

H.264 Mini BOX NETWORK CAMERA


# ***PixelPro*** **SERIES**

---

**ZN-M2AF**

## **| USER'S MANUAL**

Before connecting, operating or adjusting this product,  
read this instruction booklet carefully and completely

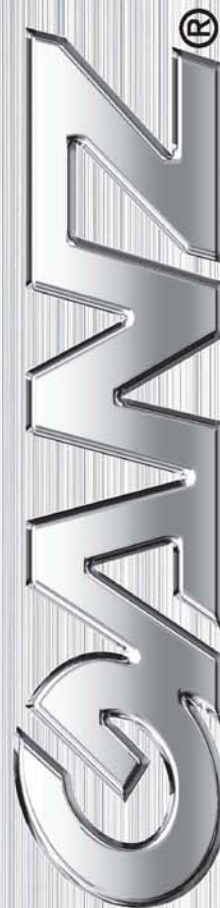

## Contents

<b>1. PRODUCT FEATURES.....</b>	<b>2</b>
<b>2. INSTALLATION .....</b>	<b>3</b>
2.1 INSTALL CAMERA.....	3
2.2 ASSIGN IP ADDRESS .....	4
2.3 ACCESS FROM A BROWSER .....	4
2.4 ACCESSING THE CAMERA FROM THE INTERNET .....	5
2.5 ADJUSTING THE IMAGE AND FOCUS.....	5
<b>3. LIVE VIEW .....</b>	<b>6</b>
3.1 VIDEO STREAM TYPES.....	6
3.2 HOW TO STREAM H.264.....	7
<b>4. SETUP .....</b>	<b>7</b>
4.1 INSTALL.....	8
4.1.1 <i>Installation Setup</i> .....	8
4.2 VIDEO .....	8
4.2.1 <i>Codec</i> .....	8
4.2.2 <i>Camera</i> .....	10
4.3 LIVE.....	12
4.3.1 <i>Viewer Setup</i> .....	12
4.4.FTP .....	13
4.4.1 <i>Config</i> .....	13
4.4.2 <i>Event</i> .....	13
4.4.3 <i>Periodical</i> .....	14
4.5.EVENT .....	15
4.5.1 <i>Motion</i> .....	15
4.5.2 <i>Mapping</i> .....	16
4.6 NETWROK .....	16
4.6.1 <i>IP setup</i> .....	16
4.6.2 <i>Service Port</i> .....	18
4.6.3 <i>E-mail</i> .....	18
4.7 SYSTEM .....	19
4.7.1 <i>User</i> .....	19
4.7.2 <i>Date / Time</i> .....	20
4.7.3 <i>Maintenance</i> .....	21
4.7.4 <i>Information</i> .....	23
<b>5.DIMENSIONS .....</b>	<b>24</b>

## 1. Product Features


The GANZ PixelPro Series (ZN-M2AF) is a high performance H.264 network camera, designed for demanding security installations. It delivers crisp, clear images, disclosing every detail, thanks to its top quality Megapixel progressive CMOS sensor and advanced image processing.

Supported by the industry's largest base of video management software, the GANZ PixelPro provides the perfect solution for securing bank offices, airports and other facilities, and for traffic surveillance, over IP based networks.

The optimal Power over Ethernet (IEEE 802.3af) support power to the camera to be delivered via the network, eliminating the need for a power outlet and reducing installation costs. Steady power could be guaranteed with a central Uninterruptible Power Supply (UPS).



The GANZ PixelPro offers a comprehensive set of network security and management features. This includes support for port based network control (IEEE802.1X), which allows the camera to be connected to a network secured with this control, and HTTPS encryption, which provides a secure channel between camera and application. It also enables authentication of the video source. Video products are efficiently managed with the powerful GANZ PixelPro Camera Management tool, which is provided on the Installation CD which comes with each GANZ PixelPro camera.

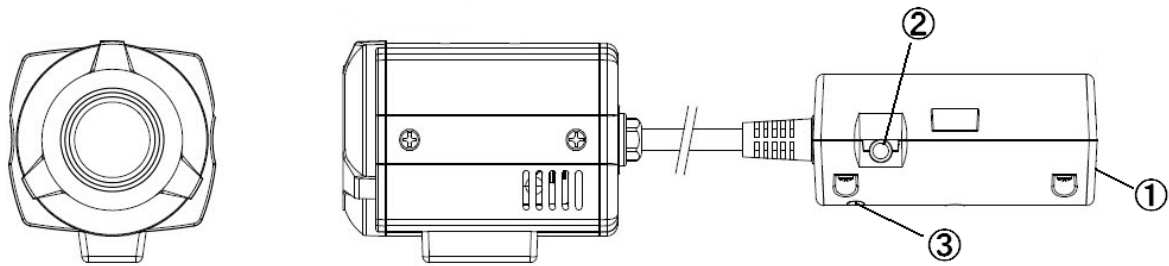

### 1. Network (RJ-45 PoE required)

The ZN-M2AF connects to the network via a standard network cable, and automatically detects the speed of the local network segment (10BaseT/100BaseTX Ethernet). This socket must be used to power the ZN-M2AF via Power over Ethernet (PoE). The camera auto-senses the correct power level when using a PoE (Class 2) switch, router or injector.

### 2. Video output for service monitor

This analog video output is available when installation mode is set to ON. Use accessory cable to video output.

### 3. Reset Switch


This switch has 3 functions by pressing time.

- 1) Switch NTSC / PAL format (less than 1second)
- 2) System reboot (around 5 seconds)
- 3) Factory Default Reset (More than 10 seconds)

## 2. Installation

### 2.1 Install camera

- 1) Assembly the bracket for fixing with wall bracket on Camera with supplied screws.
- 2) Fix the wall bracket on place that user want to install.
- 3) Connect the Wall bracket and Camera

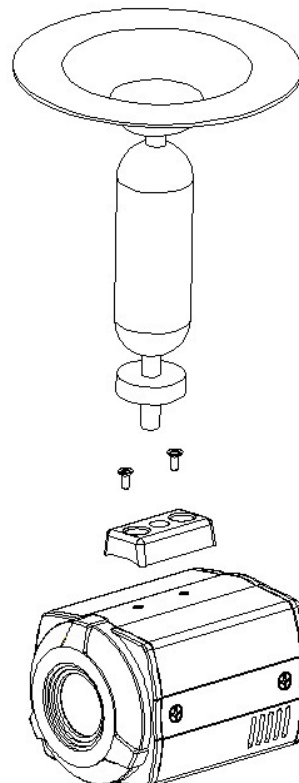


## 2.2 Assign IP address

The default setting of the camera is set “DHCP” to ON. If you have a DHCP server on your network and UPnP function enabled on your PC you can find the network camera in “My network”.

If a DHCP server is not available on your network, please assign IP address by the following process.


Execute PixelPro\_Discovery\_Tool.exe. It will search cameras on the network automatically.

- 1) After the camera is listed in camera list, select the camera.
- 2) Type in the all network information.
- 3) Click “Apply” button

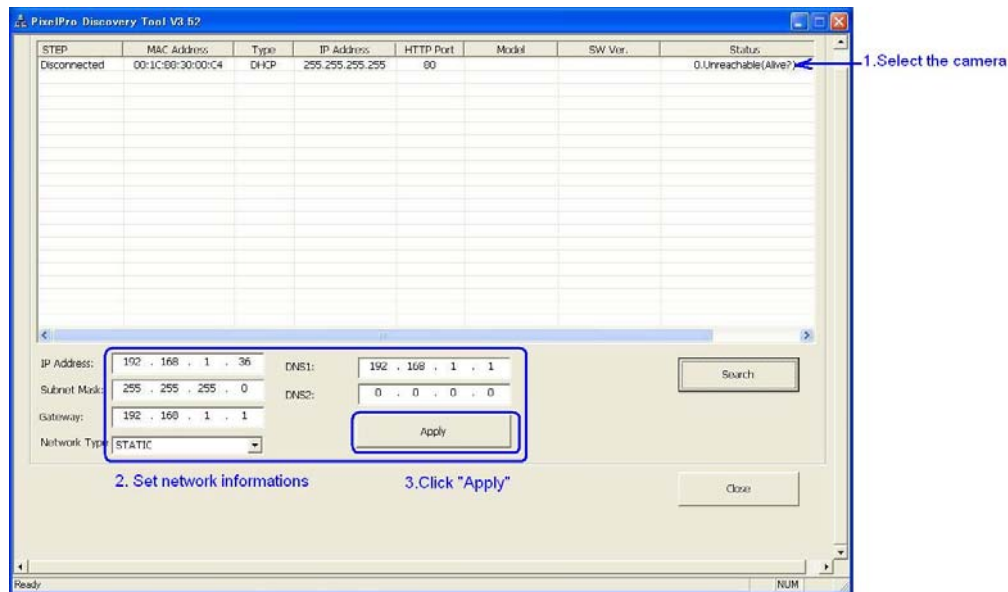

The GANZ PixelPro can be accessed with most standard operating systems and browsers. The recommended browser is Internet Explorer 7 and above for Windows.

## 2.3 Access from a browser

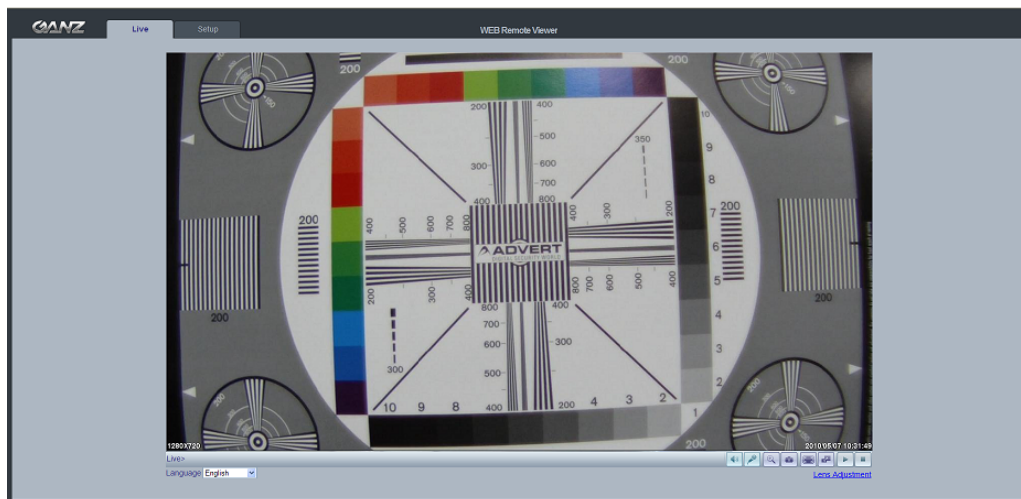

1. Start a browser (Internet Explorer)
2. Enter the IP address or host name of the camera in the Location/Address field of your browser. Press Enter.
3. Login dialog will appear when the camera is accessed for the first time.
4. The default user name is **ADMIN**, and password is **1234**.
5. The camera's Live View page is now displayed in your browser.

Note: The layout of the live view page in the camera may have been customized to meet specific requirements. Consequently, some of the examples and functions featured here may differ from those displayed on your own Live View page.

## 2.4 Accessing the camera from the Internet

Once installed, the camera is accessible on the local network (LAN). Configure the router/firewall to allow incoming data traffic to access the camera from the Internet. For security reasons this is usually done on a specific port. Please refer to the documentation for router/firewall for further instructions.


## 2.5 Adjusting the Image and Focus

### With Analog Video output

1. Open the **Live View** page in your web browser.
  - Select the **Setup** tab, and open the **Installation** page.
  - Select the 'Video Format'.
2. Connect analog monitor to the VIDEO OUT (BNC) on the cable.
  - Adjust camera angle.

### With Web Browser

1. Open the **Live View** page in your web browser.
  - Select the **Setup** tab, and open the **Video -> Camera** page.
  - Click 'Lens Adjustment'.

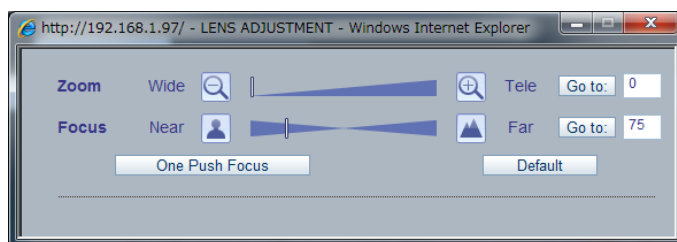

2. Set the desired Zoom position.
3. Click 'One Push Focus' button for adjust focus automatically or set focus manually.

## 3. Live View



Digital Zoom



Snap Shot



Full Screen



Video Stream change: First stream ⇔ Second stream



Play: Click this button by manually to start the stream



Stop: Click this button by manually to stop streaming

*NOTE: It is possible that not all the buttons described below will be visible unless the Live View page has been customized to display them.*

### 3.1 Video Stream types

#### H.264 protocols and communication methods

- **RTP (Real-time Transport Protocol)** is a protocol that allows programs to manage the real-time transmission of multimedia data, via unicast or multicast.
- **RTSP (Real Time Streaming Protocol)** serves as a control protocol, to negotiate the type of transport protocol to use for the stream. RTSP is used by a viewing client to start a unicast session.
- **UDP (User Datagram Protocol)** is a communications protocol that offers limited service for exchanging data in a network which uses the Internet Protocol (IP). UDP is an alternative to the Transmission Control Protocol (TCP). The advantage of UDP is that, it is not required to deliver all data and may drop network packets when there is network congestion. This is suitable for live video, as there is no point in re-transmitting old information that will not be displayed anyway.
- **Unicasting** is communication between a single sender and a single receiver over a network. This means that the video stream goes independently to each user, and each user gets own stream. A benefit of unicasting is, in case one stream fails, it only affects one user.



## 3.2 How to stream H.264

Deciding on the combination of protocols and methods to use depends on your viewing requirements, and on the properties of your network. Setting the preferred method(s) is done in webpage.

### RTP+RTSP

This method (actually RTP over UDP and RTSP over TCP) should be your first consideration for live video, especially when it is important to always have an up-to-date video stream, even if some images are lost due to network problems. This could be configured as multicast or unicast.

**RTP/RTSP/Unicasting** should be used for video-on-demand broadcasting, so that there is no video traffic on the network until a client connects and requests the stream. However, as more and more unicast clients get connected, the traffic on the network will increase and may cause congestion. Although there is a maximum of 10 unicast viewers, note that all multicast users combined count as 1 unicast viewer.


### RTP/RTSP

This unicast method is RTP tunneled over RTSP. This could be used to exploit the fact that it is relatively simple to configure firewalls to allow RTSP traffic.

## 4. Setup

The GANZ PixelPro is configured from the Setup link, which is available on the top left hand side in the web interface. This configuration could be done by:

- **Administrators**, who have unrestricted access to all settings under the Setup tab.

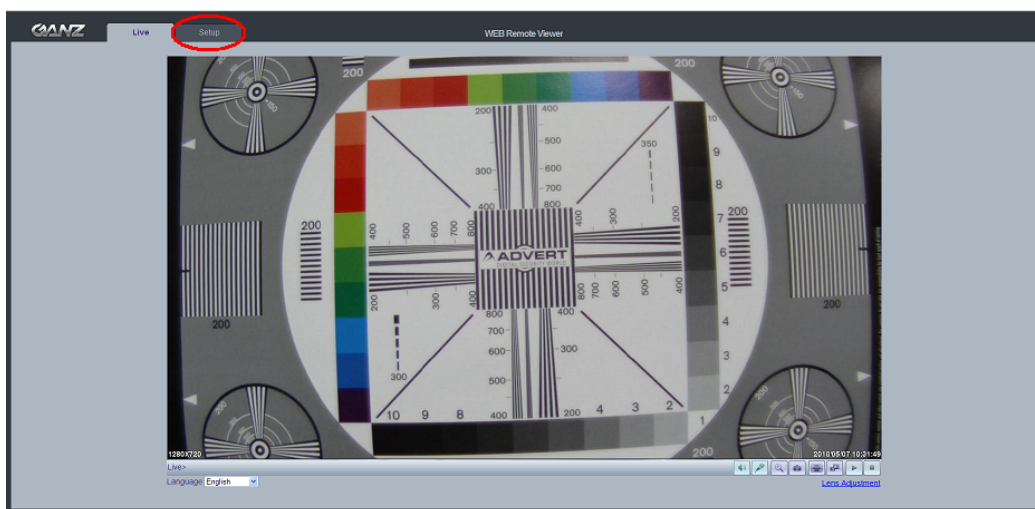


Accessing the Setup link from a browser

1. Start your web browser and enter the IP address or host name of the camera into the address bar.
2. The Live View page is now displayed. Click on the Setup tap.



## 4.1 Install

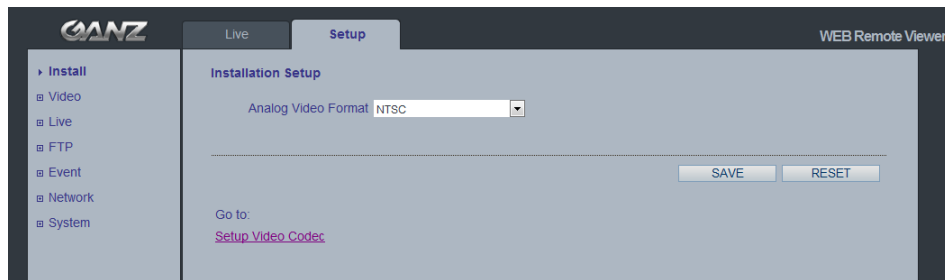

### 4.1.1 Installation Setup


**Installation Mode** allows use of the analog BNC output from the camera to connect the camera

NTSC, PAL: Analog Output is enabled.

OFF: Analog output will be disabled.

## 4.2 Video

### 4.2.1 Codec

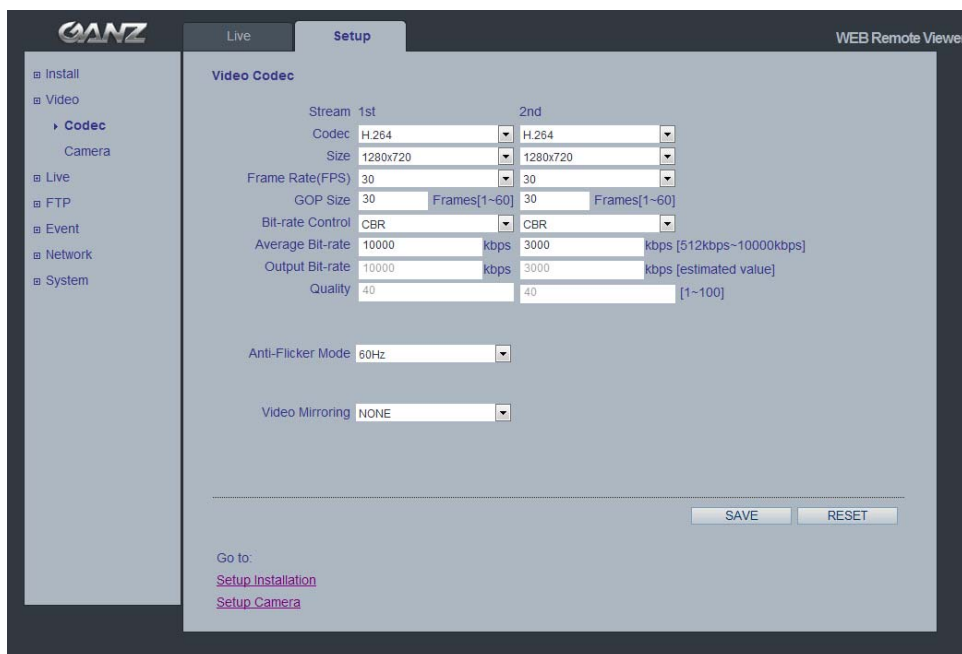

This section allows you to choose the compression codec for each of the video streams.

## Codec

### H.264

This is a video compression standard that makes good use of bandwidth and could provide high-quality video streams.

The H.264 standard provides the scope for a large range of different coding tools for use by various applications in different situations, and the GANZ PixelPro provides certain subsets of these tools.

Using H.264, it is also possible to control the bit rate, which in turn allows the amount of bandwidth usage to be controlled. CBR (Constant Bit Rate) is used to achieve a specific bit rate by varying the quality of the H.264 stream. While using VBR (Variable Bit Rate), the quality of the video stream is kept as constant as possible, at the cost of a varying bit rate.

### Motion JPEG

This format uses standard JPEG still images in the video stream. These images then are displayed and updated at a rate sufficient to create a stream that shows constantly updated motion.

The Motion JPEG stream uses considerable amounts of bandwidth, but also provides excellent image quality and access to every individual image contained in the stream. Multiple clients accessing Motion JPEG streams could use different image settings.

## Size

Video output resolution. See the next page for the output resolution table.

## Frame rate

1 ~ 30fps (60Hz) / 1 ~ 25fps (50Hz)

## GOP Size

1 ~ 60 frames

## Bit-rate control (CBR or VBR)

When using H.264 compression, if there is only limited bandwidth available, a constant bit rate (CBR) is recommended, although this may compromise image quality. Use a variable bit rate (VBR) for the best possible image quality.

## Average Bit-rate (512Kbps ~ 10Mbps)

Recommended bit rate for D1 or VGA : 800Kbps ~ 1Mbps

Recommended bit rate for 1.3M (720p) : 3Mbps ~ 4Mbps

Recommended bit rate for 2.0M (1080p) : 6Mbps ~ 8Mbps

## Quality

1 ~ 100 This parameter will be available in MJPEG mode.

## Anti-Flicker mode (Flicker less mode)

60Hz / 50Hz

## Video Mirroring


Select Video Mirroring mode NONE/ HORIZONTAL / VERTICAL / FLIP(H+V)

## < Output resolution and Frame rate table for ZN-M2AF >

RESOLUTION Table			Second Stream							
			720p	4CIF	4CIF*	VGA 4:3	VGA 16:9	VGA* 16:9	CIF	QVGA
			1280x720	704x480	704x576	640x480	640x360	640x352	352x240/288	352x240
First Stream	1080p	1920x1080	N/A	24	24	25/30	25/30	25/30	25/30	25/30
	SXGA	1280x1024	N/A	25/30	25/30	25/30	25/30	N/A	25/30	25/30
	XGA	1024x768	N/A	25/30	25/30	25/30	25/30	N/A	25/30	25/30
	720p	1280x720	25/30	25/30	25/30	25/30	25/30	N/A	25/30	N/A
	4CIF	704x480	N/A	25/30	N/A	25/30	25/30	N/A	25/30	N/A
	4CIF*	704x576	N/A	N/A	25/30	25/30	25/30	N/A	25/30	N/A
	VGA 4:3	640x480	N/A	N/A	N/A	25/30	N/A	N/A	N/A	25/30
	VGA 16:9	640x360	N/A	N/A	N/A	N/A	25/30	N/A	N/A	25/30
	CIF	352x240/288	N/A	N/A	N/A	N/A	N/A	N/A	25/30	N/A
	QVGA	320x240	N/A	N/A	N/A	N/A	N/A	N/A	N/A	25/30

Unit : fps

## 4.2.2 Camera

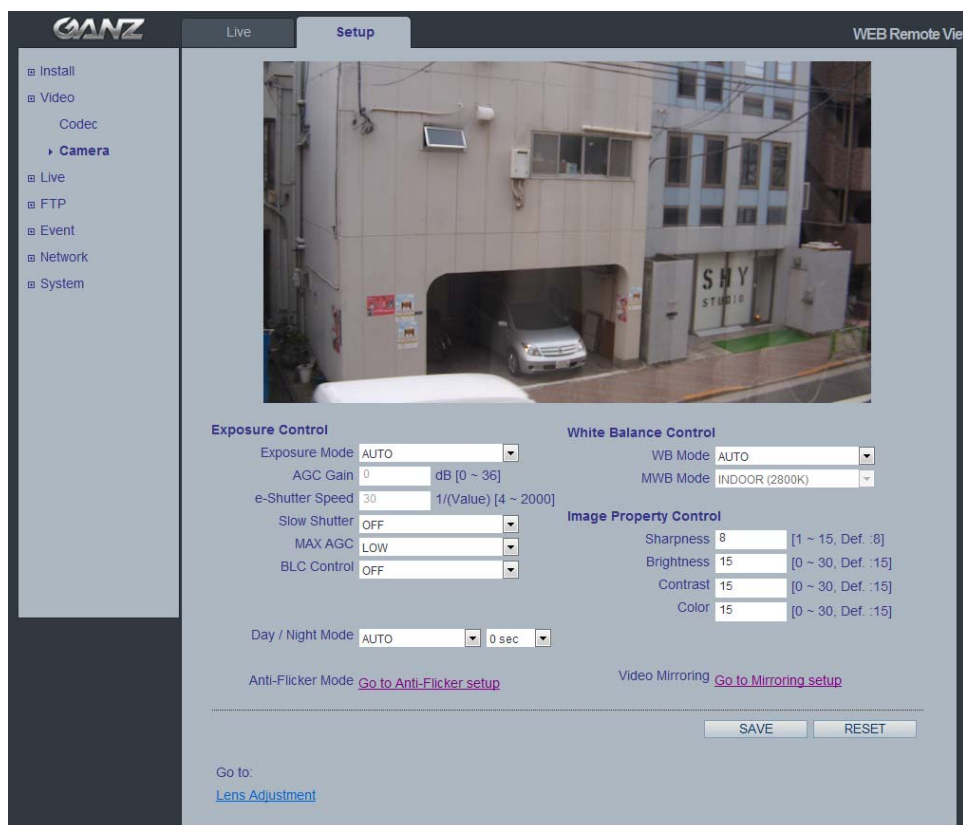

This section allows you to adjust various camera settings.

## Exposure Control

### Exposure Mode

AUTO: Use this setting for automatic exposure control.

MANUAL: Use these settings to control camera exposure manually.

To compensate for poor lighting conditions, you can adjust the Color level, Brightness, Sharpness, Contrast and Exposure control.

NOTE: *When AE is enabled, some of the submenus (AGC Gain, e-Shutter Speed) will be disabled.*

### AGC Gain

0 ~ 36 dB

### Slow shutter mode

For low light conditions, turn on slow shutter mode.

### Max AGC Gain

LOW / HIGH selectable.

### BLC Control (Back Light Compensation)

The BLC adjusts the exposure of scenes with strong backlight in the center-bottom of the image. When the image background is too bright, or the subject too dark, backlight compensation makes the subject appear clearer. The settings for low light behavior determine how the camera behaves at low light levels. These settings affect video image quality and how much noise is in the images.

## Day & Night Control

### Day & Night Mode

Auto / Day / Night

Set this filter to OFF to allow the camera to 'see' infrared light, removing the IR cut filter, when using an IR illuminator. This will make the image clearer. If set to Auto, the camera will automatically switch between IR cut filter On and Off, according to the current lighting conditions.

0 / 5 / 10 / 15 / 30 / 60 sec

Set detection window time in order to avoid failure switching.

## White Balance Control

### WB Mode

AUTO : (Automatic White balance)

MANUAL : (Manual White balance)

The White balance adjustment setting is used to make the colors in the image appear consistent, compensating for the different colors present in different light sources.

The GANZ PixelPro camera can be set to automatically identify the light source and compensate for its color temperature. If necessary, the type of light source could be set manually.

## Image Property Control

Modify the video signal parameters, such as: Brightness, Sharpness, Contrast, and Color.

**Sharpness** (Default: 8, Range: 1~15)


**Brightness** (Default: 15, Range: 0~30)

**Contrast** (Default: 15, Range: 0~30)

**Color** (Default: 15, Range: 0~30)

## 4.3 Live

GANZ PixelPro can support up to 10 simultaneous users via unicast.

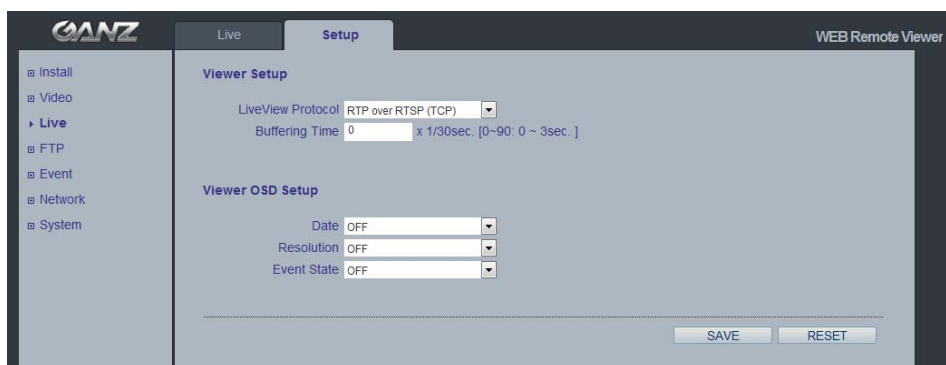

### 4.3.1 Viewer Setup

#### Live View Protocol

RTP Unicast (UDP) / RTP over RTSP (TCP)

#### Buffering Time (frame based)

Determines (0 ~ 90) x 1/30 sec (0 ~ 3sec)

#### Viewer OSD Setup

**Date:** Determines whether the date is displayed.

**Resolution:** Determines whether the camera resolution is displayed.

**Event State:** Determines whether the event state is shown on display window.

**Event State:** (as shown in Live View)

**M : Motion**

## 4.4.FTP

### 4.4.1 Config

The screenshot shows the 'Setup' tab of the GANZ WEB Remote Viewer. The 'Server Configuration' section includes the following fields:

- Server IP: 0.0.0.0
- Port: 21 [Def.: 21, 1025-65535]
- User name: (empty)
- Password: (empty)
- Send mode: Active (dropdown menu)

At the bottom right are 'SAVE' and 'RESET' buttons. At the bottom left, there is a 'Go to:' link pointing to 'Setup Video Codec'.

### Server Configuration

Allows transmission of still images to remote sites, using the FTP server. Set the information for FTP transmission by inserting the IP address, Username and Password of the remote FTP Server.

### 4.4.2 Event

The screenshot shows the 'Setup' tab of the GANZ WEB Remote Viewer. The 'Event FTP Sending' section includes the following options:

- FTP Sending: ☒ Enable, ☐ Disable
- Directory: event
- File Prefix: (empty) ex) alm\_
- FTP Send Mapping: ☐ Motion
- Effective Period: ☒ Always, ☐ Schedule
- Schedule: 00:00 - 00:00

At the bottom right are 'SAVE' and 'RESET' buttons.

### Event FTP Sending

You can configure the camera to upload still images to FTP server based on event such as Motion detection.

#### Directory

The name of the directory where the still images will be stored when an Event occurs.

#### File Prefix

You may add a file name prefix to the stored image file name.

Example: If the file prefix is 'MVD', the still image would be saved as MVD\_date\_time.jpg.

## FTP Send Mapping

Choose which types of events will be recorded to the FTP server by checking the desired event.

## Effective Period

This parameter lets you decide whether to save all the events that are happening at all hours of the day, or only the events that occur within during specific times of the day. The Schedule method is used to save events into the FTP server during a specific time range. The start time and the end time can be set using the dropdown list.

### 4.4.3 Periodical

The screenshot shows the 'Setup' tab of the QANZ WEB Remote Viewer. The 'Periodical FTP Sending' section is active. It includes a toggle for 'FTP sending' set to 'Enable'. Below this are input fields for 'Directory' (containing 'periodical'), 'File Prefix' (empty, with an example 'ex) per\_'), and 'Interval' (set to '10 sec'). The 'Effective Period' section has two radio buttons: 'Always' (selected) and 'Schedule'. The 'Schedule' option is disabled. At the bottom right are 'SAVE' and 'RESET' buttons.

## Periodical FTP Sending

It allows transmission of still images periodically to the FTP server.

### Directory

The name of the directory where the still images will be stored.

### File Prefix

You may add a file name prefix to the stored image file name.

Example: *If the file prefix is 'per', the still image would be saved as per\_date\_time.jpg.*

### Interval

It allows for saving still images based on frequency (1 image every 10 sec, for example). Use the drop-down control to set from 10 seconds to 1 hour.


### Effective Period

This parameter lets you decide whether to save still images at all hours of the day, or within during specific times of the day.



## 4.5.Event

### 4.5.1 Motion

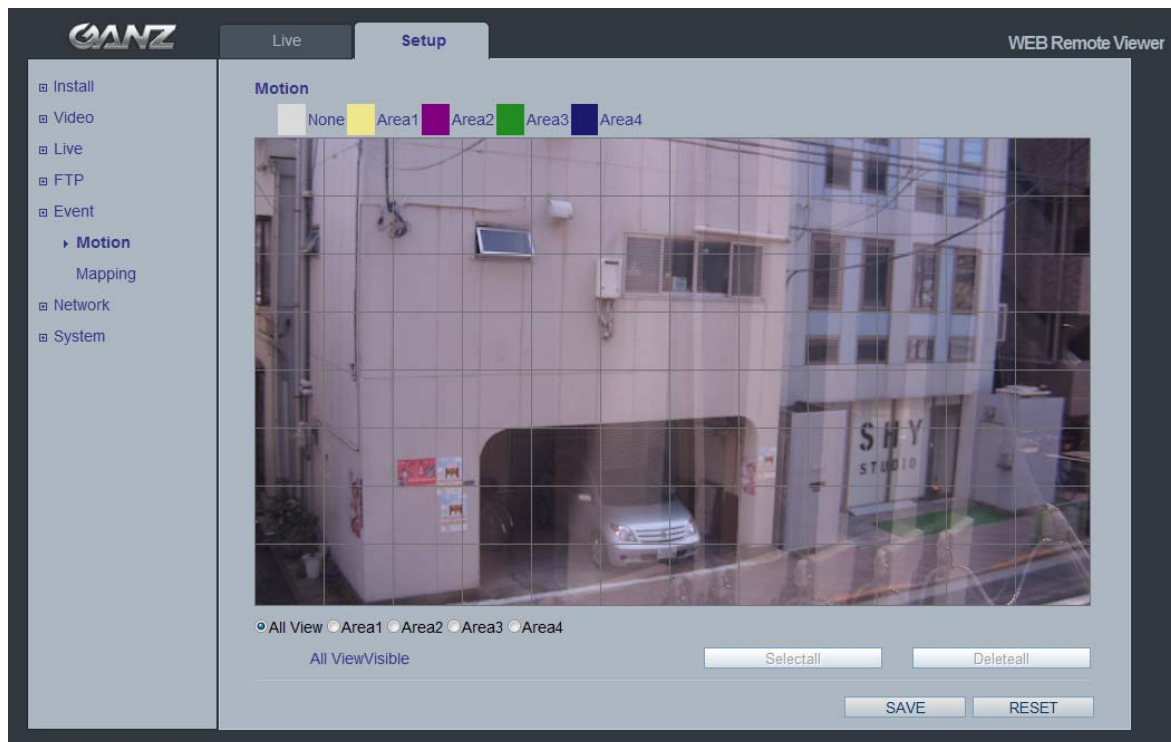

#### Motion Detection

**Motion detection is used to generate an alarm whenever movement occurs within the video image.**


A total of 4 motion detection zones can be configured.

#### Configuring Motion Detection

1. Click **Motion Detection** in the **Event Config** menu.
2. Select an area for motion detection from Area 1 to Area 4.
3. Select boxes of the motion detection zone you are creating.
4. Adjust sensitivity level.
5. Click **Save**.

**NOTE:** *Using the motion detection feature will consume more of the camera's resources, and this could decrease the camera's overall performance, depending on your settings.*

## 4.5.2 Mapping

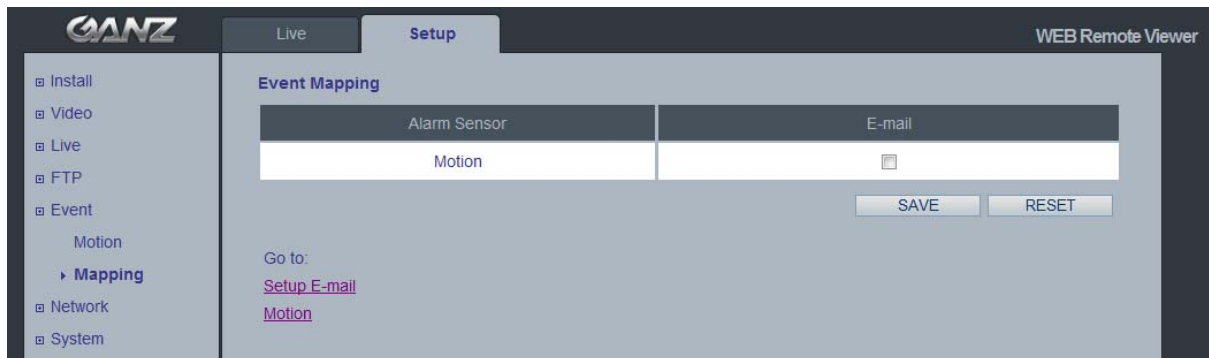

### Event Mapping

It is possible to define conditions that would cause the camera to respond with certain actions.


A triggered event happens as a result of an event which is mapped within this menu.

This could be caused by motion detection or an external alarm input.

**E-mail** notification could be sent by **Motion** Event.

## 4.6 Network

### 4.6.1 IP setup

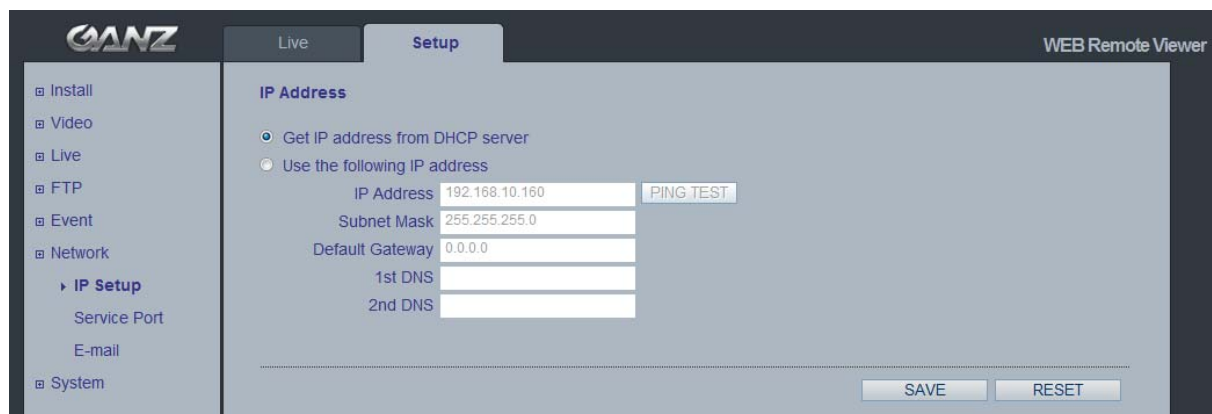

### IP Address Configuration

The IP address could be set automatically via DHCP, or a static IP address could be set manually.

**NOTE:** IP address assignment via DHCP may lead to the situation where the IP address changes and you lose contact with the camera. If your DHCP server can update a DNS server, you can access the GANZ PixelPro by a static host name, regardless of having a dynamic IP address. Configure the options for notification of IP address change (under Services) to receive notification from the camera when the IP address changes.

## DNS Configuration

DNS (Domain Name Server) provides the translation of host names to IP addresses on your network.

## Primary DNS server

Enter the IP address of the Primary DNS server for your network.


## Secondary DNS server

Enter the IP of the Secondary DNS, which is used if the Primary DNS server is unavailable.

## How to assign IP address by PixelPro Discovery tool

Execute the PixelPro Discovery Tool (from the Installation CD). It will search cameras on the network automatically.

- 1) After the list of detected devices appears, select the camera you are trying to configure.

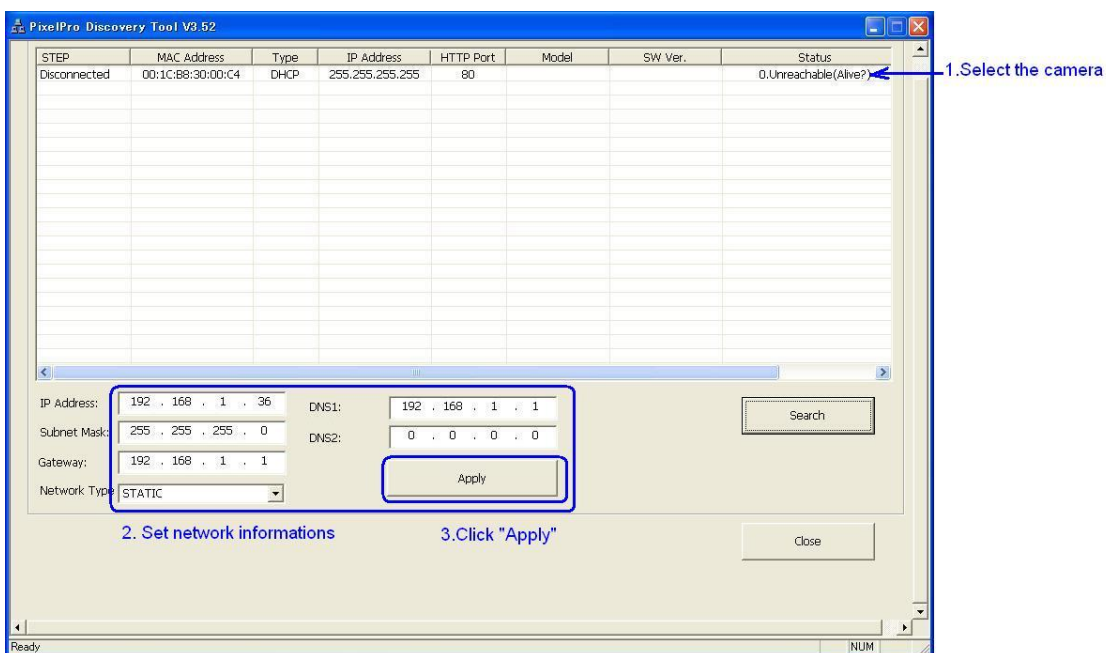

- 2) Enter all of the network information for your camera.
- 3) Click “Apply” button.

When you double-click the camera within the list, the default web browser (Internet Explorer, or compatible equivalent) will open and automatically connect to the camera.

## 4.6.2 Service Port

The screenshot shows the 'Setup' tab of the QANZ WEB Remote Viewer. The left sidebar contains a tree view with categories: Install, Video, Live, FTP, Event, Network, IP Setup, Service Port (selected), E-mail, and System. The main content area is titled 'Service Port' and contains two input fields: 'HTTP Port' with the value '80' and a default range '[Def. :80, 1~65535]', and 'RTSP Port' with the value '554' and a default range '[Def. :554, 1~65535]'. At the bottom right of the main area are 'SAVE' and 'RESET' buttons.

### Service Port

#### HTTP port

The default HTTP port number (**80**) could be changed to any port within the valid port range (1-65535). This is useful for simple port mapping.

#### RTSP port

The RTSP protocol allows a connecting client to start an H.264 stream. Enter the RTSP port number to use. The default setting is 554.

*NOTE: After changing the default port numbers, the user can use the 'PixelPro Discovery Tool' to search and connect automatically if they can't remember the specific port numbers that they used.*

## 4.6.3 E-mail

The screenshot shows the 'Setup' tab of the QANZ WEB Remote Viewer. The left sidebar is the same as in the previous screenshot, but 'E-mail' is now selected under the 'Network' category. The main content area is titled 'E-mail Setup' and contains several configuration options: 'Notification' set to 'OFF', 'Frequency' set to '5 Min', 'Server' and 'Port' (set to '25') as a single input field, 'Security' set to 'OFF', and 'User', 'Password', and 'From' as three separate input fields. At the bottom right are 'SAVE' and 'RESET' buttons. At the bottom left, there is a 'Go to:' section with two links: 'Setup To enable Address' and 'Setup Event Mapping'.

You must turn Notification to 'On' and then enter the host names or addresses for your mail servers in the fields provided, to enable the sending of event and error email messages from the camera to predefined addresses via SMTP.

**Note1)**

Frequency : Mail server may register the sender to SPAM list when frequency is set to "1 Min". It may be better to set "5 Min" for safe side.

**Note2)**

From : Specify the name who sent e-mail notification. It may be better to use e-mail format like as [aaa@bbbb.com](mailto:aaa@bbbb.com). Some e-mail server will refuses it.

## 4.7 System

The screenshot shows the 'User Management' interface in the GANZ WEB Remote Viewer. It features a table with the following data:

User ID	Password	Group	E-mail	Notification	Del/Add
ADMIN	1234	Admin		<input checked="" type="checkbox"/>	
		Admin		<input type="checkbox"/>	Add

Below the table are 'SAVE' and 'RESET' buttons. The left sidebar menu includes 'User' as a sub-option under 'System'. At the bottom, a 'Go to:' link points to 'Setup E-mail'.

### 4.7.1 User

When you access the camera, the Configure Root Password dialog box appears. Enter the user name ADMIN and password 1234 to log in.

To change the password or add a user, go to Setup > System > User. Fill in the User ID, Password and E-mail address. Select the Group. Then press the 'ADD' button and click 'SAVE'.

**NOTE:** The default administrator username ADMIN is permanent and cannot be deleted or altered.

## 4.7.2 Date / Time

The screenshot shows the GANZ WEB Remote Viewer interface. The top bar includes the GANZ logo, 'Live' and 'Setup' tabs, and 'WEB Remote Viewer' text. A left sidebar lists navigation options: Install, Video, Live, FTP, Event, Network, System, User, Date / Time (selected), Maintenance, and Information. The main content area is titled 'Date / Time Setup' and contains the following fields:

- Current Server Time: 2007/09/15 14:10:36
- Date format: YYYY/MM/DD (dropdown)
- Time format: 24 Hour (dropdown)
- Synchronization: Radio buttons for 'Synchronize with NTP server' (selected) and 'User set manually'.
- NTP server: POOL.NTP.ORG (text input)
- Local Time: 2007 / 09 / 15 14 : 10 : 24 (text input) with a 'PC Sync / SAVE' button.
- Time Zone: GMT-05:00 America/EST (dropdown)
- D.S.T: OFF (dropdown)

At the bottom right of the main area are 'SAVE' and 'RESET' buttons.

### Date & Time Format

Specify the formats for the date and time (12h or 24h) displayed in the Live View video streams.

### NTP Server

Synchronize the time from an NTP server every 60 minutes. Specify the IP address or host name of the NTP server you are using.

### Local Time / PC Sync/SAVE

Specify Local time manually or Synchronize to PC time automatically.


### Time Zone Setup

You may select your time zone from the drop-down list.

### D.S.T (Daylight Saving Time)

Toggle automatic DST clock adjustment on/off.

### 4.7.3 Maintenance

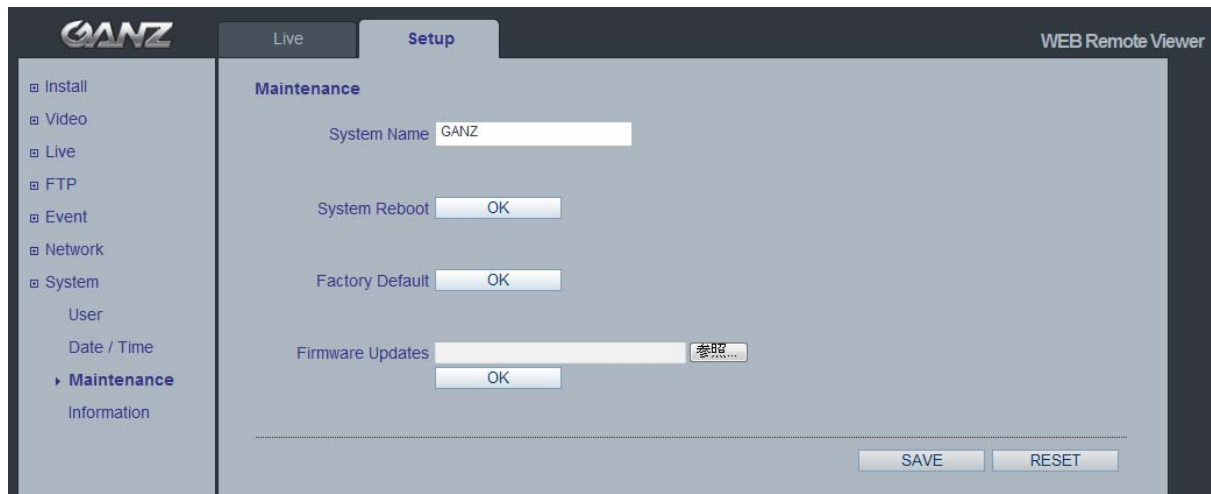

#### System Name

Choose a system name to identify the camera when using e-mail notifications.

#### System Reboot

Reboots the camera.

#### Factory Default

To reset the camera back to the original factory default settings.

#### Firmware Update

From time to time, CBC will release firmware updated for the PixelPro Series camera, which will contain feature additions and other improvements. Always read the upgrade instructions and release notes that accompany each new firmware release, before updating the firmware.

**NOTE:** *Preconfigured and customized settings should be saved before the firmware is upgraded.*



## Firmware Update Procedure

1. Save the firmware file to your computer.
2. Go to Setup > System > Maintenance within the camera web browser setup.
3. In the Firmware Update section, browse to the desired firmware file on your computer. Then Click OK.

**NOTE:** Do not disconnect power to the unit during the upgrade. The unit will restart automatically after the upgrade has completed. (1~5 minutes)

4. If you suspect the firmware upgrade for the camera has failed, always wait at least 5-10 minutes before restarting the upgrade process.
5. CBC reserves the right to charge for any camera repair which can be attributed to faulty upgrading by the user. Always read the upgrade instructions and firmware release notes before updating the firmware.

## System Reboot

There are two ways to reset the camera.

*Case 1) Using the web browser:*

1. Go to SETUP > System > Maintenance.
2. Click "System Reboot Button" and wait 1 minute for camera to reboot.

*Case 2) Using the Reset Button of the camera:*

1. Press and keep for 5 seconds than release the button.

## Factory Default Reset

There are two ways to reset the camera back to factory default.

*Case 1) Using the web browser:*

1. Go to SETUP > System > Maintenance.
2. Click Factory Default Button

*Case 2) Using the Reset Button of the camera:*

1. Push & hold the reset button more than 10 seconds.
2. Release the reset button.

**NOTE:** The unit will now have the default IP address from a DHCP server.  
Use the 'PixelPro Discovery Tool' to discover and connect to the camera.

## 4.7.4 Information

The screenshot shows the GANZ WEB Remote Viewer interface. The top bar includes the GANZ logo, 'Live' and 'Setup' tabs, and 'WEB Remote Viewer' text. A left sidebar contains a menu with options: Install, Video, Live, FTP, Event, Network, System, User, Date / Time, Maintenance, and Information (highlighted with a right-pointing arrow). The main content area is titled 'System Information' and displays the following fields:


SW Version	ZN2C0.2.1042.32
Model Name	ZN-M2AF
MAC Address	00:11:5F:0A:B5:AF
IP Address	192.168.1.89
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
1st DNS	0.0.0.0
2nd DNS	0.0.0.0
DDNS Server	DVRLINK.NET

### System Information

You can confirm the system information of the camera.

F/W version / Model Name / MAC address / IP address settings

## 5.Dimensions

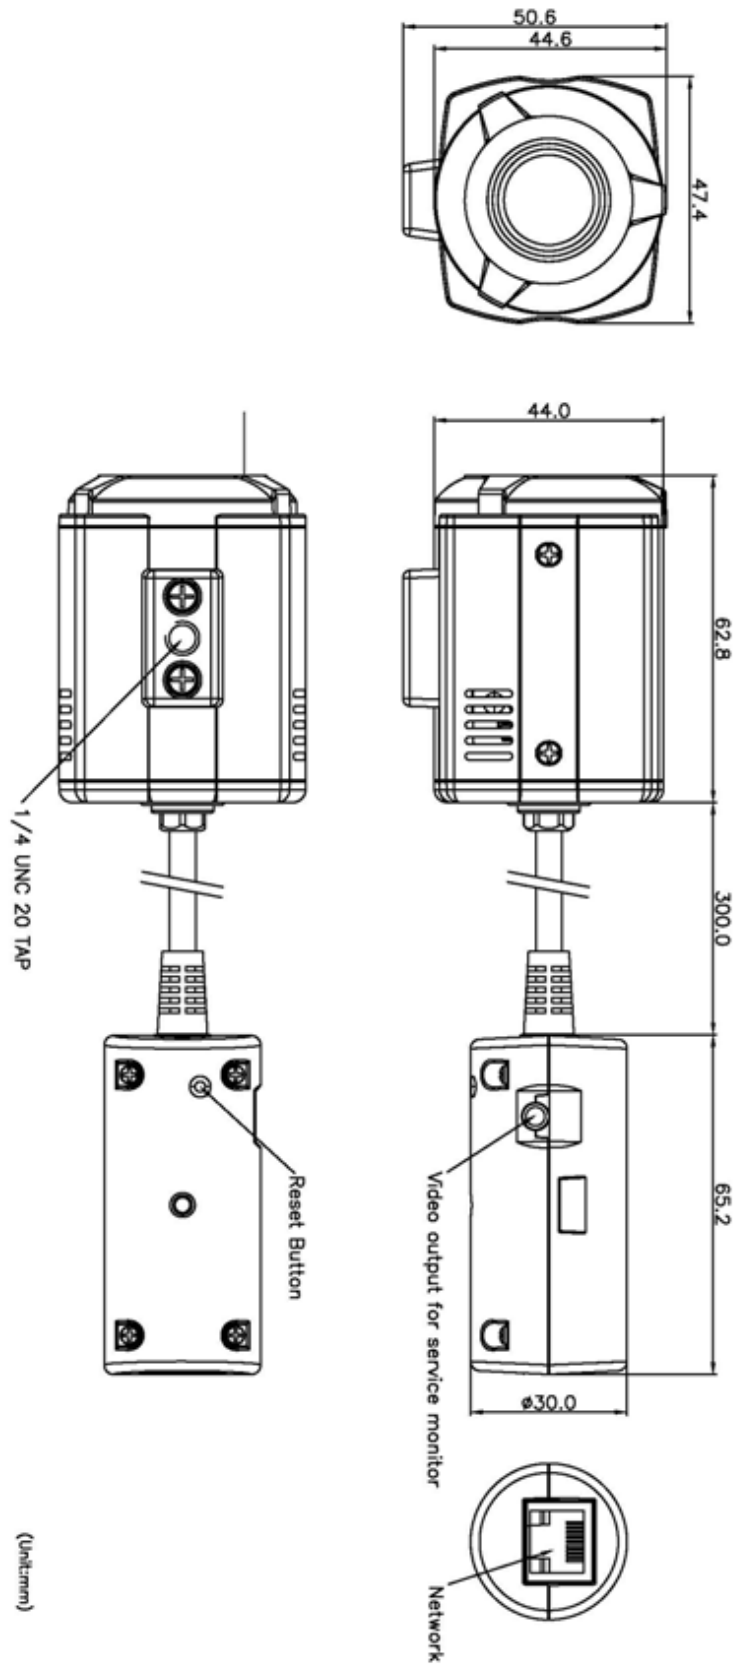



## English

### Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

## Français/French

### Élimination de votre ancien appareil

1. Ce symbole, représentant une poubelle sur roulettes barrée d'une croix, signifie que le produit est couvert par la directive européenne 2002/96/EC.
2. Tous les produits électriques et électroniques doivent être éliminés séparément de la chaîne de collecte municipale des ordures, par l'intermédiaire des installations de collecte prescrites et désignées par le gouvernement ou les autorités locales.
3. Une élimination conforme aux instructions aidera à réduire les conséquences négatives et risques éventuels pour l'environnement et la santé humaine.
4. Pour plus d'informations concernant l'élimination de votre ancien appareil, veuillez contacter votre mairie, le service des ordures ménagères ou encore le magasin où vous avez acheté ce produit.

## Deutsch/German

### Entsorgung von Altgeräten

1. Wenn dieses Symbol eines durchgestrichenen Abfalleimers auf einem Produkt angebracht ist, unterliegt dieses Produkt der europäischen Richtlinie 2002/96/EC.
2. Alle Elektro- und Elektronik-Altgeräte müssen getrennt vom Hausmüll über die dafür staatlich vorgesehenen Stellen entsorgt werden.
3. Mit der ordnungsgemäßen Entsorgung des alten Geräts vermeiden Sie Umweltschäden und eine Gefährdung der persönlichen Gesundheit.
4. Weitere Informationen zur Entsorgung des alten Geräts erhalten Sie bei der Stadtverwaltung, beim Entsorgungsamt oder in dem Geschäft, wo Sie das Produkt erworben haben.

## Italiano/Italian

### RAEE: SMALTIMENTO DELLE VOSTRE VECCHIE APPARECCHIATURE

---

1. Quando il simbolo del "Cassonetto Barrato" è apposto su un prodotto, significa che lo stesso può ricadere nei termini previsti dalla Direttiva Europea nr. 2002/96/EC in funzione dell'attuazione definita dalla Legislazione dei singoli stati membri dell'Unione Europea.
2. Tutti i prodotti elettrici ed elettronici dovrebbero essere smaltiti separatamente dai rifiuti municipali, tramite appositi contenitori, approvati dall'Amministrazione Comunale o dalle Autorità Locali.
3. Il corretto smaltimento delle vostre vecchie apparecchiature, contribuirà a prevenire possibili conseguenze di impatto negativo sull'ambiente e per la salute dell'uomo.
4. Per maggiori informazioni circa lo smaltimento delle vostre vecchie apparecchiature, siete pregati di contattare l'ufficio municipale della vostra città, il servizio di smaltimento rifiuti o il punto vendita nel quale avete acquistato il prodotto.

## Polski/Polish

### Utylizacja starych urządzeń

---

1. Kiedy do produktu dołączony jest niniejszy przekreślony symbol kołowego pojemnika na śmieci, oznacza to, że produkt jest objęty europejską dyrektywą 2002/96/EC.
2. Wszystkie elektryczne i elektroniczne produkty powinny być utylizowane niezależnie od odpadów miejskich, z wykorzystaniem przeznaczonych do tego miejsc składowania wskazanych przez rząd lub miejscowe władze.
3. Właściwy sposób utylizacji starego urządzenia pomoże zapobiec potencjalnie negatywnemu wpływowi na zdrowie i środowisko.
4. Aby uzyskać więcej informacji o sposobach utylizacji starych urządzeń, należy skontaktować się z władzami lokalnymi, przedsiębiorstwem zajmującym się utylizacją odpadów lub sklepem, w którym produkt został kupiony.

## Português/Portuguese

### Eliminação do seu antigo aparelho

---

1. Quando este símbolo de latão cruzado estiver afixado a um produto, significa que o produto é abrangido pela Directiva Europeia 2002/96/EC.
2. Todos os produtos eléctricos e electrónicos devem ser eliminados separadamente da coleta de lixo municipal através de pontos de recolha designados, facilitados pelo governo ou autoridades locais.
3. A eliminação correcta do seu aparelho antigo ajuda a evitar potenciais consequências negativas para o ambiente e para a saúde humana.
4. Para obter informações mais detalhadas acerca da eliminação do seu aparelho antigo, contacte as autoridades locais, um serviço de eliminação de resíduos ou a loja onde comprou o produto.

## Español/Spanish

### Cómo deshacerse de aparatos eléctricos y electrónicos viejos

---

1. Si en un producto aparece el símbolo de un contenedor de basura tachado, significa que éste se acoge a la Directiva 2002/96/EC.
2. Todos los aparatos eléctricos o electrónicos se deben desechar de forma distinta del servicio municipal de recogida de basura, a través de puntos de recogida designados por el gobierno o las autoridades locales.
3. La correcta recogida y tratamiento de los dispositivos inservibles contribuye a evitar riesgos potenciales para el medio ambiente y la salud pública.
4. Para obtener más información sobre cómo deshacerse de sus aparatos eléctricos y electrónicos viejos, póngase en contacto con su ayuntamiento, el servicio de recogida de basuras o el establecimiento donde adquirió el producto.

## AMERICA

**CBC (AMERICA) CORP.**  
New York / California  
<http://www.cbcamerica.com>

## EUROPE

**CBC (EUROPE) LTD.**  
London  
<http://www.cbceurope.com>

**CBC (EUROPE) LTD.**  
Milan  
<http://www.cbceurope.it/cctv>  
[info@cbc-europe.it](mailto:info@cbc-europe.it)

**CBC (DEUTSCHLAND) GmbH**  
Dusseldorf  
<http://www.cbc-de.com>

**CBC (POLAND) Sp. z o.o**  
Warszawa  
<http://www.cbcpoland.pl>

**CBC Co., Ltd. MOSCOW REP OFFICE**  
Moscow  
<http://www.cbc.ru>

## CHINA

**CBC(Beijing) Trading CO.,LTD.**  
Beijing  
<http://www.cbc-china.cn/10/>

**CBC (SHANGHAI) TRADING CO., LTD.**  
Shanghai  
<http://www.cbc-china.cn/10/>

**CBC SHANGHAI CO., LTD. GUANGZHOU OFFICE**  
Guangzhou  
<http://www.cbc-china.cn/10/>

**CBC (H.K.) CO., LTD.**  
Hong Kong  
<http://www.cbc-china.cn/10/>

## ASIA

**CBC. S PTE LTD.**  
Singapore

**CBC(THAILAND) CO., LTD.**  
Bangkok

**CBC CO., LTD. MUMBAI REP OFFICE**  
Mumbai

**CBC CO., LTD. JAKARTA REP OFFICE**  
Jakarta

**CBC (TAIWAN) CO., LTD.**  
Taipei  
<http://www.computar.com.tw/>



CBC Co.,Ltd.  
[www.GANZ.jp](http://www.GANZ.jp)

159-1.0