



User's Manual NWTC

Features:

- Simple counting function
- Available on 3 weighing units :
kg / g / lb.oz
- Capable to display Net/Gross weight
- Auto power off after not been operated in 15 minutes

Precaution :

1. Install the weighing pan properly.
2. For ensuring the accuracy , please warm up the scale after powered on and make certain the bubble appearing in the center of the level indicator.
3. Do not operate the scale in an unstable temperature environment.(Normal 0 ~ 40)
4. Avoid wind blowing & vibrating the equipment when using.

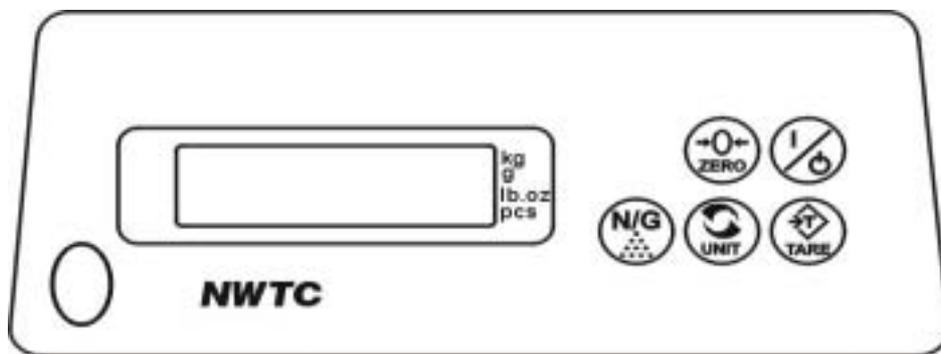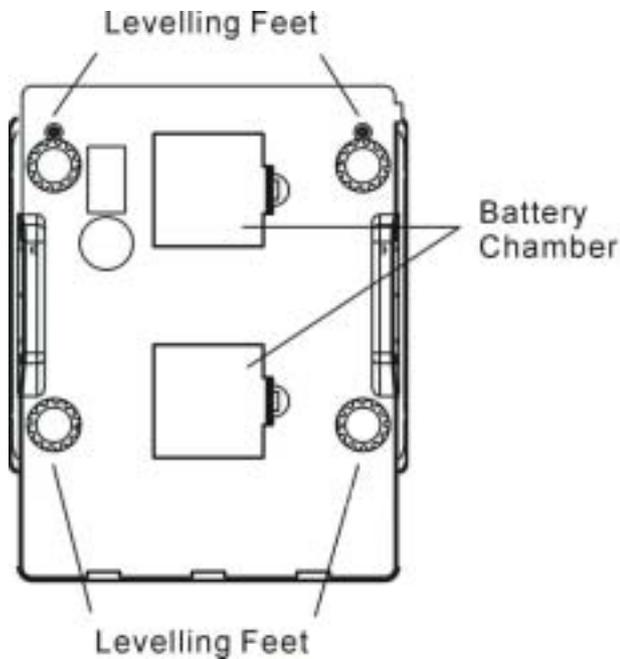

Function Keys :

: power - ON/OFF switch

: to select kg / g / lb.oz / pcs

: to reset the weight to zero

: to switch net weight / gross weight

: to tare

Operation for Simple Counting :

1. Press to select "pcs".
2. Use to choose the sampling quantity "S= 10, S=20, S=50, S= 100".
3. Put the objects according to the above quantity on the weighing pan , press .
4. **CAL** displays when sampling. **10** or **20** or **50** or **100** displays when completed sampling.
*** For accurate counting ,more sampling quantity is better.**
5. After sampling, remove the samples from the weighing pan, turn off the scale and turn on again, scale is ready for simple counting.

Trouble Shooting

Error Message	Trouble shooting
	<ol style="list-style-type: none"> 1. Weighing pan is interfered by something , remove the object from weighing pan and power on the scale again. 2. Load cell is defective.
	<ol style="list-style-type: none"> 1. The PCB is defective. 2. Load cell is defective.
	Power off and power on the scale again.
	<ol style="list-style-type: none"> 1. Weighing pan is interfered by something , remove the object from weighing pan and power on the scale again. 2. Replace new battery.
	Check if the object is over weighing capacity.
	Check if place a wrong weight master while calibration.