


# Coffee Gateway<sup>®</sup>

User Manual

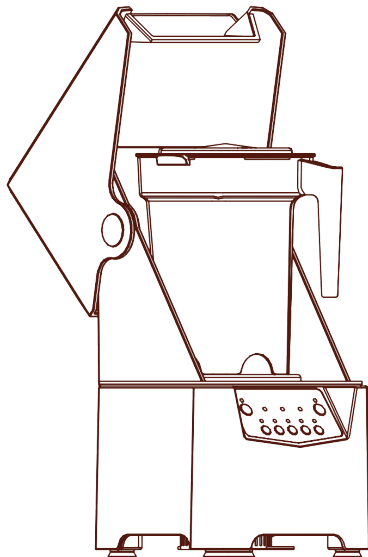


**mixtec** B7000

# Name of Parts



- 1. Sound Hood
- 2. Central Cover
- 3. Blender Jug Cover
- 4. Blender Jug
- 5. Control Panel
- 6. Body
- 7. Power on
- 8. Power off

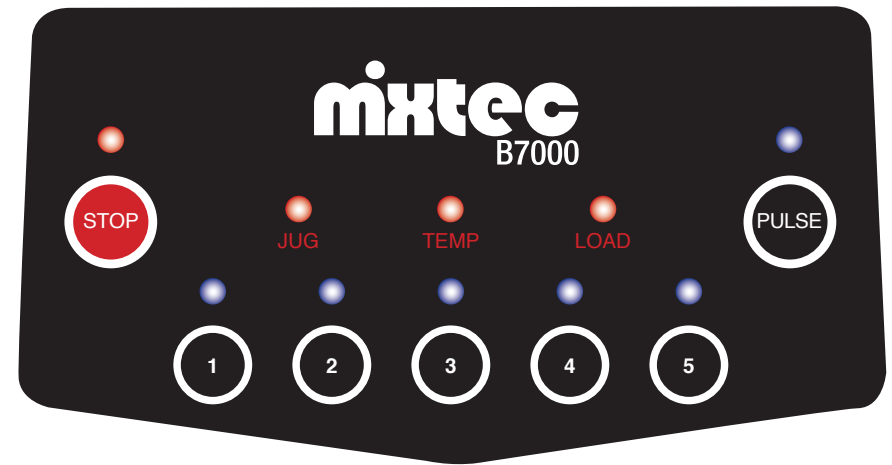

1 2 3 4 5 Speed mode

**Stop:** To turn on/off the appliance

**Pulse:** Pulse mode

**Jug:** If the jug is not placed in the correct position, the light will illuminate

**Temp indication light:** If the motor is over heated, the light will illuminate.

**Load indication light:** If the blender is over loaded, the light will illuminate.

**Mode 1:** at the uniform velocity 7500 rpm for 18s:

**Mode 2:** 0-2s:11000rpm; 2-5s:7500rpm; 5-8s:13000 rpm; 8-11s:17000 rpm; 11-14s:25000 rpm.

**Mode 3:** 0-2s:7500 rpm; 2-4s: 9000 rpm; 4-6s:15000 rpm; 6-14s:25000 rpm.

**Mode 4:** 0-8s: 7500 rpm; 8-11s:15000 rpm; 11-25s:25000 rpm; 25-35s:7500 rpm.

**Mode 5:** 0-9s: 7500 rpm; 9-11s:18000 rpm; 11-14s:21000 rpm. 14-50s:25000rpm.

**Caution:** Read the instruction manual and carefully check each accessory before operating this unit.

## Instruction Manual

1. This appliance is not intended for use by minors (under the age of 18) or persons with reduced physical, sensory or mental capabilities, unless supervised by an adult or guardian.
2. Before using this unit, check that the mains power voltage corresponds to the voltage shown on the rating plate.
3. Always remove the power cable from the wall socket when not in use or before carrying out any cleaning or maintenance operation.
4. Never leave this unit unattended when it is turned on.
5. Keep this unit out of reach of children.
6. Do NOT switch the appliance ON if it appears to be faulty in any way.
7. For repairs, accessories or power cord replacement, contact your dealer or an authorized Service Center.
8. Do not immerse the base into water for any reason (including cleaning or maintenance) and never start the unit or press the control button with wet hands.
9. The water temperature should not be over 60 degrees Celsius when cleaning the unit.
10. Do not leave the unit on for an extended period of time as you risk damaging internal parts.
11. When the motor is running, do not insert your finger or other objects into the machine and/or jug.
12. This unit contains sharp cutting blades which pose potential injury when touched in any way. Show extreme caution when cleaning or emptying the jug.
13. Switch off the appliance and disconnect the power supply before changing accessories or parts.
14. If the supply cord is damaged, it must be replaced by the manufacturer, your service agent or similarly qualified persons in order to avoid a hazard.
15. The max. noise value is 80dB(A), hearing protection is recommended.

**Tip:** When crushing ice press the "PULSE" button for three seconds, then select the program.

**Note:** The motor is equipped with safety protection setting.  
If over loaded, the unit will turn off automatically and re-operate after cooling.

## Making Fruit/Vegetable Sauce

1. Place the blender on a dry and horizontal surface.
2. Make sure the power switch is on the "OFF" position.
3. Carefully lock the Jug to the appointed position.
4. Put approximately 400g of fruit or vegetable into the blender Jug and add water. Ensure you do not exceed the maximum level on the jug.
5. Open sound insulation cover and place the power cable in to the appropriate power socket and press the power switch to the "ON" position. Close the sound insulation cover.
6. The "STOP" button on the console will light up to indicate the power is on.
7. The "JUG" button on the console will light up to indicate the jug is placed in the correct position.
8. Choose a suitable speed mode or pulse mode and blend continuously for a short period of time, then press the "STOP" button. Allow unit to rest and cool down. Repeat this step until the appropriate consistency is reached.
9. Then remove the power supply, carefully disassemble the blender jug and pour out the Fruit/Vegetable mix.

## Making Crushed Ice

1. Place the blender on a dry and horizontal surface.
2. Make sure the power switch is on the "OFF" position.
3. Carefully lock the jug to the appointed position.
4. Open sound hood and place approximately 300g of ice-cubes into the blender Jug. Place sound insulation down and press the power switch to the "ON" position. Then connect the power supply.
5. Choose suitable speed mode or pulse mode, and let the unit operate continuously for a short time. Press the "STOP" button and allow unit to rest and cool down.
6. Repeat above step until the ice shake reaches the ideal consistency, then cut off the power. Once motor has stopped running, disassemble the blender jug and pour out the ice shake.

**Tip:** When crushing ice press the "PULSE" button for three seconds, then select the program.



## Troubleshooting

Trouble	Possible	Cause Check
Motor does not operate	Safely lock is not connected	Reassemble the jug and connect with the base correctly.
Unit overheating or producing burnt/foul smell	Too much food or working continuously for too long	Reduce the food and run it again after the unit cools down
Producing inconsistent blend or funny taste	None or not enough water in machine	Add suitable water

## Cleaning and maintenance


After usage, please clean the appliance and wipe the parts with a dry cloth. Ensure it is stored in a dry place.

## Note

1. The appliance is easier to clean when done immediately after use.
2. Do not use abrasive cleaning agents, scourers, acetone, alcohol etc... to clean the appliance.
3. Simply clean the parts with the cleaning brush, warm water and some washing detergent. Rinse under the tap.



## Electric Circuit Diagram

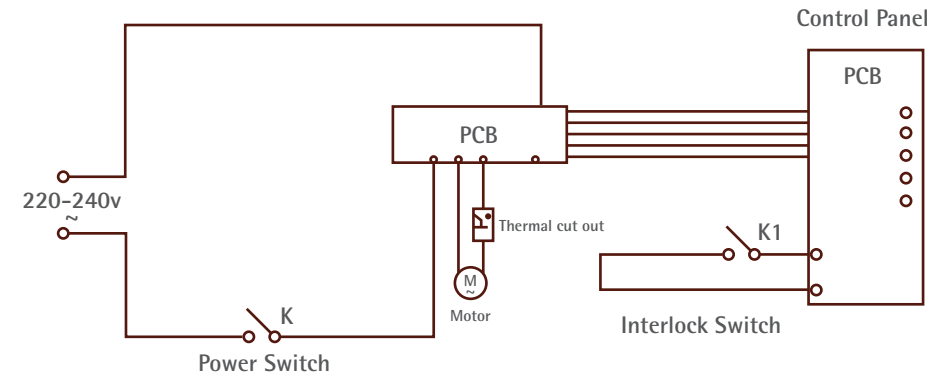

## Specification

Model No.:	B7000
Rated Voltage:	220-240V~
Rated Power:	800W
Rated Frequency:	50Hz
Rated working period:	≤2min
Rotational Speed:	17000r/min
Rated Interval period:	≥2min
Noise:	≤ 80dB(A)



### Meaning of crossed-out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal free of charge.

## Jug Care Instruction

- MixTec B7000 blender jugs should be washed by hand with a mild detergent.
- Jugs should be dried in the upright position.
- Washing in a dishwasher with harsh detergent will strip the oil out of the bearing.
- Drying jugs in an inverted position will rust the bearing.
- If jugs are not maintained appropriately the B7000 warranty may be voided.

### Address

17-21 George Street  
Blackburn 3130  
Australia

### Contact

FREEcall 1-800-COFFEE  
FREEfax 1-800-262 624

### Online

[www.CoffeeGateway.org](http://www.CoffeeGateway.org)  
[info@CoffeeGateway.org](mailto:info@CoffeeGateway.org)