

Product Manual

F5B

Functions

Thank you for purchasing this camera. In virtue of high performance chip applied, this product features high definition video with strong continuous dynamic images. The images support AVI video format, and thus clear pictures can be achieved. This device adopts a unique and super portable design, which benefits a convenient, safe and colorful daily life for you in various fields. Please make sure to carefully read this manual and keep it properly for future reference.

This manual is worked out based on updated information. Screen display and diagrams used in this manual are for detailed and visualized introduction for this digital camera. Because of technical R&D and product lots, the displays and diagrams may vary with the actual digital camera, and that is subject to the actual function of the camera.

Precautions

Before using the camera, please carefully read the precautions to ensure a correct and safe use of the camera, and to achieve the best performance and a prolonged lifespan of it.

- ◆ Keep the camera away from direct sunlight, and keep lens of the camera away from directing sunshine. Otherwise, image sensor of the camera may be damaged;
- ◆ Please be careful with the camera to avoid water or sand entering the camera while using it on sand beach or by water. Water, sand, dust or particles containing salt may damage the camera;
- ◆ Keep the camera away from contacting dust and chemical materials. It is a must to keep the camera at a cool and dry place with good ventilation. Do not place the camera at a place with high temperature, humidity or with much dusts to prevent abnormal operation caused to the camera;
- ◆ During long-term storage, regular use of the camera is required. Before using it, please check if it can normally operate;
- ◆ In case of dirt or dust accumulated on the camera or lens, clean them with a piece of soft, clean and dry cloth. In case of sand on the camera or lens, it is to gently blow the sands off. Do remember not to clean it a piece of cloth. Otherwise, surface of the camera or lens may be damaged;
- ◆ To clean surface of the camera lens, it is firstly to blow off the sands on it, and then clean it with a piece of mop or paper suitable for optical instruments. If needed, please clean camera with cleanser. It is strictly prohibited to clean the camera with organic solution;
- ◆ Touching surface of the lens with finger is strictly prohibited;
- ◆ In case of the first time of using memory card of the camera, please firstly make a back-up of the data, and then format the memory card in a one-off way;
- ◆ External TF card is a precise electronic component. The followings may cause loss or damage of the data:
 1. Improper use of the memory card;
 2. Bended card, fallen cards or impact against the memory card
 3. High temperature and humidity or direct sunlight;

4. Static field or electromagnetic field nearby;
5. Taking out the memory card or interference with the camera power supply during visiting the memory card with the camera or computer (meaning reading, writing or formatting);
6. Contact metal surface of the memory card with finger or metal article;
7. Beyond lifespan of the memory card (Please regularly purchase the new memory card).

About the Product

- ◆ This product features compact size and easy installation;
- ◆ In virtue of high performance chip applied, the product features high definition video and strong continuous and dynamic images. Even under low illumination, video can be recorded, and it also supports AVI video format;
- ◆ Support VGA (640x480) and HD (1280x720) capturing;
- ◆ Three sizes (including 5M, 3M and 1M) of image are for option;
- ◆ This product supports time and date watermark function, and time and date can be synchronously displayed while recording;
- ◆ Support high-speed USB2.0;
- ◆ Support max. 32G TF card;
- ◆ This product adopts loop coverage recording method and the new recording can automatically cover the former images achieving an endless rolling recording;
- ◆ This product is equipped with on-site replay function. You may check the video recorded on-site with the display. It also supports replay with computer.

System Requirements

System Requirements	
Operation system	Microsoft Windows2000, XP, Vista, 7
CPU	Above Intel Pentium III 800MHz or equivalent CPU
Memory	Minimum 512MB
Sound card, video card	Sound card and video card should support DirectX8 or higher version
CD driver	4 times of speed of faster
Hard disk	Over 500MB free space
Others	1 standard USB1.1 or USB2.0 interface


Appearance and key introduction

Mode switch:

- Photograph
- Video
- Replay



Lens

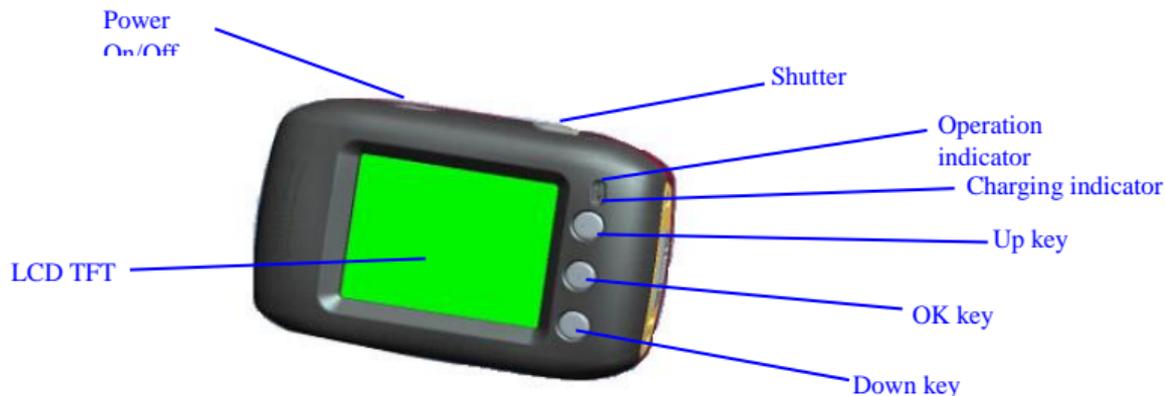

Key/Indicator	Function
Power On/Off	Power the camera on or off. When opening the menu, switch over between normal (effect parameters and replay of image, video) and setup menu.
Shutter	In recording video mode, it is used to start/stop recording; in capture mode, it is used as a shutter; it is used to play the video (in replay mode); confirmation (when operating the menu).
Up key	Digital zoom in (capture/video mode); menu selection (after opening the

	menu); pause, continue playing (when playing and recording video in replay mode)	
OK key	Open/exit from menu. Stop playing (when replaying video)	
Down key	Digital zoom out (capture/video mode); menu selection (after opening the menu);	
Mode switch	Switch over among modes of capture, video, replay	
Operation indicator	The upper one is a charging indicator.	In power-off state, it keeps constant lighting when the charger is connected for charging.
	The lower one is an operation indicator.	It flashes once during capturing, and it keeps constant lighting when connected with computer portable disk.

Start Use

1. Charge built-in lithium battery



In power-off state, when the camera is connected with computer, charging begins. At this time, the charger indicator lights and it turns off when charged full. Generally, it costs 2-4 hours to charge full.

2. Use memory card


1. Following the instructions carved by slot of the memory card, it is to insert FT card into the card slot till entirely inserted;
2. To take the FT card out, after gently pressing the end of the memory card inwards, the card will reject out;



Note: The camera is not equipped with a built-in memory, and thus a memory card is required.

3. Power On/Off:

3.1 Power-on: If to press and hold POWER key for 3 seconds, the screen starts up and the camera enters startup state;

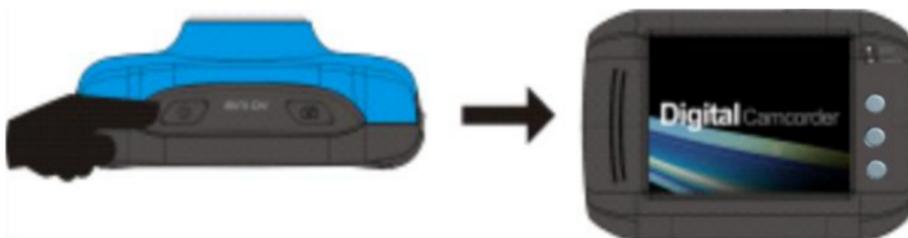

3.2. Power-off: In idle state of the camera, if to click POWER key, the camera turns off;

Automatic power-off: When idle time set for the camera reaches, it automatically turns off to save power.

The default time of the system automatic power-off is 5 minutes;

- 3.3. Power-off due to low battery: In case of extremely low battery, an icon of  "shown on the LCD screen. Please timely charge the battery. When the icon turns red and flashes, the camera will automatically power off.


4. Functional mode switchover

The camera is equipped with three modes: capture, video and replay mode. After power-on, the modes can be switched over with MODE switch.

Capture mode: Take pictures;

Video mode: Record video and driving (5min, 3min and 1min for one phase are for option.);

Playback mode: Picture and video file playback

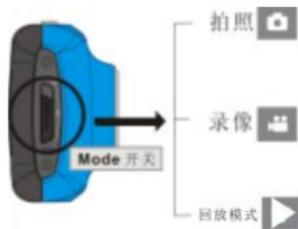

5. Indicators

Operation indicator: When the camera works (e.g. recording video, capturing or automatic screen turn-off), the operation indicator lights;

Charger indicator: Constant lighting is to remind user that the camera is being charged.

6 Video mode

When pushing Mode switch to video mode, click shutter in preview state to start recording video; to


stop video recording, it is to click it again. It will also automatically stop recording in case that no free room left in the memory card or the battery is over low:

- 1 **00:00:01**: time-meter, indicating 1 second left for recording (indicating 1 second recorded during recording);
- 2  : mode icon: indicates the current mode is video recording;
- 3  : loop recording video time icon: indicates the current loop video recording time is 3 minutes;
- 4  : movie size: indicates the current movie size is 720P;
- 5  : indicates currently a memory card is inserted;
- 6  : magnification of digital zoom: press Up and down key to adjust zoom among 1x-4x;
- 7  : battery icon: indicates current battery level;
- 8  : white balance icon: indicates the current white balance mode is automatic;
- 9  : metering icon: indicates it is currently the pan overall perspective metering.



Video menu setup

In video mode, press OK key to open menu, and then press Up and Down key to select menu. When selecting menu, background of the selected item will be highlighted. Press Shutter to enter sub-menu. In sub-menu, press Up and Down key for selection, press Shutter for confirmation and back to main menu. In the main menu, press OK key to exit from the menu.

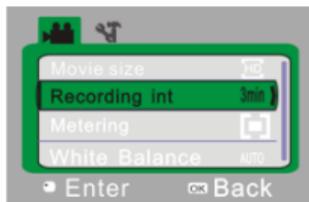

▲ Video menu


Video menu options

Main menu	Sub-menu	Description
Video format	1280x720	High resolution format
	640X480	Medium resolution format
Recording int	Off	Power-off driving record
	1min	Set driving record to 1 minute as a repeating phase.
	3min	Set driving record to 3 minutes as a repeating phase.
	5min	Set driving record to 5 minutes as a repeating phase.
Metering mode	Central metering	Metering subject to the central area
	Multi-point metering	Metering subject to multi-points


	Point metering	Metering subject to one point
White balance	Automatic	Using automatic white balance, suitable for most cases;
	Daylight	Suitable for daylight environment
	Cloudy	Suitable for cloudy environment
	Fluorescent light	Suitable for fluorescent light source environment
	Tungsten light	Suitable for tungsten light source environment
Special effect	Normal	Normal effect
	White and black	White and black effect
	Antique	Retro effect
	Negative film	Negative film effect
	Red	Reddish effect
	Green	Greenish effect
	Blue	Bluish effect
Date stamp	Off	Turn off printing date/time on the file
	Date	During capturing/recording video, print date on right bottom corner of the file
	Date and time	During capturing/recording video, print date and time on right bottom corner of the file

7 Driving video recording:

Push Mode switch to Video mode, open the menu, press Down key to select “Recording Int” menu, press Shutter key to enter sub-menu, “1min, 3min, 5min” recording loop mode are for free selection. After pressing OK key for confirmation, press OK key again to exit from the menu. When Shutter is pressed, it starts video recording. During video recording, the camera will automatically stop recording video based on 1min, 3min, 5min selected, and immediately starts next section of video recording (e.g. when 5min is selected in the menu, the camera will automatically stop when 5min recording reached, and starts next section of video recording). When the memory card is full, the earliest recorded section of file will be deleted for corresponding room for further recording, and it repeats in such a method.

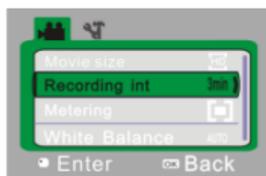

▲Open video recording menu

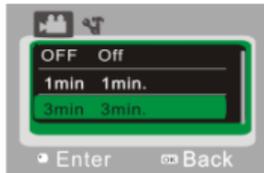

▲Select loop recording time and press OK to confirm.



▲Exit from menu and press Shutter to start loop video recording

Note: After selecting OFF in “Recording Int” menu, when existed from the menu, the camera turns to normal video recording. Normal recording is beyond the limit of time, and it will not stop until the memory card is full.

8 Capture mode:

Push Mode switch to Capture mode. Press Shutter once in preview state or click center of LCD for a picture taken:

1 **9999**: Counter: indicates quantity of pictures taken or available to be taken;

2  : mode icon: indicates it is currently the mode of capture;

3  : movie size: click this icon to select among 1M/3M/5M;

4  : indicates currently a memory card is inserted;

5  1.84 : magnification of digital zoom: press Up and down key to adjust zoom among 1x-4x;

6  : battery icon: indicates current battery level;

7  : Self-timer icon: indicates the current self-timer mode is set to 10 seconds;


8  : white balance icon: indicates the current white balance mode is automatic;

9  : metering icon: indicates it is currently the pan overall perspective metering.



Capture menu setup

In capture mode, press OK key to open menu, and then press Up and Down key to select menu. When selecting menu, background of the selected item will be highlighted. Press Shutter to enter sub-menu. In sub-menu, press Up and Down key for selection, press Shutter for confirmation and back to main menu. In the main menu, press OK key to exit from the menu.

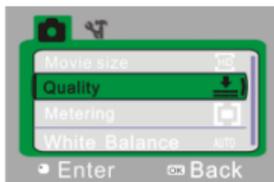

▲ Capture menu

Capture menu options


Main menu	Sub-menu	Description
Image size	2592x1944	5 megapixel resolution
	2048X1536	3 megapixel resolution
	1280X960	1 megapixel resolution
Image quality	Excellent	Best quality image
	Good	Good image quality
	Normal	General quality image
Metering mode	Central metering	Metering subject to the central area
	megapixel resolution	Metering subject to multi-points
	Point metering	Metering subject to one point
White balance	Automatic	Using automatic white balance, suitable for most cases;
	Daylight	Suitable for daylight environment
	Cloudy	Suitable for cloudy environment
	Fluorescent light	Suitable for fluorescent light source environment
	Tungsten light	Suitable for tungsten light source environment

Exposure	/	Use Left and Right key to adjust exposure compensation
Capture mode	Off	Use general single shot mode
	2s	Use 2sec. delay self-timer mode
	10s	Use 10sec. delay self-timer mode
	Continuous shooting`	Use continuous shooting
Special effect	Normal	Normal effect
	White and black	White and black effect
	Antique	Retro effect
	Negative film	Negative film effect
	Red	Reddish effect
	Green	Greenish effect
	Blue	Bluish effect
Date stamp	Off	Turn off printing date/time on the file
	Date	During capturing/recording video, print date on right bottom corner of the file
	Date and time	During capturing/recording video, print date and time on right bottom corner of the file

9 Playback mode:


9.1 After power-on, push Mode switch back to Playback mode:

- 1  : mode icon: indicates it is currently the mode of playback;
- 2  : Indicates that there is one file in current folder/totally one folder;
- 3  : indicates that the current folder is locked;
- 4  : **indicates the current file is an AVI video file.**

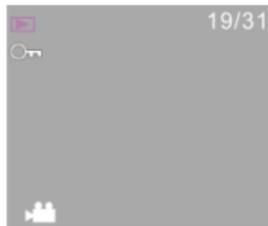

9.2 Playback menu setup

In playback mode, press OK key to open menu, and then press Up and Down key to select menu. When selecting menu, background of the selected item will be highlighted. Press Shutter to enter sub-menu. In sub-menu, press Up and Down key for selection, press Shutter for confirmation and back to main menu. In the main menu, press OK key to exit from the menu.

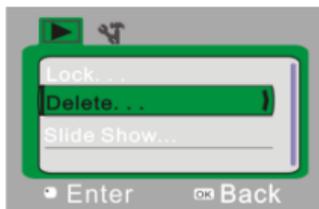


▲ Playback menu


Playback menu options

Main menu	Sub-menu	Description
File lockup	Lock/unlock this file	Lock/unlock this file
	Lock all	Lock all files
	Unlock all	Unlock al files
File deletion	Delete this file	Delete the current file
	Delete all	Delete all files
Slide show	Start	Start playing slide show
	Interval	1sec.~10sec.
	Repeat	Yes/No

9.3 Play movie clips:

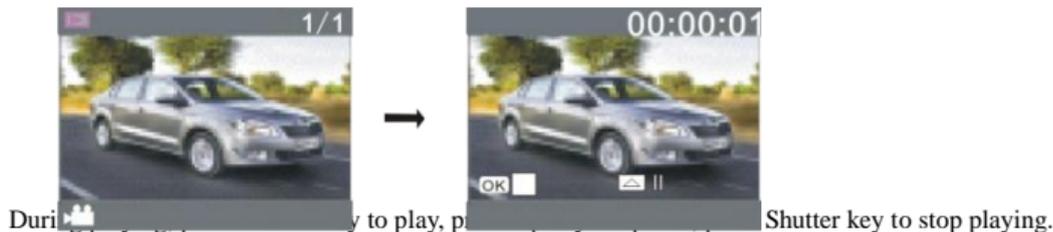


9.4 Delete file:

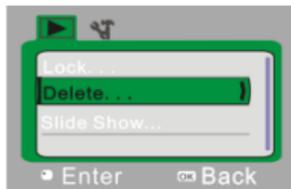

1) After selecting the file to be deleted, open the menu, press Up and Down key to select “Delete...”.




2) Press Shutter key to enter, after selecting “One”, press Shutter key for confirmation). “All” means to delete all files.)

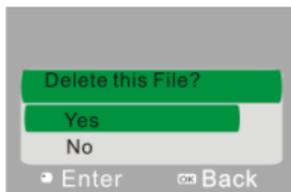

3) After selecting “Yes”, press Shutter key to delete the file. When the file is deleted, press OK key to exit from the menu.

10 System setup menu:

In capture, video recording or playback mode, press OK key to open menu, and then press Power key to switch over to setup menu. In setup menu, press Up and Down key for selecting menu. When selecting menu, background of the selected item will be highlighted. Press Shutter to enter sub-menu. In sub-menu, press Up and Down key for selection, press Shutter for confirmation and back to main menu. In the main menu, press OK key to exit from the menu.

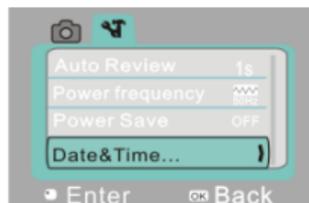

▲System setup menu


System setup menu options

Main menu	Sub-menu	Description
Automatic playback	Off	No playback performed after capture
	1 second	Playback performed 1 second later after capture
	3 seconds	Playback performed 3 seconds later after capture
Power frequency	50Hz	Set to 50Hz light source frequency
	60Hz	Set to 60Hz Playback performed 1 second later after capture

Automatic shutdown	1 minute	Automatic shutdown performed in case of 1 minute idle
	3 minutes	Playback performed 3 seconds later after capture
	5 minutes	Playback performed 5 seconds later after capture
	OFF	Cancel automatic shutdown
Date and time	/	Set up date and time format
Format	Yes/No	Format memory card
Default value	Yes/No	Back to default value

Setting date and time:

Press OK key to open the menu, and then press Power key to enter setup menu. Press Down key to select “Date&Time” item, and press Shutter key to enter setup window.

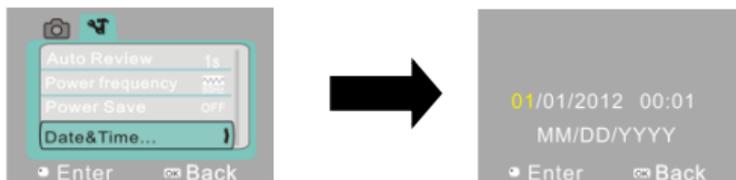

In setup window, press Power key to elect the item to be adjusted (Date, time). The selected item will be highlighted in yellow. Then press Up key or Down key for adjustment. At completion of adjustment, press Shutter key to confirm the adjustment, or press OK key to cancel the setup and return. Finally press PK key to exit from setup mode.

Application in PC

1. Connect with PC

The camera is equipped with function of plug and play. In power-in state, after connecting this device to the computer with USB cable, it can be switched over to portable hard disk mode.

Portable hard disk icon will be shown in the window of “My Computer”. Images/video shot by you are stored in portable hard disk folder I:\DCIM\100MEDIA (“I” indicates equipment portable hard disk)

Note: If to use portable hard disk function in Windows 2000 operation system or higher version, it is not needed to install driver.

Technical Parameters

Image sensor	1.3 megapixel (CMOS)
Function mode	Video, capture, car mode, portable disk, PC cam
Lens	F3.1 f=6.5mm
Digital zoom	4x
Shutter	Electronic shutter
LCD display	1.77”TFT screen
Image resolution	5M(2592×1944), 3M(2048×1536), 1M(1280×1024)

Video resolution	VGA: 640x480 (60 frame/second); 720P:1280x720 (30 frame/second)	
White balance	Automatic /Sunny / Cloudy / Fluorescent light / Tungsten light	
Exposure	-2.0 ~ +2.0	
File format	Video	AVI
	Image	JPEG
Storage medium	TF card (Max. support 32GB)	
USB interface	High-speed USB 2.0 interface	
Power supply	Built-in 3.7V chargeable lithium battery	
Dimensions (LxWxH)	67*48*29mm	
Weight	Roughly 46.5g	

Standard package



Camera



User Manual



USB cable