

metos

BLAST CHILLER / SHOCK FREEZER

GO

4240710, 4240712, 4240714, 4240716, 4240718, 4240720, 4240722, 4240723, 4240724, 4240725, 4240726, 4240728, 4240730,
4240732, 4240734 4240736, 4240738

Installation- and user manual



TABLE OF CONTENTS

1. STANDARDS AND GENERAL INSTRUCTIONS

- 1.1. Testing
- 1.2. Warranty
- 1.3. Introduction
- 1.4. Prerequisites supplied by the customer
- 1.5. Instructions regarding requests for intervention
- 1.6. Instructions for spare parts

2. TECHNICAL DATA

- 2.1. Noise level
- 2.2. Materials and fluids used

3. OPERATION

- 3.1. Applications, purpose, declared and non-declared use, authorised use
- 3.2. Dangerous areas, risks, hazards and avoidable risks
- 3.3. Safety devices

4. ROUTINE AND PROGRAMMED MAINTENANCE

- 4.1. Elementary safety standards
- 4.2. Instructions regarding emergency operations in the case of fire
- 4.3. Cleaning the machine
- 4.4. Periodic checks
- 4.5. Precautions in the case of extended periods of inactivity
- 4.6. Extraordinary maintenance

5. DISPOSAL

- 5.1. Disconnection
- 5.2. Storage
- 5.3. Dismantling and disposal

6. INSTALLATION

- 6.1. Transport and handling of the product
- 6.2. Description of commissioning operations
- 6.3. Positioning
- 6.4. Connection
- 6.5. Re-installation

7. USER INSTRUCTIONS

- 7.1. Control panel
 - 7.1.1. Clock
- 7.2. Operational cycles
 - 7.2.0. Switching on
 - 7.2.1. +3°C soft or hard blast chill cycle and soft or hard -18°C shock freeze with core probe
 - 7.2.2. +3°C soft or hard blast chill cycle and soft or hard -18°C shock freeze with timer
 - 7.2.3. Customised blast chill/shock freeze cycles
 - 7.2.4. Indefinite time cycle with cabinet setpoint setting
 - 7.2.5. Conservation phase
 - 7.2.6. Memorising a blast chill/shock freeze programme
 - 7.2.7. Recall of memorised blast chill/shock freeze programme
- 7.3. Defrosting
- 7.4. Sterilisation (optional)
- 7.5. Printer (optional)
- 7.6. Alarms/errors
 - 7.6.1. High temperature alarm
 - 7.6.2. Low temperature alarm
 - 7.6.3. Door open alarm
 - 7.6.4. Pressure switch/electric alarm
 - 7.6.5. Time-out alarm
 - 7.6.6. Blackout alarm
 - 7.6.7. Cabinet probe alarm
 - 7.6.8. Core probe alarm
 - 7.6.9. Evaporator probe alarm

1. STANDARDS AND GENERAL INSTRUCTIONS

1.1. TESTING

The product is dispatched after visual, electrical and operating tests have been passed.

1.2. WARRANTY

The warranty on the machine and related parts we manufacture is valid for a period of 1 year from the date of invoice and consists of the free supply of spare parts which, according to our final judgement, are deemed to be faulty.

It is the responsibility of the manufacturer to eliminate any faults and defects on condition that the machine has been correctly used in accordance with the instructions provided in the manual.

During the warranty period the customer will be responsible for costs related to labour, travel or transfers, transport of the parts and any equipment to be replaced.

The items replaced under warranty remain our property and must be returned by the customer at the his own expense.

1.3. INTRODUCTION

This manual is intended to provide all the necessary information for correct installation, operation and maintenance of the machine by qualified personnel.

Read the instructions provided carefully prior to any operation, as these contain essential safety indications concerning the machine.

THE MANUFACTURER DECLINES LIABILITY FOR NON-DECLARED USE OF THE PRODUCT.

THE REPRODUCTION OF THIS MANUAL OR PARTS THEREOF, IS PROHIBITED.

GENERAL SAFETY INSTRUCTIONS

The manufacturer declines all liability for any operation performed on the machine in disregard of the instructions provided in this manual.

 Before connecting the machine to the power supply, ensure that the voltage and frequency correspond to those indicated on the specifications plate.

 **Always connect the machine to an appropriate high sensitivity differential magnet circuit breaker switch (30 mA).**

 Before performing any cleaning or maintenance operation disconnect the machine from the power supply by:

- 1) Positioning the master switch on OFF;
- 2) Removing the plug.

 Wear gloves to perform maintenance on the motor compartment or on the evaporating unit positioned inside the machine.

 Do not insert screwdrivers or other devices between the guards (fan evaporator protections etc.).

 Do not handle electrical parts with wet hands or without shoes.

 Ensure good functioning of the compressor unit and evaporator by never obstructing the air inlets.

 In the case of machines fitted with wheels, check that the rest surface is flat and perfectly horizontal.

 In the case of machines fitted with locks and keys, it is recommended to keep the keys out of the reach of children.

 Use is only reserved for suitable, trained personnel. Installation, routine and extraordinary maintenance (for example, cleaning and maintenance of the refrigerating system), must be performed by specialised and authorised technical personnel with a sound knowledge of the refrigeration and electrical systems.

1.4. PREREQUISITES SUPPLIED BY THE CUSTOMER

Provide a high sensitivity differential magnet circuit breaker switch (30 mA).

Provide a wall socket with earth of the type used in the country in which the machine is operated.

Verify that the surface on which the machine rests is level.

In the case of water-cooled machines or with equipment with direct humidity control, provide connection to a water system.

1.5. INSTRUCTIONS REGARDING REQUESTS FOR INTERVENTION

Often operating difficulties are a result of ordinary causes which are almost always remediable inhouse, therefore, before requesting assistance from a technician, perform the following simple checks.

If the machine stops operating:

- check that the plug is inserted correctly into the electrical socket.

If the cabinet temperature is insufficient:

- check that this is not being affected by a heat source;
- check that the doors close perfectly;
- check that the condenser filter is not blocked;
- check that the ventilation grills of the control panel are not obstructed;
- check that the items inside the cabinet are not obstructing ventilation.

If the machine is noisy:

- check that there is no loose contact between the machine and another object;
- check that the machine is perfectly level;
- check that the screws (at least those visible) are tightened;

If the problem persists after the above checks request technical assistance, indicating:

- the nature of the defect;
- the code and serial number of the machine appearing on the specifications plate.

1.6. INSTRUCTIONS FOR SPARE PARTS

ORIGINAL SPARE PARTS ARE RECOMMENDED.

The manufacturer does not accept any responsibility for the use of non-original parts.

2. TECHNICAL DATA

The technical data plate is located outside on the side or at the rear and inside the motor compartment.

2.1. NOISE LEVEL

L_{eq} at the noisiest point at 1m in operating conditions	< 70 dB(A)
L_{pc} at 1m in operating conditions	< 130 dB(C)

TESTING ENVIRONMENT

Testing was performed in a rectangular showroom with no sound absorption.

Significant obstacles were absent in the area surrounding the machine.

REFERENCE REGULATIONS

Noise testing was performed in compliance with Legislative Decree 277 and in accordance with methods described in ISO 230-5, in order to obtain the data required by 2006/42/EC Directive.

OPERATING CONDITIONS OF THE MACHINE

Testing was performed under the most severe condition which corresponds to the start-up phase called "PULL DOWN".

2.2. MATERIALS AND FLUIDS USED

Respecting the environment, all the used materials comply with Legislative Decree no.151, July 25, 2005, in the implementation of directives RoHS (2002/95/EC) and WEEE (2002/96/EC and 2003/108/EC), concerning the reduction in use of hazardous substances in electrical and electronic equipment as well as waste disposal.

The refrigerant gases or the foaming agents of the polyurethane foams used are in compliance with Regulation EC 842/2006.

3. OPERATION

3.1. APPLICATIONS, PURPOSE, DECLARED AND NON-DECLARED USE, AUTHORISED USE

Our refrigerators are agri-food machines (EC regulation No. 1935/2004), intended for foodstuffs.

The machines are designed with the appropriate equipment to guarantee the health and safety of the user.

They are not suitable for storing pharmaceuticals, chemicals or any other non food products.

Avoid the appliance misuse. Do not introduce into the cell: live animals, objects or corrosive products.

APPLICATION OF THE BLAST CHILLER-SHOCK FREEZER

The blast chiller-shock freezer is a machine which rapidly lowers the temperature of cooked or raw foods, in order to maintain the organoleptic properties (chemical-physical and nutritional) of these foods unaltered.

COOLING OR FREEZING TIME IS A PARAMETER THAT IS DIFFICULT TO ESTABLISH WITH ANY PRECISION, SINCE THIS DEPENDS ON THE TYPE OF FOOD OR FOODS IN A COOKED DISH.

THE DECLARED PERFORMANCE LEVELS WERE OBTAINED BY USING POTATO PURÉE IN OFF THE SHELF ALUMINIUM TRAYS GN1/1 H=40. THE THICKNESS OF THE MASHED POTATOES INTO THE CONTAINERS IS 25mm.

Blast chilling temperature cycle

This cycle enables rapid lowering of the temperature of the cooked food (from +90 to +3°C in 90 minutes) to avoid it remaining within the critical temperature range of +10°C to +65°C.

The cooked and blast chilled food can be stored in the refrigerator for up to 5 days.

Shock freezing temperature cycle

Shock freezing (from +90°C to -18°C) prevents the formation of macro-crystals of ice in the food, which would result in a loss of liquids and vitamins. This cycle is suitable for cooked and raw food and conserves these foodstuffs for up to 2 months and 12 months respectively.

Conservation cycle

At the end of every blast chilling or shock freezing cycle the machine envisions a conservation cycle during which the equipment functions as a normal refrigerator and the duration of which is at the user's discretion.

FOODSTUFFS STORAGE

For the best performance of the appliance, the following indications should be observed.

Conservation cycle:

- do not introduce hot foods or uncovered liquids inside the machine;
- wrap or protect foodstuffs, particularly if they contain aromas;
- Arrange the foodstuffs inside so as not to limit air circulation, avoiding placing papers, cartons, boards, etc. on the racks, which may obstruct the passage of air;
- as far as possible, avoid opening the door frequently or for lengthy periods of time.

Blast chilling/shock freezing cycle:

- do not open the door once the cycle has commenced and until the cycle has terminated;
- avoid wrapping, protecting or closing containers with lids or insulating films;
- do not use trays or containers taller than 65mm;
- do not stack foodstuffs;
- use aluminium or stainless steel containers.

3.2. DANGEROUS AREAS, RISKS, HAZARDS AND AVOIDABLE RISKS

The refrigerator equipment has been designed and manufactured with the appropriate devices to guarantee the health and safety of the user and does not contain dangerous edges, sharp surfaces or protruding elements.

The stability of the machine is guaranteed even when the doors are open; however, do not pull on the doors.

In the case of refrigerators with drawers, do not open more than one drawer at a time and do not lean or sit on an open drawer, so as to avoid overturning or damaging the refrigerator.

N.B.: In refrigerators with glass doors do not extract more than one basket or rack at a time so as not to compromise the stability of the refrigerator. Gradually arrange the foodstuff starting from the bottom upwards; similarly, remove foodstuff starting from the top downwards.

THE MACHINE HAS NOT BEEN DESIGNED TO BE INSTALLED IN AN EXPLOSIVE ATMOSPHERE.

MAXIMUM LOAD (UNIFORMLY DISTRIBUTED) PER BASKET, DRAWER OR RACK = 40 KG

APPLIANCE WITH WHEELS

When moving, take care not to forcefully push the refrigerator so as

avoid overturning and damage. Also note any unevenness of the surface on which the refrigerator is being pushed. Appliances fitted with wheels cannot be levelled, therefore, ensure that the surface on which they rest is perfectly horizontal and level.

 **ALWAYS BLOCK THE WHEELS WITH THE STOPS PROVIDED.**

RISKS CAUSED BY MOVING PARTS

The only moving part is the fan, which presents no risk as it is isolated by a protection grill secured with screws (before removing this protection, disconnect the machine from the power supply).

RISKS CAUSED BY LOW/HIGH TEMPERATURES

Adhesive labels indicating "TEMPERATURE WARNING" are located in the proximity of areas which constitute low/high temperature dangers.

RISKS CAUSED BY ELECTRICAL POWER

Electrical risks have been eliminated by designing the electrical system in accordance with IEC EN 60204-1 and IEC EN 60335-1. Adhesive labels indicate "high voltage" areas which may present electrical risks.

RISKS CAUSED BY NOISE

Leq at the noisiest point at 1m in operating conditions < 70 dB(A)
Lpc at 1m in operating conditions < 130 dB(C)

RESIDUAL RISKS

Any liquids emanating from foodstuffs or washing products are prevented from leaking outside by a drain positioned at the bottom. During cleaning operations, remove the plug and place a collection tray under the machine (Hmax=100mm).

IT IS OF UTMOST IMPORTANCE THAT THE PLUG IS REFITTED IN THE HOLE. IN THE CASE OF MACHINES WITH NO DRAIN, PREVENT THE STAGNATION OF LIQUIDS BY CLEANING THOROUGHLY ON A DAILY BASIS.

3.3. SAFETY DEVICES

 IT IS PROHIBITED TO TAMPER WITH OR REMOVE THE SAFETY DEVICES PROVIDED (PROTECTION GRILLS, DANGER LABELS, ETC.). THE MANUFACTURER DECLINES ALL LIABILITY SHOULD THE SAID INSTRUCTIONS NOT BE RESPECTED.

4. ROUTINE AND PROGRAMMED MAINTENANCE

The information contained in this chapter addresses suitable, trained personnel in the case of routine maintenance; while specialised and authorised personnel is addressed for extraordinary and/or programmed maintenance.

4.1. ELEMENTARY SAFETY STANDARDS

Before performing any intervention, disconnect the machine plug from the electrical mains power supply.

REMOVAL OF PROTECTIONS OR SAFETY DEVICES IS PROHIBITED.

In routine maintenance operations, the removal of protections/safety devices (grills, adhesive labels, etc.) is prohibited.

4.2. INSTRUCTIONS REGARDING EMERGENCY OPERATIONS IN THE CASE OF FIRE

 DO NOT USE WATER IN THE CASE OF FIRE.
 USE CO₂ FIRE EXTINGUISHER (CARBON DIOXIDE) AND COOL THE MOTOR COMPARTMENT AREA AS QUICKLY AS POSSIBLE.

4.3. CLEANING THE MACHINE

Before any cleaning operation, disconnect the machine from the electrical power supply.

INITIAL INSTALLATION

Before operating, wash the interior and accessories with a little water and neutral soap in order to remove the characteristic "new" odour. Arrange the accessories inside the cabinet in positions most appropriate for use.

DAILY CLEANING

Carefully clean the external surfaces of the machine using a damp cloth and following the direction of the finish.

Use neutral detergents and not substances with a chlorine base and/or that are abrasive.

Do not use utensils which may cause scratches and consequently the formation of rust. Rinse with clean water and dry carefully.

Clean the interior of the cabinet with neutral detergents which do not contain chlorine or abrasives, to avoid the formation of dirt residues. In the case of hardened residues, use soap and water or neutral detergents, using a wooden or plastic spatula if necessary.

After cleaning, rinse with a little water and dry carefully.

Do not wash the machine with direct water jets, as any water leakage into electrical components may affect their correct functioning.

Lower and adjoining areas of the machine must also be cleaned on a daily basis with soap and water and not with toxic or chlorine-based detergents.

WARNINGS FOR BLAST CHILLERS WITH WASHING KIT

Always use the neutral detergent supplied by the manufacturer so to guarantee maximum cleanliness without damaging the interior surface and the relative functional parts of the blast chiller (evaporator, fans, heating plant, etc).

Before starting any washing program check, using the visual indicator positioned in the lower left side of the appliance, that the level of detergent is above the minimum accepted.

PERIODIC CLEANING AND GENERAL MAINTENANCE

Cleaning and general maintenance operations must be carried out to ensure the consistent performance of the machine.

The refrigerator unit (condenser) must be cleaned by specialised personnel.

Regularly clean the drain to avoid that the hole becomes blocked.

IT IS OF UTMOST IMPORTANCE THAT THE HOLE IS CLOSED ONCE AGAIN WITH THE APPROPRIATE PLUG.

4.4. PERIODIC CHECKS

- Check that the plug is correctly inserted in the power supply socket.
- Check that the appliances are not affected by heat sources.
- Check that the machine is perfectly level.
- Check that the door gasket seals perfectly.
- Check that the drain is not blocked.
- Check that the condenser battery is not covered with dust; should this be the case, request after-sales technical assistance.

4.5. PRECAUTIONS IN THE CASE OF EXTENDED PERIODS OF INACTIVITY

If an extended period of inactivity of the machine is foreseen:

- switch the machine off by pressing the OFF button on the control panel;
- remove the plug from the power supply socket;
- empty the refrigerator and carefully clean it (see cleaning section);
- leave doors ajar to ensure air circulation.

4.6. EXTRAORDINARY MAINTENANCE (only by specialised personnel)

Periodically clean condenser.

Check door gaskets to ensure perfect sealing.

Check that the electrical system is in order.

Check the surround heating elements (using an amperometric clamp).

IN THE CASE OF REPAIRS OR REPLACEMENT OF PARTS, ALWAYS PROVIDE THE CODE AND SERIAL NUMBER OF THE MACHINE, VISIBLE ON THE SPECIFICATIONS PLATE.

5. DISPOSAL

5.1. DISCONNECTION

The disconnection operations must be done by qualified technicians.

Avoid spilling or leakage into the environment.

Before disconnecting the unit collect, if there are any:

- refrigerant gas;
- non-freezing solutions present in hydraulic circuits.

5.2. STORAGE

Waiting for dismantling and disposal, the appliance can be temporarily stored outdoor provided that the unit electrical, refrigeration and plumbing circuits are intact and closed.

However country's laws on environmental protection are still to be observed.

5.3. DISMANTLING AND DISPOSAL



This symbol identifies the units as returning units, in directive RAEE 2002/96/CE.

Information regarding potential effects on environment and human health, due to the presence of hazardous substances, can be obtained from the manufacturer-distributor-importer, as in charge of collecting and processing the waste, or from the retailer where you purchased the appliance, or from the local services in charge of waste disposal.

DISMANTLING OPERATION MUST BE DONE BY QUALIFIED PERSONNEL.

Disposal

WEEE Directive requires that electrical and electronic equipment disposal and recycling must be handled through a dedicated collection, in suitable approved facilities, and in a separate way from the one done for mixed domestic waste disposal.

The user has the obligation of not disposing of the appliance at the end of the useful life of the same, as a domestic waste, but to deliver it to designated collection facilities authorized as required by regulations or specified by the distributor.

All materials are to be retrieved or disposed of in compliance with the national regulations concerning the subject.

For further information on the appliance disposal: contact the manufacturer.

6. INSTALLATION

(only by specialised technical personnel)

6.1. TRANSPORT AND HANDLING OF THE PRODUCT

The machine must be transported using suitable handling equipment and never manually.

If lifting systems are used, such as a forklift or transpallet, take particular care that the load is balanced.

Normally the packaging is in expandable polystyrene on wood pallets, secured to the bottom of the equipment for greater safety during transport and handling.

Warnings are printed on the packaging, representing the instructions to be complied with to ensure that no damage is caused during loading and unloading operations, transport or handling.

Warnings printed on our packaging:



TALL LOAD



FRAGILE



KEEP DRY

The user must dispose of the packaging in accordance with the laws in force in the applicable country.

STACKING LIMITS

When storing or transporting the machine, the maximum stacking limit is two machines, unless otherwise indicated with an appropriate adhesive label.

SINCE THE CENTRE OF GRAVITY OF THE MACHINE DOES NOT CORRESPOND TO ITS GEOMETRIC CENTRE, BE AWARE OF INCLINATIONS DURING HANDLING.

6.2. DESCRIPTION OF COMMISSIONING OPERATIONS

After removing the packaging from the machine, it is advisable to verify the integrity of the machine and the absence of damage due to transport. Any damage must be communicated to the carrier immediately. Damaged machines cannot be returned to the manufacturer under any circumstances without prior notice and written authorisation is received.



DURING HANDLING DO NOT PUSH OR DRAG THE MACHINE TO PREVENT OVERTURNING OR DAMAGE TO PARTS (E.G. FEET).



NEVER LEAN THE MACHINE ON THE DOOR SIDE.

6.3. POSITIONING

Position the machine in a well-aerated place and far from heat sources. Observe minimum gaps for operating functions, aeration and maintenance.

MACHINE WITH WHEELS

A machine with wheels cannot be levelled, therefore, ensure that the surface on which it rests is perfectly horizontal and level.



AFTER HAVING POSITIONED THE MACHINE, ALWAYS BLOCK THE WHEELS.



DURING HANDLING DO NOT PUSH FORCEFULLY OR DRAG THE MACHINE TO PREVENT OVERTURNING OR DAMAGE.

PAY PARTICULAR ATTENTION TO UNEVENNESS OF SURFACES. NEVER LEAN THE MACHINE FROM THE DOOR SIDE.



THE MACHINE HAS NOT BEEN DESIGNED TO BE INSTALLED IN EXPLOSIVE ENVIRONMENTS.

6.4. CONNECTION

Before connecting the machine to the power supply, ensure that the voltage and frequency correspond with those indicated on the specifications plate.

A variation of +/-10% of the normal voltage is permitted.

It is of utmost importance that the machine is connected to an efficient earth connection.

WARNINGS FOR BLAST CHILLERS WITH WASHING KITS

The appliance must be connected to the water supply network using the supplied flexible pipe, suitable for high temperatures and pressure and with 3/4" GAS attachment.

To prevent the excessive deposit of lime scale and therefore decrease plant maintenance the use of a water softener is recommended.

To increase efficiency the recommended water temperature must be between 40-60°C. The optimum network pressure must be between 2-5 bar for the rotor to rotate regularly. If the water pressure should fall below 0.5 bar a safety pressure switch will intervene that will immediately block the function, with signal on the alarm display.



For blast chillers with washing kit

IT IS FUNDAMENTAL NOT TO CHANGE THE DIRECTION OF THE ROTOR SPRAYING NOZZLES SO AS NOT TO COMPLETELY ALTER THE SYSTEM FUNCTIONING FEATURES.



DO NOT USE PLUGS WITHOUT EARTH. THE MAINS SOCKET MUST COMPLY WITH REGULATIONS VALID IN THE APPLICABLE COUNTRY.

EARTHING THE MACHINE IS A MANDATORY SAFETY MEASURE BY LAW

In order to protect the machine from any electrical overload or short-circuits, the connection to the power supply is through a high sensitivity differential magnet circuit breaker switch (30 mA) with manual re-set and with sufficient power.

For dimensioning the protection device, consider the following:

$I_{max} = 2.3 I_n$ (nominal current)

I_{cc} (short-circuit current) = 4500 A with 230v/1~50Hz power supply.

I_{cc} (short-circuit current) = 6000 A with 400v/3~50Hz power supply

6.5. RE-INSTALLATION

If a re-installation is necessary, proceed as follows:

- 1) Position the power supply switch on OFF;
- 2) Disconnect the plug from the power supply and wind up the cable;
- 3) Remove all foodstuff from the interior of the cabinet and clean the cabinet and accessories thoroughly;
- 4) Re-pack the machine, taking care to re-position the protective polystyrene and secure the wooden base, in order to prevent damage during transport;
- 5) Proceed as described previously for the new positioning and connection.

7. USER INSTRUCTIONS

7.1. CONTROL PANEL



Description buttons of control panel



START/STOP

After having connected the machine to the power supply, press this button to progress the machine from a state of inactivity (Off) to one of Stand-by, in preparation for setting the desired cycle

This button is also used to start/interrupt operation during the blast chill/shock freeze/conservation cycle



UP

Increase values, displays the temperature of the core probe



DOWN

Decrease values, displays cycle time elapsed



+3°C BLAST CHILL

Selection of blast chill at +3°C



-18°C SHOCK FREEZE

Selection of shock freeze at -18°C



SOFT

Selection of soft blast chill cycle (+3°C) or shock freeze (-18°C)



DEFROST

Start/stop defrost

By pressing the button for extended time, the temperature of the evaporator probe is displayed



PROBE HEATING

Heating for extraction of core probe



STERILISATION

Start/stop sterilisation process



PROGRAMME

Memory or recalls a blast chill/shock freeze cycle on memory



PROGRAMME

Start/stop the precooling cycle of the room

Description of the display and symbols



DISPLAY 1

Displays temperature of the core probe or time

DISPLAY 2

Displays temperature of the cabinet

DISPLAY 3

Displays the operational phase in progress (from 1 to 3)



Cabinet temperature



Heating active core probe



Blast chill/shock freeze cycle with core probe (flashing in core probe insertion test)



Blast chill/shock freeze cycle with timer



Sterilisation in progress



Blast chill cycle function selected (+3°C)



Shock freeze cycle function selected (-18°C)



SOFT Soft phase selected



Blast chill in progress (flashing when active compressor delay)



Conservation phase in progress



STOP Machine in Stop mode



Compressor activity indicator




Room fans activity indicator

GENERAL RECOMMENDATIONS


For correct use of the spike probe:

- avoid violent blows, they can jeopardise the correct functioning of the probe;
- sterilise the spike before use;
- the maximum recommended thickness of the product is 45mm;
- cleanliness of the spike determines good performance.

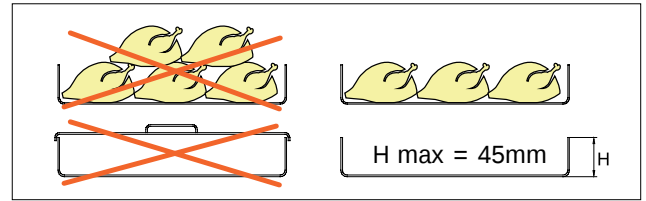


TO INSERT THE PROBE

- Insert the probe with the point as near as possible to the heart of the product.

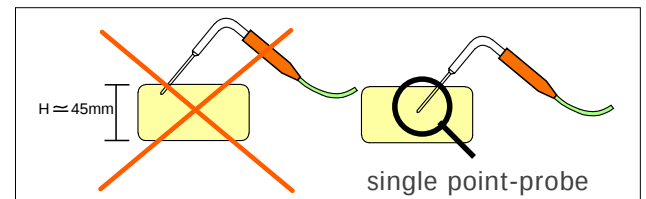

TO EXTRACT THE PROBE

- Heat the probe  see 7.2.5.
- Turn it.
- Extract it without tilting the spike.

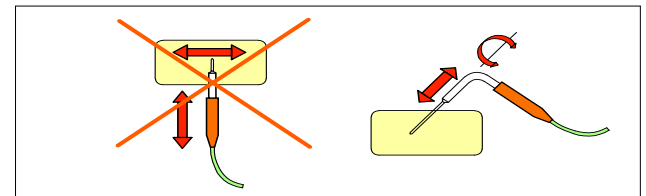

7.1.1. CLOCK (with optional expansion card for printer or supervision)

With the machine turned off by the  button, it is possible to change the clock setting by keeping the  and  buttons pressed simultaneously for extended time.

- DISPLAY 1 indicates the year value
- DISPLAY 2 indicates the letters "Year"

By using the  and  buttons it is possible to change the values of the respectively:



Use button  to confirm the value, which is displayed thereafter.

Press  button to exit.

7.2.0. SWITCHING ON



(Fig.1)

By pressing the  button the board turns on, no selection is visible in DISPLAY 1 (Fig.1), DISPLAY 2 indicates the cabinet temperature and the Stop symbol.

7.3.0.1 PRECOOLING

After having selected a blast chilling or freezing cycle (even already executed), pressing the button  activates a PreCooling cycle that takes the room temperature to:

- 10°C if a blast chilling cycle has been selected
- 25°C if a freezing cycle has been selected

If no cycle has been selected previously, the room behaves as if a freezing cycle has been selected.

Once the PreCooling SetPoint has been reached, the Buzzer sounds for 3 seconds every 60 seconds to indicate that the room is ready to execute the blast chilling cycle.

During the PreCooling cycle:

DISPLAY 2 shows the temperature of the room.

The symbols ,  and  or  are lit.

At the start of the compressor and fan, the respective symbols  are also lit.

Opening the door or pressing the button  interrupts the cycle, and the card repropose the last cycle selected.

7.2.1. +3°C SOFT OR HARD BLAST CHILL CYCLE AND -18°C SOFT OR HARD SHOCK FREEZE CORE PROBE

BLAST CHILL/SHOCK FREEZE PHASE

Press the  button to select the +3°C hard blast chill cycle and also the  button for the +3°C soft cycle .



(Fig.2)



(Fig.3)



(Fig.4)

Press the  button to select the -18°C hard shock freeze cycle and also the  button for the -18°C soft cycle .

 
The following symbols light up: core probe , type of blast chill soft  or soft  + the symbol soft or shock freeze hard , or soft  + the symbol soft , temperature  and **STOP** (Fig.2).

To start the selected cycle press the  button; the blast chill in progress symbol  lights up (Fig.3). Within the first 3 minutes, the electronic control performs a core probe insertion test to verify the effective application of the probe in the product to blast chill; the core probe symbol flashes in this phase.

If the core probe is inserted badly or left in the holder provided, the cycle is automatically converted to "timer" and DISPLAY 1 indicates the time to the end of the blast chill cycle (Fig.4).

The following symbols light up: , blast chill function , temperature , compressor , room fan  and blast chill symbol . DISPLAY 2 indicates the cabinet temperature and DISPLAY 3 the blast chill phase in progress.

If the temperature has not been reached through to the core within the time determined, with blast chill/shock freeze core probe confirmed, the time out alarm is activated. The blast chill phase conti-



(Fig.5)

nues but the  symbol flashes.


On DISPLAY 1 the code AL5 flashes (Fig.5). The alarm remains on into the conservation phase.

By pressing the  button at any time during the cycle in progress, the time from the start of blast chilling is indicated.


Upon termination of the blast chill cycle the machine automatically continues on to the conservation phase, see 7.2.5.

By pressing the  button is indicated the time of the concluded blast chilling cycle.

+3 SOFT

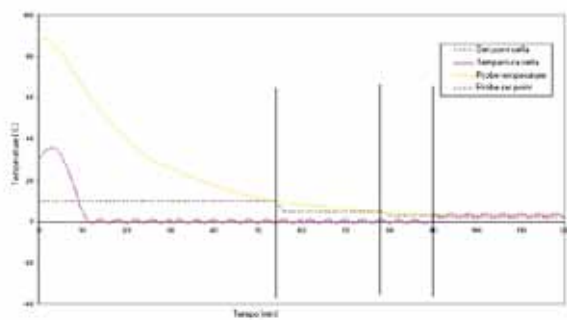


+3 HARD

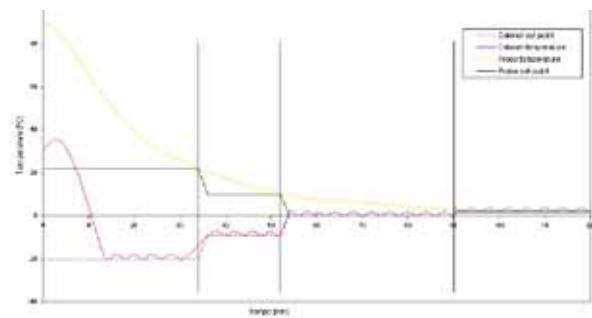

-18 SOFT



-18 HARD

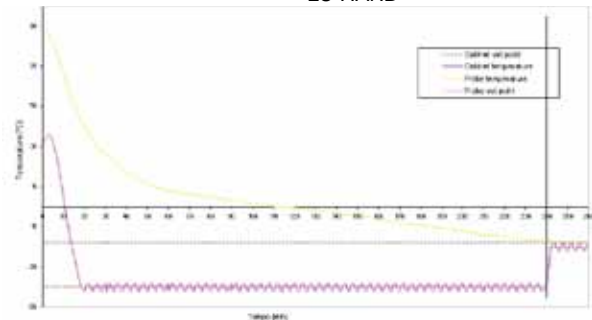

7.2.2. +3°C SOFT OR HARD BLAST CHILL CYCLE AND -18°C SOFT OR HARD SHOCK FREEZE TIMER

BLAST CHILL/SHOCK FREEZE PHASE

Press the  button twice to select the +3°C hard blast chill cycle and also the  button for the +3°C soft cycle .

Press the  button twice to select the -18°C hard shock freeze cycle and also the  button for the -18°C soft cycle .



(Fig.6)

DISPLAY 1 indicates the total time foreseen for blast chilling/shock freeze.
DISPLAY 2 indicates the cabinet temperature (Fig.6).

The following symbols light up: time , type of blast chill hard  or soft  + the symbol soft or shock freeze hard  or soft  + the symbol soft, temperature  and **STOP**.

By using the  or  buttons it is possible to change the cycle duration.

N.B.: It is possible to set a duration either shorter or longer than 90 min. for blast chill cycles or 240 min. for shock freeze cycles.

Maximum limit: 120 min. for a +3°C cycle

Maximum limit: 300 min. for a -18°C cycle



(Fig.7)


Press the  button to start the cycle.

By pressing button  (Fig.7) the temperature read by the probe is temporarily displayed (if inserted into the product, it will show the temperature of this product).


Upon termination of the blast chill cycle the machine automatically continues on to the conservation phase, see 7.2.5.

By pressing the  button is indicated the time of the concluded blast chilling cycle.


+3 SOFT

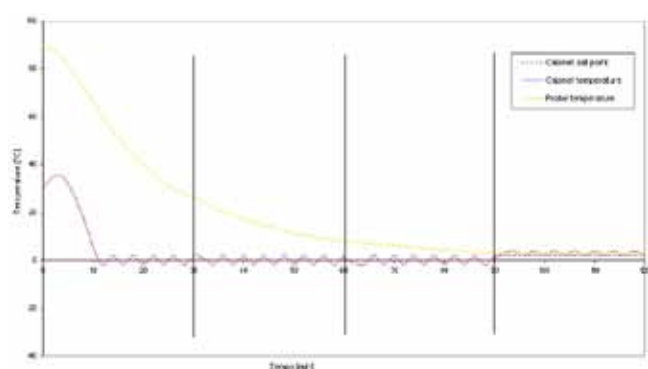


+3 HARD

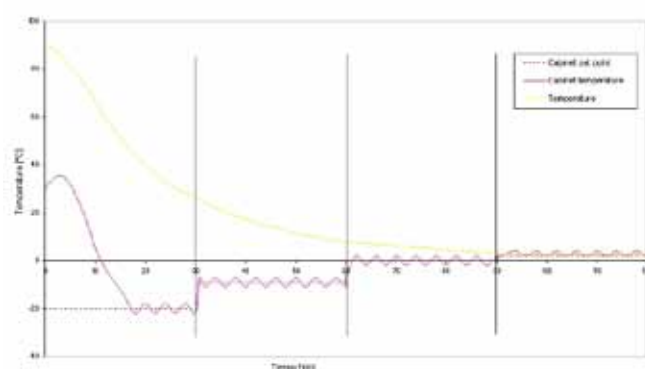

-18 SOFT

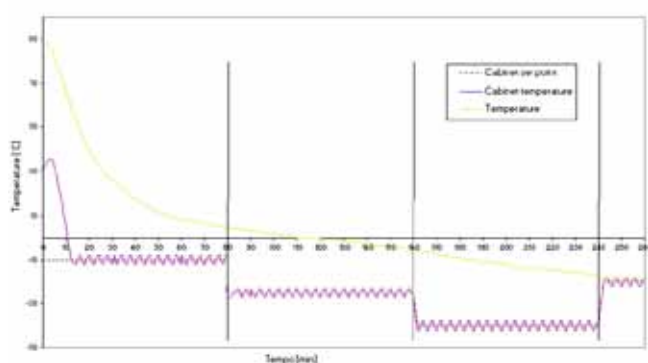

-18 HARD

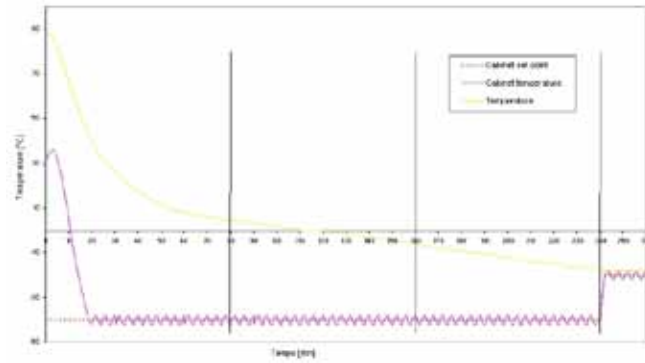

7.2.3. BLAST CHILL OR SHOCK FREEZE PERSONALIZE CYCLE ,

It is possible to modify the breakdown/freezing cycle:

- timed 
- probe  ,

personalising them as required.

The breakdown or freezing cycle is divided into three phases where it is possible to modify the following values:

IN ORDER TO MODIFY THE DATA IN NOT PERMANENT WAY

Press the key relative to the cycle  (+3 hard), or the key  (-18 hard)

For the soft cycles, first press the  button and then press and hold the button  or .



(Fig.8)

Control displays (Fig. 8):

SCREEN 1- modifiable cell temperature

SCREEN 2 - no signal (off)

SCREEN 3 – the number of the phase

The cell temperature symbol  flashes, by pressing the  or  the value of the set temperature is increased or decreased, for the phase being modified and displayed on DISPLAY 3.

With a further pressing the “initially selected cycle” the pin symbol flashes , by pressing the  or  the value of the set pin temperature is increased or decreased, for the phase being modified and displayed on DISPLAY 3.

With a further pressing the “initially selected cycle” the clock  symbol flashes, by pressing the  or  the value of the set duration is increased or decreased, for the phase being modified and displayed on DISPLAY 3.

Repeat the same procedure described for the later phases 2 and 3.

Phase 4 of conservation only involves setting the temperature. To confirm the settings of all the phases described, press the relevant key  or  for extended time.

Press the  button to start the cycle.

At the end of the cycle the machine moves into conservation phase automatically, see ch. 7.2.5.

The new sets of the personalised cycle will be lost when the machine is stopped with key .

See tecincal manual S __ = setpoint	BLAST CHILL OR SHOCK FREEZE			CONSERVATION
	PHASE 1	PHASE 2	PHASE 3	PHASE 4
SET CABINET	S01	S04	S07	S10
SET CORE	S02	S05	S08	- -
SET TIME	S03	S06	S09	- -

7.3.5.1 TO STORE DATA IN A PERMANENT PROGRAMME



(Fig.8a)



(Fig.8b)

After the modification procedure described above (cap 7.2.3), press and hold the button 

rather than  or ; DISPLAY 1 shows the number of the first available programme. Pressing and holding the button  stores the cycle, and the control positions itself to restart with a new cycle (Fig. 8a).

A stored programme can be deleted by overwriting a new blast chilling/freezing cycle on it as follows: at the end of the cycle, instead of storing it on the first available programme automatically

selected by the system, press the button  or  and position the display on the number

of the programme to be deleted, then press the programme button .

If the symbols __ _ appear on DISPLAY 2 next to the number, this means that no programme is stored (Fig. 8b).

7.2.4. INDEFINITE TIME CYCLE WITH CABINET SET POINT SETTING



(Fig.9)

Press the  programme button to exit any programme; press the button once again and DISPLAY 1 will indicate the letters P0 (Fig.9).

Select a blast chill/shock freeze programme with the appropriate buttons  or .



(Fig.10)

DISPLAY 1 indicates symbol  with the clock symbol  next to it, the type of blast chill  or shock freeze , the temperature symbol  and **STOP**. DISPLAY 2 indicates the default temperature of the selected cycle: (Fig.10).

Buttons  and  increase or decrease the set point cabinet temperature value indicated in DISPLAY 2. Button  starts the machine. To stop the machine press the  button.

7.2.5. CONSERVATION PHASE



(Fig.11)

At the end of each blast chill/shock freeze cycle, the machine proceeds to conservation phase. DISPLAY 1 is off; DISPLAY 2 indicates the cabinet temperature (Fig.11).

The conservation symbol  lights up.

By pressing the  button is indicated the time of the concluded blast chilling cycle.

By pressing button  the temperature read by the probe is temporarily displayed (if inserted into the product, it will show the temperature of this product).

This phase is terminated by pressing the  button. The machine sets itself on Stand-by and the user is asked whether the programme is to be memorised or the button  must be pressed once more.

Press the core probe heating button  to facilitate extraction of the probe from the product.

The  symbol lights up.

Core probe heating takes place only if the temperature of the probe is less than -5°C.

7.2.6. MEMORISING A BLAST CHILL/SHOCK FREEZE PROGRAMME




(Fig.12)

With the machine in conservation mode  (if the cycle has gone to good aim) and pressing the  button, DISPLAY 1 indicates the number of the first free programme (Fig.12), by pressing the  button, the cycle is memorised and the control board is re-set in order to start a new cycle.

It is possible to cancel a memorised programme overwriting it with a new blast chill/shock freeze cycle by doing the following: once a cycle has terminated, instead of memorising it in the first free programme automatically selected by the system, use button  or  to access the number of the programme to be cancelled.

 7.2.7. RECALL OF MEMORISED BLAST CHILL/SHOCK FREEZE PROGRAMME



(Fig.13)

To select a blast chill/shock freeze programme press button . By pressing the  or  buttons the memorised programmes are displayed in sequence (Fig.13).

Press button  to start the selected blast chill/shock freeze programme.



(Fig.14)

If DISPLAY 2 (Fig.14) indicates symbols  there are no memorised programmes.

7.3. DEFROSTING



(Fig.15)

Manual defrosting with the door open is performed if the cabinet temperature is below parameter P57 (see technical manual). To start or stop defrosting cycle press button  for extended time.

DISPLAY 1 will indicate code **def** and DISPLAY 2 the cabinet temperature (Fig.15).

7.4. STERILISATION (OPTIONAL)

Sterilisation can start only if the temperature is above parameter P26 (see technical manual).



(Fig.16)

The cycle is activated with the machine in Stand-by by pressing the  button.

When the button is pressed again, sterilisation is terminated. The symbol  light up on the display indicates that the sterilisation phase is in progress.

DISPLAY 1 shows the time to the end of the process (Fig.16).

If the door is opened or a blackout occurs, sterilisation terminates.

7.5. PRINTER (OPTIONAL)

The following is recorded for every blast chill cycle: date, time, type of cycle, time elapsed from start and temperature in the cabinet and at the product's core, sampled every 10 minutes, to modify the sampling time see parameter P44 (see technical manual).

Using parameter P72 (see technical manual) the language of the printer can be changed.

****HELLO****		
03/03/2007	10:15	
+3 °C HARD		
Time	Ti	Tc
00:00	25	61
00:10	8	54
00:20	-5	

Time = time elapsed

Ti = **CABINET** temperature

Tc = **CORE** temperature

7.5.1 USB RECORDER (OPTIONAL)

This is present only if there is the expression code EVC99E00X0XXX00 (Optional).



Setting the parameter **P41 = 2** allows the user to connect the USB Recorder interface (code EVUS BREC01).

When the keypad detects the presence of the USB Recorder, the user can access the USB menu



which provides information on the state of the USB Recorder by pressing the buttons  or  for 2 seconds:



When the USB flash drive is inserted in the USB Recorder, the progress of the ongoing operations appears on the display. During a LOG DATA operation, the respective text with percentage of progress appears:

When the operation has been completed correctly, the end is signalled:



Otherwise error states are signalled:



Pressing the button  returns the user to the previous menu.

During the data Upload operation, the user can interrupt the process by pressing the button  for 2 seconds.

To reset the USB Recorder, press the button  for 2 seconds.

7.6. ALARMS/ERRORS

HIGH TEMPERATURE ALARM



During the positive (negative), the alarm part when the temperature cabinet the values sets up. Alarm code AL1 will flash on DISPLAY 1.

The buzzer (optional) sounds but can be stopped by pressing a button. When the temperature falls by below the alarm threshold, the alarm is automatically cancelled.

LOW TEMPERATURE ALARM



During the positive (negative), the alarm part when the temperature cabinet the values sets up. Alarm code AL2 will flash on DISPLAY 1.

The buzzer (optional) sounds, but can be stopped by pressing a button.

When the temperature rises above the alarm threshold, the alarm is automatically cancelled.

DOOR OPEN ALARM



If the door is open for more than two minutes after the start of the blast chill/shock freeze, the compressor stops and the code AL3 will flash on DISPLAY 1.

PRESSURE SWITCH/ELECTRIC ALARM ==> CONTACT TECHNICAL ASSISTANCE



When pressure switch alarm AL4 is activated, the blast chill cycle in progress will be immediately terminated.

TIME-OUT ALARM**AL5**

If the blast chill or shock freeze phase in progress does not terminate within the set time, code AL5 will flash on DISPLAY 1.

BLACKOUT ALARM**AL7**

If a blackout occurs during a blast chill cycle, the machine remembers the cycle and phase it was performing when it switched off.

In cycles with core probes, the machine also remembers the cycle.

Blast chill time tolerance is 10 minutes.

Code AL7 will flash on DISPLAY 1.

The buzzer (optional) sounds but can be stopped by pressing a button. If the button is pressed again, the display disappears.

CABINET PROBE ALARM == > CONTACT TECHNICAL ASSISTANCE**Er1**

The cabinet probe measures the temperature of the cabinet, which is indicated on DISPLAY 2.

If the probe is defective, a cabinet probe alarm and buzzer (optional) are activated and error code ER1 flashes on the DISPLAY 1.

The buzzer (optional) sounds, but can be stopped by pressing a button.

Once the fault is remedied, the alarm cancels automatically.

- In the case of a faulty cabinet probe, it is nevertheless possible to start or continue a blast chill programme with timer.
- A set temperature blast chill programme not yet started, will convert the setting to time.
- If the core probe is not inserted, a set temperature blast chill programme in progress will convert the setting to time and the compressor check will be performed on the core probe instead of the cabinet probe.
- A set temperature blast chill programme in progress with core probe inserted, turns the compressor on and off on the basis of times memorised previously in blast chill or conversation phases.

CORE PROBE ALARM == > CONTACT TECHNICAL ASSISTANCE**Er2**

The core probe is used for reading core temperature in blast chill cycles.

A fault in the core probe causes an alarm only if a set temperature blast chill cycle is in progress.

In this case the cycle automatically converts the setting to time and the buzzer (optional) is activated.

Alarm code ER2 will flash on DISPLAY 1.

The buzzer (optional) sounds, but can be stopped by pressing the button.

The alarm code display disappears by pressing a button.

EVAPORATOR PROBE ALARM == > CONTACT TECHNICAL ASSISTANCE**Er3**

The probe allows termination of defrosting based on temperature.

Press and release button , to see the temperature of the evaporator which is shown on DISPLAY 2.

If the probe is defective, an evaporator probe alarm and buzzer are activated, and error code ER3 flashes on the display.

The buzzer (optional) sounds but can be stopped by pressing a button.

Once the fault is remedied, the alarm cancels automatically.

With the probe alarm on, defrosting terminates in time.



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of life. This applies to your device but also to any enhancements marked with this symbol. Do not dispose of these products as unsorted municipal waste.

