

MODEL NO. EU155Y

ELECTROHOME®

LUNCHBOX

AM/FM Lunchbox Utility Radio

- AC, DC and Battery Power Operation
- Ultra RUGGED Design
- Water and Dust Resistant

User's Manual



www.electrohome.ca



TABLE OF CONTENTS

Important Safety Instructions	2
Product Diagram	4
Controls	5
LCD Display	5
Power the Radio	6
Manual Tuning	7
Memory Presets Recall	8
Recalling Stations from Preset Memories	8
Display backlight	8
Setting Tuning Step	9
Clear the Preset Stations	9
Specifications	10

 
 
 
 
 
 
Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings
4. Follow all instructions
5. Do not use this radio near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with these instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

GB

- 
- 
10. Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where they exit from the apparatus.
 11. Only use attachments/accessories specified by the manufacturer.
 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
 14. Refer all servicing to qualified service personnel. Servicing is required when the radio has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the radio, the radio has been exposed to rain or moisture, does not operate normally, or has been dropped.
 15. To reduce the risk of fire or electric shock, do not expose this radio to rain or moisture.
 16. The Shock Hazard Marking and Associated Graphical Symbol is provided on the bottom panel of this radio.
 17. This radio shall not be exposed to dripping or splashing and no objects filled with liquids, shall be placed on the this radio.
 18. To avoid electric shock. Use batteries during a rainy day or when the weather is wet.

Product Diagram

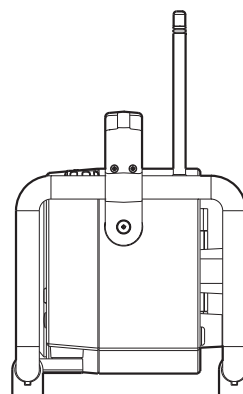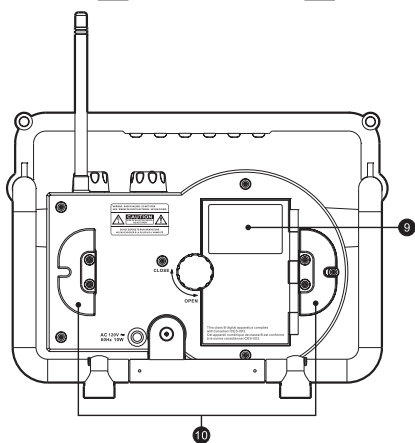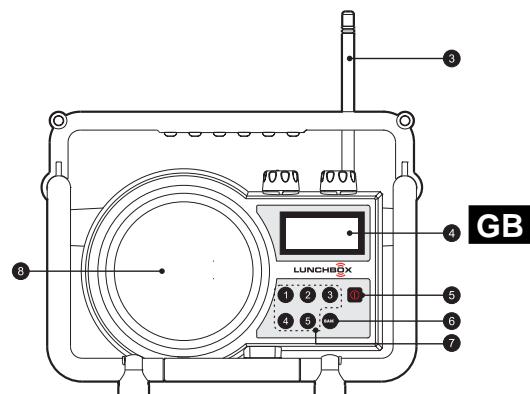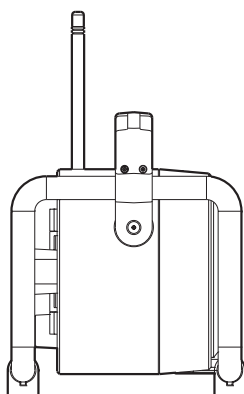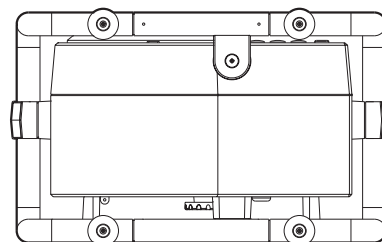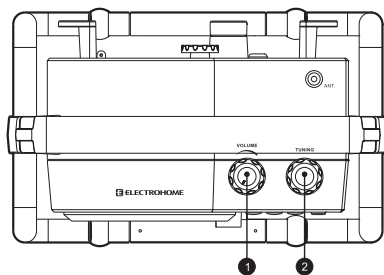


Controls

- ① Volume Control
- ② Tuning Control
- ③ FM antenna
- ④ LCD display
- ⑤ Power On/Off
- ⑥ Band Selection
- ⑦ Preset Station
- ⑧ Speaker
- ⑨ Battery Compartment
- ⑩ AC power cord storage

LCD Display

 - Ⓐ Band Indicator
- Ⓑ Frequency
- Ⓒ Preset Stations
- Ⓓ Low Battery Indicator

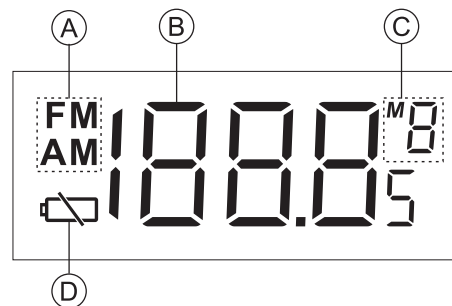

Power the Radio

1. Battery Operation


Installing the batteries. First turn the battery cover fixture anti-clockwise to loosen and pull down the battery cover.

Insert 4 x C size batteries into the compartment. Ensure the batteries are inserted in accordance with the diagram shown.


Close the battery cover and fasten the fixture by turning it clockwise.

If the radio is not to be used for any extended period of time, it is recommended that the batteries are removed from the radio.

1.

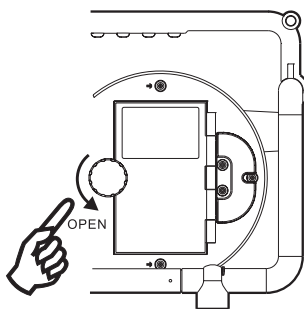


2.

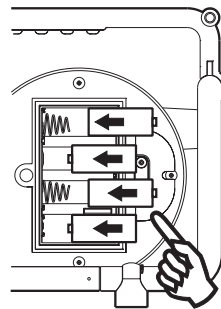

GB

 3.

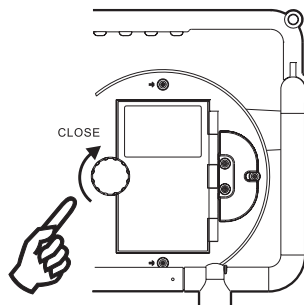

2. AC Operation

Before you plug the AC power cord into the AC socket, be sure the voltage is correct. If you have batteries in the radio and use the AC power cord, the batteries will automatically be disconnected.

AC power storage is designed to store the cord when the radio is not in use.

3. Operating the Radio

This radio is equipped with two tuning methods – Manual tuning and Memory presets recall.

Manual Tuning

1. Press the Power button to turn on the radio.
2. Select the required waveband by pressing the Band button.
3. Be sure to screw in the rubber FM antenna properly to get the best reception. For AM band, rotate the radio to get the best signal.
4. Rotating the Tuning Control knob will change the frequency in the following increments
FM: 50 or 100 kHz
AM: 9 or 10 kHz
5. Rotate the Volume Control knob to get the required sound level.
6. To turn off the radio, press the Power button. The display will show OFF.

Memory Presets Recall

Storing stations in preset memories

There are 5 memory presets for each waveband.

1. Press the Power button to turn on the radio.
2. Tune to the required station using the Tuning Control.
3. Press and hold down the required preset until the radio beeps.
The preset number will appear in the display and the station will be stored under chosen preset button.
4. Repeat this procedure for the remaining presets.
5. Stations stored in preset memories can be overwritten by the following above procedures.

GB

Recalling Stations from Preset Memories

1. Press the Power button to turn on the radio.
2. Select the required waveband.
3. Momentarily press the required Preset button. The preset number and station frequency will appear in the display.

Display backlight

When the radio is switched on, press any button (except the Power button) and the LCD display will illuminate for approximately 15 seconds.

Setting Tuning Step

Tuning steps in some countries are different from where you may have purchased this radio. If you purchased this radio in North America and intend to use this radio in Europe, you may have to adjust tuning step so the radio will continue to function normally. While the radio is switched off. Press and hold the Band button for approx. 7 seconds, until the display flashes the current FM tuning step 50 (kHz). Rotate the Tuning Control, you may adjust to 100 (kHz).

Press the Band button again to confirm the setting.

After FM tuning step is reset, pressing the Band button again will display AM and flash 9 (kHz).

Rotate the Tuning Control, you may adjust to 10 (kHz).

Press the Band button again to confirm the setting.

Clear the Preset Stations

Whenever it is necessary, you can clear all the preset stations.

When the radio is off, press Preset button 1 and Band at the same time for more than 2 seconds to clear all the preset stations.

The radio will reset to the original factory settings.

Specifications

Frequency Coverage :

FM 87.50 – 108 MHz

AM 520 – 1710 kHz (10 kHz)

522 – 1629 kHz (9 kHz)

AC Power :

AC 120V/60Hz/10W (North America)

Batteries : 4 x C Size

Output Power :

2 Watt 10% T.H.D. @ 100 Hz @ DC battery 6V

5 Watt 10% T.H.D. @ 100 Hz @ AC 110V

GB



381R36WE-A

