

OLIN[®]

PD-7700

**7 INCH TWIN SCREEN
PORTABLE DVD PLAYER**

USER MANUAL



FREE CALL

Customer Helpline

 **1800 656 630**

PRECAUTIONS

	CAUTION <i>RISK OF ELECTRIC SHOCK</i> <i>DO NOT OPEN</i>	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		

For Customer Use:

Enter below the serial number that is located on the bottom of the unit. Retain this information for future reference.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

WARNING:

To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

Handling the cords on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling.

CAUTION:

This Digital Video Disc player employs a laser system. To prevent direct exposure to the laser beam, do not try to open the enclosure or defeat the safety interlocks. When open and the interlocks are defeated, visible laser radiation is present. To prevent electric shock, match wide blade of plug to wide slot of outlet and fully insert.

Use of controls, adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure. **DO NOT STARE INTO THE BEAM.**

NOTICE:

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.



WARNING:

THIS MODEL AND ITS ENCLOSED CAR ADAPTOR ARE ONLY COMPATIBLE WITH 12V VEHICLES.

PLEASE NOTE: THIS MODEL IS NOT COMPATIBLE WITH 24V VEHICLES.

DO NOT CONNECT THE UNIT TO THE CAR VIA CAR ADAPTOR BEFORE THE ENGINE HAS BEEN STARTED.
DISCONNECT THE CAR ADAPTOR WHEN IT IS NOT IN USE.

PRECAUTIONS


Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works.
© 1992-1997 Dolby Laboratories. All rights reserved.



This player has built-in copy-right protection technology that prevents copying from a DVD disc to any media.

If a video recorder is connected to the player, the video output image will be distorted during recording.

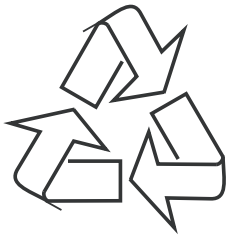

For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org.


IMPORTANT SAFETY INSTRUCTIONS

1. **Read Instructions:** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
3. **Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and usage instructions should be followed.
5. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. **Water and Moisture:** Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. **Heat:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
9. **Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
12. **Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
13. **Power Sources:** Do not connect the power plug to a power outlet other than that which is indicated here and on the label as this may result in the risk of fire or electric shock. Do not handle the power plug with wet hands. Doing so may cause electric shock.
14. **Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
15. **Battery:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Battery pack or batteries installed shall not be exposed to excessive heat such as sunshine, fire or the like.
16. **WARNING:** THIS MODEL AND ITS ENCLOSED CAR ADAPTOR ARE ONLY COMPATIBLE WITH 12V VEHICLES. PLEASE NOTE: THIS MODEL IS NOT COMPATIBLE WITH 24V VEHICLES. DO NOT CONNECT THE UNIT TO THE CAR VIA CAR ADAPTOR BEFORE THE ENGINE HAS BEEN STARTED. DISCONNECT THE CAR ADAPTOR WHEN IT IS NOT IN USE.



IMPORTANT SAFETY INSTRUCTIONS

17. Using the unit in a Vehicle :On no account should this unit be used by the driver of a moving motor vehicle, or left unsecured in the vehicle whilst driving. If this unit is being used by a passenger in your vehicle, be sure that it is secured or held safely, and does not obstruct any safety device (i.e. airbag, seat belt etc.) that is fitted. All passengers should wear seat belts when using this unit in a moving vehicle. If in doubt, please contact your vehicle manufacturer for further advice. Using other car power adaptors could damage the unit.
18. Using Headphones or Earphones: Hearing experts advise against the constant use of personal stereos played at high volume. Constant high volume use can lead to hearing loss. If you experience ringing in the ears or hearing loss, discontinue use and seek medical advice.
19. Grounding or Polarization: This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
20. Power-Cord Protection: Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
21. Protective Attachment Plug: The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
22. Outdoor Antenna Grounding: If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANS/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode (see figure).

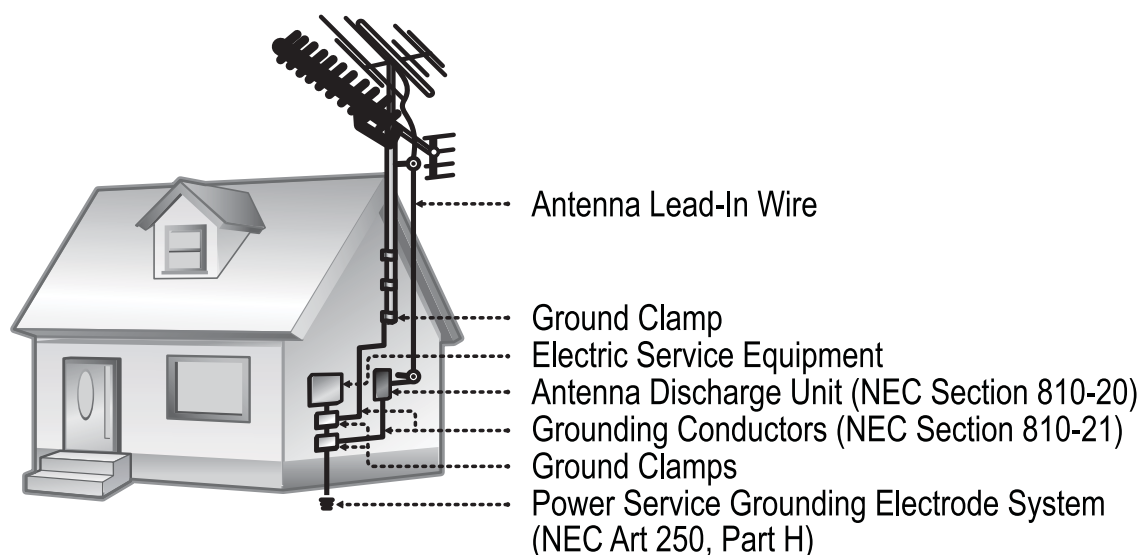

23. Lightning: For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused

IMPORTANT SAFETY INSTRUCTIONS

for long periods of time. This will prevent damage to the product due to lightning or power-line surges.

24. If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.(Waste Electrical and Electronic Equipment Directive)
25. Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
26. Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or shout-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
27. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
28. Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
29. Replacement Parts: When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
30. Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
31. Wall or Ceiling Mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.



TABLE OF CONTENTS

PRECAUTIONS	2
IMPORTANT SAFETY INSTRUCTIONS	4
TABLE OF CONTENTS	7
PACKAGE CONTENTS	9
ABOUT OPTICAL DISCS	10
Disc Requirements.....	10
Disc Care and Maintenance	10
Handling a Disc.....	10
Cleaning a Disc.....	10
LOCATION OF CONTROLS.....	11
Front View (Main Unit)	11
Left View (Main Unit).....	12
Right View (Main Unit)	12
Bottom View (Main Unit).....	12
Left View (Monitor).....	13
Right View (Monitor)	13
Front View (Monitor)	13
Remote Control.....	14
Battery Installation	15
Power Supply	15
CONNECTIONS	16
Power, Audio and Video Output Connections	16
Connecting to a wall outlet	16
Outputting AV signal from the main unit to the monitor by the DC car cord	16
Using the car plug.....	17
Outputting AV signal from the main unit to the monitor	17
Audio and Video Connectios (external device)	17
USB/SD/MMC Card Connection	18
Connecting to an Amplifier Equipped with a Dolby Pro Logic Surround	18
Rechargeable Battery Pack.....	19
Using Headphones/Earphones	19
BASIC OPERATIONS.....	20
Basic Playback.....	20
Play/Pause/Stop	20
Previous /Next (Skip)	20
Forward/Reverse (Search)	20
Slow/Step	20
Menu Navigation	21
Numeric Keypad	21
Disc Error Messages	21
Power Management.....	21

TABLE OF CONTENTS


PLAYER FUNCTIONS	22
Menu/Title	22
Setup	22
Display	22
Repeat Mode.....	22
Repeat A-B Mode	23
Multi-Angle/Subtitle/Audio	23
Zoom	23
Clear.....	23
Search.....	23
DVD Mode.....	23
CD Mode	23
LCD Menu	24
Program Function	24
USB/SD/MMC Card Access	24
SETUP	25
Language Setup.....	25
Screen Setup	25
Audio Setup.....	26
Custom Setup	26
SPECIFICATIONS	27
HEADREST MOUNTING BAG PLACEMENT	28
TROUBLESHOOTING.....	29

PACKAGE CONTENTS

Please make sure the following items are included in the package. If any items are missing, please contact your local dealer.




Main Unit

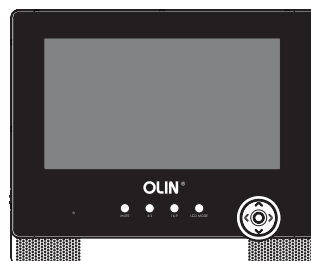


Monitor




Remote Control

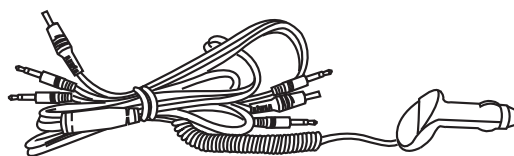

Car Adaptor with AV cable

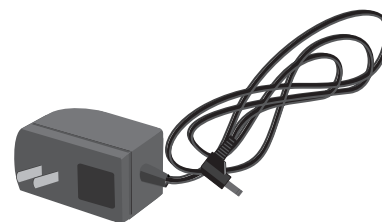


Adapter(1A)

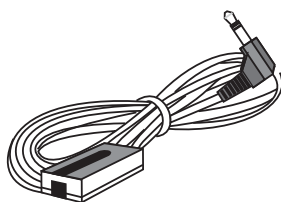


Adapter(2A)



Power Cord

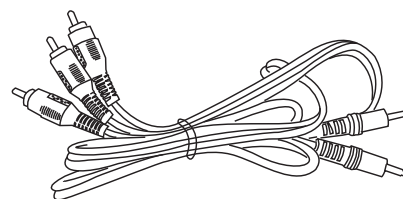

Audio & Video Cable

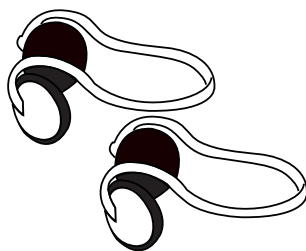

Headphones



Headrest Mounting Bags

ABOUT OPTICAL DISCS

Disc Requirements

This DVD player supports playback of the following discs.

Type	Disc Mark	Content Type	Disc Size	Max. Playback Time
DVD-Video Discs		Audio + Video (moving picture)	12 cm	133 min (SS-SL)
				242 min (SS-DL)
				266 min (DS-SL)
				484 min (DS-DL)
Audio Compact Discs (CDs)		Audio	12 cm	74 min
JPEG CDs	--	Still Picture	12 cm	--


This unit can play back CD-R and CD-RW discs that contain JPEG picture files. Discs not listed above are not supported by this unit (eg, PC CD-ROM, CD-Extra, CD-G, CD-I, etc.)

Disc Care and Maintenance

Optical discs (DVDs, CDs) contain high-density compressed data and need proper handling.

Handling a Disc

- Hold a DVD/CD by its edges. Avoid touching the recorded side of the disc. To remove a DVD/CD from its storage case, press down on the center retention mechanism of the case and lift the disc out.
- Do not subject discs to prolonged exposure to direct sunlight, high humidity, or high temperatures.
- Do not bend or press discs.
- To reduce the risk of scratches, always put discs back in their case after use. Store discs vertically in a cabinet.
- Do not place stickers or labels on either side of a disc.

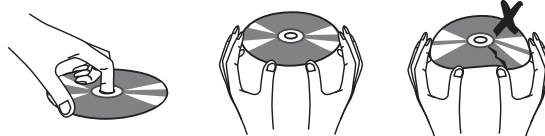

Cleaning a Disc


Use a dry, soft cloth to wipe off any fingerprints and dusts from the playing surface of the disc. Wipe in a straight line radially from the center to the outside edge of the disc. Small dust particles and light stains will not affect playback quality.

- Never use chemicals such as record sprays, anti-static sprays, benzene, or thinners to clean a disc. Doing so will damage the surface of the disc permanently.

Note: In stop mode, do not touch the disc until it completely stops.

LOCATION OF CONTROLS

Main unit

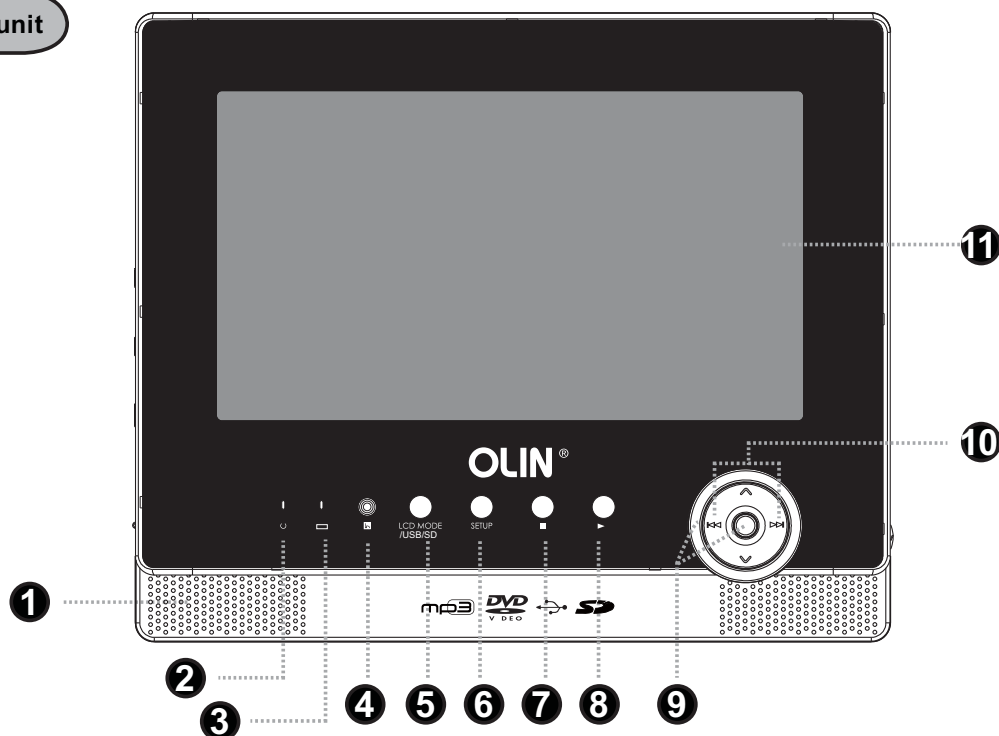

Front View

1 Integrated Stereo Speakers

2 Power on Indicator


3 Battery LED Indicator

- Lights red when charging the battery.
- Lights green when the battery is fully charged.

4 Remote Sensor

5 LCD Mode/USB/SD Button

- Briefly press this button to display the LCD Menu.

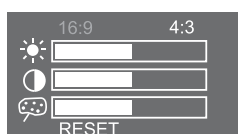

1. Press up/down direction button to highlight item and then make adjustment by left/right direction button.
2. Press up/down direction button to select SCREEN and then press left/right direction button to set screen dimension as

16:9 or 4:3

3. To reset all items, select RESET by up/down direction button and then press ENTER button to confirm.

- Press and hold this button for a short while to display the working source menu, you can access the DVD/USB/Card using this menu.

6 Setup

To access the setup menu which various features of the player can be adjusted in.

7 Stop

Press once to prestop the playback, press twice to stop completely.

8 Play/Pause

Press the Play/Pause button to play the disc. Press again to pause playback.

9 Up/Down/Left/Right / Enter buttons

Press the direction buttons to select an item and press the ENTER to confirm

10 Fast Forward/Reverse

Press to skip forward/reverse. Hold to fast forward/reverse.


11 7" TFT Display.

For your reference:

1. Place a disc with the label facing up and push gently on the center of the disc so it goes into position.
2. To start playing, press the PLAY/PAUSE button. (Some discs will start playing automatically).
3. To stop playing, press the STOP button.
4. To Skip Forward/Skip Backward, press the NEXT/PREV button.
5. To Fast Forward/Fast Backward, press/hold the NEXT/PREV button.

LOCATION OF CONTROLS

Main unit

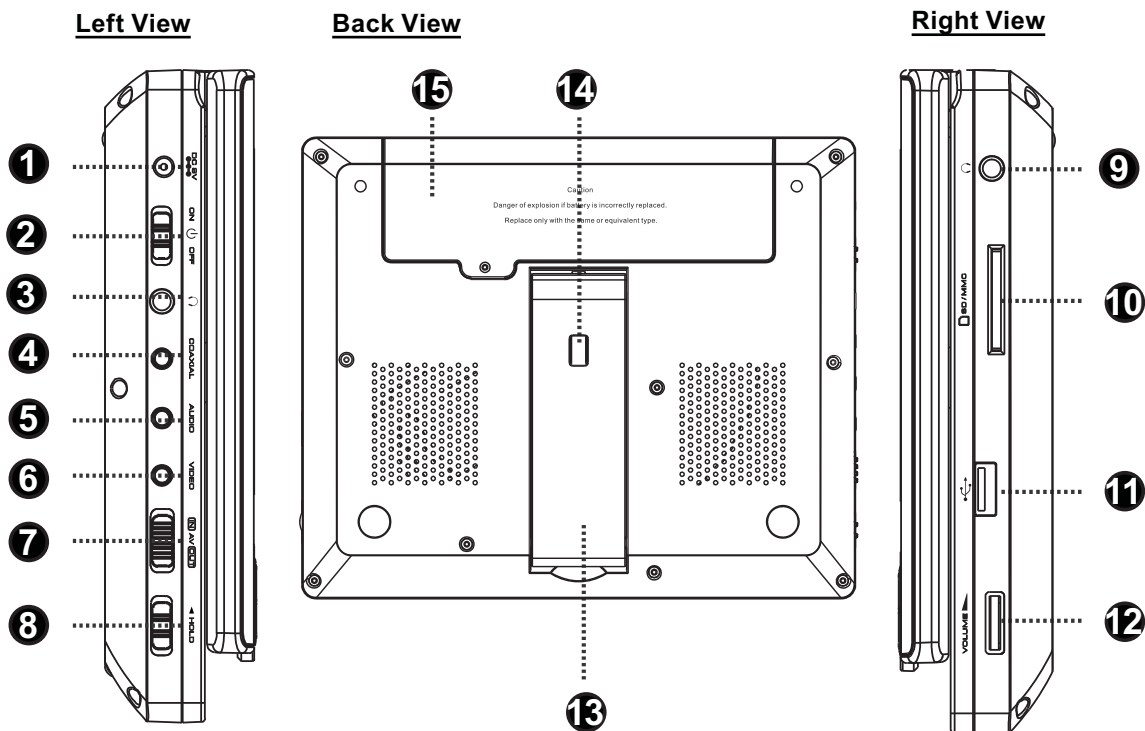

Left View

① DC 9V IN

To connect to the supplied AC Adaptor/DC Car Cord for power supply.

② Power Switch

To turn on/off the unit.

③ Headphone Jack

To connect to the supplied headphone. As the headphone is plugged in, the speakers' volume output will be OFF.

④ Coaxial Out

To connect to an external speaker system by the coaxial cable.

⑤ Audio Jack

To connect to an external speaker system by the supplied RCA cable.

⑥ Video Jack

To connect to an external TV screen by the supplied RCA cable.

⑦ AV Switch

Set the AV jack as input or output

⑧ Hold Switch

Prevent any unwanted function changes in PLAY or STOP mode.

Right View

⑨ Headphone Jack

To connect the headphone.

Before connection, make sure that the volume is at low level.

⑩ SD/MMC Card Slot

To access media files on SD/MMC cards.

⑪ USB Port

For use with USB flash drives.

⑫ Volume Dial

To Adjust the Volume Level.

Bottom View

⑬ Using the Stand

1. Lift up the stand from groove
2. For a different angle, unlock the switch on stand first
3. Extend the stand to a comfortable viewing position
4. Lock the switch on stand to keep the position

⑭ Stand Lock

⑮ Battery Cover


LOCATION OF CONTROLS

Monitor

Left View

Front View

Right View

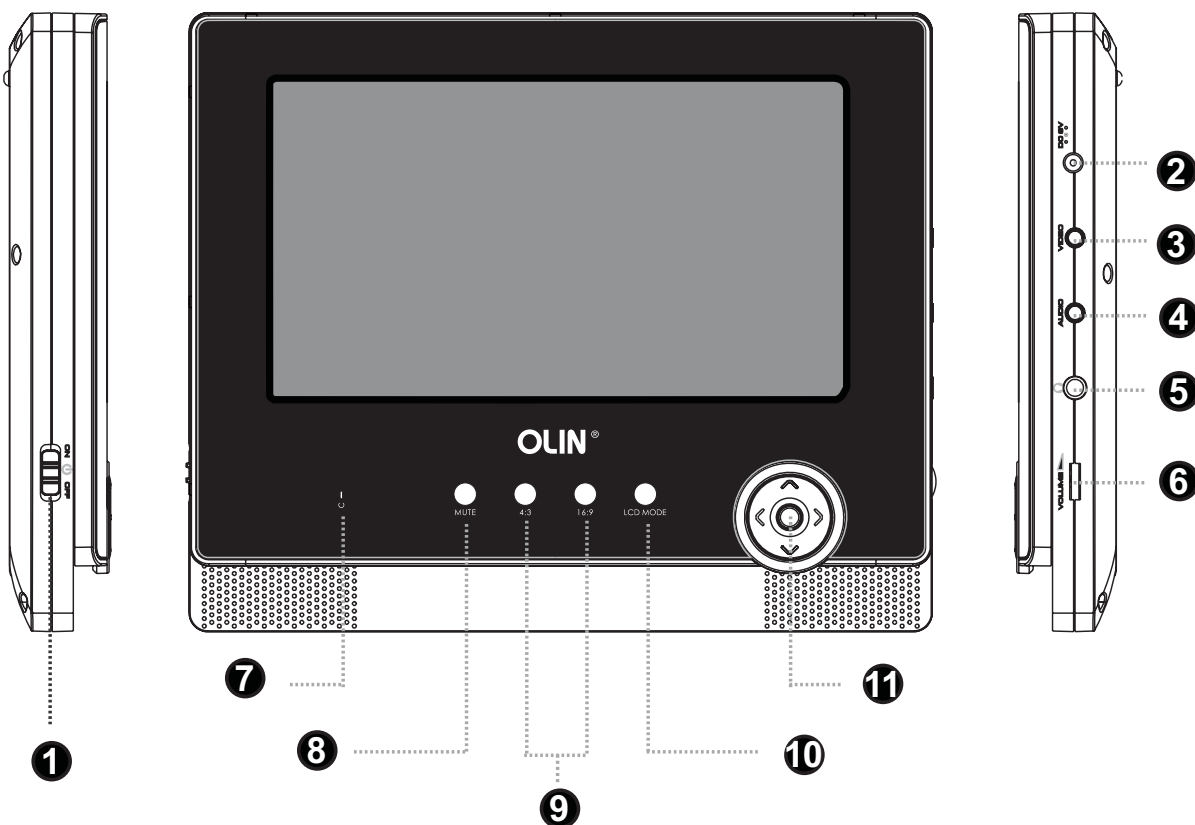

Left View

❶ Power Switch

To turn on/off the unit.

Right View

❷ DC 9V In Jack

To Connect to the supplied AD Adaptor or the DC Car Cord for power supply.

❸ Video Jack

To input the video signal.

❹ Audio Jack

To input the audio signal.

❺ Headphone Jack

To connect the Headphone.

Before connection, make sure that the volume is at low level.

❻ Volume Dial

To adjust the Volume Level.

Front View

❷ Power On Indicator

❸ Mute Button

To turn off / restore the audio.

❹ Screen Ratio Button

To change the screen ratio to 4:3 or 16:9.

❺ LCD Mode Button

you can adjust the screen effect in the LCD menu. For operation details, please refer to the LCD Mode of the Main unit.


❻ Navigation Buttons and Enter button

To select and Confirm options in the LCD Menu and Setup Menu of the monitor.

LOCATION OF CONTROLS

Battery Installation

- Refer to the diagram. Remove the battery compartment cover located on the rear of the remote control. Insert batteries, making sure to match their polarities (+/-) to the markings on the inside of the compartment. Replace the cover.
- To use the remote, point it at the remote sensor of the player. Operate the remote within 15 feet of the sensor and at an angle of +/- 60 degrees.
- Batteries in the remote will last for approximately 1 year. Replace the batteries if the remote control does not work. Do not mix old with new batteries, or different types of batteries.
- Remove the batteries from the remote if it will not be used for a long period of time.

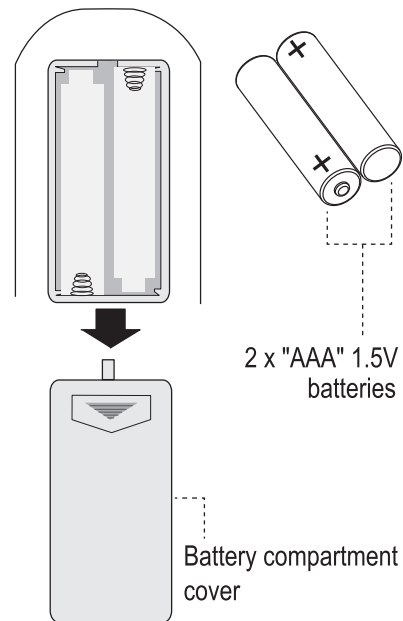

WARNING

- The batteries used in the remote control may present a fire or chemical burn if mistreated. Do not recharge, disassemble, incinerate, or heat the battery (~212°F).
- Keep batteries away from children.

Power Supply

This unit should be used with 100-240V 50/60Hz AC wall outlets, only.

Caution:

- *Do not connect the power plug to a power outlet other than that which is indicated here and on the label as this may result in the risk of fire or electric shock.*
- *Do not handle the power plug with wet hands. Doing so may cause electric shock.*

CONNECTIONS

Power, Audio and Video Output Connections

Before connecting the power source, ensure that all the connections are properly done.

- Connecting to a wall outlet
- Outputting audio and video signal from the main unit to the monitor by the DC car cord.


Adaptor for main unit:
This adaptor should be used
with 100-240V~50/60Hz 0.6A MAX
AC wall outlets.

DC Out: 9V
DC Current: 2.0A

Adaptor for monitor:
This adaptor should be used
with 100-240V~50/60Hz 0.3A
Max AC wall outlets.


DC Out: DC 9V
DC Current: 1A

Main Unit

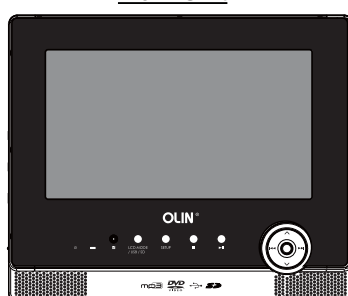

Slide the AV switch
of the main unit to
Out.

Monitor

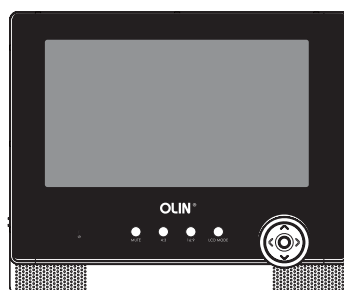

DC 9V in
Video in
Audio in

To wall outlet
(100-240V 50/60Hz)

To wall outlet
(100-240V 50/60Hz)

Do not plug in



WARNING:

THIS MODEL AND ITS ENCLOSED CAR ADAPTOR ARE ONLY COMPATIBLE WITH 12V VEHICLES.

PLEASE NOTE: THIS MODEL IS NOT COMPATIBLE WITH 24V VEHICLES.

DO NOT CONNECT THE UNIT TO THE CAR VIA CAR ADAPTOR BEFORE THE ENGINE HAS BEEN STARTED. DISCONNECT THE CAR ADAPTOR WHEN IT IS NOT IN USE.

Caution:


Do not connect the power plug to a power outlet other than that which is indicated here and on the label as this may result in the risk of fire or electric shock.

Do not handle the power plug with wet hands. Doing so may cause electric shock.

Only use adaptors of the type specified here. Failure to do so may cause a fire or damage the player.

CONNECTIONS

- Using the car plug
- Outputting audio and video signal from the main unit to the monitor.


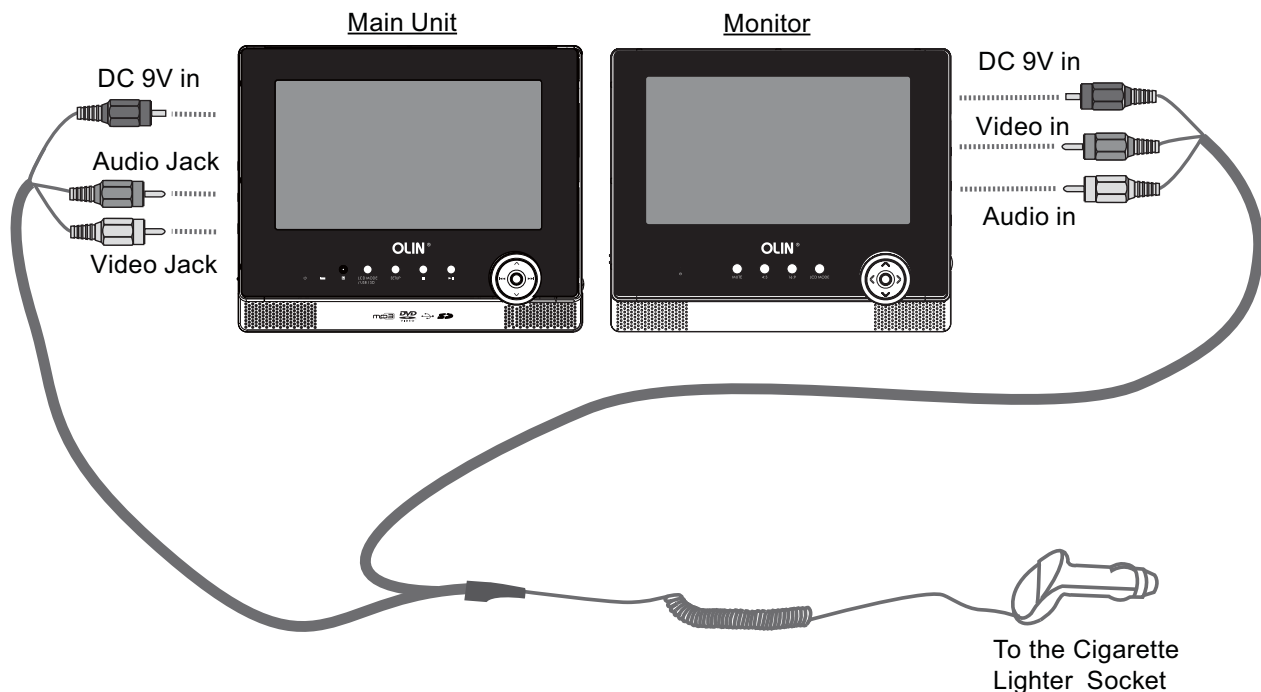


Audio and Video Connections (external device)

Main Unit

Slide the AV switch to AV IN to input the AV signal.
Slide the AV switch to AV OUT to output the AV signal.

Monitor

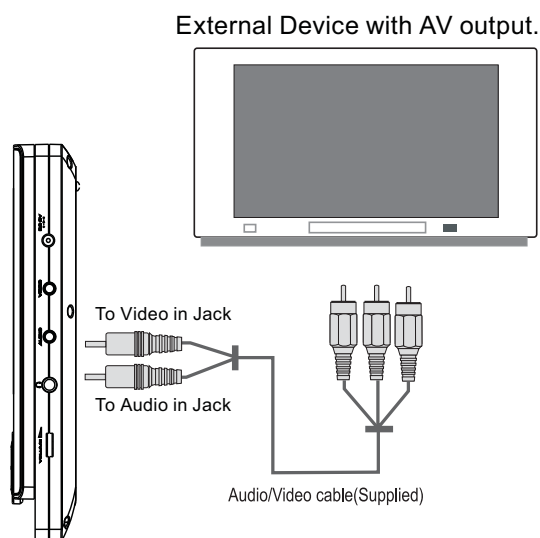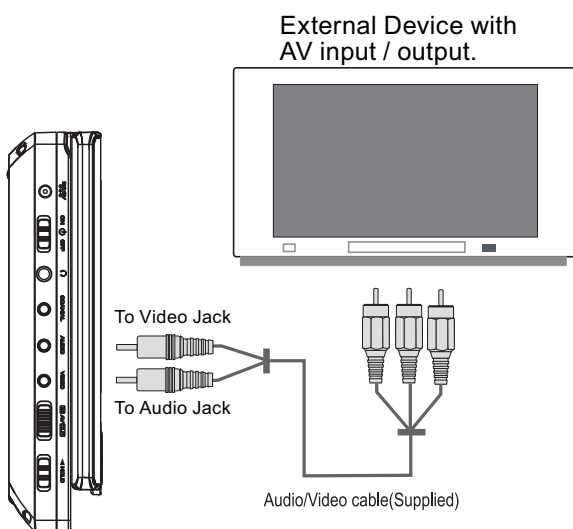


1. Refer to the owner's manual of the external device as well.
2. Before connecting the power source, ensure that all the connections are properly done.
3. If the player will not be used for a long period of time, disconnect the power and remove the battery from the remote control.


CONNECTIONS

USB/SD/MMC-Card Connection

1. Insert the USB/SD Card into the corresponding slot on the right panel of the main unit, press and hold the LCD MODE/USB/SD button to display the DVD/USB/Card selection menu. Press the up/down direction button to select USB or Card from the menu, press ENTER to access.
2. It takes a short while for the unit's reading data. After the device is detected, the screen will display the working menu, press the direction buttons to select the desired file from the menu and press Play/Pause to start playback.

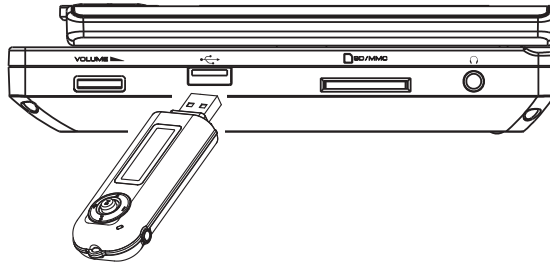


Connecting to an amplifier equipped with a Dolby Pro Logic Surround

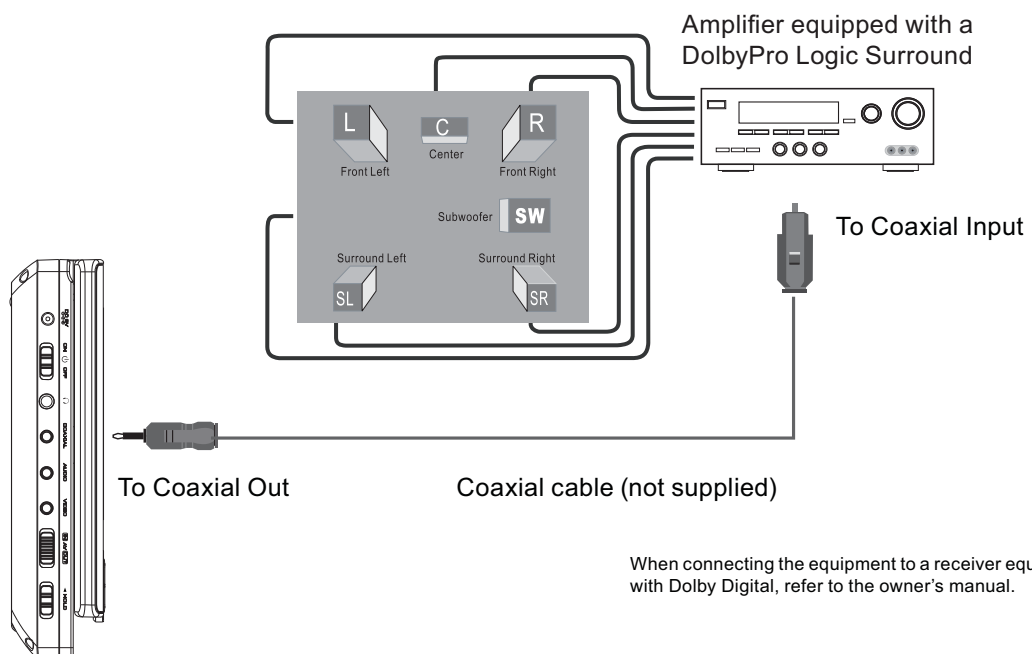

CONNECTIONS

Rechargeable Battery Pack

- For new or exhausted rechargeable battery pack, we recommend it be recharged for 4 hours.
- To charge the battery, just connect the adaptor.
- If the battery does not work to your expectation, please consult the service center. Do not attempt to replace or repair the battery by yourself unless you are a qualified service personnel

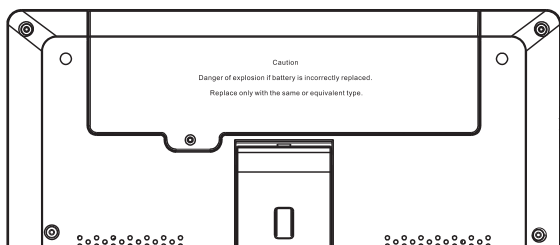

(NI-MH Rechargeable Battery Pack)

- The battery can be recharged about 300 times without obvious performance drop.

Note:

- Use appropriate charger to charge the NI-MH battery.
- Never dispose of in fire or heat up.
- Do not use in high temperature or near heat sources.
- Do not open the cover. Refer servicing only to qualified service personnel.
- We do not recommend charging battery pack while DVD player is in use.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Low Battery Detection

- The unit will access to STANDBY mode automatically when the battery is low.

Using Headphones / Earphones

Maximum output voltage $\leq 150\text{mV}$

HEADPHONE VOLUME WARNING

Connect earphones with the volume set low and increase it if required. Prolonged listening through some earphones at high volume settings can result in hearing damage. When headphones/earphones are connected, no sound will be emitted from the unit's speaker.

Caution: Avoid listening to sound at levels which may be harmful to your ears.

Continuous use of earphones at high volume can damage the user's hearing.

BASIC OPERATIONS

Basic Playback

- 1 Prepare the connections and power supply.
- 2 Load a disc
Press the Play/Pause/Stop button to open the top cover. Insert a disc with the label-side facing up. Close the cover manually.
 - If a single-sided disc is inserted upside-down, the player will display “NO DISC” or “Invalid Disc”.
- 3 Start playback
Press PLAY to start playback (some discs may start playing automatically).

Play/Pause/Stop

 
- Press  to play the disc.
- Press  during playback to pause. Press  again to resume playback.
- Press  during playback to stop the disc (“Pre-Stop”). Press  to resume playback.
- Press  when the disc is “Pre-Stopped” to stop playback completely. (When  is pressed, the disc will start playing from the beginning).

Previous/Next (Skip)


- Press  to skip to the next track (DVD, CD, etc).
- Press  to return to the previous track (DVD, CD, etc).

Forward/Reverse (Search)

- Repeatedly press the  button to search fast forward through a disc.



 - Repeatedly press the  button to search fast reverse through a disc.



Slow/Step

- Press SLOW for slow-motion playback. Each successive press of SLOW will change the rate of slow-motion playback. Press  to resume normal playback.



- Press STEP to start frame-by-frame playback. Each successive press of STEP will advance the video one frame. Press  to resume normal playback.

Note:


Audio will be muted during fast-forward, fast-reverse, and slow-motion playback mode.

BASIC OPERATIONS

Menu Navigation


To navigate DVD disc menus or the player's setup menus:

- Press the DIRECTION keys (arrows) to select a desired feature or option in the menu
- Press ENTER to confirm a selection in the menu.
 - For some menu options, you may be able to use the numeric keypad to input data.
- Press  to cancel an entry.

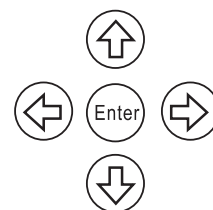

Numeric Keypad

- Use the numeric keypad to skip directly to a DVD chapter or CD track. (Some discs may not allow direct access function.)
- Use the numeric keypad to input numeric data in menu option fields when possible.

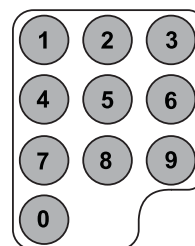

Disc Error Messages

The following messages will be displayed on-screen if there is a problem with the format of the loaded disc

- **Wrong Regional Disc** The region code of the disc does not match the player's region code
- **Wrong Password** The parental rating level of the disc is higher than the parental rating level setting of the player. The player will not play the disc.
- **Wrong Disc** The player is equipped with automatic disc quality detection software. If the player detects a disc that is damaged or had a format problem, it may play the disc at lower quality or stop playback completely, depending on how damaged the disc is
- **DTS Discs:** This player does not have a built-in DTS decoder
 - Connect to a digital amplifier using a Digital Audio Connection (optical or coaxial) to enjoy DTS audio discs.
 - Select Dolby 5.1 or 2-Channel Stereo Downmix instead of the DTS setting

Note:

DVD disc production quality may vary; some discs may deviate from the industry standard

Some incorrectly-formatted discs may still play, however, the playback and operational quality of the disc may be substandard

Power Management

If the player will not be in use for a long period of time, set the Power Switch to the OFF position, unplug the player, and remove the batteries from the remote control

PLAYER FUNCTIONS

Menu / Title

- Press the MENU key during DVD playback to return to the disc's Root Menu.
- Press the TITLE key during DVD playback to return to the disc's Title menu.

Setup

Press the SETUP key to enter the player's setup menu. Enter the Setup menu to adjust the player's internal settings, please see the [SETUP](#) section for operation details

Display

Repeatedly press the Display key to show the playback information.

To quit the display mode, keep pressing the Display button to finish the show.

Repeat Mode

Each successive press of REPEAT will change the repeat mode of the player shown as below:

Repeat	DVD Mode	CD Mode
REPEAT x1	Repeat Chapter	Repeat All
REPEAT x2	Repeat Title	Repeat Track
REPEAT x3	Repeat All	Repeat Off
REPEAT x4	Repeat Off	

Note:

Some DVDs do not support the repeat function.

PLAYER FUNCTIONS

Repeat A-B Mode

To repeat a specific section of a disc (play on a loop):

1. Press A-B to set the desired start point ("A") of the section to be repeated.
2. Press A-B again to set the desired end point ("B") of the section to be repeated.
3. The section "A-B" will now play repeatedly as a loop. Press A-B again to resume normal playback.

Multi-Angle/Subtitle/Audio

- During playback of a DVD that has been mastered with multiple angles, press ANGLE to view the available alternate camera angles (A DVD may have up to 9 selectable angles)
- During playback of a DVD that has been mastered with subtitles, press SUBTITLE to view the available subtitle tracks (A DVD may have up to 32 selectable subtitles)
- During playback of a DVD that has been mastered with alternate language/audio tracks, press AUDIO to hear the alternate tracks (A DVD may have up to 8 selectable audio tracks)

Zoom

Press ZOOM to change the magnification level of the picture

- During DVD playback, each successive press of ZOOM will change the level of magnification to:
2X → 3X → 4X → 1/2X
- During JPEG CD playback, each successive press of ZOOM will change the level of magnification to:
2X → 3X → 4X → 1/2X

In JPEG Mode

When the magnification level is greater than Normal/100%, use the NAVIGATION keys to pan around the magnified picture

When the magnification level is equal to 100%, use the NAVIGATION keys to rotate or reverse the picture

Note: The picture quality will decrease as the zoom level (magnification) increases


Clear

Press the Clear button to cancel the incorrect input .

Search

Go to a desired section by SEARCH function.

Press the Search button to display the search bar shown below:

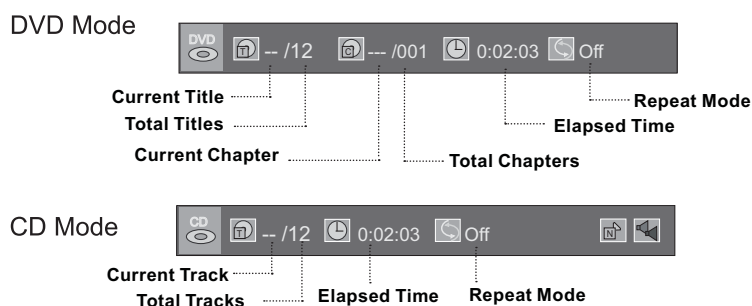


- 1 Press the direction buttons to move between entries
- 2 Press the numeric buttons to input data
- 3 Press the Clear button to cancel the incorrect input
- 4 Press the ENTER or the Play/Pause button to start search and playback.
- 5 Press the Search button to exit

PLAYER FUNCTIONS

LCD Menu


Press the LCD Mode button once to display the LCD menu.

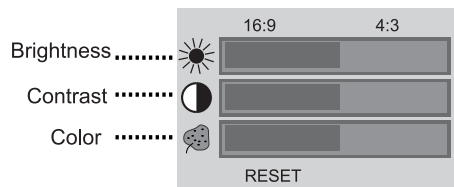

- Press the Up/Down direction button to select the desired item, press the Left/Right direction button to adjust.
- Press the Left/Right direction button to change the screen dimension as 16:9 or 4:3.
- When RESET is selected, press the ENTER button to confirm the Brightness, Contrast and Color settings to the factory default settings.

PROGRAM FUNCTION

Press the "Program" button to display the program menu. (eg: DVD mode)

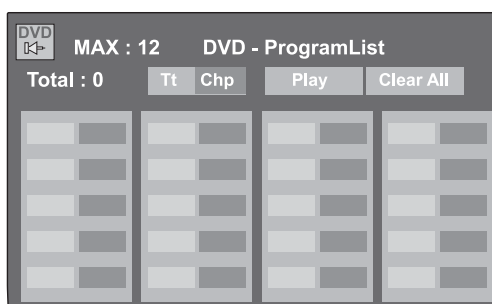

1. Press the DIRECTION buttons to move between entries.
2. Press the NUMERIC buttons to input data.
3. To delete the incorrect input, press the CLEAR or ENTER button. To delete all programs, select "Clear All" and press ENTER.
4. Press Play/Pause to start playback or select "Play" from the menu and press ENTER.
5. To cancel, press Program twice.


USB/SD/MMC Card Access

- Press the DVD/USB/SD button on the remote to display the working source menu, you can also access this menu by holding the LCD MODE/USB/SD button on the main unit for a short while.
- Press the up/down direction button to select DVD/USB/Card from the menu.
- Press ENTER to access.

SETUP

Various features of the player can be adjusted in the SETUP menu

1. Press the SETUP button to show the setup menu.
2. Press the direction buttons to select the desired item.
3. Press ENTER to confirm.

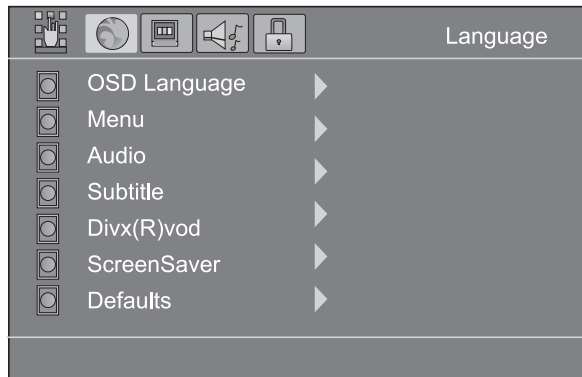

Language Setup

Item	Description	Default Setting
OSD Lang	Sets the language of the player's on screen display	English
Menu	Sets the menu language	English
Audio	Set the audio language	English
Subtitle	Sets the subtitle language	English
DivX(R)vod	Display the Divx information	
Screen Saver	The screensaver prevents burn in damage to the player's screen	On
Defaults	Resets all settings to the factory default	

Display

Item	Description	Default Setting
TV Type	Sets the aspect ratio of the display. 4:3 is used with standard television displays; 16:9 is used with widescreen television displays.	16:9
View Mode	Sets the view mode. (Fill, Original, Height Fit, Width Fit, Auto Fit).	Auto Fit
TV System	Sets the player's Video Out signal type. Set this to correspond with your TV's Video System type. PAL is the standard used in Australia.	Auto

SETUP

Audio Setup

Item	Description	Default Setting
Audio Setup	Sets the audio channel mix mode (LT/RT, Stereo).	Stereo
Spdif Dolby	Set the audio output mode. (PCM, RAM, OFF)	RAW

Parental

Item	Description	Default Setting
Change	You must input the four-digit password to access the Parental settings. The initial password is 8888. Enter the old password, the new password, and then the new password again to verify and change the Parental Settings password. Restoring the player's default settings will not reset the password. DO NOT FORGET THE PASSWORD; this password cannot be reset.	
Rating Level	Sets the maturity rating level of the player. The player will not play any discs higher than this setting. There are eight rating levels. Level 1 will restrict playback to discs suitable for people of all ages. Level 8 will allow playback of all discs, including those suitable for adults only.	8

SPECIFICATIONS

Main Unit

Power supply	DC 9.0V 2A
Power consumption	<=10W
Signal system	Auto/NTSC/PAL
Video output	1±0.2V (p-p), 75ohm, Negative sync., 3.5 mm mini jack x1
Audio output	1.2 Vrms (1 KHz, 0dB), 3.5 mm mini jack x1
Earphone terminal	3.5mm stereo mini jack x1
Signal /Noise ratio(audio)	90dB typical
Dynamic range(audio)	90dB typical
Panel size	7 inch (16:9)
Resolution	480(H) x 234 (V) (QVGA) Pixels
Laser	Wavelength 650 nm
Operating conditions	Temperature: 0℃ to 45℃ Operation status : Horizontal
Dimensions	198×165×37 mm (Main Unit & Batt)
Weight	725.9g (Main Unit & Batt)

Monitor


Power supply	DC 9.0V 1A
Power consumption	< =7W
Signal system	Auto/NTSC/PAL
Video Input	1±0.2V (p-p), 75ohm, Negative sync., 3.5 mm mini jack x1
Audio Input	1.2 Vrms (1 KHz, 0dB), 3.5 mm mini jack x1
Earphone terminal	3.5mm stereo mini jack x1
Panel size	7 inch (16:9)
Resolution	480(H) x 234 (V) (QVGA) Pixels
Operating conditions	Temperature: 0℃ to 45℃. Operation status : Horizontal
Dimensions	198×165×26mm
Weight	507.5g

Specifications and manual are subject to change without prior notice.

PLACEMENT

Mounting in the Vehicle

- The headrest mounting bags for fitting the main unit and the monitor on to your car headrests.
- The bag has 2 straps that wrap around the headrest tightly and the main unit / monitor slides in and out of the bag.

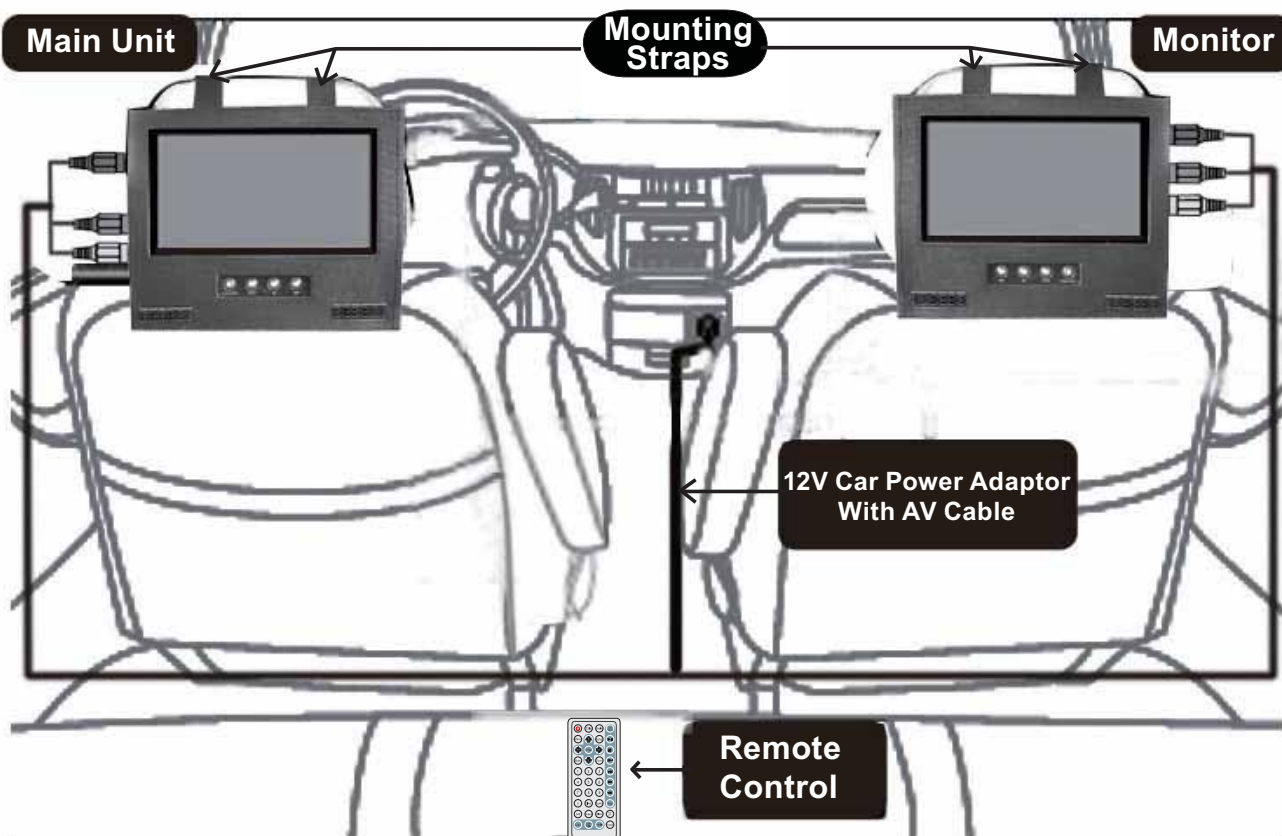

SAFETY WARNING!

- On no account should this unit be used by the driver of a moving motor vehicle, or left unsecured in the vehicle whilst driving.
- If this unit is being used by a passenger in your vehicle, be sure that it is secured or held safely, and does not obstruct any safety device (i.e. airbag, seat belt etc.) that is fitted.
- All passengers should wear seat belts when using this unit in a moving vehicle.
- If in doubt, please contact your vehicle manufacturer for further advice.
- Using other car power adaptors could damage the unit.

TROUBLESHOOTING

Main Unit Troubleshooting

There is no power to the device.

- Ensure that the Power Switch on the main unit is physically set to the ON position.
- Ensure that the AC adaptor cord is securely connected to the player and the proper wall outlet.

The device will not play the disc.

- Ensure that a supported disc is loaded in the player label-side up.
- Ensure that the disc's rating level does not exceed the player's parental rating level.
- Ensure that the disc is not damaged or too dirty.
- Clean the disc or try another disc. Moisture may have condensed inside the player. Remove the disc and leave the player on for 1-2 hours and then try again.

There is no picture.

- Ensure that the TV set has been powered on and is set to the correct AV mode.
- Ensure that the connections between the player and the TV are secure and correct.
- Check if the connection cables are damaged.

The picture is noisy or distorted.

- The disc may be damaged or dirty. Clean the disc or try another one.
- Reset your TV's color system.
- Ensure that the player is connected directly to the TV (and not through a VCR, cable box, satellite receiver, etc.)

The picture is not full-screen.

- Change the aspect ratio setting of your player from the Setup menu.
- Select a different aspect ratio option from the DVD disc menu.

There is no sound or distorted sound.

TROUBLESHOOTING

- Ensure that the TV and amplifier have been turned on and properly set up.
- Ensure that the TV and amplifier connections are secure and correct.
- Try a different Audio track of the DVD by pressing AUDIO.
- Ensure that the MUTE function of the TV, Amplifier, or Player is not engaged.

The remote control doesn't work.

- Ensure that the Power Switch has been physically set to the ON position.
- Ensure that there are no obstacles between the remote and the player.
- Point the remote at the remote sensor on the main unit.
- Ensure that the batteries in the remote retain a charge and have been installed correctly.
- Try replacing the remote's batteries.

The player has malfunctioned.

- Unplug the player. After 30 minutes, plug in and power on the player -- the restore function should reset the player.

Monitor troubleshooting

There is no power to the device.

- Ensure that the Power Switch on the monitor is physically set to the ON position.
- Ensure that the AC adaptor cord is securely connected to the player and the proper wall outlet.

There is no sound or distorted sound.

- Ensure that the AV cable connections are secure and correct.
- Ensure that the MUTE function of the monitor is not engaged.

The picture is noisy or distorted.

- Reset the monitor's color system.
- Ensure that the AV cable connections are secure and correct.

NOTE

Copyright

This manual contains information protected by copyright law.
No part of this document may be used or reproduced in any form or by any means,
or stored in a database/retrieval system without prior written permission from us.

The information of this manual is based on the current version of the product.
We reserve the right to alter the content without prior notice.

All brand names in this manual are the property of their respective owners.

Need some help?
Call our toll free
Customer Helpline today!

**FREE
CALL**

Customer Helpline
 **1800 656 630**

Or visit our website
www.westwell.com.au/olin



Westwell Australia Pty Ltd

Westwell and its stylised logo are registered in the Australian IP office.

OLIN is a registered trademark of Westwell Australia Pty Ltd.

All rights reserved.

All promotional materials are offered for reference only.

Actual products may vary.