



User Manual

Air Pressure Transmitter Kit

Contents

Section 1.0 – About Air Pressure Transmitters

Section 2.0 - Installation

Apreco Limited © 2011






Section 1.0 - About Air Pressure Transmitters

About

The Apreco Air Pressure Transmitter senses the pressure of air and compatible gases and sends a standard 4-20 mA output signal. The housing is specifically designed to enable the gauge to be removed for annual servicing and calibration.

A wide range of models are available factory calibrated to specific ranges. Pressure connections are inherent to the glass filled plastic moulded housing making installation quick and easy. Digital push-button zero and span simplify calibration over typical turn-potentiometers. 90mm digit LCD shows the pressure differential readings in pascals

Section 2.0 Installation

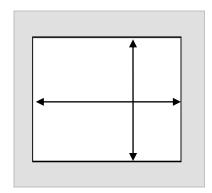

3 0 0 3

<u>Preparation & fitting of Air Pressure Transmitter</u>

Step 1

Install The plastic tubing and Senor plates as per the Site layout drawings.

Step 2

Cut aperture for the backing box which houses the APT gauge Aperture size: W = 145mm H= 155mm

Notes:

- 1) Aperture cut-out needs to be LEVEL
- 2) Minimum depth of 50mm is required to fit the backing box

Step 3

Fit Plastic cover screen to front of the backing box before installing into the wall. This keeps the spacing between hole centres correct.

Step 4

Fit the backing box into the wall tightening the screws in the yellow clamping blocks as required, whilst taking care not to over tighten.








Step 5

Remove the plastic screen to continue to fit the gauge

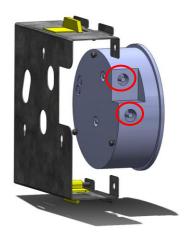


Step 6

Connect the tubes that have been installed to the applicable HIGH/LOW connectors.

Connect the 2 wire power supply as per the wiring diagram.

Note: Power supplied by others

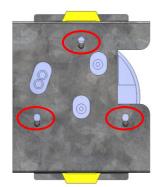


Step 7

Guide the gauge into the housing and locate the fixing screws into the slots as shown.



Sten 8

Use the 'UNITS' button to select Pa unit display range. *Note:* Do *NOT* press the 'ZERO' button unless you are calibrating the unit.

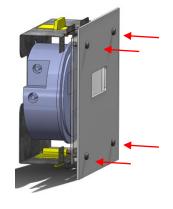

Step 9

Fit the plastic cover screen and metal cover plate, using the M4 x16 screws provided to secure in place

Note: Take care not to over tighten.