

# **K2000 DVR USER MANUAL**

Construction





## On/Off

### 1. On

- Press and release the Power Button

- The Blue Indicator is burning.

## 2. Off

- Press and release the Power Button
- The Blue Indicator is off.

**Notice:** When it is low-power, the Car DVR will be off after it reminds the user.

## Recharging

The red indicator will be burning during charging.

After about 180 minutes, the red indicator will be off.

Insert or get out the Memory Card

## Insert

Insert the Micro SD Card according to the indication on camera

Put into the card slot straightly

Get out

Push the Micro SD card and release it

LCD Rotating

Two sides Rotating, one side rotating angle is 90 degree, the other is 180 degree

Lens Rotating

Rotating Angle: 180 degree

Switch between Image/Video/playback

Press and release the MODE button

## System Reset

Press and release the MENU Button two times

The back ground is blue

Date/Time Reset: Date/Time

Auto Turn Off: Reset the Off Time

Sound Of Button: On/Off Button Sound

Language: Reset the Language

Optical: Reset Currency (50Hz/60Hz)

TV Model: NTSC/PAL

Video Rotating: Reset it upright or inverted

Default: Restore factory setting select

Version: Software Version Code

## 1, Video

Turn on the Camera or connect it to power source

Press and release OK button to stop recording

Press and release again to restart

In the video working status, press and release UP Button

In the status of video working status, press and release the Down Button to switch between Day Status and Night Status.

When it switches to Night Status, the LED will be burning.

## 2 Reset the Video

Press and release the button, Menu

Resolution: 1080P/720P/480P

Recycle Time: 5min/10min/15min

Date Stamp: on/off

Image

A. Shoot Image

Press and release OK button

In the status of Image, press and release the UP Button

In the status of Image, press and release the DOWN Button to switch between Day Status and Night Status.

When it switches to Night status, the LED will be burning.

## Image Resetting

Press and release the MENU Button to reset it.

Shooting mode: Single shot / Self-timer (2 seconds / 5 seconds / 10 seconds) / Continuous

Resolution: 12M/8M/5M/3M;

Image Quality: Best / quality / standards;

Sharpness: strong / standard / soft;

White Balance: Auto / Daylight / Cloudy / Tungsten /  
Fluorescent;

Color: normal / black / brown;

ISO: Auto / 100/200/400;

Exposure Compensation: -2.0 - +2.0;

Face: Face / smile recognition;

Anti-Shake: Off / On;

Quick Preview: Off / 2 seconds / 5 seconds;

Date Label: Date / (date / time)

## File Management

Press and release the MODE Button

## Video Playback

Press and release the MODE Button

Press and release the UP or DOWN Button to choose the file for  
**playback**

Press and release the OK Button to play or stop

During playing, press and release the button, DOWN to rewind.

Press and release the Button, MENU to stop playing.

Image Playback

Press and release the MODE Button

Press and release the UP or DOWN Button to choose the file for playback

## Playback Resetting

In the status of Playback, press and release the Button MENU

Connect and PC

## Download Files:

Connect Camera and PC

Press and release the Power Button

Blue Indicator is burning

Movable Disc/ PICBRIDGE/Camera will be show on Screen of  
Camera

## Choose Movable Disc

The Movable Disc Sign will be show on PC

If you choose Camera, this equipment will be used as web  
camera.

**Notice:** Operation System: Windows 2000/XP/Vista/Windows  
7,MAC OS x 10.3.6 以上。

Get out of USB Cable to turn off the camera.

**Notice:**

Because of the wrong operation or any other unknown reasons, it stuck, please press and release the Reset Button, then turn it on again.