Specification

Model	BC960	
Pick up Element	1/3" SONY Super HAD CCD II	
Effective Picture Elements (H×V)	NTSC:976(H)×494(V),PAL:976(H)x582(V)	
Horizontal Resolution	700TV Line	
Minimum Illumination	0.001 Lux/F1.2	
S/N Ratio	More than 52dB	
Scanning System	2:1 interface	
Synchronous System	Internal, Negative sync.	
Auto Electronic Shutter	NTSC: 1/60s~1/100,000s, PAL: 1/50s~1/100,000s	
Gama Characteristic	0.45	
IR Distance	20 Meters (with ¢ 5X24PCS Infrared LED)	
IR Status	Under 10Lux by CDS	
IR Power On	CDS AUTO Control	
Video Output	1Vpp, 75Ω	
Auto Gain Control	Auto	
Power/Current	DC12V(+/-10%)/350mA	
Lens	Board Lens 3.6mm/F2.0	
Dimension (mm)	175(W)x69(H)x55(D)	
Weight (g)	830	
Storage Temperature	-30~+60℃ RH95% MAX	
Operating Temperature	-10~+50℃ RH95% MAX	

Packing List

No	Name	Model	Number
1.	Weatherproof IR Color Camera	BC960	1
2.	User Guide	BC960	1

Franchiser:

BC960 Color Camera

Talos Weatherproof IR Color Camera



Notes : Before providing power for the camera, please read this User Guide in detail!

Do not attempt to disassemble the camera. If the camera can not work, please contact local franchiser or our company.

BRIEF OF PRODUCT

CONNECTING



CAMERA RESET/BACK/EXIT/SAVE ALL



. May be the power supply voltage abnormity, please check the power supply voltage and pole whether exactitude.

Please check all the connecting cable and monitors whether be connected

2. The picture level direction have flowing interference ripples

. May be caused by the power supply AC ripples, it need filter the wave of the

. Check the monitor and peripheral equipments used.

3. The picture background color changes continuously

. The fluorescent lamp's electromagnetic field cause color roll. This is proper phenomenon of the cameras.

Reduce the fluorescent lamp numbers or increase the distance between the camera and the fluorescent lamps can improve it. . Use power supply external sync. camera can solve it.

4. The picture smear too mass

. The power supply's voltage unstable.

. Connecting cables not connect correctly or have high impedance.

•The power supply must through safe attestation. Its output voltage, current, voltage polarity and operating temperature must match the camera's requirement.

•When using the camera in the thunderbolt condition, please note to mount Anti-thunder device or put off the power supply plug and cable. In order to capture high quality pictures, the power supply's cable and video output cable should not be too long.

INTRODUCTION

Congratulations on your purchase of this product. This User Guide suits BC960 product. We adopt the latest SONY technical of sensor and driver. The most attractive characteristics are small and easy hidden, suits the elevator and corridor. In addition, it owns the characters of high definition and stability, strong anti-jamming, rich and real color. Fixing and using this model are convenient too. It is very good for you to apply to your CCTV system.

Please read this instruction manual carefully to ensure proper use of the product.



The symbol is intended to alert the user to the presence of important operating and maintenance (servicing) Instructions in the literature accompanying the appliance.



The symbol is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient Magnitude to constitute a risk of electric shock to persons.





- Please note the camera's operating temperature and its using environment requirement. Avoid using the camera at too high or too low temperatures. The operating temperature is $-30 \sim +60^{\circ}$ C. (Recommendatory operating temperature is -10~+50°C.)
- Never make the camera face the sun or bright object. Otherwise, it will damage the CCD.
- Do not mount the camera near by the radiator or heater.