 




Turn it back on

# User Guide

Emotion

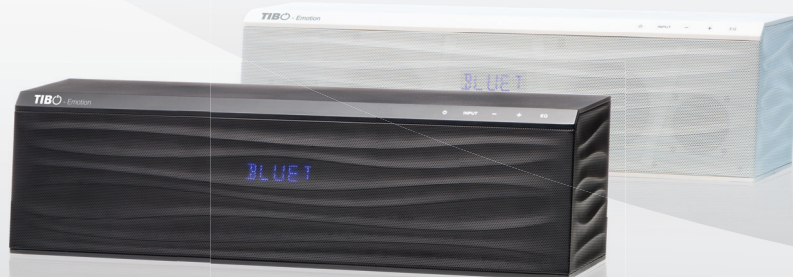

**3D**  
SOUND

**LED**  
display

**AUX**

**Bluetooth**

**Coax-in**

**Optical-in**

Please read this user manual carefully before using your Emotion and retain for future reference.

## PACKAGE CONTENTS

1 x User Manual



1 x Remote Control  
(2 x AAA batteries included)



1 x Emotion speaker



1 x DC Adapter



1 x RCA Audio  
Cable



1 x Optical Cable



1 x Coax Cable



## FEATURES

- » Provides powerful sound to enhance your listening experience.
- » Sonic Emotion Absolute 3D technology\* produces rich, full sound that permeates every inch of your room.
- » Compatible with most Bluetooth-enabled devices with iOS or Android™ platforms.
- » Remote for convenient controlling from a distance.




## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions. Keep these instructions, for further reference.
2. Heed all warnings.
3. Follow all instructions.
4. Do not use this unit near water.
5. Clean only with dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits the unit.
9. Use only attachments/accessories specified by the manufacturer.
10. Unplug this unit during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as if the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.


## WARNING AND PRECAUTIONS

1. To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside.
2. Do not expose the unit to dripping or splashing liquids.  
Do not place objects filled with liquids (such as vases) on the unit.
3. The power plug is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To completely disconnect the unit from the power supply, the power plug of the product shall be disconnected from the wall outlet completely.
4. Using the unit near fluorescent lighting may cause interference with the remote. If the unit is behaving erratically, move away from any fluorescent lighting.

## FRONT

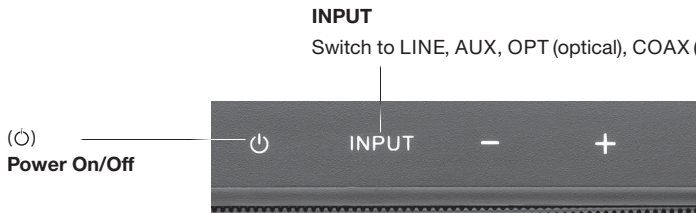

## BACK

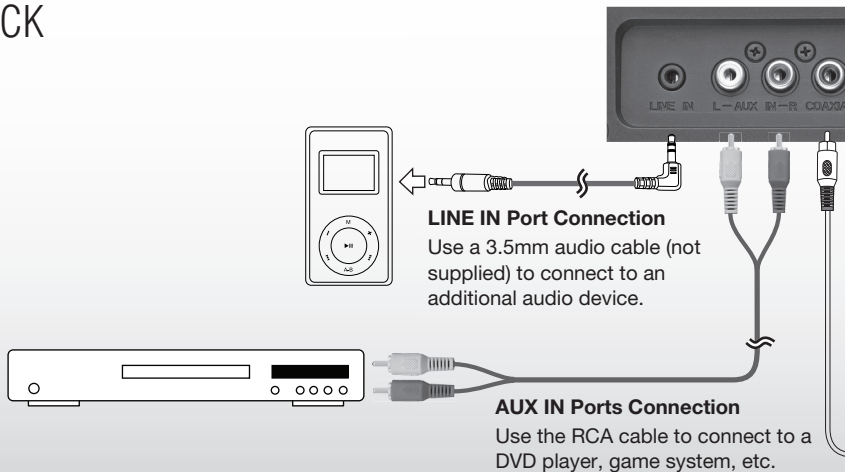


DAX (coaxial), or BLUETOOTH.

### Volume Control (+/-)


#### EQ

3D Equalizer sound options (MUSIC, MOVIE, GAME, and 3D OFF).

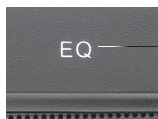

#### DC IN

Use the AC adapter and AC power cord to connect to a wall outlet.

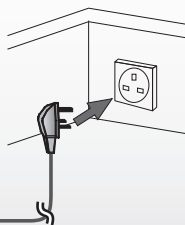

To an optical port

To a coaxial port



## USING THE EMOTION

1. Turn on your device and turn down its volume.
2. Press **O** to turn on the Emotion, and turn down its volume.
3. Press **INPUT** to switch to **LINE**, **AUX**, **OPT** (optical), **COAX** (coaxial), or **BLUETOOTH** mode. You can also press **BLUETOOTH** on the remote to enter to Bluetooth mode directly.
4. Press **EQ** to choose a sound option or press **MUSIC**, **MOVIE**, **GAME**, or **OFF** on the remote. You can further customize each option by adjusting **BASS +/-** and **TREBLE +/-**.
5. After starting playback on your connected device, adjust the Emotion volume to a comfortable level.


**Note:** The Emotion enters standby mode if you pause it for more than 15 minutes or if the Bluetooth connection is broken for 15 minutes.

## USING THE BLUETOOTH FUNCTION

1. After you turn on the Emotion and switch to Bluetooth mode (**BLUETOOTH** scrolls on the display), the soundbar searches for a Bluetooth-enabled device (**BT PAIRING** scrolls on the display).
2. Activate your device's Bluetooth function (refer to your device's user's guide).
3. When **Tibo Emotion** appears in the Bluetooth devices list, pair it to your device. If you are prompted for a PIN, enter **0000**.

# USING THE REMOTE CONTROL

1. Open the battery compartment and install two AAA batteries (included), matching the polarity symbols (+ and -) marked inside.
2. Point the remote at the center of the Emotion to control it.

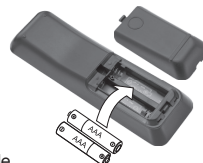

**Power On/Off** (○)

**MUTE**

Turn sound on or off.

**DIM**

Adjust screen brightness.

**VOL +/-**

**MUSIC, MOVIE,  
GAME, OFF**

3D Equalizer sound options.

**BASS +/-**

Adjust bass tone.

**BLUETOOTH**

Go to BLUETOOTH mode.

**INPUT**

Toggle between LINE,  
AUX, OPTICAL, and  
COAXIAL mode.

⏮️/⏭️

Go to previous/next track.

⏸️

Play/Pause.

**TREBLE +/-**

Adjust treble tone.



**Note:** During Bluetooth connection, if you need to pair the Emotion to other Bluetooth devices, press and hold the **BLUETOOTH** button on the remote. The current Bluetooth connection is interrupted, and the Emotion starts searching for other Bluetooth devices.

## BATTERY NOTES

1. Dispose of batteries promptly and properly. Do not burn or bury them. Use only fresh batteries of the required size and type.
2. Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
3. If you do not plan to use the remote control for a long time, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

## SPECIFICATIONS

- » Power Input: DC 15V, 4A
- » Output (RMS): 6 x 10 Watts
- » Frequency Response: 65 – 18,000 Hz
- » Drivers: 2 x 75 mm, 2 x 70 mm, 2 x 50 mm
- » Bluetooth Connection Range: 30 ft. (9.1 m)
- » Bluetooth Protocol: V2.1 + EDR Class 2
- » Dimensions (WxHxD): 458 x 130 x 129 mm
- » Net Weight: 3.7 kg
- » Gross Weight: 4.35 kg

*We reserve the right to change the technical data and the design of the product without notice as a result of further development.*

# TROUBLESHOOTING

| Problem                     | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No sound and display.       | Make sure the power supply is plugged into a working outlet and firmly connected to the Emotion.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Distorted sound.            | Check your source device to see if it is causing the distortion. Set the device and Emotion volume to a low level.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Unbalanced sound.           | If the volume remains low even when the Emotion volume is turned all the way up, check the source device to make sure it is connected via a variable output. Make sure the output is not turned down too low.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Bluetooth function failure. | <ul style="list-style-type: none"> <li>» Avoid electromagnetic interference or interference caused by other Bluetooth devices.</li> <li>» Make sure your Bluetooth device supports audio transfer, is discoverable and has its volume turned up.</li> <li>» If the connected device moves too far away from the Emotion, the Emotion disconnects from the device. Move the device close. The connection resumes automatically.</li> <li>» In Bluetooth mode but without Bluetooth connection, press and hold <b>EQ</b> on the Emotion or <b>BLUETOOTH</b> on the remote control to clear the list of devices paired to the Emotion. Then pair the Emotion to your device again.</li> <li>» Disconnect power, then connect power again and turn on the Emotion.</li> </ul> |

## CONTACTS

 
**Tibo Ltd.**

DSV House,  
Maidstone Road,  
Milton Keynes  
MK10 0AJ  
United Kingdom

tel.: **+44 (0) 845 2711 906**

e-mail: **info@tibo-electronics.com**

Proof of purchase (attach your receipt here).

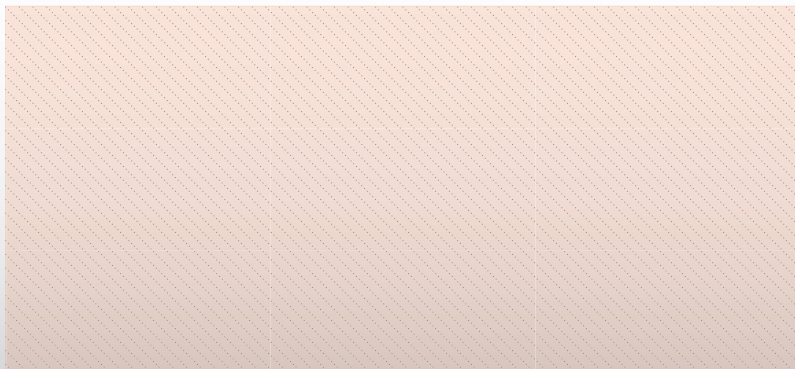



Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Sonic Emotion and  Logo Standard version are registered trademarks of sonic emotion ag.



[www.tibo-electronics.com](http://www.tibo-electronics.com)