

RMS (RemoteManager) Remote Monitoring Software

User Manual

Contents of this user manual are protected under copyrights and computer program laws.
Functions or configurations are subject to be changed or modified without prior notice.

1st Edition : 20 Aug 2008

1st Revision : 02 Apr 2009

Thank You

Thank you for purchasing !

Before operating the system, please read this User Manual thoroughly and retain it for future reference.

Contents

1.	INTRODUCTION	2
2.	SYSTEM REQUIREMENT	2
3.	INSTALLATION.....	3
4.	BASIC OPERATION	4
5.	SCREEN LAYOUT.....	5
6.	DVR SITE REGISTRATION.....	7
7.	LIVE CONNECTION.....	11
8.	PLAYBACK CONNECTION.....	12
9.	REMOTEMANAGER SETTING	13
10.	PTZ CAMERA CONTROL	15
11.	BACKUP LIVE.....	16
12.	REMOTE CONFIGURATION.....	17
13.	BACKUP ARCHIVE.....	35
14.	SAVING SNAP-SHOT	37
15.	STILL PRINTING	38
16.	LOG EVENT SEARCH	39
17.	AVI CONVERTER	40
18.	TIME SYNC.....	41
19.	APPENDIX (USER AUTHORIZATION)	42
20.	APPENDIX (WATERMARK).....	43
21.	APPENDIX (Q & A)	44

1. Introduction

With this program installed on P/C, user can fully manage and monitor the images on DVR(s) over network. Maximum of 16 channels can be seen at once. The camera images can be seen from any position with the button on the screen when PTZ driver has been installed.

2. System Requirement

Recommended Specs


Category	Content
OS	Windows XP / Vista
CPU	Pentium Dual core 1.8GHz or Higher
RAM	1GB
VGA	1024 × 768, 24bit color, DirectX support Min. 256MB (No shared memory)
HDD	20MB free space for installation Min. 10GB free space for Remote Backup

Minimum Specs


Category	Content
OS	Windows XP / Vista
CPU	Pentium 2GHz or Higher
RAM	512MB
VGA	1024 × 768, 24bit color Min. 64MB video memory
HDD	20MB free space

3. Installation


3.1 Run RemoteManagerSetup.exe on CD and then Setup Menu appears as below.

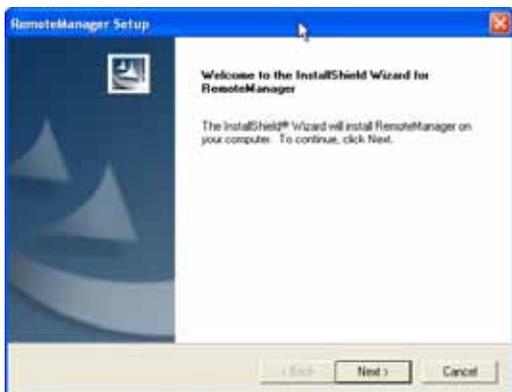


Press the [Next] button to move to the next screen.

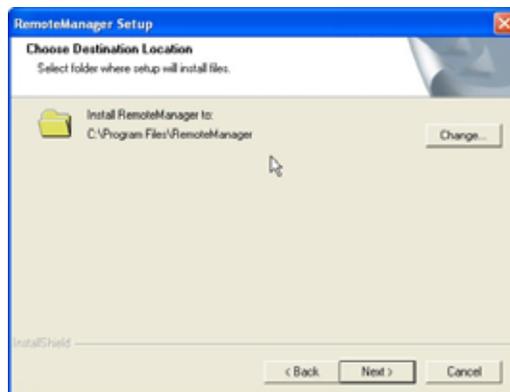

Press [Change] button if you want to install the program in another directory.

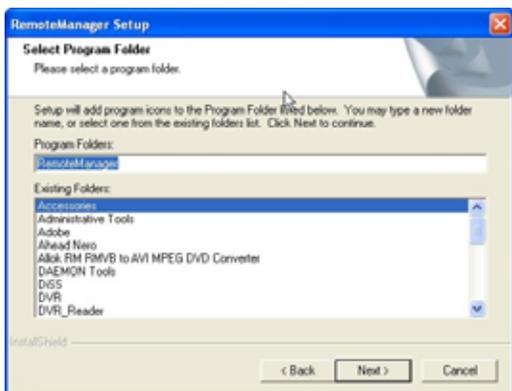


Select Program Folder.

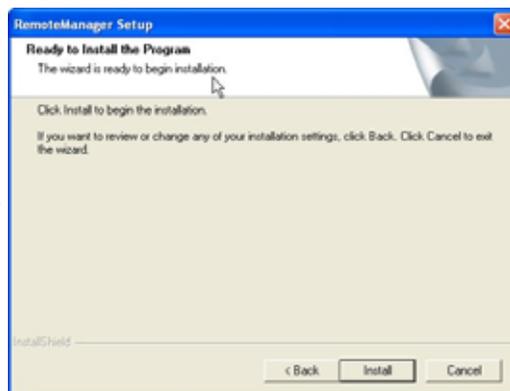

Click [Install] to begin installation


5. Screen Layout

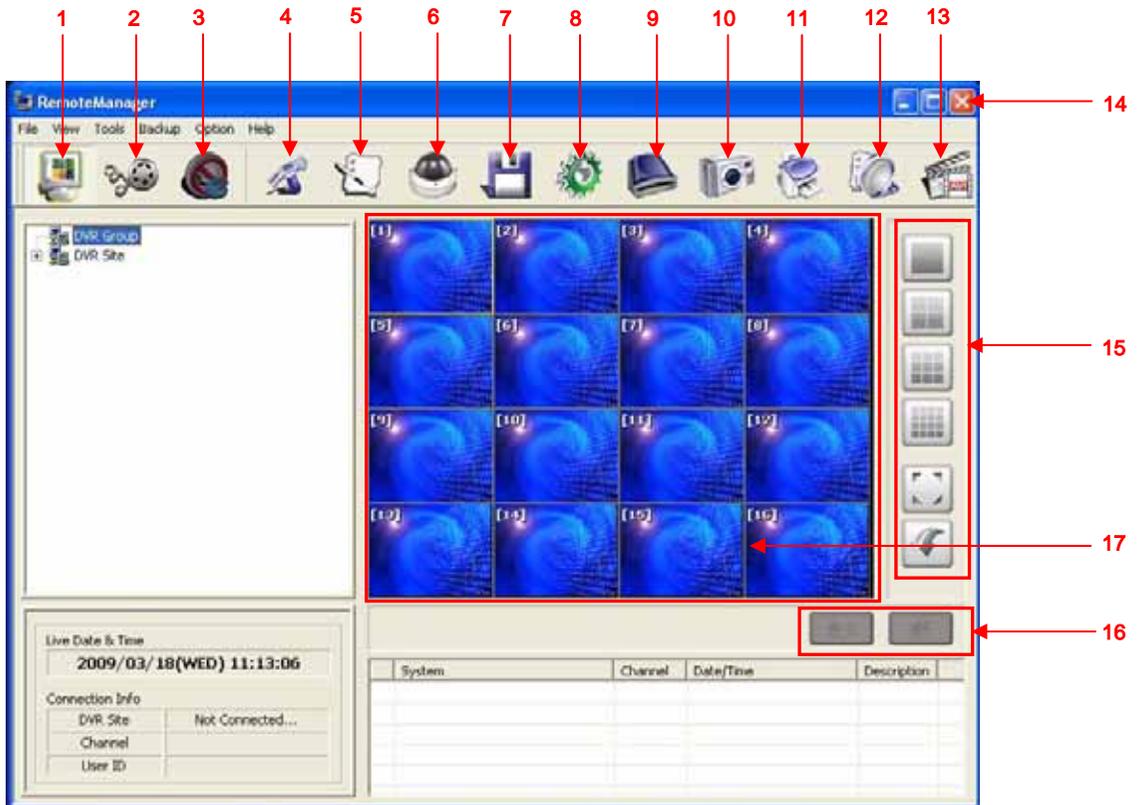

1. Live Mode : Showing live image
2. Playback (VOD) Mode : Playback (Video On Demand) recorded image
3. Close All : Close all channel screen
4. RemoteManager Setting : Option setup of RemoteManager
5. DVR Site Registration : Add / Modify Site List and User List
6. PTZ Camera Control : Control camera PTZ & Focus
7. Backup Live : Save live video into PC (SSF or AVI format selectable)
* Available in Live Mode only.
8. Remote Configuration : Remote setup DVR
9. Backup Archive : Backup recorded video from DVR to PC
* Available in Playback(VOD) Mode only.
10. Saving Snap-Shot : Save picture to PC
11. Still Printing : Print out image
12. Log Event Search : Showing event in server & find image
13. AVI Converter : Convert SSF file to AVI format

14. Exit RemoteManager program


15. Screen Division Selection : Change screen division mode

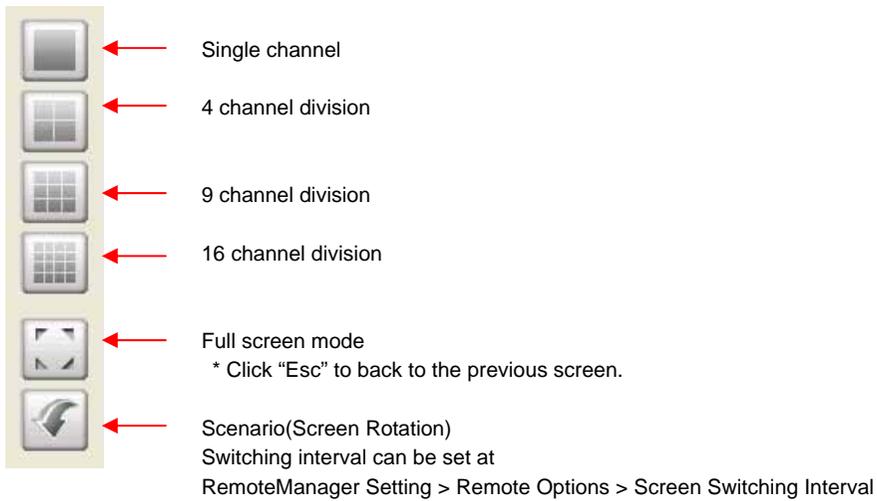

16. Alarm and Audio : Alarm on/off, Audio mute

17. Channel Screen : Transmitted images of camera are shown in each channel screen.

Left click with mouse and then the chosen screen is indicated by yellow border.

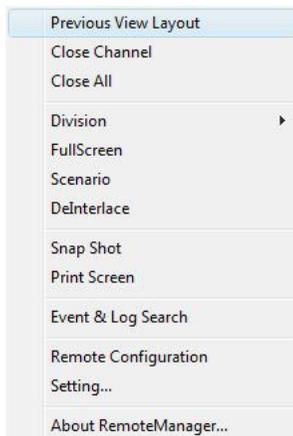

Right click mouse, "Hot-cut" menu will appear

6. DVR Site Registration



6.1 Select DVR Site Registration icon



6.2 In Site Manager, select [Site List] and click [Add] to add or click [Modify] to amend DVR site information.

Site Property

System

Name: DVR 1

IP Address(or URL): 192.168.0.231

User ID: admin

Password: *****

Port: 9010

Web Port: 80

Channel: 1-16

- Input a channel number or range with comma.
ex) 1-4,6,11,12-16

Ok Cancel

Default Port # : 9010

In case of DDNS connection,
you need input URL as per following format:


[m ac address],[ddns link]

e.g. 001c84010021.cctv-link.net

IP Address(or URL): 001c84010021.cctv-link.net


Port: 9010

6.3 In Site Property, input DVR Name, IP, User ID, Password, Port, Web Port and Channel#, then click [OK]

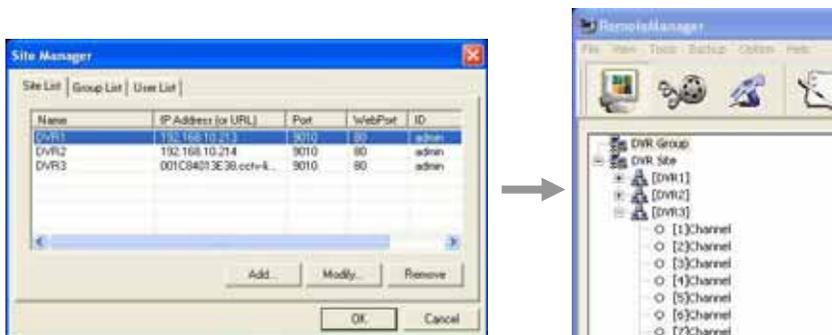


6.4 New DVR information will show at DVR Site panel, after click [OK].

6.5 In Site Property, select [Search], Device Auto Detect window will pop up.

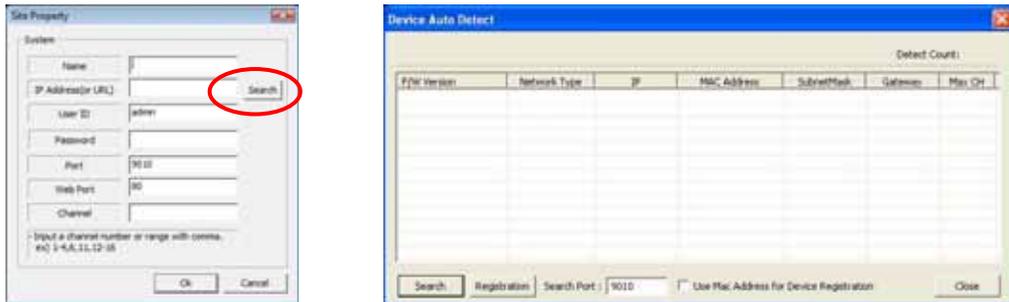


6.6 Click [Search], all DVRs connected over the network will be listed out.

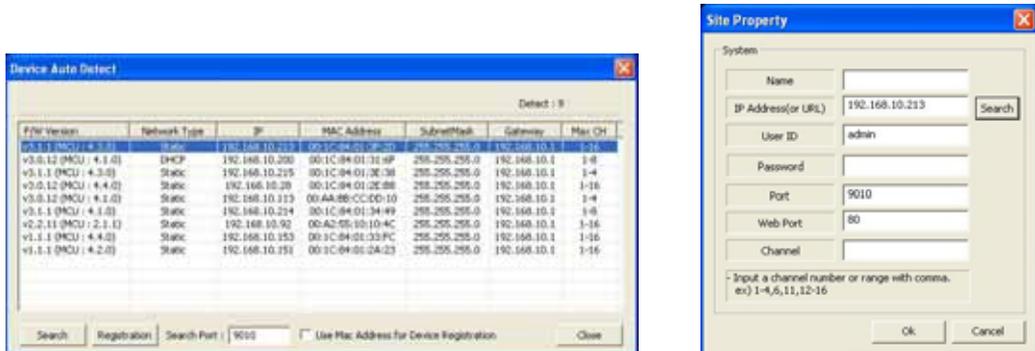

Select the DVR and click [Registration], DVR's IP, User ID, Port and Web Port information will be shown in Site Property automatically. Then fill in the Name, Password and Channel, and click [OK].


6.7 If select [Use Mac Address for Device Registration], and then click [Registration], DVR's mac address & cctv-link.net will be shown in Site Property automatically.

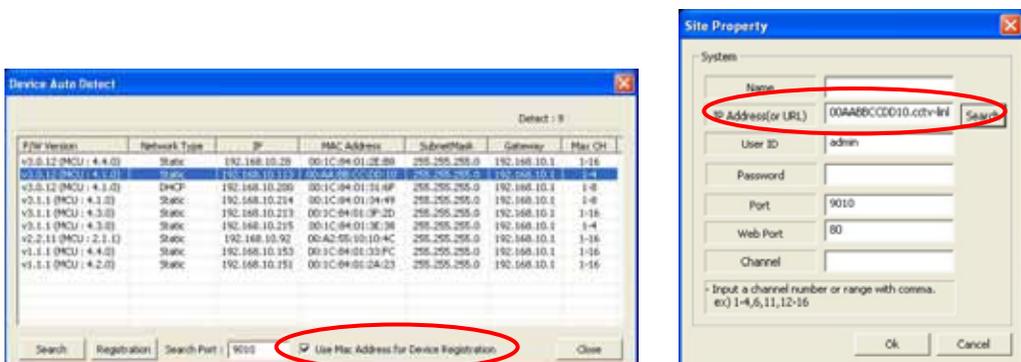


Note If user changed TCP/IP Port at DVR, those DVR can be found by changing port number of [Search Port].

6.8 In Site Manager, user can create a group by selecting [Group List].

Click [Add] of the left side and input Group Name. And then, confirm by clicking [OK] button.

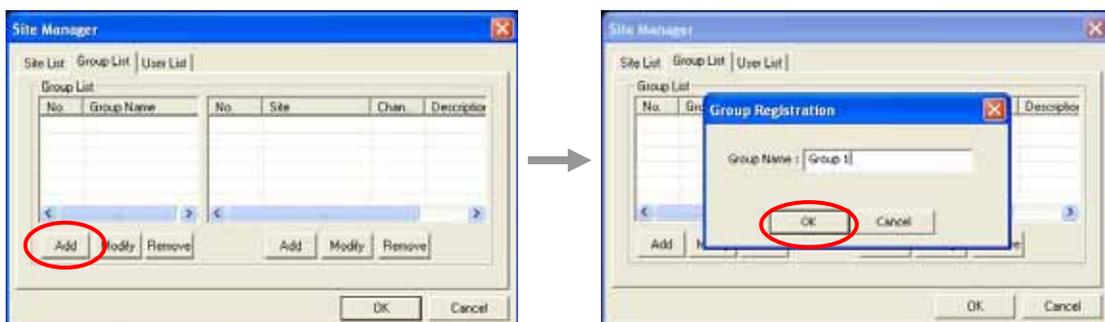


6.9 Click [Add] of right side and register DVR and its channel that user wants to include in the Group.

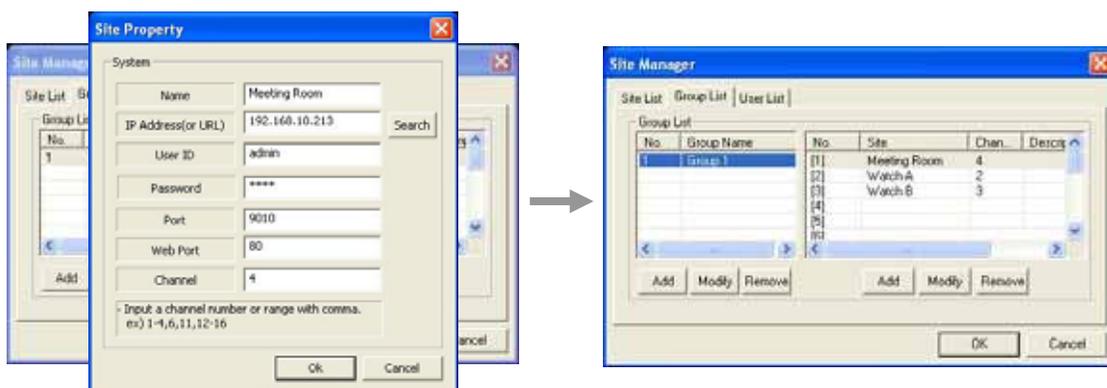

6.10 Click [Add] of right side and register DVR and its channel that user wants to include in the Group.



6.11 In Site Manager, select [User List] and click [Add] to add or click [Modify] to amend User's properties.

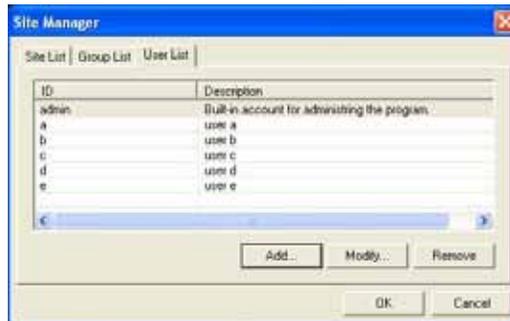

6.12 "admin" is the built-in account for administrating the DVR and RemoteManager program.



6.13 Other normal users can be assigned with different level of authority.



7. Live Connection


7.1 Select Live Mode icon



7.2 Select a site from the DVR Site panel. Then with the mouse, drag and drop it to the Channel Screen.



7.3 Show live date & time, connection information of the DVR site.

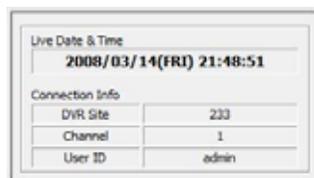

7.4 Indicate event occurred - Show live date & time, connection information of the DVR site.

System	Channel	Date/Time	Description
192.168.0.231		2007/08/18 15:58:40	Option setup end
192.168.0.231		2007/08/18 15:58:43	Option setup start
192.168.0.231		2007/08/18 15:58:45	Option setup end
192.168.0.231		2007/08/18 15:58:50	Camera connection status changed (Cam On : 2 3 4)
192.168.0.231		2007/08/18 15:58:52	Camera connection status changed (Cam On : 1 2 3 4)

- Note**
- 1) It is available in the case that "Remote Notify" setup of DVR is done correctly.
 - 2) If UEventServer.exe(of CMS) is being operated in the same PC, event may not be listed correctly.



7.5 Show channel#, resolution, live date & time of the connected channel.



7.6 Enable / Disable alarm out, audio mute.



8. Playback Connection

8.1 Select Playback(VOD) Mode icon



8.2 Select a site from the DVR Site panel. Then with the mouse, drag and drop it to the Channel Screen.



8.3 Select date on calendar, and Input playback time



8.4 User can also search video by using 0~24 hour Intelli-Search bar



Enable [Play DST] to play DST video.
When DST finishes, the "one hour" overlapped data is shown in BLUE color in Intelli-Search bar.

8.5 Then click forward play or Backward play icon



8.6 User can adjust playback speed



8.7 Show DVR channel #, resolution, recorded date & Time of the connected channel.



8.8 Enable / Disable audio mute



9. RemoteManager Setting



9.1 Select RemoteManager Setting icon

1. Receive Event
Select type of event to receive from DVR sites
2. OSD Display
Select On-Screen-Display information
3. Save File Format for Live Backup
Select live backup file format
4. DDNS
Setup DDNS IP (or Link) and Port

5. Enable / Disable DirectDraw & DeInterlace

If image cannot be displayed properly, disable DirectDraw and then restart RemoteManager
(For Windows Vista, this DirectDraw may be disabled automatically)

6. Use DeInterlace

Enable / Disable DeInterlace


7. Automatic re-connect

Setup automatic re-connection interval

8. Use auto connecting previous View Layout

It will remember the live connection channels layout.
When restart RMS, it will auto connect to the channels as per previous logon.

In Live Connection Mode, user can select [Previous View Layout] in Hot-Cut menu to recall previous connection channels.

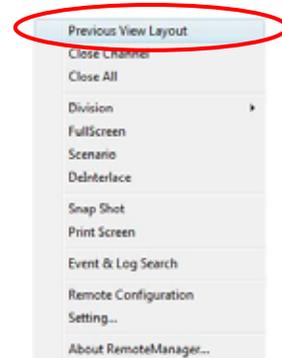

9. Screen Switching Interval (sec)

Select screen rotation interval time

10. Alarm Pop-up (sec)

Select alarm pop-up time

11. Event Port

Setup event receiving port

12. TimeSync Port

Setup port for time sync

13. Storage Server IP

Setup storage server IP (Video Streamer only)

14. Saving Directory

Select folder for saving backup image


Click  to browse folder

15. Show Snap-Shot Image Info

Add site name, channel title & number, date & time in snap-shot.

10. PTZ Camera Control

10.1 Select PTZ Camera Control icon

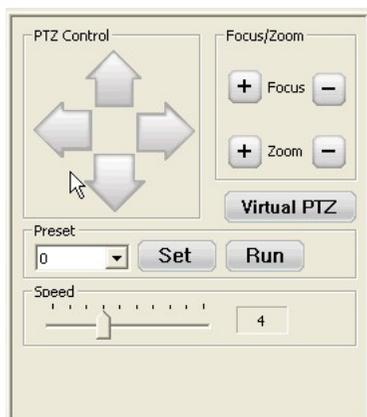

PTZ Control : Camera can be moved up, down, left and right

Focus/Zoom : Adjust focus of lens, zoom in & out

Preset : Setup preset location

Speed : Adjust moving speed of camera

Virtual PTZ : PTZ can be controlled by clicking mouse on channel screen directly



Fast moving



Slow moving



Zoom In



Zoom Out

11. Backup Live

- 11.1 Connect to desired DVR site in Live mode, then click on the channel screen to select camera for live backup (chosen camera to be indicated by yellow border).



- 11.2 Select Backup Live icon

- 11.3 Then, it will start saving live video, and [Recording...] will be displayed on selected channel. Click Backup Live icon again to stop saving, it will show "Backup complete!" message.



- 11.4 User can change the saving folder at RemoteManager Setting > Remote Options > Saving Directory




Saving Folder => C:\Program Files\RemoteManager\ArchiveData\[DVR site name] \ [Date] \
 Video clip file name => hhmmssxx.ssf or hhmmssxx.avi (xx+1 is channel number)
 ex.) Ch 3 at 11:45:32AM => 11453202.ssf or 11453202.avi

- 11.5 User can select the saving file format (SSF or AVI) at RemoteManager Setting > Remote Options > Save File Format for Live Backup



12. Remote Configuration

- 12.1 Connect to desired DVR site in Live mode, then click on the channel screen to select camera of DVR for remote configuration (chosen camera to be indicated by yellow border).

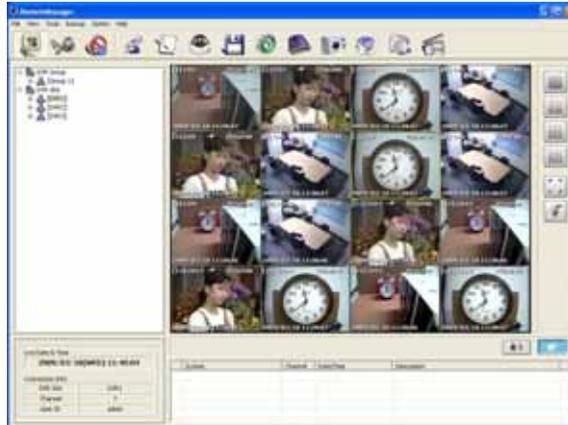

- 12.2 Select Remote Configuration icon



- 12.3 Web Login page of DVR will pop up.
Input User ID and Password of DVR to login.



Default administrator ID and password of DVR:
ID: admin, Password: 1234


12.4 User has to install ActiveX file at workstation P/C.



Security Setting of IE web browser has to be properly made.



12.5 After ActiveX installed, Web page will be shown as below.

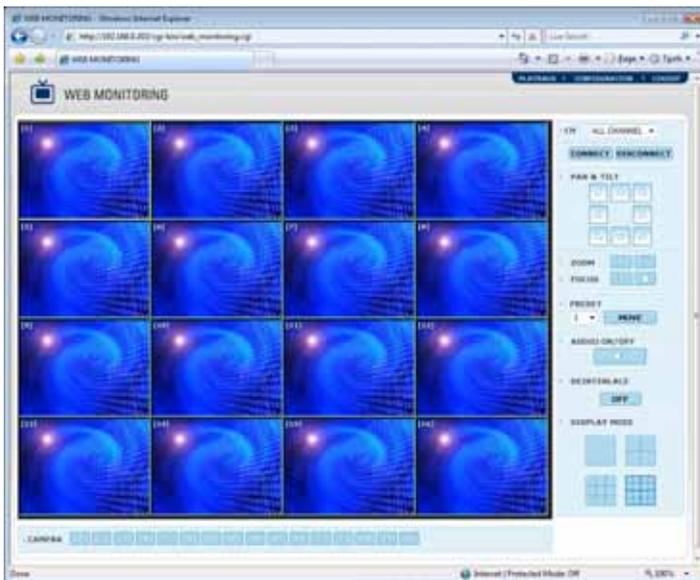

Click [Playback]
to go to Web
Playback page.

Click [Configuration]
to go to Web setup page.

There are 5 kinds of configuration categories :


- A) SYSTEM
- B) DEVICE
- C) RECORD
- D) NETWORK
- E) QUICK SETUP

12.6.A.1 In SYSTEM > SYSTEM INFO tab, you can setup DVR's Date/Time, Display format and HDD overwrite.

The screenshot shows the 'WEB CONFIGURATION' interface for a DVR system. The 'SYSTEM INFO' tab is active, displaying various configuration options. The interface is organized into sections: 'SYSTEM INFO', 'DISPLAY', and 'HDD FULL'. The 'SYSTEM INFO' section includes fields for SITE NAME (DVT1), SITE ID (1), DATE/TIME (2008/09/02 - 13:01:22), DATE/TIME FORMAT (MMDDYYYY), 24 H, DAY LIGHT SAVING (USE DST), BEGIN (Month: 09, Day: 01, Hr: 00), END (Month: 08, Day: 31, Hr: 00), TIME SYNC MODE (None), CYCLE (1 hour), SYNCFORCE (0000), and SYNCSERVER (0.0.0.0). The 'DISPLAY' section includes SEQUENCE DWELL TIME (3 sec), SPOT-OUT DWELL TIME (3 sec), ALPHA BLENDING (4800 bps), and VGA MODE (BOOKMODE). The 'HDD FULL' section has a dropdown menu set to 'OVERWRITE'. A 'SAVE' button is located at the bottom right of the configuration area.

You have to click [SAVE] to apply new setting.

12.6.A.2 In SYSTEM > USER tab, you can add or edit user's password and level of authority.

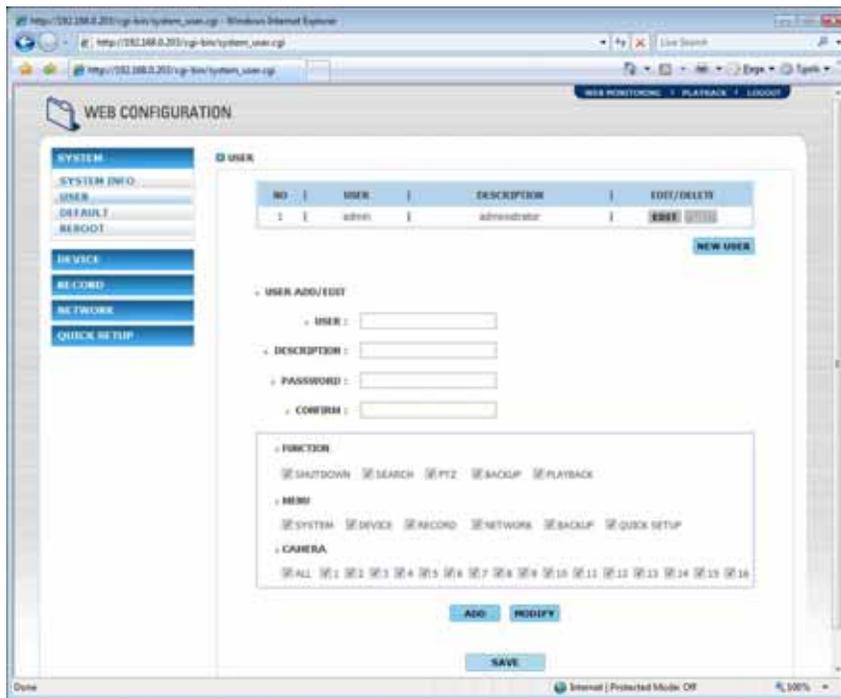

Click [EDIT] to modify existing user, and then click [MODIFY] to apply change.

Click [NEW USER] to add new user, and then add [ADD].

12.6.A.3 In SYSTEM > DEFAULT tab, you can initialize the system setup as released from the factory.




User will lose all the system setup after rebooting the system, and have to setup again network configuration to connect.

12.6.A.4 In SYSTEM > SYSTEM REBOOT tab, you can reboot the system without any change of the setup.




User can use this function when the network is disconnected due to abnormal operation of the system and try to reconnect. However, IP number assigned to the system may be changed in case of DHCP mode.

12.6.B.1 In **DEVICE > CAMERA** tab, you can setup Camera color and motion detection of each camera..

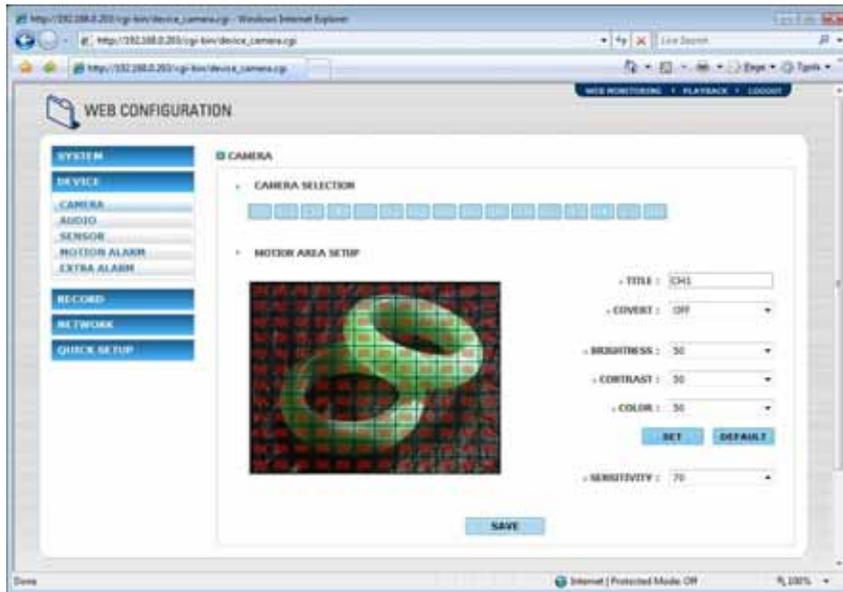

Click [SAVE] to apply new setting.

12.6.B.2 In **DEVICE > AUDIO** tab, you can turn on/off audio channels

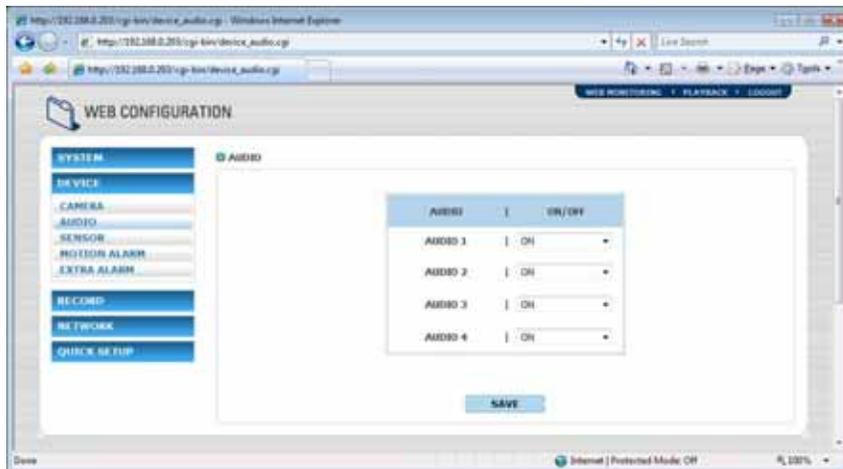

Click [SAVE] to apply new setting.

12.6.B.3 In **DEVICE > SENSOR** tab, you can setup Sensor for each channel.

The screenshot shows the 'WEB CONFIGURATION' interface for a device, specifically the 'SENSOR' tab. The interface is divided into a sidebar and a main content area. The sidebar contains navigation menus for 'SYSTEM', 'DEVICE', 'CAMERA', 'AUDIO', 'SENSOR', 'MOTION ALARM', 'EXTRA ALARM', 'RECORD', 'NETWORK', and 'QUICK SETUP'. The main content area displays a table for configuring sensors across 16 channels. Each channel has settings for ON/OFF, CAMERA, ONT, BEEP/DIVS, PRESET, SWELL, (PRE-ALARM), and TYPE. A 'SAVE' button is visible at the bottom right of the main content area.


NO	ON/OFF	CAMERA	ONT	BEEP/DIVS	PRESET	SWELL	(PRE-ALARM)	TYPE
1	OFF	1.1	1.0	OFF	1.0	1.0 sec	None	N/O
2	OFF	1.2	1.0	OFF	1.0	1.2 sec	None	N/O
3	OFF	1.3	1.0	OFF	1.0	1.3 sec	None	N/O
4	OFF	1.4	1.0	OFF	1.0	1.4 sec	None	N/O
5	OFF	1.5	1.0	OFF	1.0	1.5 sec	None	N/O
6	OFF	1.6	1.0	OFF	1.0	1.6 sec	None	N/O
7	OFF	1.7	1.0	OFF	1.0	1.7 sec	None	N/O
8	OFF	1.8	1.0	OFF	1.0	1.8 sec	None	N/O
9	OFF	1.9	1.0	OFF	1.0	1.9 sec	None	N/O
10	OFF	1.10	1.0	OFF	1.0	2.0 sec	None	N/O
11	OFF	1.11	1.0	OFF	1.0	2.1 sec	None	N/O
12	OFF	1.12	1.0	OFF	1.0	2.2 sec	None	N/O
13	OFF	1.13	1.0	OFF	1.0	2.3 sec	None	N/O
14	OFF	1.14	1.0	OFF	1.0	2.4 sec	None	N/O
15	OFF	1.15	1.0	OFF	1.0	2.5 sec	None	N/O
16	OFF	1.16	1.0	OFF	1.0	2.6 sec	None	N/O

NOTIFY: BUZZER CAMERA POP-UP

SAVE


Select Notify Mode, and then click [SAVE] to apply.

12.6.B.4 In DEVICE > MOTION ALARM tab, you can setup Motion Alarm of each camera.

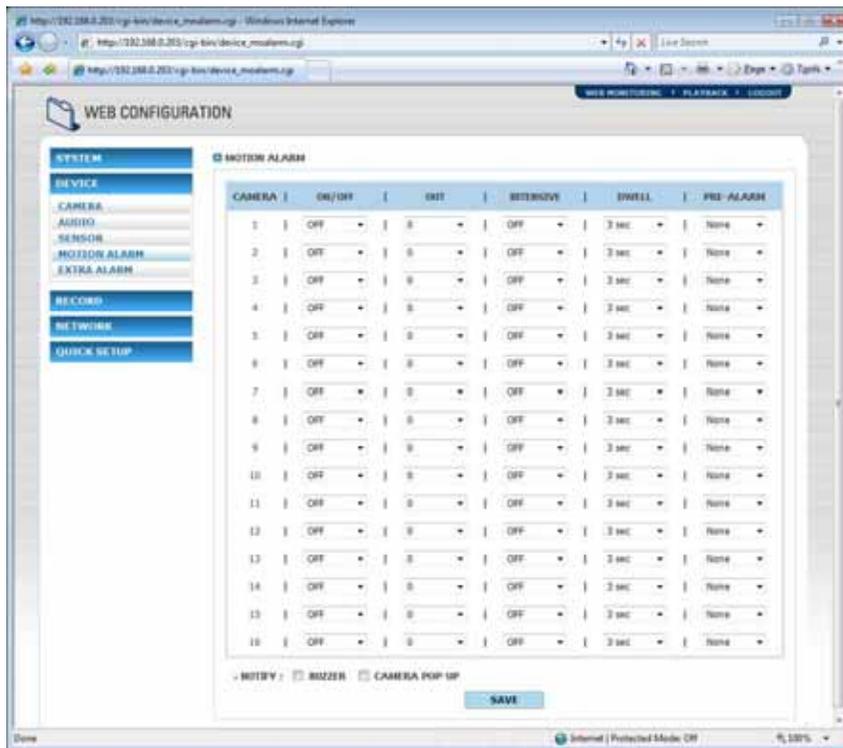

Select Notify Mode, and then click [SAVE] to apply.

12.6.B.5 In DEVICE > EXTRA ALARM tab, you can setup Extra Alarm of DVR.

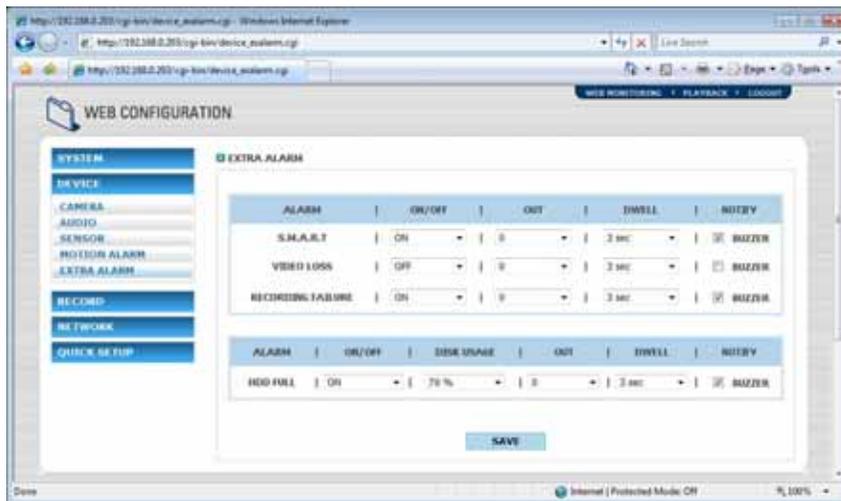

S.M.A.R.T : setup alarm for HDD health


VIDEO LOSS: setup alarm for video loss

RECORDING FAILURE: setup alarm for DVR recording failure

HDD FULL: setup alarm when HDD reaches to defined Disk Usage %

Click [SAVE] to apply change.

12.6.C.1 In **RECORD > CAMERA** tab, you can setup Camera On/Off, Resolution, FPS, Quality, Auto Delete and Audio for each channel.

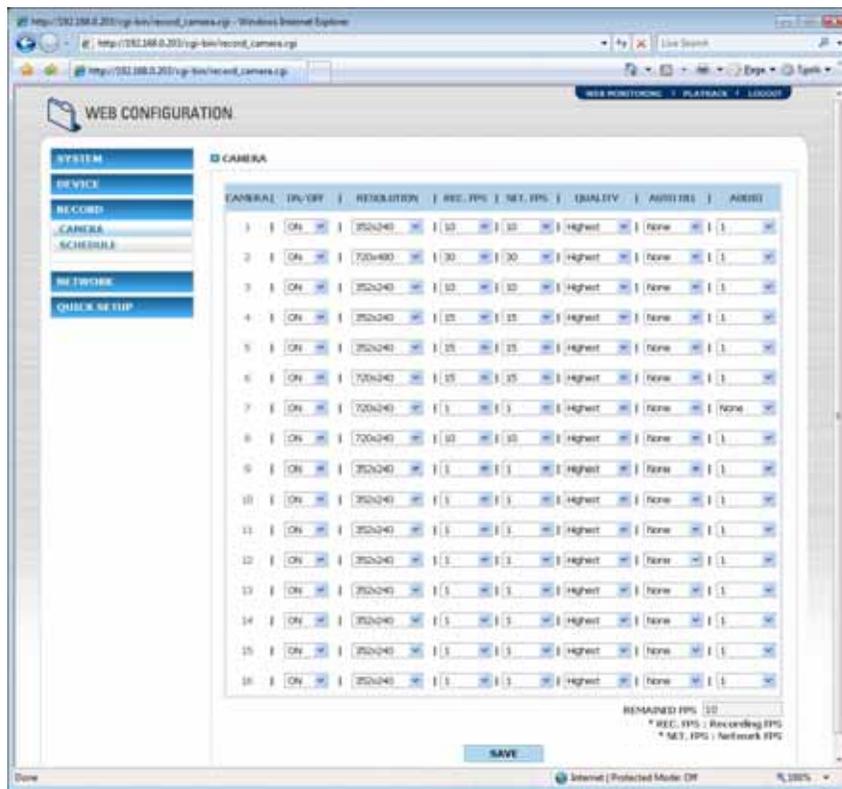


You can adjust frame per second (FPS) and resolution of each camera, based on the REMAINED FPS left.

Click [SAVE] to apply new setting.

Note If user selects "USE QUICK SETUP", detail setup (RESOLUTION, REC. FPS, NET. FPS, QUALITY, etc.) will not be available.

12.6.C.2 In RECORD > SCHEDULE tab, you can setup Recording Schedule of each channel.

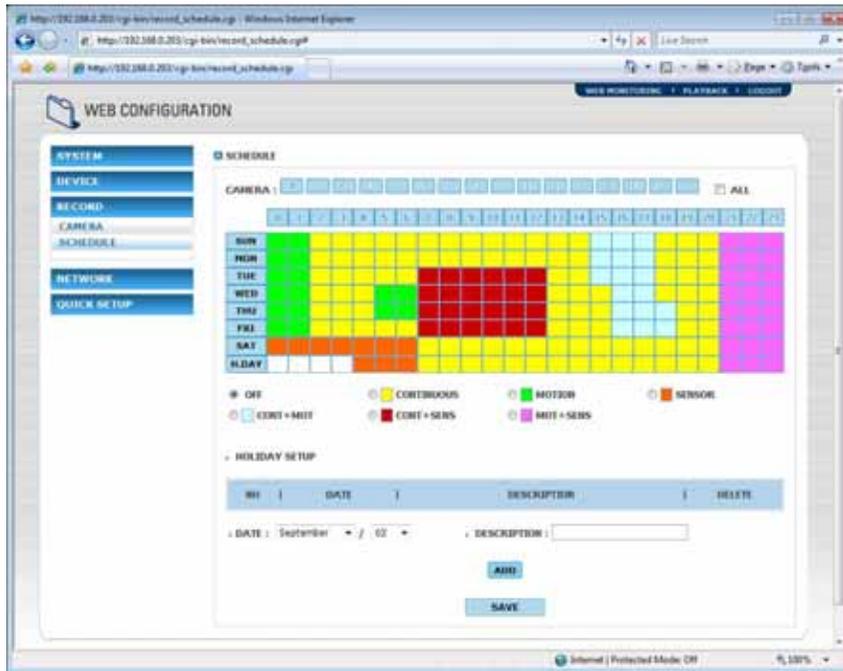


You can add Holiday by clicking [ADD].


Click [SAVE] to apply new setting.

Note If user selects "USE QUICK SETUP", detail setup will not be available.

12.6.D.1 In NETWORK > NETWORK tab, it will show Network information of the DVR

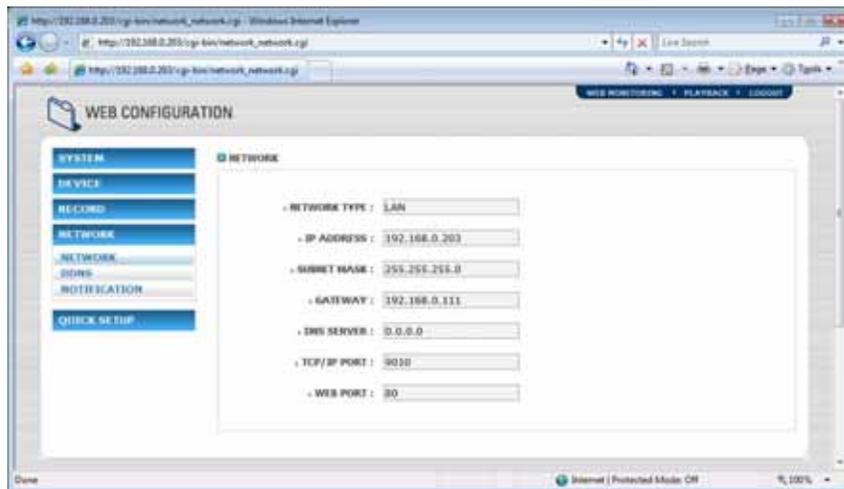

12.6.D.2 In NETWORK > DDNS tab, it will show DDNS Server and Port information of the DVR

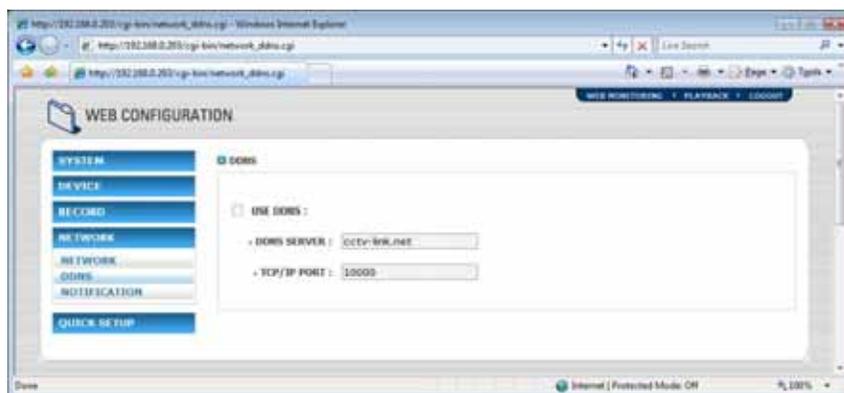

You cannot change any setting in above 2 tabs.

12.6.D.3 In NETWORK > NOTIFICATION tab, you can setup Remote Notify and E-mail Notify.

Enable / Disable
REMOTE NOTIFY

Enable / Disable
E-MAIL NOTIFY

WEB CONFIGURATION

SYSTEM
DEVICE
RECORD
NETWORK
NETWORK DOWNS
NOTIFICATION
QUICK SETUP

NOTIFICATION

REMOTE NOTIFY

NO	ADDRESS	EDIT/DELETE

NEW ADDRESS

REMOTE NOTIFY ADD/EDIT

IP ADDRESS:

PORT:

EVENTS ALL

LOG-INPUT SETUP SYSTEM START SHUTDOWN SENSOR
 MOTION ALARM VIDEO LOSS S.M.A.L.T RECORDING FAILURE HDD FULL

ADD MODIFY

E-MAIL NOTIFY

NO	E-MAIL	EDIT/DELETE

NEW EMAIL

E-MAIL NOTIFY ADD/EDIT

E-MAIL:

EVENTS ALL

LOG-INPUT SETUP SYSTEM START SHUTDOWN SENSOR
 MOTION ALARM VIDEO LOSS S.M.A.L.T RECORDING FAILURE HDD FULL

ADD MODIFY

SMTP:

PORT:

USER:

PASSWORD:

FROM:

SAVE

Click [NEW ADDRESS] to add new remote notify IP.

You can also Edit / Delete remote notify IP by clicking [EDIT] or [DELETE].

Click [ADD] / [MODIFY] to configure type of events.

Click [NEW EMAIL] to add new e-mail address.


You can also Edit / Delete e-mail address by clicking [EDIT] or [DELETE].

Click [ADD] / [MODIFY] to configure type of events.

Lastly, click [SAVE] to apply new setting.

12.6.E.1 In QUICK SETUP > QUICK SETUP tab, you can configure Quick Setup of DVR.

Enable / Disable
QUICK SETUP

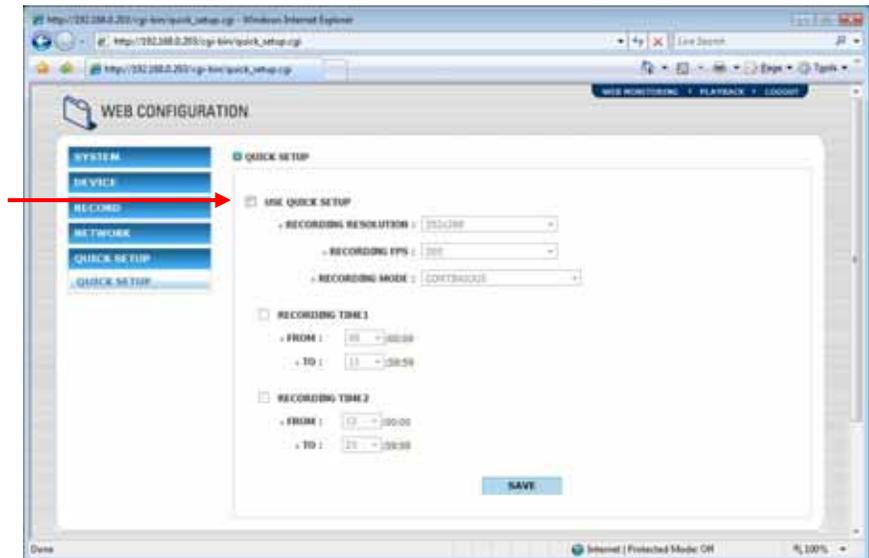



You can configure:

- Recording Resolution
- Recording FPS
- Recording Mode
- Recording Time

Click [SAVE] to apply change.

12.7. Live Monitoring

Click Web Monitoring to go to live monitoring page

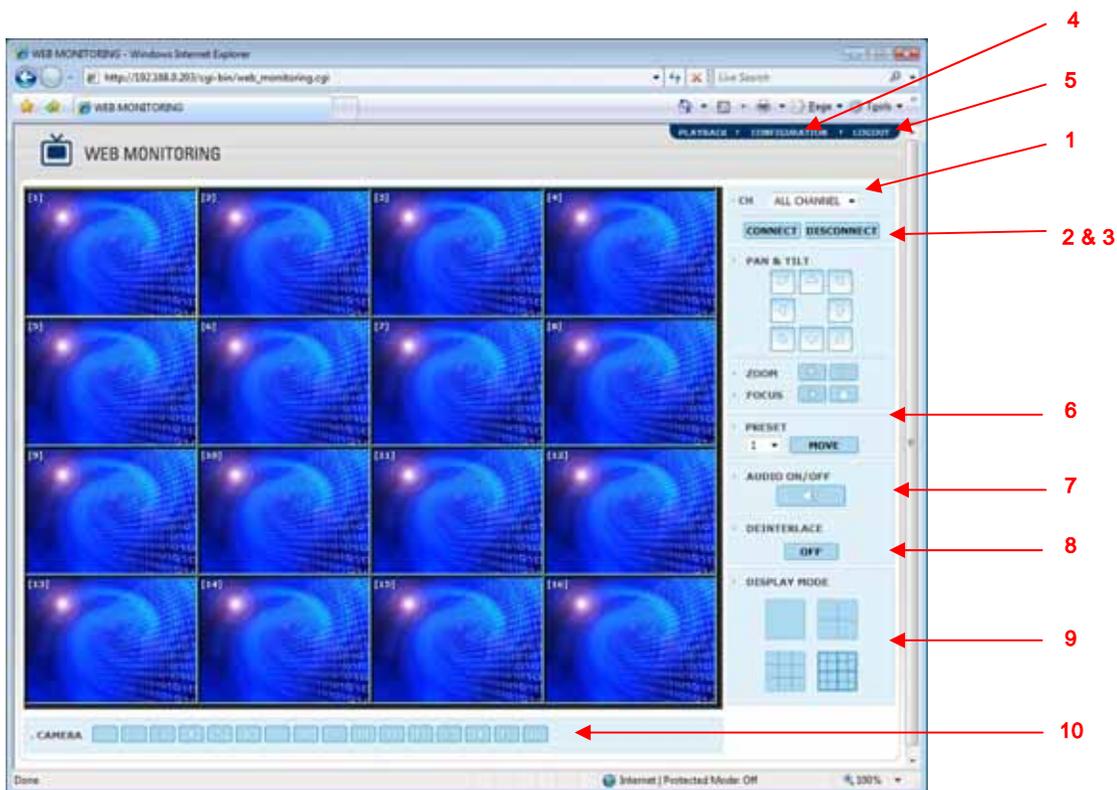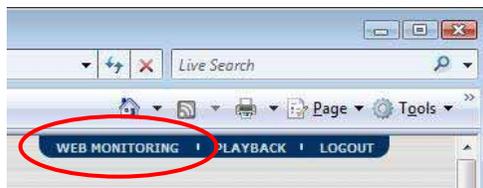

1. Select channels for connect or disconnect.
2. Connect selected channel.
3. Disconnect selected channel.
4. Go to Web Configuration page.
5. Log out to go back to Web Login page.
6. PTZ control
7. On & Off audio
8. On & Off Deinterlace
9. Select display of 1, 4, 9 or 16 screen mode
10. Single Channel Pop-up button

Connection of Live Monitoring : Select channel and then click [CONNECT]

Disconnection of Live Monitoring : Select channel and then click [DISCONNECT]





Right click on single screen channel, select [Full Screen] to enlarge image.

* Only available at CIF Image.

12.8. Playback


Click Playback to go to playback page

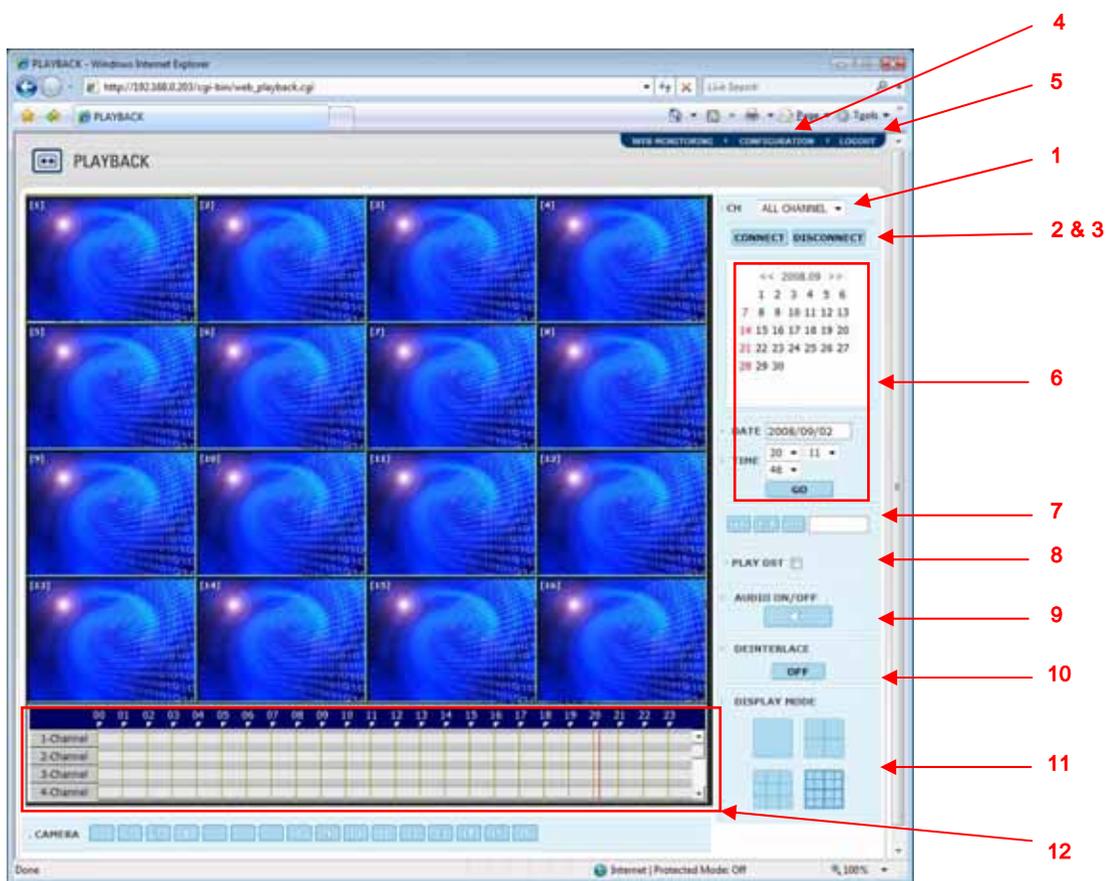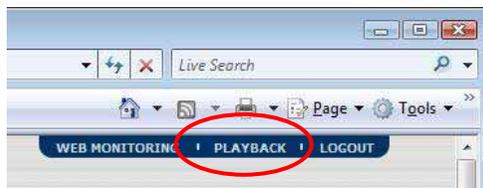

1. Select channels for connect or disconnect.
2. Connect selected channel.
3. Disconnect selected channel.
4. Go to Web Configuration page.
5. Log out to go back to Web Login page.
6. Calendar, date and time search
7. Play forward/backward control
8. Play DST data
9. On & Off audio
10. On & Off Deinterlace
11. Select display of 1/4/9/16 screen mode
12. Intelli-Search bar


Connection of Playback : Select channel and then click [CONNECT]

Disconnection of Playback : Select channel and then click [DISCONNECT]

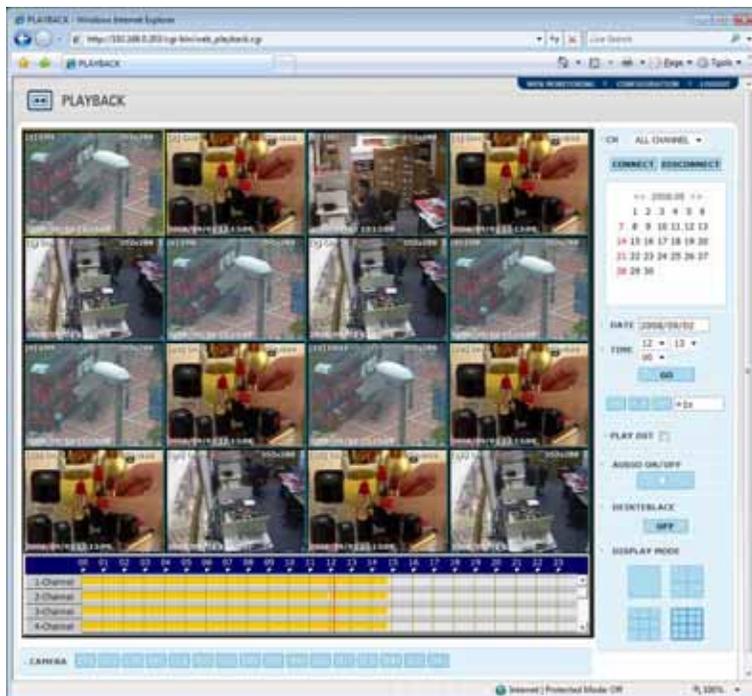


13. Backup Archive

13.1. Firstly, go to Playback (VOD) Mode, and playback desired video.

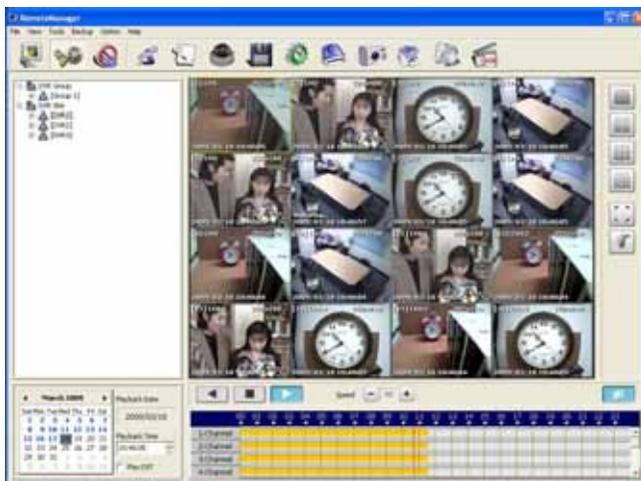


13.2 Select Backup Archive icon

13.3 In Connected System List, select DVR site, and then select [VOD Backup] or [Remote File Copy].

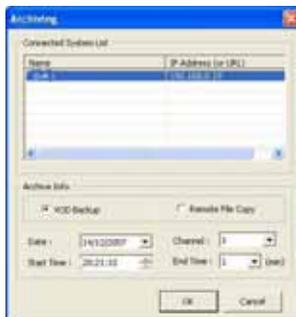

13.4 In case of [VOD Backup], select Date, Channel, Start Time, and End Time.

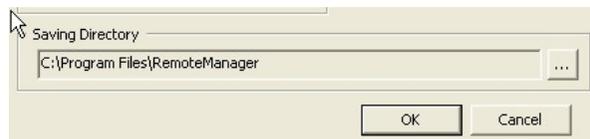


User can change the saving folder at RemoteManager Setting > Remote Options > Saving Directory


Saving Folder => C:\Program Files\RemoteManager\ArchiveData\[DVR site name] \ [Date] \
Video clip file name => hhmmssxx.ssf or hhmmssxx.avi (xx+1 is channel number)

13.5 In case of [Remote File Copy], select Date, and Channel.

Click [OK], File List will pop up.

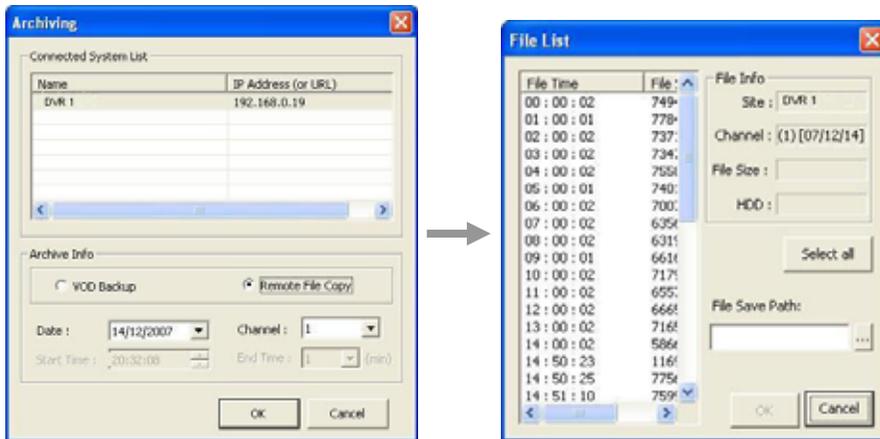

13.6 Select desired File Time and File Save Path, then File Size and HDD size information will be displayed.

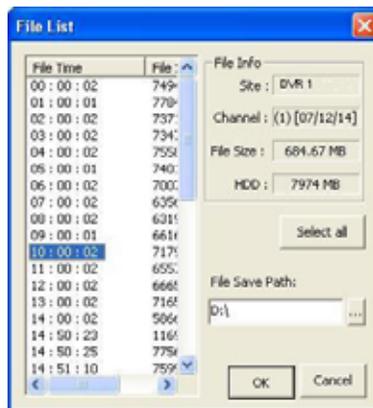

Click [OK] to start backup.

Saving Folder => D:\RemoteFileData\ [DVR site name] \ [Date] \

Video clip file name => hhmmssxx.ssf or hhmmssxx.avi (xx+1 is channel number)

14. Saving Snap-Shot


14.1 Firstly, connect desired channel either in Live Mode or Playback (VOD) Mode.



14.2 Select Saving Snap-Shot icon


14.3 Select location for saving image in PC.

Image can be saved in JPEG, PNG or BMP format.

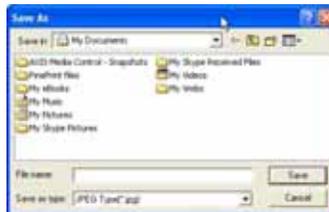

14.4 User can select option "Show Image Info on Snapshot" in Remote Option.

Site name, channel title & number, date & time will be displayed in snap-shot.

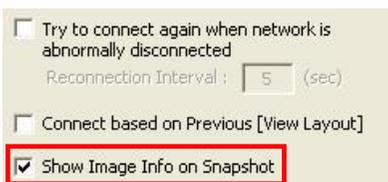


15. Still Printing

15.1 Firstly, connect desired channel either in Live Mode or Playback (VOD) Mode




15.2 Select Still Printing icon

15.3 Select printer to print out

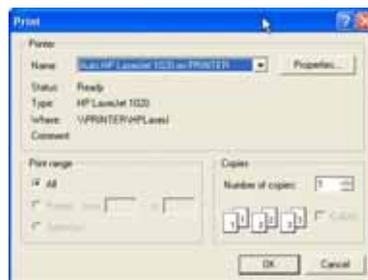


15.4 Recording Information will be printed with:

Current Date, Current Time, Camera or Channel Number, Camera Position/Site

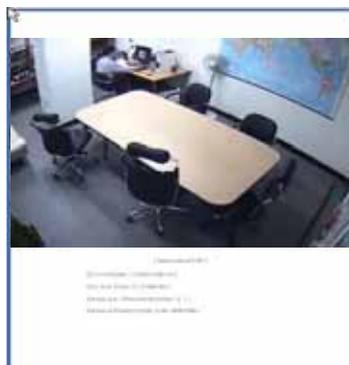

16. Log Event Search


16.1 Firstly, connect desired DVR site in either Live Mode or Playback (VOD) Mode.

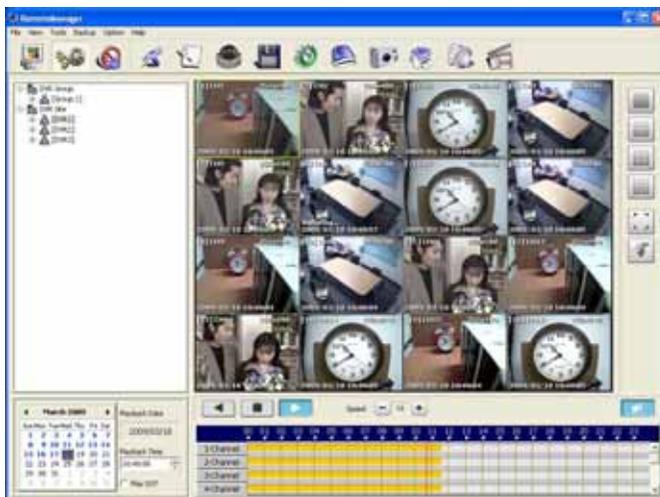

16.2 Select Log Event Search icon

16.3 Input Search Date, Event Type and then click [Refresh]


16.4 Select specified event, and click [Go to timeline] to playback video of the event.

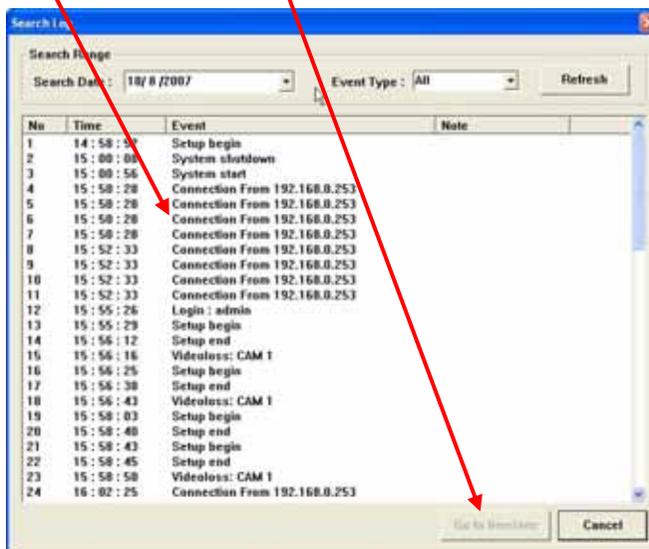

17. AVI Converter

17.1 Firstly, save desired video in SSF file as per Chapter #11 Backup Live or Chapter #13 Backup Archive

17.2 Then playback the SSF file in Playback VOD mode (* Drag and drop)

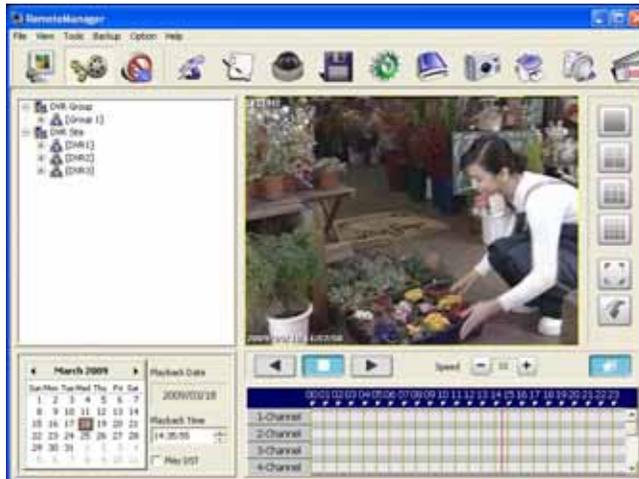


17.3 Select AVI Converter icon



18. Time Sync.

18.1 RemoteManager PC can act as a TIME SYNC SERVER for multiple client DVR(s)

18.2 In DVR Menu > SYSTEM > SYSTEM INFO > DATE/TIME SET > TIME SYNC MODE > select [Client]

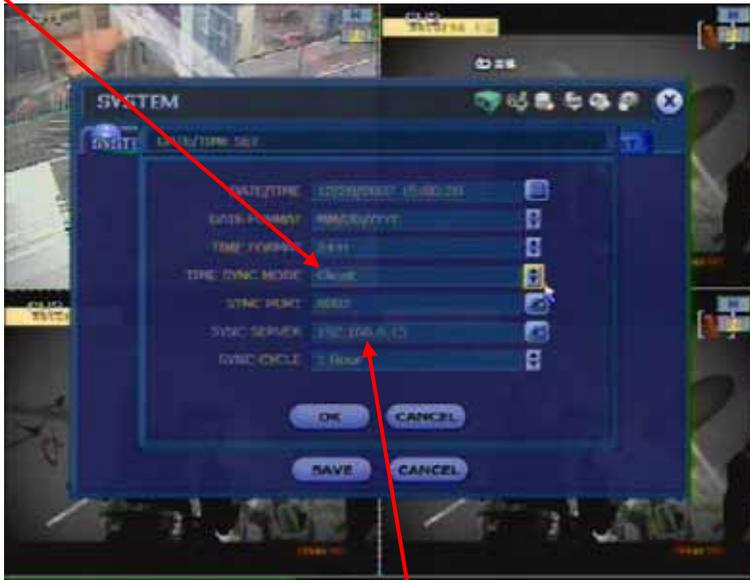

18.3 In SYNC SERVER > input RemoteManager PC's IP address

18.4 Then, such DVR will act as a Client. It will follow the time of RemoteManager PC's time clock automatically according to the period setup in SYNC CYCLE.

19. Appendix (User Authorization)

Level of authority for users in DVR and RemoteManager

Level of authority for the user is linked up between DVR and RemoteManager software.

Each user can be set with a different level of authority in the operation of DVR and RemoteManager software by an administrator.

A) Users in DVR's User List

Administrator (admin) of DVR can assign each user's authority in DVR's operation.

- 1) Login the DVR as admin, then add or modify user's authority.
- 2) If a user has been restricted for a certain permissions in DVR, then those restrictions will also be applied to the operation of RemoteManager software.
 - * Live and playback of each channel
 - * Search
 - * PTZ control
 - * Backup

B) Users in RemoteManager's User List

Administrator (admin) of RemoteManager can assign each user's authority.

- 1) Login the RemoteManager as admin, then add or modify user's authority.
 - * DVR Site Registration (add / modify DVR sites in RMS)
 - * Backup Live (backup live video to remote PC)
 - * AVI Converting (convert SSF file to avi format)
 - * Snap-Shot (saving live image or VOD image to remote PC)
 - * Printing (print out live image or VOD image)
- 2) The authority of a certain user at RemoteManager is governed by the permission level set in both DVR and RemoteManger, that is, such user will be restricted according to the authority setting set in DVR (mentioned in A) and RemoteManager (mentioned in B) as well.

Note Remote user should be pre-registered in DVR with designated permission level.
If user has been registered in RemoteManager only (not in DVR), then such user can not be connected to the DVR via RemoteManager.

20. Appendix (Watermark)

Backup Player


Click on "BackupPlayer" icon to execute Backup Player program.
It can playback both SSF file and AVI file.



SSF file is manufacturer's propriety format which has been compressed & encrypted by unique algorithm. It cannot be altered by other software.

User can convert **SSF** file to **AVI** format by using [AVI Converter]. When playback AVI video clip in BackupPlayer, user can verify whether the AVI file has been altered or not by pressing "Watermark" button.

No alteration was found on original **AVI** video clip.

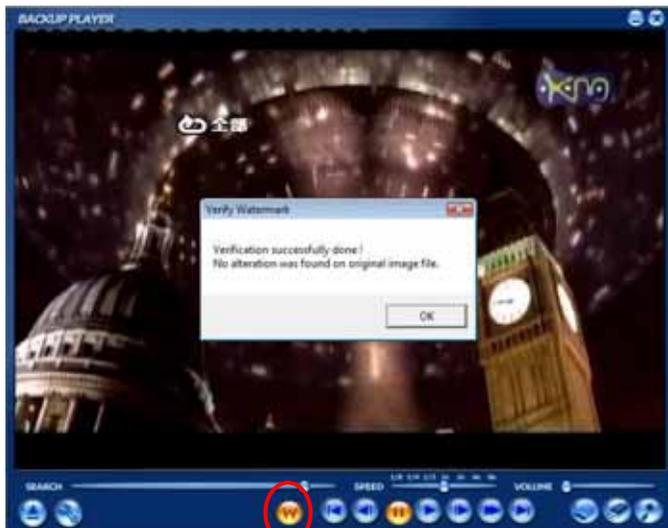

Watermark button

AVI video clip has been altered.



21. Appendix (Q & A)

Q: Cannot connect to the Server.

A: First, check the network environment. Also, check if the DVR server IP is correctly entered. In case the server does not support corresponding connection method, it could not be connected. Refer to the error message if it appears.

Q: Connection is repeatedly cut

A: Check the network. In case the state of network is not good or if there is defect in the LAN card, the connection would be repeatedly cut.

Q: Sometimes pink colored screen would be shown while sequencing screen mode.

A: This happens when the VGA of some PC does not support Direct X efficiently. Try to change VGA card. Or disable DirectDraw in <RemoteManager Setting>.

Q: Full screen mode does not support One- screen mode.

A: Requires VGA card which supports the Direct X to see Full One Screen Mode. Or disable DirectDraw in <RemoteManager Setting>.

Q: The screen blinks while sequencing to other screen from Full One Screen Mode.

A: There would be a bit of delay while changing the screen mode to 640 x 480 for better picture quality of image.

Q: The screen broke on one-screen mode.

A: There could be roughly about 2 reasons. The first reason is when the VGA card does not support Direct X efficiently. The second reason is if the setting is done wrongly even when the VGA card is supporting Direct X. Check if "Screen Pixel" is set to high in the registry information of VGA card and lower down to 60 Hz.

Q: The logo would not come out or part of the logo would be broken while returning to multiple screen modes from 1 screen mode after starting the RemoteManager.

A: It happens when the VGA card is lacking of memory. The memory of the VGA should be at least 64MByte. Or disable DirectDraw in <RemoteManager Setting>.

Q: Image cannot be displayed properly.

A: Disable DirectDraw in <RemoteManager Setting>, and restart RemoteManager again.

Q: Does RemoteManager work in Windows Vista ?

A: Yes, but it is recommended NOT to use Windows Aero color scheme.