LG CU500v

High-Speed Multimedia Phone

- AT&T Music
- Cellular Video

• Organize Me

• Downloadable Fun

- Video Share
- Mobile Email
- Text Messaging
- Instant Messaging (IM)
- 1.3 Megapixel Rotating Camera with Video
- Music Player with 3D Stereo Sound
- MEdia[™] Net

VIDEO SHARE

- 1. Dial the 10-digit phone number of another 3G Video Share capable phone.*
- 2. A few seconds after initial connection, **Video Share Ready** will display at the top of both screens. At this point, either calling party may start one-way video sharing.
- 3. Press the **Key**. It will take a few seconds to establish a video share connection.
- 4. If you're the recipient, press the **Left Soft Key** for **Accept** when prompted and you will see the live video from the sender's phone.
- 5. To end Video Sharing, select the ^[D] icon, press the Left Soft Key, then Yes (1). If you're the sender, select Yes (1) or No (2) to either save the video clip to My Stuff or discard it. Only senders can save video clips sent via Video Share recipients do not have this capability.

*Both parties must be in a 3G service area-a = icon and a () icon must appear by the signal bars prior to a call being placed.

TAKING PICTURES

- 1. To take a picture, press the **O** Key.
- 2. Rotate the camera lens toward your subject. Press the volume keys to flip the viewfinder image.
- 3. Press **left** or **right** on the Navigation Key to adjust brightness and **up** or **down** for zoom.* Press the **Right Soft Key** to adjust image resolution, quality, self timer, or other options.
- Press € to take the picture.
- 5. To send your picture, press the **Left Soft Key**. Add text, then press ∉ to enter recipients. To choose a contact from the address book, press €. Press the **Left Soft Key** to send.

Note: To take a photo with the flip closed, press the Task Key. Scroll down with the volume keys to Take Photo and press ▶/||. Images and videos are saved under My Stuff (7). *Camera resolution of 1280 x 960 does not support zoom function.



AT&T MUSIC

- **Transfer and listen to your music with the integrated Music Player**
- (Stream dozens of commercial-free music stations with **Streaming Music**
- () Watch the latest music videos by clicking on **Music** Videos
- Personalize with ringtones and Answer Tones[™] under Shop Tones
- Instantly ID the title and artist of a song with MusicID
- () Get the latest music news, charts, and concert info from The Buzz

CELLULAR VIDEO

Access Cellular Video

- 1. From standby mode, press the Left Soft Key for Menu.
- 2. Select CV (6), then press 🥌 to connect.
- 3. Once connected, select the program or category you wish to view and press 😂.

Personalize your CV Home Page

- 1. From the CV home page, select **EDIT** and press **§**.
- 2. Select the content you would like added or deleted from your CV home page and press S.

Note: You can add up to 20 favorites. Parental Controls available. See box insert for details. Access to Cellular Video requires a MEdia[™] Max plan.

DOWNLOADABLE FUN

- 1. From standby mode, press the Left Soft Key for Menu.
- 2. Select AT&T Mall (5) and press 🥞.
- Select Shop Tones (1), Shop Games (2), Shop Graphics
 (3) or Shop Applications (4) and press €.
- 4. Choose a category and press 😂.

ORGANIZE ME

- 1. From standby mode, press the Left Soft Key for Menu.
- 2. Select My Stuff (7) and press 🥰.
- 3. Select Tools (6) and press 🥰.
- 4. Select Alarm Clock (1), Calendar (2), Notepad (3) or one of the other handy tools.



MEDIA NET

Access MEdia Net

- 1. Press 🍯 to launch MEdia Net.
- 2. Scroll and highlight the content you want to view and press $\textcircled{\Subset}.$

Personalize your MEdia Net Home Page

- From the MEdia Net home page, select EDIT next to My Links to add a link to your home page, and press €.
- 2. Select the content you would like added or deleted from the MEdia Net home page and press €.



MUSIC PLAYER

Transferring Music

- 1. You must convert your music to either .MP3, .AAC, or .AAC+ format using the media player of your choice.
- 2. Remove the battery and insert the microSD[™] card^{*} (gold contacts facing down) into the slot at the top of the phone.
- 3. Power on the phone and connect it to your PC using a USB data cable.*
- 4. When the Hardware Wizard pops up, click Cancel.
- 5. The PC recognizes the phone as a **Removable Disk** under My Computer. Open the folder where your music is stored and transfer your files by dragging and dropping them onto the Removable Disk icon.
- 6. When finished, press the **Right Soft Key** on the phone for Exit and disconnect the USB cable.

Warning! Do not disconnect phone while file transfer is in progress. *microSD card and USB data cable sold separately; go to www.cingular.com. Requirement: Windows 2000 or later. Not compatible with Mac OS. Note: The number of files you can store depends on the size and format options of the memory card.

Playing Music with the Flip Open

- 1. Press the **J** Key, select Music Player (1), then All Songs (1) or Playlists (2). Select a song or playlist.
- 2. Press in play/pause. Press up or down on the Navigation Key to change the volume, and **left** or **right** to go to the previous or next song.
- 3. Press the Left Soft Key for Minimize to access other phone functionality while music is playing.

Playing Music with the Flip Closed

- 1. Press and **hold** the $\blacktriangleright/\parallel$ Key. Select All Songs or a playlist. Use the left side volume keys to scroll.
- 2. Press \blacktriangleright/II to play/pause the music. Use the $\triangleleft \triangleleft$ or $\blacktriangleright \triangleright$ keys to go to the previous or next song.
- 3. Press and **hold** the \rightarrow/\parallel Key to exit the music player.

INSTANT MESSAGING

- 1. From standby mode, press right on the Navigation Key to access IM.
- 2. Highlight the IM community you want to enter, select Sign In/On, and press 🥯.
- 3. The first time you enter a community, enter your **Screen** Name/ID or Email and your Password. Check the Auto Sign On/In box to be automatically connected in the future. Press the Left Soft Key to Sign In/On.
- 4. Select a contact that is currently online and press \leq .
- 5. Enter your message and press 😂 twice to send. To end a chat, select Option, then End Conversation.

Note: When you receive an incoming instant message, a "new message" icon similar to this one 🔘 will appear on the screen.

All materials in this job aid including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. All product or service names are the property of their respective owners. Phone features subject to change without prior notice. © 2007 AT&T Knowledge Ventures. All rights reserved. Subsidiaries and affiliates of AT&T Inc. provide products and services under the AT&T brand.

TEXT MESSAGING

- 1. From standby mode, press the Left Soft Key for Menu.
- 2. Select Messaging (2), then Create New Message (1).
- 3. Type your message.

Rotating

Camera

Headset Jack

Left Soft Key

Send Kev

Task Key

Navigation Key

AT&T Music Key

Volume Up/Down


- 4. When completed, press 😂 for **Send To.**
- 5. Enter the recipient's telephone number or press 😂 for Contacts to select an existing contact.

AT&T

Option

BLG

6. Press the Left Soft Key to send.

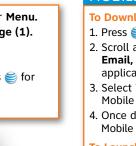

MOBILE EMAIL

- To Download Mobile Email
- 1. Press 😂 to launch MEdia Net.
- 2. Scroll and select Mail & Messaging (3), then Mobile **Email,** and press if for **Buy Now** to download the application.
- 3. Select Yes when asked if you'd like to download Mobile Email.
- 4. Once downloaded, select Applications (2) to save Mobile Email.

To Launch Mobile Email

- 1. From standby mode, press the Left Soft Key for Menu, select My Stuff (7), Applications (2), then Mobile Email.
- 2. Select a provider and press 🥮. Enter your Screen Name/ID or Email and Password. Check the box to automatically connect in the future. Press the **Right Soft** Key to Sign In/On.
- 3. Scroll to an email and press 😂 to download its content.
- 4. Press 😂 to delete or the **Right Soft Key** to reply or forward.

SPECIFICATIONS

GSM/GPRS/EDGE: 850/900/1800/1900 MHz (Quad-Band) UMTS/HSDPA: 850/1900 MHz Talk Time: Up to 5 Hours (GSM) Up to 3.5 Hours (UMTS) Standby Time: Up to 10 Days Dimensions: 3.80" (H) x 1.95" (W) x 0.76" (D) Weight: 3.70 oz.

Visit www.cingular.com/device-support for more information.



Camera Kev Power/End Key Clear & Back Key

