

## USER'S MANUAL DIGITAL AMPLIFIER "ERAMP TCL 202-S"

**ERAMP TCL 202-S**, is equipped with:

- amplifier able to charge 2 x 2 W. Rms.
- FM tuner.
- two sources of audio signal.

INTERNAL signal source and FM TUNER.

**Note: Consult your supplier to take advantage of the remote controls ref. LS32.**

### **CONVENTIONS:**

**Functions will be referred between “-“, keys between (-), visual indicators [-] and signal sources between {-}.**

### INDICATORS

[LED] – visual indicator of activated TUNER.

### KEYS

(▲) – key to increase the level.

(▼) – key to reduce the level.

( RESET ) – RESET key or initiation of the tuner.

( SEEK ) – search key SEEK, search radio stations.

( FM/LINE ) – source selection key.

### SIGNAL SOURCES

{EXTERNAL} – usual signal source to the sound system.

{TUNER} – signal source of the radio.

### **1.0 - SPECIFICATIONS:**

\* Adjustment of the sound level between 66 dB and 0 dB, in 34 steps.

\* Manually or by remote control Ref. ERLS 32.

\* Select two sources of audio signal.

\* Manual tuning of FM radio.

\* “TIMER” temporiser, adjust for 30 minutes.

#### **\* Infrared remote control**

Permits:

- Adjust “VOLUME” level.
- Select sources of sound.
- Tune radio stations in FM.
- Input and output of the temporiser, “TIMER mode”
- “MUTE” silencer.

## **1.0 - TECHNICAL CARACTERISTICS:**

### *\* POWER SUPPLY*

- Asymmetric power supply with maximum dissipation of 50 Watts.
- Nominal tension of power supply, stabilized to 12 Volts.
- Maximum current of output, 3 A.
- Electronic protection against short circuit.

### *\* AMPLIFIER*

- Impedance of recommended charge for each channel, not inferior to 8 Ohms.
- Maximum power, 4 Watts by channel.
- Effective power, 2 Watts by channel.
- Maximum distortion, THD < 0.4%
- Separation of channels, 70 dB.

### *\* TUNER*

- Band, 8 Mhz to 108 Mhz.
- Recommended type of aerial, exterior dipole.

### *\* REMOTE CONTROL RANGE*

- Up to 10 metres.

## **2.0 – MAINTENANCE**

- Clean frontal panel, in case of damage contact your authorized reseller.

## **3.0 – PRECAUTIONS:**

- Do not use abrasive or solvent cleaners.
- Do not apply liquids directly.

## **4.0 – VOLUME ADJUSTMENT:**

Two ways to do it:

\* With ERLS 32 remote control by pressing one of the (VOLUME+) or (VOLUME-) keys.

\* Manually by pressing one of the keys to increase (▲) or to reduce (▼).

## **5.0 – SELECTION OF THE SOUND SOURCE:**

The amplifier has two signal sources:  
EXTERNAL and FM TUNER.

\* EXTERNAL signal source:

It's common to the rest of the system's amplifiers and automatically selected when the amplifier is connected for the first time. It's the "INTERNAL" source of the amplifier.

\* FM tuner:

Selectable by remote control ERL32 or manually.

\* By remote control ERLS32:

- Press one or two times the key (FM/LINE).

\* Manually:

- By pressing the (FM/LINE) key, the [LED] indicator is illuminated.

- Press again the (FM/LINE) indicator to rearrange the internal source; the [LED] indicator will be turned off.

## **1.0 – FUNCTIONING OF THE FM TUNER:**

Select the signal source of the tuner FM.

If there isn't a station tuned:

- Press the search key (SEEK) or start the tuner:

### **7.1) *START TUNER:***

Can be done by two different ways:

\* By remote control ERLS 32:

- Press (RESET) key or

\* Manually:

- Press the (RESET) selection key of the amplifier.

### **7.2) *TUNING OF THE RADIO STATIONS:***

To tuning search the FM frequency, in two ways:

\* By remote control ERLS 32:

- Press (SEEK) key.

The tuning is automatic and only stops in the next station if the aerial's signal has acceptable quality.

\* Manually:

- Press the search key (SEEK) of the amplifier.

- Reach the peak of the FM frequency and the search process is interrupted. Restart the tuner by pressing the (RESET) key.

## **2.0 – USE OF THE TEMPORISER:**

To avoid the amplifier stays turned on for undetermined time there's the temporiser function "TIMER". When the pre-programmed time is through, the volume gradually reduce until is turned off.

"TIMER" function is programmed for 30 minutes and can't be changed.

### 8.1) ACTIVATION OF THE TEMPORISER:

The access to “TIMER mode” only can be done in one way:

- \* By remote control ERLS32.
- Press one or twice the (TIMER) key.

Obs:

The [LED] indicator will indicate the activation of “TIMER mode” like this:

- When the selected signal source is the {INTERNAL}, the [LED] indicator that was switched off starts to blink. The switched on state has a superior duration in relation to the switched off state.

### 8.2) QUIT “TEMPORISER” MODE:

Three methods:

- Automatic, when the temporisation expires, the amplifier reduces progressively the sound volume till the minimum.
- Turning off the amplifier by (▼) key.
- Remote control, press once (TIMER) key.