



A TRIMBLE COMPANY

---

# SOFTWARE MANUAL

## STRETCHOUT™

*(for use with Gatewing X100 UAS)*

**Version 1.2**

**Publication Date: 9 October 2012**



© 2011 Gatewing.

Gatewing® is a registered trademark of Gatewing NV.

Stretchout™ and X100™ are trademarks of Gatewing NV.

All other registered trademarks, trademarks and names of products and companies used in this document belong to their respective owners.

All Rights Reserved. No part of this document may be photocopied, reproduced, stored in a retrieval system, or transmitted, in any form or by any means, whether electronic, mechanical, or otherwise, in whole or in part, without the prior written permission of Gatewing.

Gatewing NV  
Ottergemsesteenweg 439 / 11  
9000 Gent, Belgium  
[www.gatewing.com](http://www.gatewing.com)

Tel: +32 9 335 05 15  
Fax +32 9 335 88 03  
Mail: [documentation@gatewing.com](mailto:documentation@gatewing.com)



# TABLE OF CONTENTS

## SYMBOLS USED IN THIS MANUAL

### 1. INTRODUCTION TO STRETCHOUT

### 2. DOWNLOADING STRETCHOUT

#### 2.1 System Requirements

### 3. INSTALLING STRETCHOUT

#### 3.1 Stretchout

#### 3.2 Licensing Stretchout

### 4. MANAGING PROJECTS IN STRETCHOUT

#### 4.1 Opening Screen Toolbar: Overview

#### 4.2 Opening Screen Toolbar: Using the Buttons

##### 4.2.1 Add Flight

##### 4.2.2 Remove Flight

##### 4.2.3 Flight Path

##### 4.2.4 Stretchout and Cloud Processing

##### 4.2.5 Export

### 5. PROCESSING WORKFLOW IN STRETCHOUT

#### 5.1 Navigating the Processing Screen

#### 5.2 Processing Screen Toolbar: Overview

#### 5.3 Ground Control

##### 5.3.1 Importing Ground Control Points (GCPs)

##### 5.3.2 Setting the Coordinate System

##### 5.3.3 Insert Ground Control Points Module

##### 5.3.4 Navigating the Insert Ground Control Points Module

##### 5.3.5 Editing Ground Control

#### 5.4 Image Processing

##### 5.4.1 Local Processing

##### 5.4.2 Pix4D Cloud Processing

#### 5.5 Managing Multiple Flights

### 6. FEEDBACK / CONTACT GATEWING



## SYMBOLS USED IN THIS MANUAL



A caution message indicates an important reminder about correct procedures and practices in the operation of your software. Ignoring these reminders may result in incorrect results without leading to actual error messages.



A hint message indicates helpful hints or shortcuts.



A reference message directs you to an internal reference within the document, a related document or a web link.



# 1. INTRODUCTION TO STRETCHOUT

Welcome to the Gatewing image processing software known as Stretchout, to be used in conjunction with the Gatewing X100 aerial mapping and surveying system.

The Gatewing X100 unmanned aircraft system (UAS) flies automatically along a pre-programmed path, taking pictures at a specified altitude, along parallel lines and with specified overlap between the image exposures. At the same time, position information of the pictures is recorded for further processing. This image acquisition is used to map terrain for orthophoto creation, digital terrain model creation or photogrammetry.

But before you can use the images from the Gatewing X100 to generate an orthophoto or digital elevation model (DEM), you must first have accurate information about the orientation of the aircraft and its position when each image was taken and the time at which each image was taken. Some of this information is referred to as “geotags,” which identify each image uniquely with an exposure station position. These data are recorded in a log file aboard the aircraft. The process of associating each image with its exposure station position is referred to as “synchronizing” or “geotagging” the images.

That’s where Stretchout comes in.

Stretchout synchronizes or geotags the images once the images and log file information have been uploaded. Next, the images and exposure information can be exported to a stand-alone image processing software package such as AgiSoft PhotoScan Pro, Pix4UAV Gatewing Edition or EnsoMOSAIC. The resulting data products from such image processing packages include orthomosaics, DEMs and detailed reconstruction parameters in various formats allowing 3D visualization in GIS software and compatible packages for potential post-processing.



## 2. DOWNLOADING STRETCHOUT

Contact your dealer or [Gatewing support](#) for obtaining the latest installer file of Stretchout.

### 2.1 System Requirements

	minimum	recommended
Operating system	Windows XP or later (64 bit)	Windows XP or later (64 bit)
CPU	Any 64 bit processor	Any 64 bit processor
RAM	2 GB	4 GB
Free hard disk space for processing	10 GB	10 GB

## 3. INSTALLING STRETCHOUT

### 3.1 Stretchout

Stretchout is included free with each Gatewing X100 UAS System Kit and can run “rapid” processing for a rough and quick result. While not a 100% guarantee of good results, Stretchout can be used a bit like a proofing tool. However, it is also possible that the provided rapid processing may not deliver a (complete) result due to the type of land surface measured and the adverse effects of working at a reduced resolution, although processing with a professional image processing solution may produce a good result. However, many users may find the orthomosaics from Stretchout to be adequate for their purposes (e.g. GIS background layers).

### 3.2 Licensing Stretchout

To install Stretchout properly, your computer must be connected to the Internet at the time of starting your first processing session. This is so that verification of the license can be done. Without this connection, Stretchout will not start the processing window.



Log-in credentials (username/password) are communicated by your dealer or Gatewing. These credentials are valid for Stretchout.

If you are planning to use the program on a computer where the Internet will not be accessible, be sure to run your first processing session in an environment where the connection is feasible. Even if your computer is not connected to the Internet later, Stretchout will run normally after a proper installation.

Users may install Stretchout on any computer.




## 4. MANAGING PROJECTS IN STRETCHOUT

Stretchout allows you to manage the data (input and output) for each specific flight that you do with the Gatewing X100. Each flight has associated with it a set of imagery, data log files that are created by the plane while in flight and, if applicable, a listing of ground control point coordinates.

To open Stretchout, double-click the Stretchout icon  on your Desktop or from the Windows Start menu.

When you open Stretchout, you will see an opening screen that allows you to manage your flights.

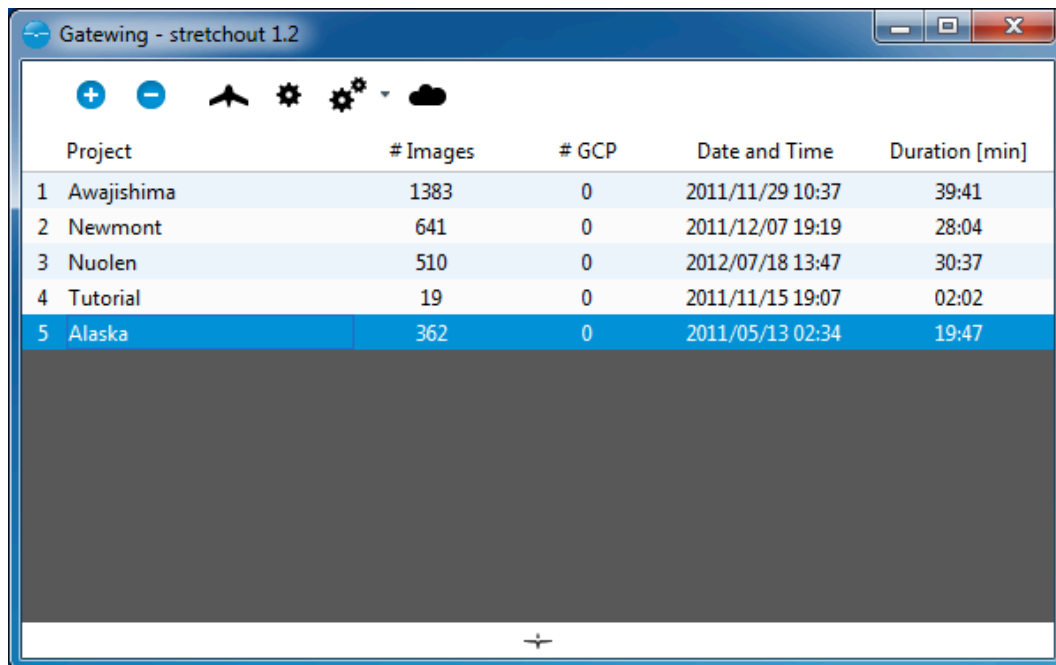

Project	# Images	# GCP	Date and Time	Duration [min]
1 Awajishima	1383	0	2011/11/29 10:37	39:41
2 Newmont	641	0	2011/12/07 19:19	28:04
3 Nuolen	510	0	2012/07/18 13:47	30:37
4 Tutorial	19	0	2011/11/15 19:07	02:02
5 Alaska	362	0	2011/05/13 02:34	19:47






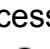
The flight list will show the project name, number of images, number of Ground Control Points (GCPs), time and date of the first acquisition in a flight and duration of the flight. Flights can be sorted according to any of the columns by clicking the appropriate column header.

### 4.1 Opening Screen Toolbar: Overview


The following actions are available in the toolbar on Stretchout's opening screen:






- the  button allows you to add flights
- the  button removes flights from the list
- the  button allows you to see the complete flight path in 3D
- the  button launches the Stretchout processing module
- the  button allows you to export your flight information to other processing software packages.
- the  button allows you to upload your project to the Pix4D Cloud




If available, you may return to the primary toolbar by clicking  at any time.

## 4.2 Opening Screen Toolbar: Using the Buttons

### 4.2.1 Add flight

Clicking  on the toolbar allows you to indicate the location of the log files and the images that need to be synchronized. The log files contain image acquisition information, such as the position and orientation of the X100. These files can be stored anywhere on your local, external or network drives, and log files from different flights do not need to be stored together or in a common directory.

After you click,  use the LOG FILE button to indicate the location of the file of the flight you want to add. The format of the log file is logyyyyymmdd\_hhmmss.txt.

Next, the FLY FILE button allows you to select the corresponding file. The format of the fly file is logyyyyymmdd\_hhmmss.fly.


Finally, the IMG DIR button will prompt you to select the folder containing the images. Click on the folder once to highlight it, and then choose SELECT.



The X100 system may take images while the aircraft is on the launcher. Additionally, the operator may have taken test images before the flight. Be sure these images are deleted from the set of images that are in the folder selected by IMG DIR. Otherwise, the processing results will be erroneous and not likely to be useful.



The LOG FILE, FLY FILE and IMG DIR buttons will turn blue when a valid location is set for them. After you have set the IMG DIR by clicking SELECT, you will see a dialogue box summarizing the file names of the LOG and FLY files and the number of images. The dialogue box will prompt you to enter a flight name and confirm by clicking ADD. The flight will be added to the list with a consecutive ID number.

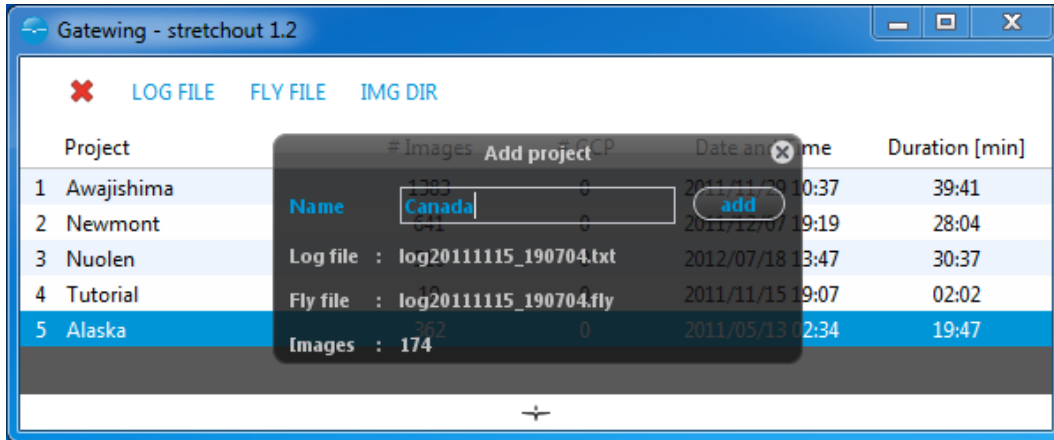


**i** For project names, use only alphanumeric characters. Do not use any special characters including space, dash, underscore, etc. Project names are not case sensitive.

**i** Two flights can have exactly the same project name. Projects with the same name are stored in the internal database based on the differing project ID number, image count, duration and date and time of the flight.

**!** Make sure to identify properly for yourself the corresponding files and images of each flight, especially when you have multiple flights over the same area. Mixing up flight files and images may go unnoticed at this stage but leads to flaws in the image processing or to error messages stating that the data cannot be processed.

## 4.2.2 Remove flight


Select a flight (a single click in the list will highlight the flight in blue) and click  to remove the flight from the list.


**i** You will be asked for confirmation to remove a flight.



Removing a flight from the list will not remove the flight and image files from your disk.

### 4.2.3 Flight path

To create a representation of the flight path for a selected flight in the list, click the  button. The corresponding KML file will be created in the folder containing the log file. The logged GPS positions will be used to create a line of flight from takeoff to landing.

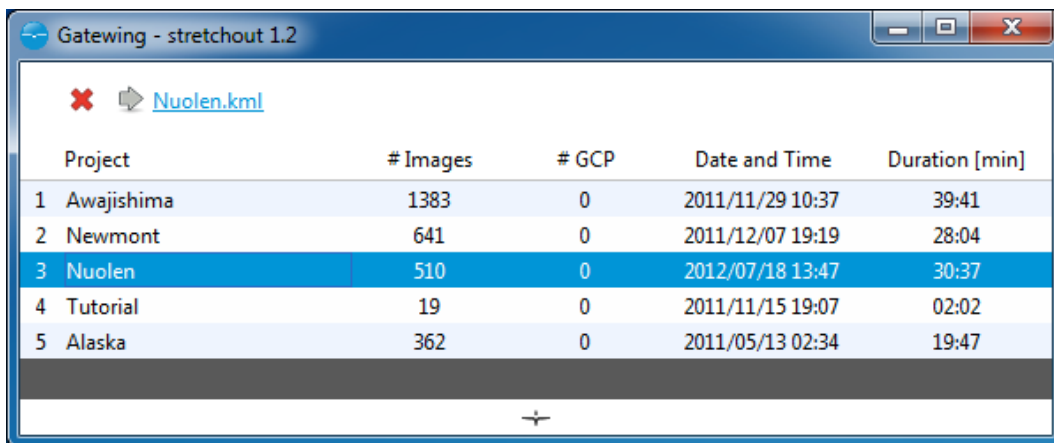




Project	# Images	# GCP	Date and Time	Duration [min]
1 Awajishima	1383	0	2011/11/29 10:37	39:41
2 Newmont	641	0	2011/12/07 19:19	28:04
3 Nuolen	510	0	2012/07/18 13:47	30:37
4 Tutorial	19	0	2011/11/15 19:07	02:02
5 Alaska	362	0	2011/05/13 02:34	19:47

A link to the KML file will be shown in the toolbar above the flight list. The link will open the KML file using the default software assigned to KML files on your system (typically Google Earth).



## 4.2.4 Stretchout and Cloud Processing

Select a flight and click  or  to launch the Stretchout Processing Screen in a separate window.

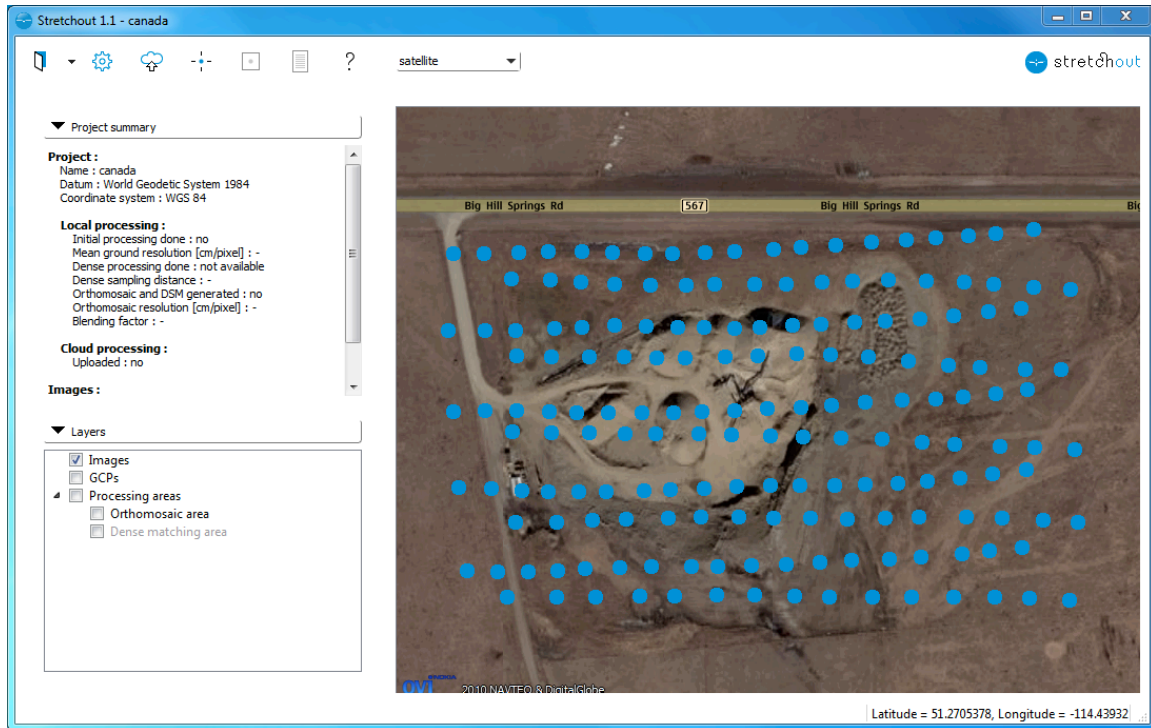

The processing module will be opened in a separate window. You can switch back to the opening screen to manage your flights at any time, and by selecting other flights you can open any number of parallel processing windows.

Note that if you begin local processing in several processing windows, this usually means that each process will be processed sequentially, as you generally will not have enough computing resources to have your processing run on separate threads that are as fast as a single processing job.




How you initiate local or cloud processing and all functions you can access in the processing module are covered in the “Processing Workflow” section of this manual, Page 14.



If Ground Control Points (GCPs) are identified in the Stretchout Processing Screen, they will be shown in the GCP column in the table view.



## 4.2.5 Export

Select a flight and click the  button to bring up the options to export a flight for processing in other compatible software packages.

Clicking AgiSoft PhotoScan<sup>1</sup> will create a `flightname.psz` file and display a link to the file in the toolbar.

Clicking Pix4UAV Gatewing Edition (formerly known as Stretchout Pro) creates a `flightname.p4d` file and displays a link to the file in the toolbar.

The EnsoMosaic<sup>2</sup> button creates both a `flightname.trp` and a `flightname.gps` file. Also, a link to these files is displayed in the toolbar. A warning message appears when the EnsoMOSAIC export is selected, reminding users to enter the path to the calibration file of the camera used for this particular flight in the corresponding field of the created TRP file, which can be done in any text editor.

Clicking Generic will create a `flightname.csv` file and display a link to the file in the toolbar. This file contains the image positions (GPS X,Y,Z) and orientations (UAV roll, pitch, yaw) as recorded in the aircraft log file.

All export files are by default created in the same folder as the LOG file.

Please refer to the user manual of the software packages supported in the Export function for information on how to use the exported files.

---

<sup>1</sup> PhotoScan is a product of AgiSoft LLC (<http://www.agisoft.ru/products/photoscan/professional/>).


<sup>2</sup> EnsoMOSAIC is a product of MosaicMill Oy (<http://www.ensomosaic.com/>)




## 5. PROCESSING WORKFLOW IN STRETCHOUT

### 5.1 Navigating the processing screen

Projects can be processed through local desktop processing and/or through Pix4D cloud processing.

Click  on the opening screen to open the Stretchout processing window. The window layout is presented in the figure below.

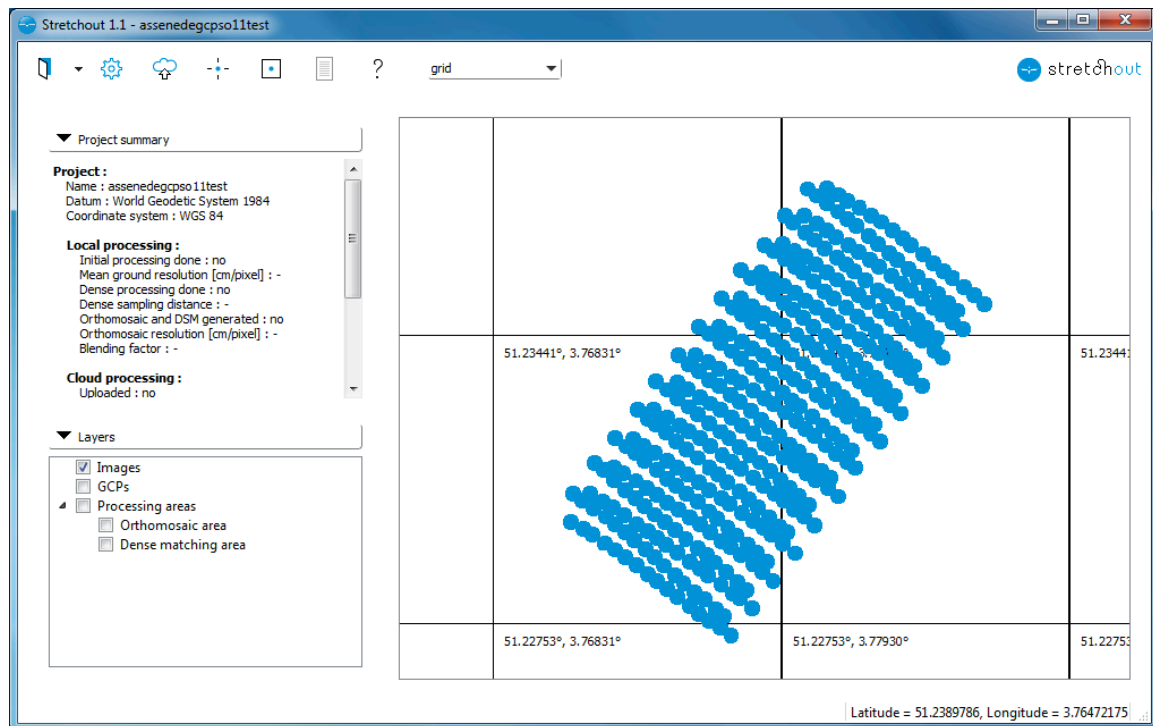

In the main panel, the image acquisition positions are displayed as blue dots on a selectable background of either a grid, map or satellite view. When you hover the mouse over the main panel, the coordinates are displayed in the lower right corner.









Putting the mouse arrow on an image position will display the image name next to the coordinate display. View the corresponding image by double clicking the blue dot.

The Project Summary panel gives an overview of the project size, GCPs and coordinate system, along with processing status and statistics. The display of image acquisition centers, potential GCPs and polygons drawn to select processing areas (see further) can be toggled in the Layers panel.



## 5.2 Processing Screen Toolbar: Overview

The following actions are available in the toolbar on Stretchout's processing screen:

- Click  in the Stretchout Processing Window to open the project menu from which the user can save projects, add projects, change the coordinate system and toggle the summary view.
- The  button allows you to run the image processing on your local machine.
- The  button allows you to upload your project to the Pix4D Cloud.
- Click the  button to include your Ground Control Points.
- Click the  button to modify your Ground Control Points.
- The  button shows you the processing quality report.
- The  button shows you the build-in help content.
- The  button allows you to select a background image.

## 5.3 Ground Control

### 5.3.1 Importing Ground Control Points (GCPs)

To improve the accuracy of your mapping and DEMs, you can use ground control points that are well distributed across the area and elevation ranges of the project to fix the solved photogrammetric model within the accuracy of your ground control system. Generally, accuracy of the positioning of ground control must be one-half to three times the ground sampling distance or GSD (the distance represented by a single pixel). Typically, in a flight that is operated at 150 m above ground level (AGL), GSD will be 5 cm. Thus, to be meaningful, ground control must have an absolute accuracy in the range of 2.5 to 15 cm. Remember that the referencing of the data products will be limited by the accuracy inherent in the internal consistency of the ground control coordinates you input.





Ground control points are any photo-identifiable points for which you have coordinates in a single system (datum and projection). These points must be clearly visible in the photographs. Many times, markings are placed on the ground before flight to ensure that the points are visible, but more permanently visible structures such as corners of road marks and artificial constructions can




also be used. The general recommendations for custom-made ground control point markers include a unique appearance with an unambiguous point of measurement on the images, a non-reflective color contrasting with the substrate, a size of at least five times the image pixel size, and ease of use in the field.


When ground control points are available, these should be entered first, before beginning processing. If you have already processed the imagery, you can enter the ground control information and reprocess the data for higher quality positioning, consistent with the accuracy of your ground control.

Enter GCP names and coordinates using the ADD GCP  button on the toolbar.

A dialogue box appears when you click the  button from which you can import ground control points in a list (created in a spreadsheet program or text editor) by clicking the “from .csv” button.

 Next to the “from .csv” button, there is a direct link to the GCP file format topic in the help file.

The names (identifiers) and coordinates of the respective ground control points can be imported either as space, tab or comma separated TXT or CSV files; both forms are accepted. Ground control points listed in TXT or CSV files should not contain any headers. Records are listed each on a separate line in the following order: `identifier,latitude[decimal degrees],longitude[decimal degrees],height[meter]` for GCPs measured in WGS84 lat/long degrees or `identifier,x[meter],y[meter],z[meter]` for GCPs measured in any projected coordinate system, where x denotes the west-to-east position and y refers to the south-to-north position. Note that lat/long coordinates should be formatted as decimal degrees, with negative entries for western and southern hemispheres. When using a spreadsheet as GCP editor, please make sure your system country settings are set to use a point as decimal separator (instead of a comma).

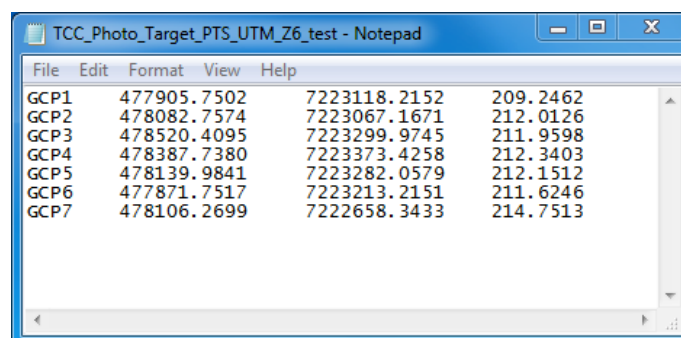


Identifier	Latitude [decimal degrees]	Longitude [decimal degrees]	Height [meter]
GCP1	477905.7502	7223118.2152	209.2462
GCP2	478082.7574	7223067.1671	212.0126
GCP3	478520.4095	7223299.9745	211.9598
GCP4	478387.7380	7223373.4258	212.3403
GCP5	478139.9841	7223282.0579	212.1512
GCP6	477871.7517	7223213.2151	211.6246
GCP7	478106.2699	7222658.3433	214.7513





### 5.3.2 Setting the Coordinate System


After the GCP file has been selected, you can use one of three options to set the coordinate system (datum and projection zone) in which the ground control points are measured. Click the “from list” button to access drop-down lists from which you can select the respective datum and coordinate system (projection). Alternatively, you can set the datum and corresponding coordinate system by indicating the unique EPSG code (see [www.epsg.org](http://www.epsg.org)).

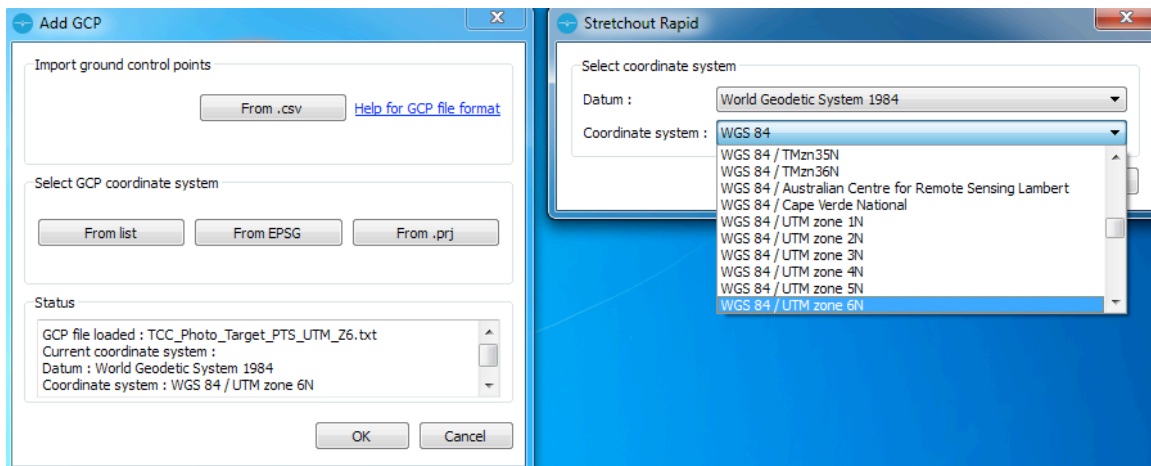


If the desired coordinate system is not available in the drop-down lists, you can add a coordinate system by uploading a PRJ file in well-known text format using the “from .prj” button. However, only PRJ files containing the seven TOWGS84 (also called Helmert) parameters can be used.

The status panel below the coordinate system selection buttons displays the GCP file name, datum and coordinate system. When you click OK, the insert ground control points module opens automatically if the coordinates of the ground control points match the project coordinates reasonably well.


In case of mismatches — for example, if the x and y fields have been changed in the GCP text file, or if a wrong coordinate system was selected — the “insert ground control points module” will not open, and the following error message will be displayed in the status panel:

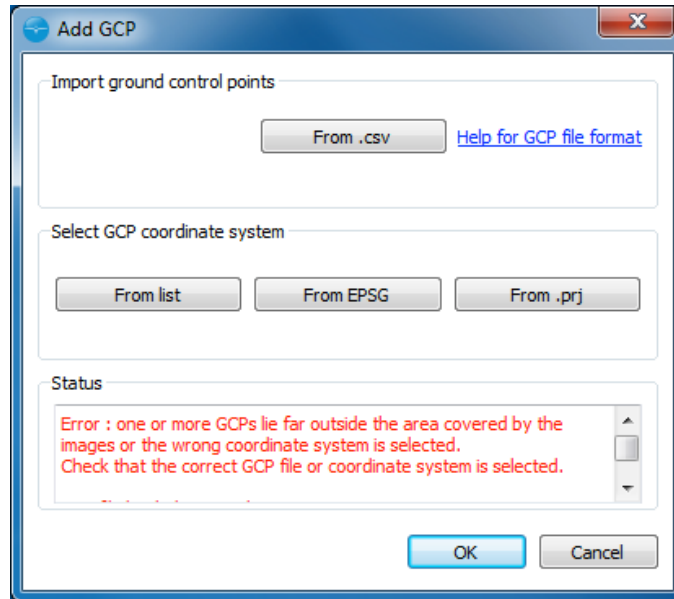


 The datum and coordinate system in which the GCPs are added in the project and set in this dialogue box will determine the datum and coordinate system of the output files. Hence, for projects without ground control, the default output coordinate system is WGS84 UTM, while the output files of projects with ground control will be georeferenced in the datum and coordinate system of the GCPs by default.

### 5.3.3 Insert Ground Control Points Module

In the main panel of the processing window, the positions of the ground control points, as determined from the coordinates you have entered, will be indicated at first by red crosses.

 If possible, check the positions of the ground control points in the main panel of the processing window thoroughly. Selecting a wrong coordinate system may not lead to the error message described above if such an error causes only a minor shift.

Hovering the mouse over a cross will display the GCP identifier next to the coordinate display in the lower right corner. The following warning will appear in the project summary panel:

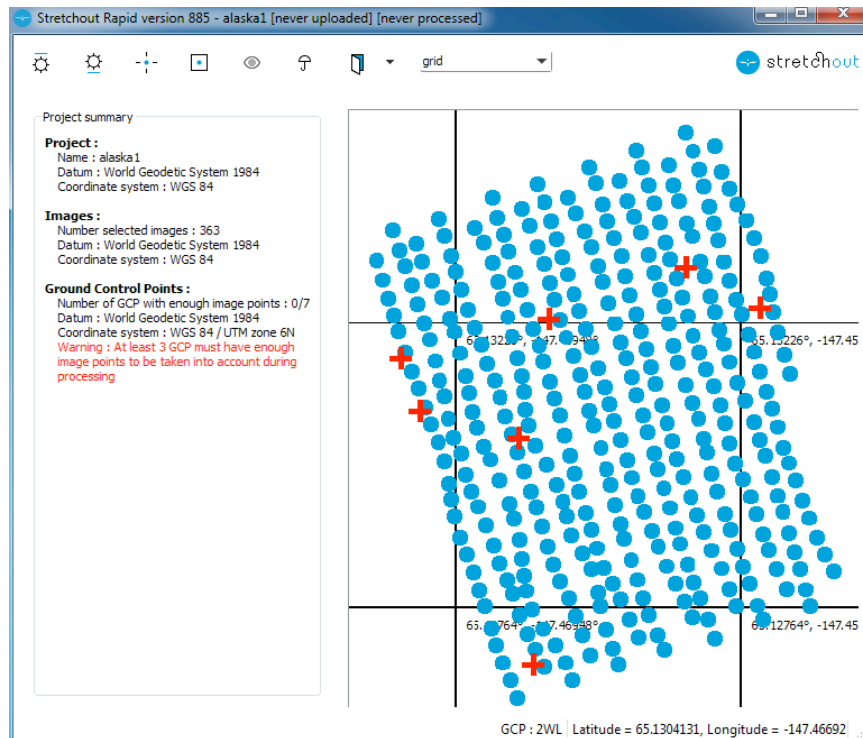

For a project to be processed with GCPs, ground marker positions should be indicated on the images for at least three GCPs. When enough GCPs have been indicated in the corresponding images, the warning message in the project summary panel on the processing window disappears.




Although a project can theoretically be processed with as little as three (without error estimates) or four GCPs (allowing error estimates), it is strongly advisable to add as many GCPs per project as possible, with five as a practical minimum and more for larger projects (consisting of multiple flights). Even more importantly, GCPs should be well spread out across the terrain towards the edges but also in the center, in x, y and z. Ideally, marker positions should only be indicated on images where the measurement point can be determined at the pixel level.

For each GCP to be included, the corresponding positions should be indicated on at least two images. When this is done, the label "Not enough image points" disappears from the GCP identifier list, and the cross in the main panel of the processing window turns green.




GCP ground marker positions should ideally be indicated on as many images as possible, provided they are not blurred. Indicating the GCP on images where the ground marker(s) are blurry may introduce small errors.

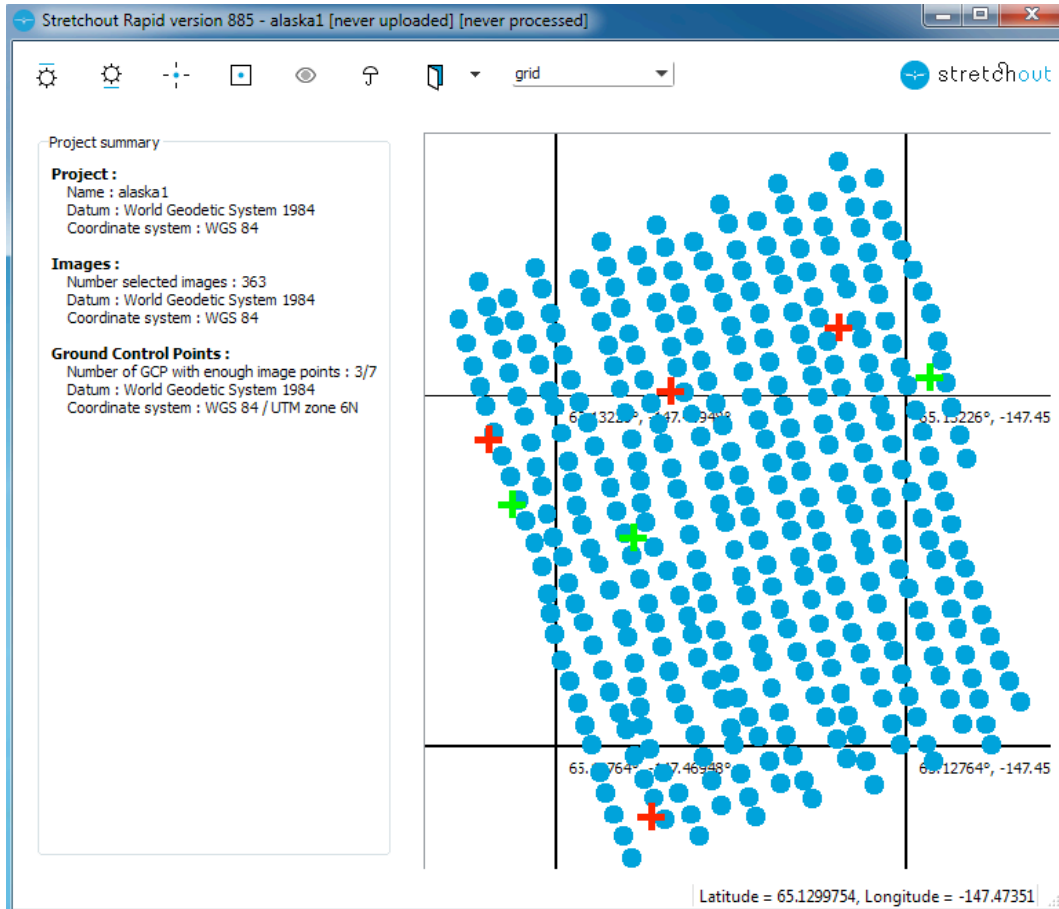

### 5.3.4 Navigating the Insert Ground Control Points Module

The insert ground control points module consists of three panels:

- The left panel shows the ground control point identifiers in alphabetical order.
- The middle panel shows the list of images in the project.
- The right panel shows the selected image on which a ground control point may be indicated by clicking on the ground markings visible in the image.

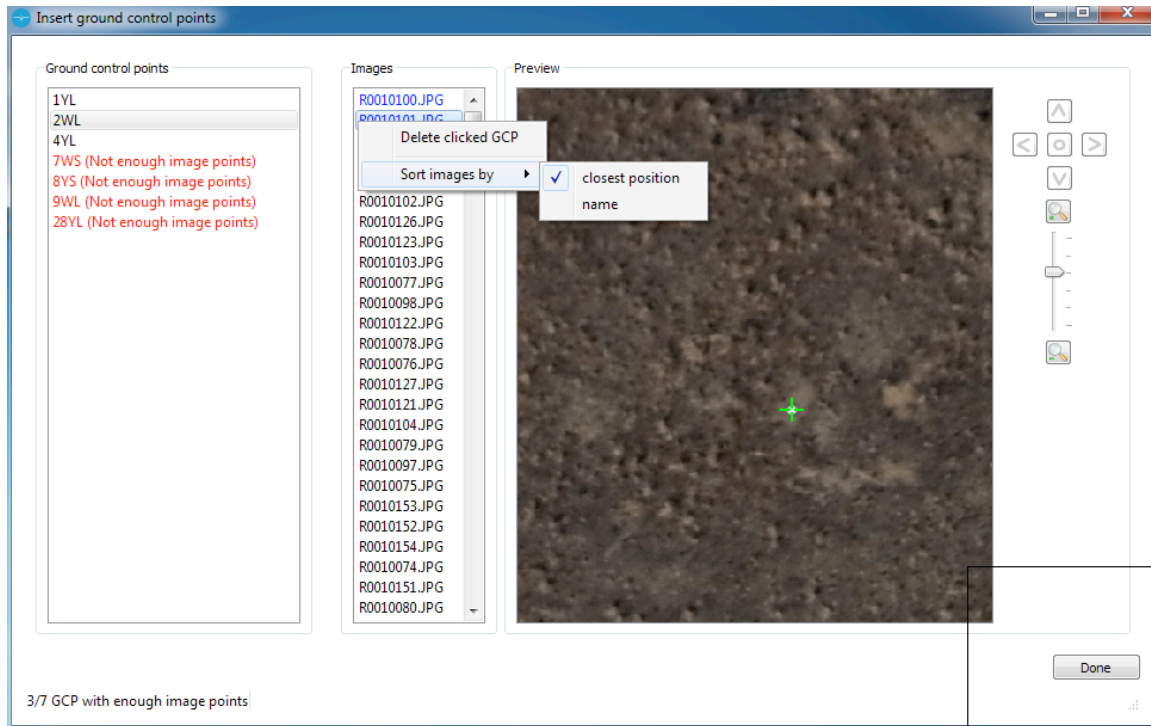

**To remove an inserted ground control point from an image**, right click on the image name in the list and choose DELETE CLICKED GCP.

**To remove a GCP from the project**, including all of its ground marker positions indicated on all the images, right click on the identifier in the left panel list and choose DELETE.

**Zoom in and out on the displayed photo** by using the mouse scroll wheel or a touch pad.

By default, the **items in the image list are sorted according to position**, with the closest position to the respective GCP identifier displayed first in the list. The closest position is calculated based on comparison of the GPS-recorded image position and the coordinates in the GCP text file.


You can also **sort the image list alphabetically** by right-clicking in the image list and choosing SORT IMAGES BY>.




**Pan** by holding the right mouse button while dragging.

You can **insert a ground control point into a photo** with a single click of the left mouse button; simply clicking again anywhere in the photo will move the ground control point to the new pixel that was clicked.



### 5.3.5 Editing Ground Control




Ground control can be edited after initial entry. Users may find that they have to add or delete ground control points or need to select the ground control marker location(s) more accurately. This can be performed by clicking on the edit ground control button  or by double-clicking on a ground control point in the main window.


 By clicking “save project” in the  project menu, the number of actually indicated GCPs (which may differ from the total number of GCPs in the added file) will be added to the database in the Stretchout opening screen (visible after closing and re-opening the opening screen). When generating a PhotoScan .psz file from the  export list, the identifiers and the location of these GCPs on the images will also be stored in the generated project file.

## 5.4 Image Processing


In the processing screen, you can optionally import ground control points and indicate ground marker positions. You can then choose to process your flight locally using the  button or submit it to the Pix4D cloud server for processing using the  button.

### 5.4.1 Local Processing


Click the local processing button  to start the processing on your machine. This will add the following pane to the bottom of the processing window:

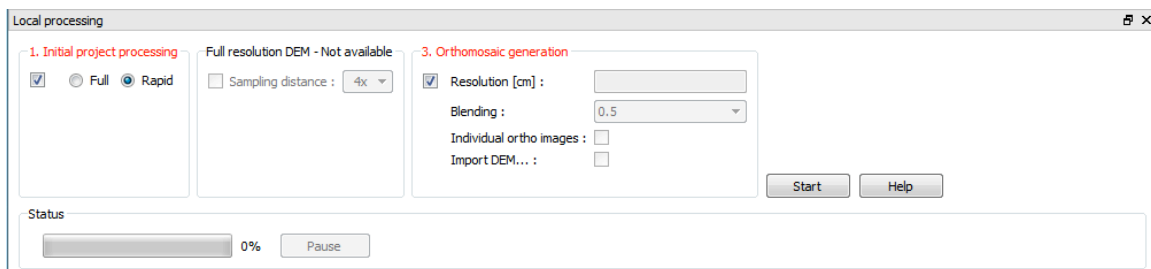

The desired steps can be selected, before clicking the Start button. You have the choice to carry out the steps one by one or by selecting all the steps at once.

 When launching the local processing from Stretchout, no changes can be made to the processing parameters (i.e., rapid initial processing, four times reduced resolution) and step 2 (dense matching) is not available.




*Step 1:* In the “Initial project processing” section at the bottom, rapid processing is done at one-fourth of the original image resolution, possibly leading to incomplete results, while dramatically increasing processing speed. When step 1 is completed, the Automatic Reconstruction Report shows up in a pane at the right side of the processing window or can be consulted by clicking the report button . The report can also be consulted in PDF format by clicking the PDF link in the report pane (the PDF file can be found in the results folder of the project, which is automatically generated in `../projectname/results` in the directory where the project log file resides).

*Step 3:* In the “Generate Orthomosaic” section, the resolution is fixed at four times the native image resolution.

The area for which end products will be generated can be set by clicking Draw under Orthomosaic area in the Project menu. Any polygon can be drawn by left clicking in the map pane to insert a vertex and right clicking to close the orthomosaic area. The orthomosaic area should be drawn before starting step 3. The area display can be toggled in the layers pane. The Stretchout processing generates the orthomosaic in GeoTIFF format, available in the `../projectname/results` folder. This folder is automatically generated by Stretchout in the same directory where your X100 logfile resides.

## 5.4.2 Pix4D Cloud Processing

Click the cloud processing button  to upload your project. Fill in your username and password and click the "upload" button to start transferring your images to our cloud server. The username and password combination is exactly the same as the one used for registering the software (see “Licensing Stretchout”, p. 7).

You can monitor the processing status at our cloud page:

<http://gatewing.pix4d.com>




More information on Gatewing cloud processing is explained here:

<http://gatewing.pix4d.com/faq>



You can always stop the upload by closing down the Cloud Processing window. It is possible to resume the upload at any time.

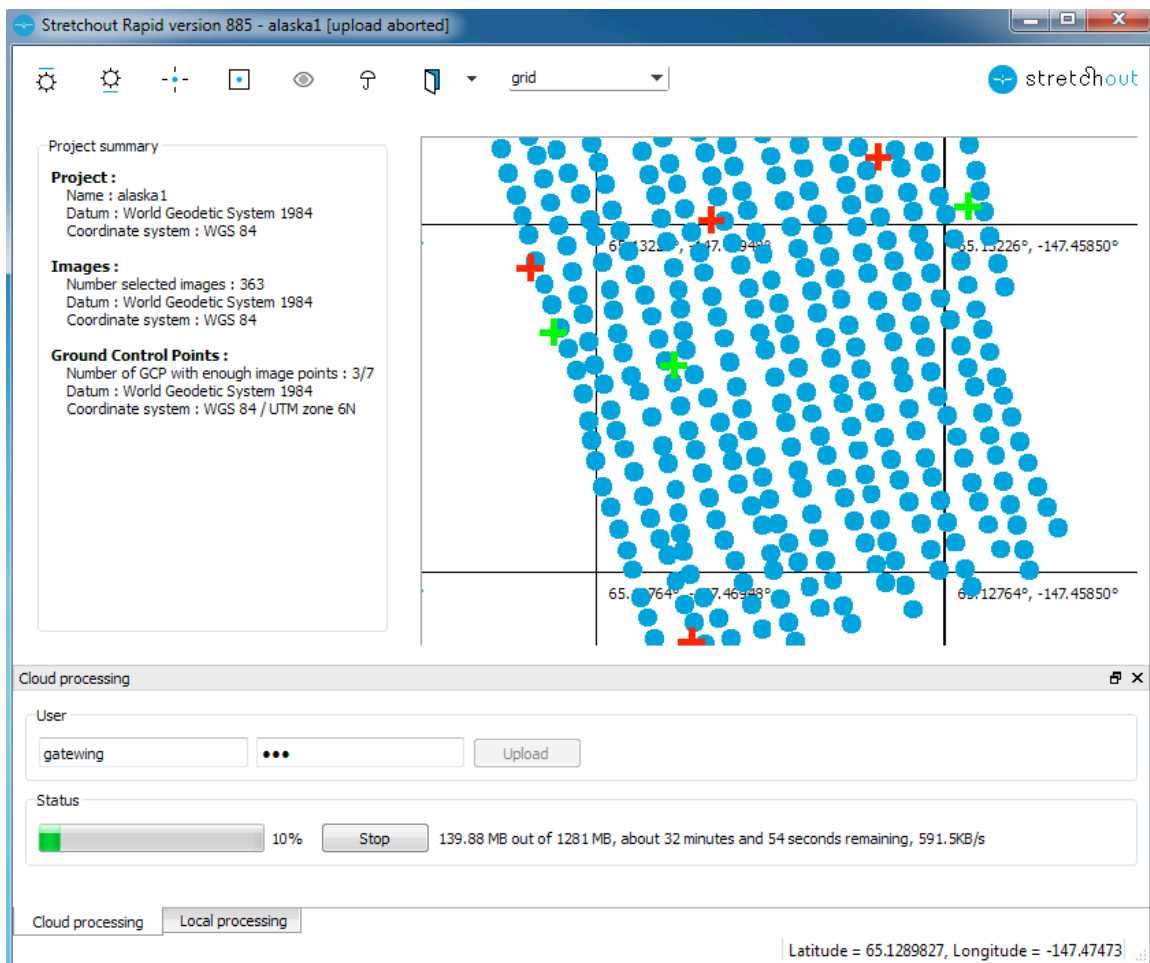

When you are using the cloud, an e-mail is sent to you as soon as the initial processing is over. The corresponding Automatic Reconstruction Report can then be downloaded as a PDF file.

You should thoroughly review the report generated at initial processing before making the decision to move forward with the purchase of your desired products, **Ortho** or **Full**:

- **Ortho** contains a basic orthomosaic;
- **Full** creates orthomosaic (GeoTIFF, KML tiles), DEM (GeoTIFF, XYZ), internal and external orientation parameters and several export formats.






## 5.5 Managing Multiple Flights



Combining several adjacent flights for processing as one block can be done in the following way:

*Step 1:* Add your flights individually to the list in the [Stretchout opening screen](#) by indicating the respective files and folders and naming them appropriately.






Make sure there are no flights with identical image file names (this may occur if you have for instance acquired some of the flights you want to merge with several cameras). If so, batch rename the files but avoid brackets or spaces or any other special characters.

*Step 2:* For each flight, click the processing button  to open the Stretchout processing window. You don't have to do anything further here, just click close again and choose "save". This creates a Stretchout project .p4d file in the same folder as the log file for the respective flight.

*Step 3:* Select one of the flights and click the processing button  again to start adding other flight projects; as the main window shows up, go to the project menu button  in the toolbar and click "add project". From there on, browse to the .p4d files for the other flights you want to add - repeat this for each flight. You will see the added photos show up in the main window allowing you to check if the projects are contiguous and complete (and see if the ground control points are covered by the flights, if you have ground control points available)



If you have ground control points, you do not need to add these for each separate flight before adding projects. You can simply merge your projects first using the process described above, and then add your ground control points for the whole contiguous block at once to save time.

*Step 4:* Go to the processing menu  again and choose "save as..." to rename your project to the whole contiguous block. When you click upload to the cloud  or process locally  next, the whole project with multiple flights will be processed as one.



## **6. FEEDBACK / CONTACT GATEWING**

Gatewing encourages your comments concerning this manual or software. We are committed to providing documentation and software that meet your needs.

Please send any comments by contacting us at [support@gatewing.com](mailto:support@gatewing.com).

Please include the name of the document/software and any comments, errors found or suggestions you have for improving this manual or the software's operation.

Contact Gatewing customer support:

Tel: +32(0)2/669 66 69

E-mail: [support@gatewing.com](mailto:support@gatewing.com)