


HAUS

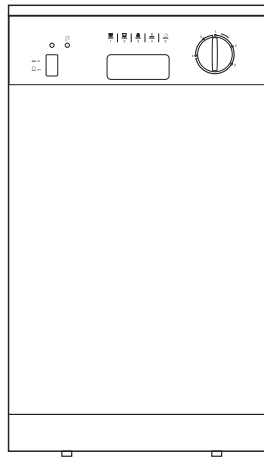

Freestanding dishwasher Instructions manual

DW9-AFM Series

Customer helpline: 0845 600 4632

Safety information	2
Installation	4
Electrical Connection	6
Getting to know your dishwasher	7
How to fill the salt container	8
How to fill rinse aid container	10
How to fill the detergent dispenser	11
Not suitable for the dishwasher	12
Dishes arrangement in dishwasher	13
Programme overview	15
Using the appliance	16
How to keep your dishwasher in shape	17
Care and maintenance	18
Trouble shooting	19
Technical data	23
Important information	23
Disposal information	25
Product guarantee	26

At time of delivery

- Check packaging and dishwasher immediately for signs of transport damage. If the appliance is damaged, do not use it and contact the retailer or our approved customer service department without delay.
- Please dispose of packaging materials properly.

During installation

- Site the dishwasher and connect it up in accordance with the installation instructions.
- The dishwasher must not be connected to the electricity supply while installation is being carried out.
- Ensure that the domestic wiring is properly earthed.
- The mains electricity supply must conform to the details shown on the dishwasher rating plate.
- Do not connect the dishwasher to the electricity supply using an extension cable.
- Built-under and built-in appliances should always be installed under a continuous work surface which is attached to the adjacent cupboards in order to ensure that the appliance is entirely stable.
- After the appliance has been installed, the mains plug should still be easily accessible.
- The plastic housing on the water inlet contains an electrically operated valve. The connecting wires are inside the inlet hose. Do not cut through this hose and do not immerse the plastic housing in water.
- During installation, the power cable must not be excessively or dangerously kinked or flattened.

During normal use

- The dishwasher must only be used by adults for the washing of household dishes and cooking utensils.
- This appliance cannot be installed outdoors, even if the area in which it is installed is covered by a roof. It is very dangerous to leave the appliance exposed to rain and the elements.
- Do not place any heavy objects on the door or stand on the door when it is open. The appliance could tip forward.
- The water inside the dishwasher is not suitable for drinking.
- Do not use solvents of any kind inside your dishwasher. There is a risk of explosion.
Open the door carefully if the dishwasher is operating. There is a risk of water coming out.
- Do not touch the heating element during or after a wash cycle.
- Fundamental rules to follow when using the appliance:
 - Never touch the dishwasher when barefoot or with wet hands or feet.
 - Do not use extension cords and multiple socket.
 - If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply.

If your family includes children or the infirm

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep detergents out of the reach of children.

If a fault occurs

- If the appliance malfunctions, turn off the water supply to the appliance and disconnect the plug from the wall socket. Then, consult the section entitled "Trouble shooting". If you cannot solve the problem, contact a service centre.
- Only specialised personnel are authorised to make repairs.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised service agent.
- To maintain the EFFICIENCY and SAFETY of this appliance, we recommend:
 - Call only a manufacturer-approved service engineer or contact the manufacturer directly.
 - Always use original spare parts.

When disposing of old appliances

- Appliances which are no longer being used must be made inoperable by disconnecting the plug from the wall socket, cutting the power cable and removing the door lock.
- Take the appliance to a designated waste disposal centre.



Dangerous voltage



Warning

Children could get locked or stuck in the appliance (risk of suffocation). Therefore: Remove the mains plug and cut themains wire. Damage the door lock so that the door can no longer be closed.

Positioning the appliance

Positioning the appliance in the desired location. The appliance is equipped with water supply and drain hoses that can be positioned to the right or the left of the appliance to facilitate proper installation.

Levelling the appliance

Once the appliance is positioned, adjust the feet (screwing them in or out) to level the appliance. If the appliance is level, it will help to ensure proper performance.

Cold water connection

Connect the water supply hose to a threaded 3/4 inch (ca. 19mm) connector, making sure that it is fastened tightly in place (see Fig. A).

If the water pipes are new or have not been used for an extended period of time, let the water run for a while until the water is clear and free of impurities.

If this precaution is not taken, there is a risk that the water inlet can get blocked and damage the appliance.

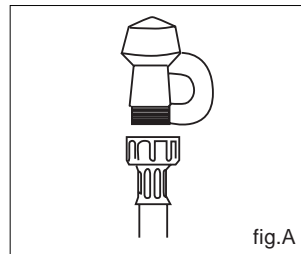


fig.A



Warning

The appliance is to be connected to the mains water using new hose sets. Old hose sets should not be reused.

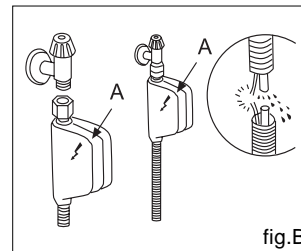


fig.B

Anti-Flooding protection

The dishwasher is equipped with a system that stops the supply of water in the event of a problem with the water supply hose or leaks within the unit, in order to prevent damage to your home. If, for any reason, the housing containing the electrical components is badly damaged, turn off the power supply and unplug the appliance immediately. In order to guarantee that the anti-flooding feature operates properly, box "A" with the water supply hose must be attached to the water supply tap as shown in Fig. B. If the length of the hose is not adequate to make a proper connection, the hose must be replaced with one which is long enough. This hose is available from specialised retailers and approved service centres.

Drain hose connection

Insert the drain hose into a drain pipe with a minimum diameter of 4cm, making sure to avoid kinking or pinching. If necessary, fit a syphon trap (U-bend) as in Fig. C. The free end of the hose must be at a height between 40 and 100 cm and must not be immersed in water.

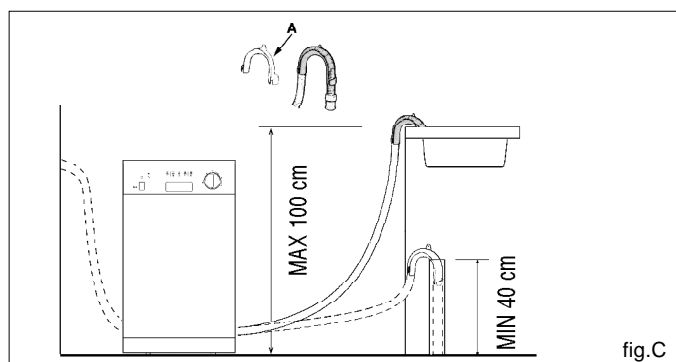


fig.C



Attention:

The syphon trap (U-bend) must be fastened to the wall to prevent the drain hose from moving and allowing water to spill.

Electrical Connection

After making sure that the voltage and frequency values for your domestic electricity supply correspond to those on the rating plate (located on the inner door of the appliance), insert the plug into an electrical socket which is properly earthed (the earthing of the appliance is a legal safety requirement).

If the plug is not appropriate for the socket, replace the whole cable, rather than using plug adaptors or the like, as they could cause overheating and burns.




Caution:

The dishwasher's mains plug must be accessible even when the appliance is installed as a built-in unit so that maintenance can be carried out safely.

- Before connecting, check that the voltage indicated on the rating plate corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the appliance manufacturer).
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- This unit must be earthed. This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

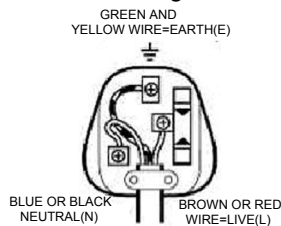

The wires in this mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL
BROWN = LIVE
GREEN + YELLOW = EARTH

IMPORTANT

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:




Caution
To prevent electric shock disconnect from the mains before removing the cover

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- The green and yellow wire must be connecting to the terminal marked with the letter E or the earth symbol. (\perp).

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.


If in doubt contact a qualified electrician.

Close-up view (control panel)

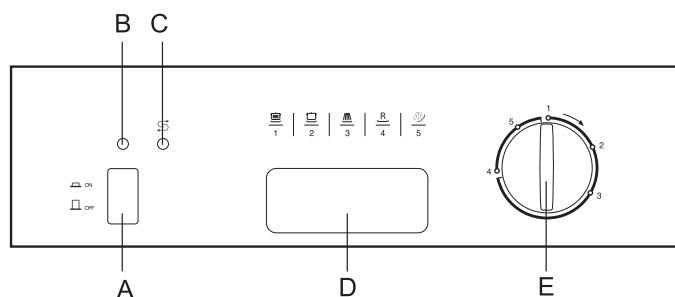

- A** "ON-OFF" Button
- B** "ON-OFF" Light
- C** Low Salt Indicator Light
- D** Door handle
- E** Programme selection dial.

Dishwasher interior

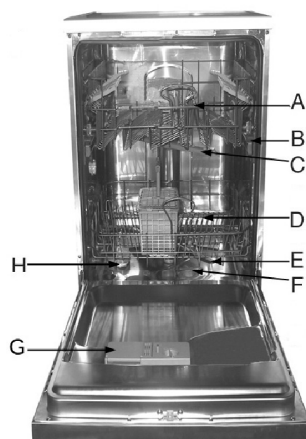

- A** Upper Rack
- B** Rack Height Adjustor
- C** Top Spray Arm
- D** Lower Rack
- E** Bottom Spray Arm
- F** Washing Filter
- G** Detergent and Rinse Aid Dispenser
- H** Salt Container Cap

Salt

The hardness of water varies from place to place. If hard water is used in the appliance, deposits will form on the dishes and utensils.



The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water.

Filling the container with salt

Always use salt intended for use with dishwashers.

The salt container is located beneath the lower rack and should be filled as follows:

- When the low salt indicator "C" lights, you must add salt.
- Remove the lower rack and then unscrew and remove the cap from the salt container;
- If you are filling the container for the first time, fill it with water.
- Place the end of the funnel (supplied) into the hole and introduce about 2 kg of salt. It is normal for a small amount of water to come out of the salt container.
- Carefully screw the cap back on.

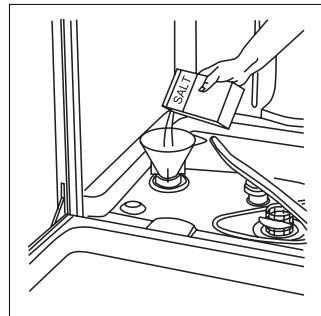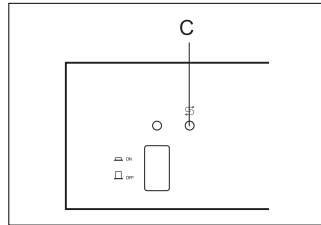


Important

To prevent the formation of rust, fill with salt just before beginning a wash cycle.

Adjusting salt consumption

You can adjust the amount of salt used to suit the hardness of the water in your area. This is intended to optimize the level of salt consumption so that it remains at a minimum.

To adjust salt consumption, proceed as follows:

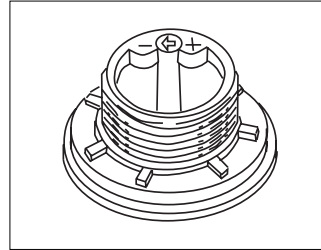

- Unscrew the cap from the salt container;
- There is a ring on the container with an arrow on it (see figure to the side),
- If necessary, rotate the ring in an anticlockwise direction from the "-" setting towards the "+" sign, based on the hardness of the water being used.

It is recommended that adjustments be made in accordance with the following table:

Water Hardness				Selector position	Salt consumption (Grams/cycle)	Autonomy (cycles/2kg)
Level	Clarke degrees	°dH	mmol/l			
1	0-14	0-17	0-1,7	/	0	/
2	14-36	18-44	1,8-4,4	"-"	20	60
3	36-71	45-89	4,5-8,9	Middle	40	40
4	>71	>89	>8,9	"+"	60	25

Rinse aid


This product makes dishes sparkle and helps them to dry without spotting. The dispenser is located on the inside panel of the door.

Adding rinse aid

Regardless of the type of detergent dispenser installed on your appliance, you must proceed as indicated below when loading the rinse aid.

To open the dispenser, turn the cap "1" in an anti-clockwise direction and then pour in the rinse aid, making sure not to overfill. The amount of rinse aid used for each cycle can be regulated by turning the dose adjustor "2", located beneath cap "1", with a screwdriver.

There are 6 different settings; the normal dosage setting is 3.

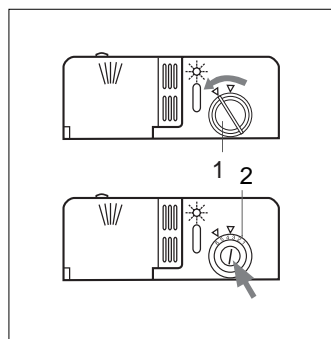

Important


Correct dosage of rinse aid improves drying.

If drops of water remain on the dishes or spotting occurs, the dosage adjustor should be turned to a higher setting.

If the dishes have white streaks, turn the dosage adjustor to a lower setting.


Detergent

Detergent specifically intended for use with dishwashers must be used. The dispenser must be refilled before the start of each wash cycle following the instructions provided in the "Programme overview". The detergent dispenser is located on the inside panel of the door.

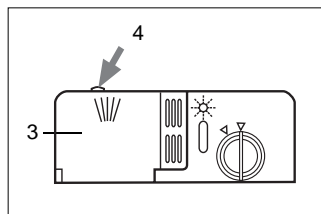

Adding detergent

- To open cover "3" on the dispenser, press button "4".
- The detergent for the wash cycle should be poured into compartment "5".
- The detergent for the pre-wash cycle should be poured into compartment "6".
- After the detergent has been placed in the dispenser, close the cover and press down until it clicks in place.

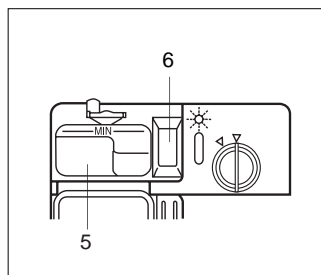

Notice:

To facilitate closing the cover, remove any excess detergent on the edges of the dispenser.



Notice:

3 in 1 or similar tablets should not be used when Rinse, Rapid wash or Soak programmes are selected.

What you should not put into the dishwasher

Cutlery and tableware manufactured in whole or part from wood. These will become faded and unsightly in appearance. Furthermore, the adhesives that are used are not suitable for the temperature inside the dishwasher.

Delicate decorative glassware and vases, special antique or irreplaceable china. The decorative patterns on such items will not be dishwasher-proof.

Plastic objects that are not resistant to hot water, copper and pewter utensils are also not suitable.

Items with decorative patterns printed or painted onto the surface of crockery, glasses, etc.

Aluminium and silver items tend to become discoloured or faded if washed in the dishwasher.

Some types of glass can become opaque in appearance after they have been washed many times in a dishwasher.

Highly absorbent materials, such as sponges and towels, should never be placed in the dishwasher.

Our recommendation

In the future, only purchase table or kitchenware that is dishwasher-proof.



Important

Items that have been soiled by tobacco ash, wax, lubricating grease or paint, should not be put in the dishwasher.

Damage to glassware and other dishes

Possible causes

- Type of glass or manufacturing process.
- Chemical composition of detergent.
- Water temperature and duration of dishwasher programme.

Suggested remedy

- Use glassware or porcelain dishes that have been marked 'dishwasher-proof' by the manufacturer.
- Use a mild detergent that is described as 'kind to dishes'. If necessary, seek further information from detergent manufacturers.
- Select a programme with a low temperature and as short a duration as possible.
- To prevent damage, take glass and cutlery out of the dishwasher as soon as possible after the programme has ended.

Dishes arrangement in dishwasher

en

Before placing the dishes in the dishwasher, remove larger food particles to prevent the filter from becoming clogged, which results in reduced performance.

If the pots and pans have baked-on food that is extremely hard to remove, we recommend that they are soaked before being washed. This will eliminate the need for extra wash cycles.

Pull out the rack to load the appliance.



How to use the lower rack

We recommend that you place the most difficult to clean items on the bottom rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right.

It is preferable to place serving dishes and lids on the sides of the racks in order to avoid blocking the rotation of the top spray arm.

- Pots, serving bowls, etc, must always be placed face down (see Fig. D).
- Large pots should be placed at an angle to allow the water to flow out.
- The cutlery basket cannot be separated (see Fig. E).

Normal daily load

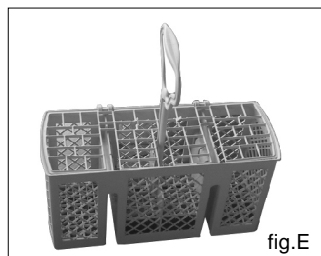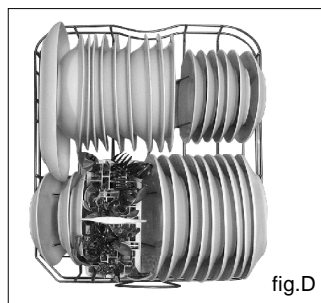

Warning

Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.

How to use the upper rack

The upper rack is designed to hold more delicate and lighter crockery, such as glasses, cups and saucers, plates, small bowls and shallow pans (as long as they are not too dirty).

- Position items so that they do not get moved by the spray of water.
- The upper rack can be adjusted for height by using the knobs located on both sides of the rack itself (see Fig. F).

Adjust the upper basket to the higher level and you have more space to accommodate larger pans and trays in the bottom basket.

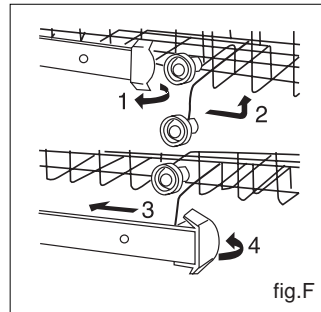


fig.F

Shelf

Lean tall glasses and those with long stems against the shelf and NOT against other items to be washed.

Place glasses, cups and small bowls on the additional cup rack. The additional cup rack can be swivelled in or out as required (see Fig. G).

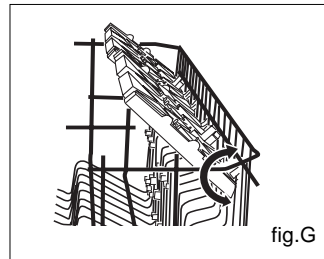


fig.G

Knife rack

The knife rack clips onto the side of the top basket, giving you the freedom to wash large sharp knives separately and out of harm's way (see Fig. H).

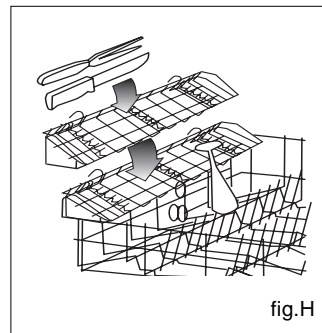







fig.H

Programme overview

en

Cycle	Cycle Selection Information	Description of cycle	Detergent	Rinse aid
 Heavy Duty	Very dirty dishes,pots and pans(not to be used with delicate items).	Pre-wash with hot water. Extended wash at 55°C. Rinse with cold water. Rinse with hot water. Drying.	30g	★
 Normal Wash EN 50242	Normally dirty dishes,pots and pans .Standard daily cycle.	Extended wash at 55°C. Rinse with cold water. Rinse with hot water. Drying.	27g	★(5)
 Rinse	For dishes that need to be rinsed and dried only.	Rinse with cold water. Rinse with hot water. Drying.		★
 Rapid Wash	Economic,fast cycle to be used to on not very dirty dishes right after they are used. No drying cycle.	Short wash at 55°C. Cold rinse.	15g	
 Soak	Pre-wash of dishes, pots and pans while waiting for the load to be complete after the subsequent meal.	Short cold wash to prevent food residue from drying on the dishes .		

Starting a wash cycle...

- Make sure the appliance is plugged in.
- Make sure that the water supply is turned on and the tap fully open.
- Load the dishwasher.
- Pour in the detergent.
- Turn the program dial in a clockwise direction to select the desired program.
- Press the "ON-OFF" button, and the "ON-OFF" light will turn on. At this point, the wash cycle will begin.



Notice:

When washing, the dial will rotate automatically.

At the end of the wash cycle...

When the dial reaches the STOP mark (see figure), the cycle has finished. Turn off the appliance using the ON-OFF button and open the door of the dishwasher. Wait a few minutes before unloading the dishwasher to avoid handling the dishes and utensils while they are still hot and more susceptible to breakage. They will also dry better.

Cancelling or modifying a wash cycle setting...

Press the ON-OFF button and the ON Light will turn off. Rotate the dial clockwise to the desired cycle setting. Then, turn the dishwasher back on using the ON-OFF button.

After every wash

After every wash, set the ON-OFF button "A" to off and leave the door slightly ajar so that moisture and odours are not trapped inside.

Remove the plug

Before cleaning or performing maintenance, always switch off the electricity supply and remove the plug from the socket.

No solvents or Abrasive Cleaning Products

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Use only a cloth and warm soapy water.

To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little white vinegar, or a cleaning product made specifically for dishwashers.

Seals

One of the factors that cause odours to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.

The door should not be left in the open position since this could present a tripping hazard.

Moving the appliance

When you go on holiday

When you go on holiday, it is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly ajar. This will help the seals last longer and prevent odours from forming within the appliance.


Regular inspection and maintenance of your appliance helps to prevent problems from occurring. This saves time and aggravation. You should therefore carefully inspect the inside of your dishwasher from time to time.

Overall condition of appliance

- Check that no grease or scale has accumulated on the inside of the dishwasher.
If you discover any deposits, clean the interior of the dishwasher thoroughly with a dishwasher detergent solution.

Dishwasher salt





Check the LOW SALT indicator "C". Top up with salt, if required.

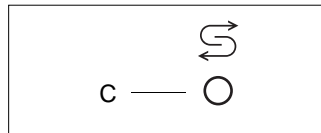

Filters

The filters "7" and "8" prevent larger particles of food in the water from reaching the pump. These particles can occasionally block the filters.

- When the appliance has finished washing, check the filters for particles of food and, if required, clean.
- After removing the coarse micro-filter "7", the filter unit "8" can be removed. Remove any particles of food and rinse the filters under running water.
- Insert the filter unit "8" and tighten the coarse micro-filter.

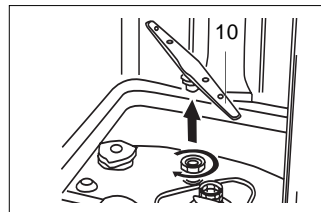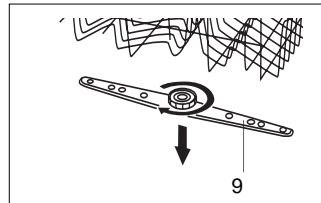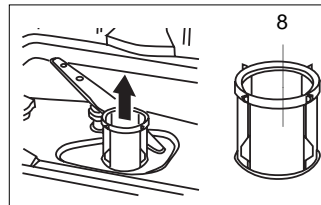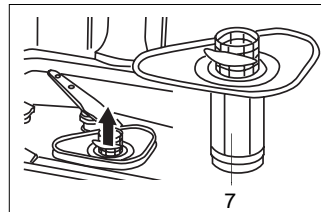

Spray arms

Lime scale and food residue can block the nozzles in the spray arms "9" and the arm mountings "10".

- Inspect the nozzles in the spray arms for holes blocked due to food residue.
- If necessary, pull the lower arm "10" upwards and lift it off.
- Unscrew the upper spray arm "9".
- Clean both spray arms under running water.
- Refit the spray arms. Ensure that the lower arm has locked into place and the upper one is screwed in tight.

Resolving minor problems yourself

Experience has shown that you can resolve most problems that arise during normal use.

Not only does this save costs, but it also means that the appliance is available for use again that much sooner. The following list of common occurrences and their remedies should help you resolve most problems.

Problems...

...when the appliance is switched on

Appliance does not start up

- Fault with fuse in mains electricity supply.
- Plug not inserted in wall socket.
- Appliance door not closed properly.
- Programme button has not been pressed.
- Water tap not turned on.
- Blocked filter in water intake hose.
-The filter is situated in the supply-hose connection.



Caution

Do not forget that repairs should only be carried out by a qualified specialist. Improper repairs can lead to considerable equipment damage as well as danger to the user.

If you carry out all these checks and the appliance still does not function or your appliance has any other error display, power the appliance OFF and wait a few minutes. Then power the dishwasher on and try again. If the dishwasher still does not function and/or the problem persists, contact the nearest authorised service centre and provide them with the following information:

- The nature of the problem.
- The model type number (Mod...) and the serial number (S/N...), which is shown on the plate on the inner part of the door.

Lower spray arm rotates with difficulty.

- Spray arm is blocked by small items or food residue.

Detergent compartment lid cannot be closed

- Detergent compartment has been overfilled.
- Mechanism is clogged with remnants of detergent.

Indicator lamps do not go out after washing has finished

- The ON-OFF button is still set to ON.

Remnants of detergent stuck inside dispenser.

- Compartment was damp when it was filled up with detergent. Compartment must be dry before detergent is added.

Water remains inside appliance after programme has ended.

- Blockage or kink in drainage hose.
- Pump is jammed.
- Filters are blocked.
- The programme is still running. Wait for the programme to end.

...during washing**Unusual amount of foam is created**

- Normal washing up liquid has been poured into the rinse-aid container.
- Remove any spilled rinse aid with a cloth as it could otherwise lead to excessive foaming during the next washing cycle.

Appliance stops suddenly while washing is taking place

- Electricity supply has been cut off to the appliance.
- Water supply has been interrupted.

Knocking sound can be heard while washing is taking place

- A spray arm is knocking against the dishes inside the appliance.

Rattling sound can be heard while washing is taking place

- Crockery has not been stacked properly inside the appliance.

Knocking sound coming from inlet valves

- This is caused by the way the water pipes have been laid and it has no effect upon the way the appliance functions. There is no remedy for this.

...with the dishes, cutlery, etc.**Food residue is stuck to the dishes, cutlery, etc.**

- Dishwasher was not loaded properly. Jets of water could not reach all parts of the dishes, etc.
- Too many items in the rack.
- Items in the rack were touching each other.
- Not enough detergent was added to dispenser.
- Selected wash programme was not intensive enough.
- Rotation of spray arm was obstructed by dishes, etc.
- Nozzles in spray arm are blocked by food residue.
- Filters are blocked.
- Filters have been incorrectly fitted.
- Waste-water pump is jammed.

Plastic items are discoloured

- Not enough detergent was added to dispenser.
- Detergent has insufficient bleaching properties. Use a detergent containing a chemical bleaching agent.

White stains are left on crockery, glasses have a milky appearance

- Not enough detergent was added to dispenser compartment.
- Amount of rinse-aid was set too low.
- No salt has been put in appliance (if in a hard water area).
- Water softener was set too low.
- Salt container lid is not screwed tight.
- If you used a phosphate-free detergent, try a detergent containing phosphates and compare results.

Dishes, cutlery, etc. have not been dried

- Selected programme did not include drying function.
- Amount of rinse-aid was set too low.
- Items were removed from dishwasher too soon.

Glasses have a dull appearance

- Amount of rinse-aid was set too low.

Tea stains or traces of lipstick have not been completely removed.

- Detergent does not have a sufficient bleaching effect.
- Washing temperature was set too low.

Traces of rust on cutlery

- Cutlery is not sufficiently rustproof.
- Salt content in wash water is too high.
 - Salt container lid is not screwed tight.
 - Too much salt was spilt while filling container.

Glasses become clouded and discoloured; coating cannot be wiped off

- Unsuitable detergent was used.
- Glasses are not dishwasher-proof.

Smears left behind on glasses and cutlery; glasses have acquired a metallic appearance

- Amount of rinse-aid set too high.

Technical data

en

Width	45 cm
Depth	60 cm
Height	85 cm
Capacity	9 standard place settings
Mains water pressure	0.03-1.0MPa
Power voltage	220-240V~ 50Hz
Maximum current intensity	10A
Total absorbed power	1950W

Important information

Notes on waste disposal

Old appliances still have some residual value. An environment-friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

When an appliance has reached the end of its working life, unplug it from the mains. Cut through the mains cable and dispose of it together with the plug.

Destroy the door locking mechanism. This will ensure that children cannot be locked inside and are not exposed to the risk of suffocation.

Your new appliance was protected by suitable packaging. Please dispose of all packaging materials properly and ensure that they are kept out of children's reach.

Do not allow children to play with any parts of the packaging. There is a risk of suffocation from the cardboard boxes and the plastic wrapping.

Up-to-date information concerning options for disposal can be obtained from your retailer or local council.

General information

- Measures must be taken to ensure that built-under and built-in units that are later used as free-standing appliances cannot topple over. This can be achieved by bolting the dishwasher to the wall or fitting it under a continuous work surface which is screwed to the adjacent cupboards.

Information on conformity tests implemented in compliance with EN 50242

Appliance loaded in accordance with standard specifications.



Example of loaded dishwasher: See Fig. 1 and 2

Capacity: 9 place settings

Programme: Normal Wash


Rinse-aid setting: 5

Detergent: 27g

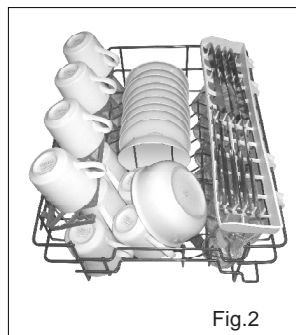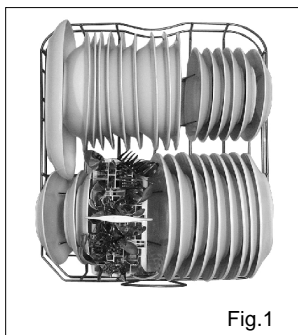

Height-adjustable top-basket must be inserted in the uppermost position.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalidated if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.
- In the event of a problem with the product within the guarantee period call the customer helpline on 0845 6004632

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW