

# ALURA

**TDC 4 LED**  
**4-head DMX LED moonflower light effect**



**User manual**

# Safety instructions



## WARNING!



**Always keep this device away from moisture and rain! Hazardous electrical shocks may occur!**



## WARNING!



**Only connect this device to a matching power outlet. This device is intended to work on a specified AC currency. Connecting this device to power outlets with other voltages may result in permanent damage and possible hazardous situations, such as fire or electrical shocks!**



## WARNING!



**Be careful with every operation of this device. Touching live wires inside and outside the unit may cause hazardous electrical shocks!**

This unit must be operated by, or under the supervision of an adult. This device is not suitable for children.

Every person involved with the installation, operation and maintenance of this device has to:

- Be qualified
  - Follow the instructions of this manual
  - Make sure there is no damage caused by transport. If the device seems damaged from the outside, do not use it and contact your dealer for more information and consultation.
  - To make sure the device maintains in perfect condition and for safe operation, it is necessary for the user to follow the instructions and warning notes of this user manual.
  - Damage caused by improper use or modifications to the device are not covered by warranty.
  - This device does not have any user-serviceable parts inside. Servicing of this device needs to be done by qualified technicians.
- Important notes regarding safety and health:**
- Never let the power cord come in contact with other cables. Handle the power cord and all connectors with the mains with caution.
  - Never remove any warning or informative labels from the unit
  - The ground contact always needs to be connected. Do not cover or remove the ground contact.
  - Never leave cables lying around
  - Do not open the device and do not modify any hard- or software of this unit.
  - Do not insert this object into air vents.
  - Do not connect this device to a dimmerpack.
  - Do not switch the system on and off frequently as this will reduce the lifespan of the device.
  - Do not drive the inputs of the fixture with a signal larger than required to work at full performance.
  - Only use this device indoor, avoid contact with water, moist or other liquids. Do not place items filled with liquids on top of the unit.
  - Avoid nearby flames or heat sources, do not place this device near flammable liquids, gas or flammable items.
  - Always disconnect the device when it is not in use for a longer period or time, when servicing is needed or when the device needs cleaning.

- Only handle the power cord by its connectors. Never pull the cable to remove a connector from its socket, as this could lead to damage and electrical shocks.
- Always operate this device with a stable AC current.
- Always operate this device with the AC ground wire connected to the electrical system's ground.
- Never use other types of cables than specified in the manual, do not use defective or bad functioning cables. Contact your dealer when the included or required cables do not work properly with this device.
- When the device has been exposed to large temperature differences (for example, transport from outdoor to indoor), do not connect the device immediately. Do not activate the unit until it has reached room temperature, as moist might build up inside the unit, which may cause shortcuts and/or electrical shocks.

#### **Guidelines and types of use:**

- This device is intended to be used by professionals on stage, in theatres, clubs and other equal venues.
- This device is not suitable for children and always needs to be operated by an adult.
- Only use the device when the environment is suitable and will not cause any damage. Do not use the product in moist or dusty environments, or where long-term damage may occur such as:
  - indoor swimming pools where chlorine is used.
  - Beaches, where sand and salt are present.
  - Outdoor, without roof protection
  - Indoor areas where intense heat sources are present or where the temperature exceeds levels which are comfortable for humans.
- Only use the included power adapter and only connect the device to a suitable power outlet with the correct output voltage. Connecting the device to a power outlet with the wrong type of voltage or using the product with a wrong type of power supply may cause permanent damage to the device.
- Avoid shocks and collision during use and transport. Do not transport the device while in use. Avoid brute force during the installation and operation of this device.
- Familiarise yourself with the functions of the device before use. Do not allow operation of the device by unskilled or unqualified people.
- Use of the device in other ways than described in this user manual may cause damage and injury. Ayra does not take responsibility for any damage or injury caused by improper use.

#### **Storage and transport:**

- This device is intended for mobile use. When transported, use the original packaging of the product, or a fitting flightcase, preferably filled with foam.
- This device is not intended for permanent use. Operation breaks will ensure that the lifespan of the device remains unchanged.
- If the device is not used for a longer period of time, disconnect it from its power source and store it in its original packaging, or in a fitting flightcase.
- Store the device indoor, dry and do not expose the device to extreme temperature differences.

#### **Housing:**

- Inspect the housing of the device frequently. Severe dents, cracks and missing screws should be avoided at all costs. Do not use the device when the housing is not in optimal condition. Contact your dealer or a skilled technician when in doubt about the state of the device
- Check the fixture and screws for corrosion. Corrosion should not be present on the fixture. Contact your dealer or a skilled technician when corrosion is found on the fixture
- Every power or signal chassis/connector should be mounted tightly. Do not use the device when connectors are loose.
- Do not use the power cord when the cores are visible. Contact your dealer for a replacement if needed.
- Avoid the buildup of dust and dirt. Clean the exterior of the fixture every month with a dry or damp cloth. When using the device intensively, the cleaning frequency needs to be increased.

#### **Fuses:**

- The main fuse of this device is to be found on the rear of the device. In most cases, directly next to the power inlet.
- Only replace a fuse for a new one with the same type and rating! Do not use a fuse with a higher or lower rating.
- Do not bridge the fuse with electrical wires, aluminum foil, as the fuse is used for protection against electrical shocks and short circuit.
- Always mount the fuse cover back to the fuse compartment.

# Box contents

## **Box contents**

1x TDC 4 LED fixture  
1x power cable

## **Unit and accessory inspection**

- Always use the supplied power cable to connect the unit to a power supply. If the cable appears broken or has visible damage, do not use it.
- If the unit is not going to be used for a longer period of time, disconnect it from the power supply and store it in a dust-free environment.
- Always check the unit for possible damage before use. If you suspect that something is wrong with the unit, do not connect it to a power source! When you suspect that your unit is broken or damaged, contact your local dealer or a certified technician to inspect the unit.

AURA

## Device overview



1. Beam output
2. Adjustable bracket
3. IEC Power inlet (with fuse)
4. IEC Power outlet
5. Control panel display with MENU, UP and DOWN buttons
6. Built-in microphone for sound active mode
7. DMX input (3P XLR)
8. DMX output (3P XLR)
9. Safety eye

# Setting up the unit

To activate the unit, connect the included power supply with the unit and a suitable 230V, 50 Hz power outlet. The unit will activate directly after it is plugged in to a wall outlet or other power source.

The status of the fixture is shown on the display. Certain values determine the current status and will change when you push buttons on the control panel. The buttons each have their own function, for easy navigation in the control panel. When connecting the unit for the first time, the display usually shows value "A001", which is starting address 1 for DMX operation mode.

Press the 'MENU' button to switch modes, so you can easily select the built-in master/slave, music controlled or DMX mode. Press 'Enter' to confirm a setting.

display	Mode	Function
<b>ADDR</b>	DMX address setting	A001-A512
<b>SLND</b>	Slave mode	Master, SL1, SL2
<b>SHND</b>	Auto mode	Auto_speed 1-9 – Show 0-12
<b>SOUN</b>	Sound mode	Sound on/off
<b>SENE</b>	Sound sense	Sound sense 0-100
<b>BLND</b>	Black out mode	LED mode, YES – NO
<b>DISP</b>	Display inversion	Display Inversion, Idsp-dspl
<b>TEST</b>	Test mode	Self test
<b>Hour</b>	Using time of light	Fixture hours, 0 ~ 9999
<b>UERS</b>	version	Software version, Ver XXX

**ADDR:** DMX address setting, used to determine the DMX starting channel. From this channel on, the fixture will respond to values, corresponding with the amount of channels that the fixture is occupying. (For example, when you set the starting address to value 003, the fixture will respond to channels 3, 4, 5 etc..)

**SLND:** When using the master/slave function, you need to connect 2 or more fixtures with XLR-XLR cable. The first fixture in line needs to be set as master, the others as Slave 1 or 2 (synchronized or mirrored performance). This way, the slaves will mimic the behavior of the master fixture for wonderful synchronized lighting shows.

**SHND:** Auto mode, with built-in programs and adjustable speed. Program setting 0-12 + Speed setting 0-9.

**SOUN:** Activate or disable the built-in sound controlled mode. This way, the fixture will respond to the beat of the music.

**SENE:** The sensitivity of the built-in microphone is adjustable, to optimize the built-in sound controlled mode. For example, when your music source (speakers) are placed far away, you might want to increase the sensitivity to make sure that the fixture responds to the sound accurately.

**BLND:** Black out mode (S.L.S.) The Signal Loss Setting provides the right action when the fixture suddenly loses DMX signal. By activating the function, the fixture goes in blackout mode. By deactivating the mode, the fixture goes in sound controlled mode.

**DISP:** Display invert version – When using the fixture in a hanging setup, it is possible to flip the display, so the characters will be shown upside down. This makes reading the several statuses much easier.

**TEST:** Self test mode, to control all segments and LEDs

**Hour:** The fixture shows how much hours it has been active. This is very practical for rental companies which need to perform service intervals on all fixtures after several hours of performing, to maintain optimal shape.

**UERS:** Displays the software version which is installed on the main PCB.

The TDC 4 LED is equipped with several working modes, each with its own advantages. For simple events there are stand-alone modes, for advanced situations there are options to create synchronized lightshows, or

controlled with a DMX-512 controller. A short description for each mode can be found below:

**Music controlled mode:**

The music controlled mode is used to play a series of programs on the beat of the music. For optimal results, place the TDC 4 LED fixture close to a speaker or subwoofer. Too much distance or a lack of bass will cause the unit to freeze as it will not detect a music source.

**Auto mode:**

The unit will play one of the selected auto programs continuously on a selectable speed, until you desire to change the program or user mode.

**DMX control mode:**

This fixture can be controlled using a DMX-controller and standard XLR male to XLR female cable. When doing so, make sure your DMX-controller is capable of controlling your fixture. When in doubt, contact your local dealer for advice.

Set the correct address on the digital display, you are able to choose a value between 001 and 512.

**DMX channel control:**

4-ch Mode	Function	Value	
1	Function	000-009 010-085 086-160 161-239 250-255	OFF Synchronous show 2-light show 4-light show Sound Active
2	Chase	000-021 022-042 043-063 064-085 086-106 107-127 128-149 150-170 171-191 192-213 214-234 235-255	Chase 1 Chase 2 Chase 3 Chase 4 Chase 5 Chase 6 Chase 7 Chase 8 Chase 9 Chase 10 Chase 11 Chase 12
3	Speed	000-255	Variety slow to fast
4	Strobe	000-009 010-255	ON Strobe Strobing slow to fast



# Technical specifications

- LED light effect with 4 lenses
- Projects LED light-patterns on floors, walls and ceilings
- Light source: 256 LEDs, spread over 4 clusters (64 for each lens)
- 4 DMX-channels
- Auto mode with 12 internal programs and 9 speed settings
- Music controlled mode with internal microphone
- Working modes: music controlled, DMX, automatic, test, master/slave
- LCD-display with menu-buttons
- Included power cable
- Working mode, program selection, speed and strobe function with DMX
- Power consumption: 30 Watt
- Power supply: 230V AC, 50 Hz
- Measurements: 1000 x 230 x 180 mm (with bracket)
- Weight: 6.5 kg

## Connectors:

- DMX: 3p XLR male and female
- Power: IEC power input, IEC Power Link output

## Included accessories:

- Power cable with Schuko & IEC connectors



## Connectors and wiring schematics:

### DMX-connections:

#### DMX-output

XLR mounting-socket:



- 1: Ground
- 2: Signal (-)
- 3: Signal (+)

#### DMX-input

XLR mounting-plug:



- 1: Ground
- 2: Signal (-)
- 3: Signal (+)

### Electrical wiring:

Cable	Pin	International
Brown	Live	L
Blue	Neutral	N
Yellow/Green	Earth	