 


User Manual

MR. COFFEE®

Coffeemaker
Models UNT83,
URT83. URTX83.
and URTX87D

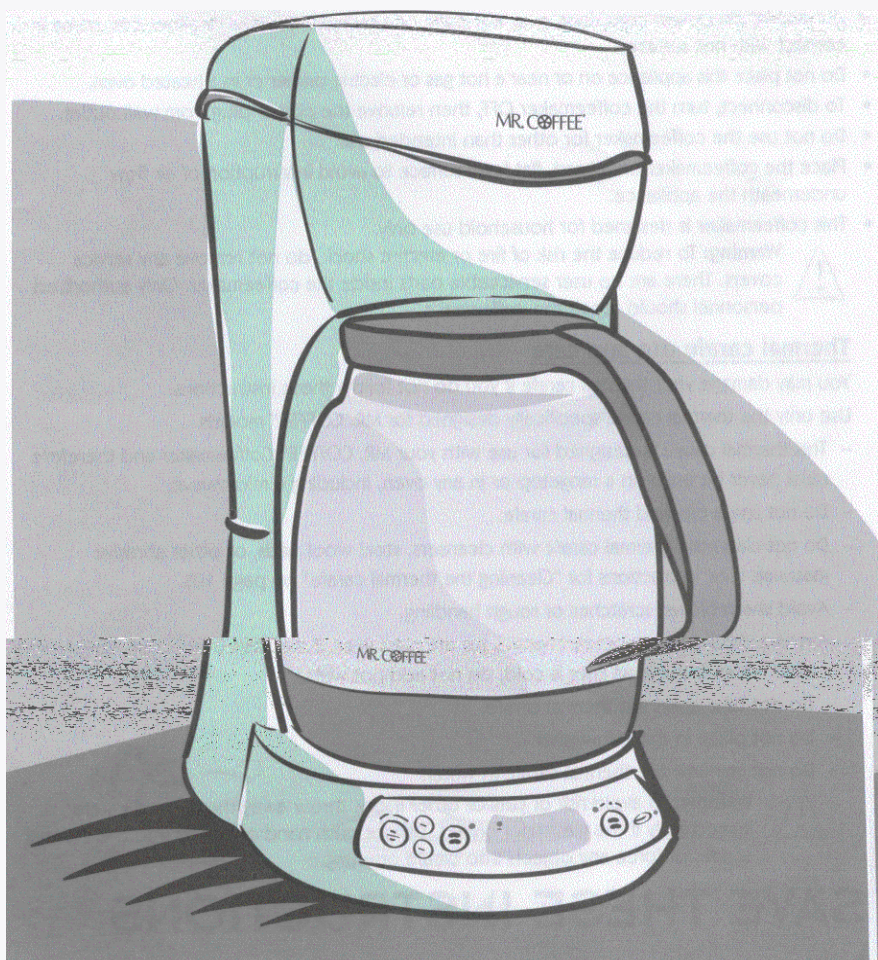

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- Read all instructions before using the coffeemaker
- Do not touch the coffeemaker's hot surfaces.
- To protect against electric shock, do not immerse the power cord, power plug, or coffeemaker in water or other liquid.
- Close adult supervision is necessary when this appliance is used by or near children
- Turn the coffeemaker off and unplug the power cord from the power source when the coffeemaker or clock are not in use and before cleaning. Allow the coffeemaker parts to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or operate it after the appliance malfunctions or has been damaged in any manner. Return this appliance only to the nearest authorized service center for examination, repair or adjustment.
- The use of accessory attachments other than MR. COFFEE® products may cause hazards or injuries.
- Do not use outdoors.
- Do not let the power cord hang over the edge of a table or counter or allow it to come in contact with hot surfaces.
- Do not place this appliance on or near a hot gas or electric burner or in a heated oven.
- To disconnect, turn the coffeemaker OFF, then remove the power plug from wall outlet.
- Do not use the coffeemaker for other than intended use.
- Place the coffeemaker on a hard, flat level surface to avoid interruption of air flow underneath the appliance.
- This coffeemaker is designed for household use only.



Warning: To reduce the risk of fire or electric shock, do not remove any service covers. There are no user serviceable parts inside the coffeemaker. Only authorized personnel should repair the coffeemaker.

Thermal carafe use and care

You may damage your thermal carafe if you do not follow these instructions:

Use only the thermal carafe specifically designed for MR. COFFEE® model.

- This thermal carafe is designed for use with your MR. COFFEE® Coffeemaker and therefore must never be used on a rangetop or in any oven, including a microwave.
- Do not use a cracked thermal carafe.
- Do not clean the thermal carafe with cleansers, steel wool pads, or other abrasive materials (see instructions for "Cleaning the thermal carafe" on page 10).
- Avoid sharp blows, scratches or rough handling.
- Avoid sudden temperature changes for the glass liner. If the glass liner is hot, do not add cold water. If the glass liner is cold, do not add hot water.
- Do not take apart the thermal carafe.
- Do not place in the dishwasher.
- Do not immerse the thermal carafe in water.



Warning: To avoid risk of cuts or other injury, throw away the thermal carafe immediately if the glass liner breaks. Do not push hand or fingers into the thermal carafe, or force any objects into carafe opening.


SAVE THESE INSTRUCTIONS

Special cord set instructions

1. A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
2. An extension cord may be purchased and used if care exercised in its use.
3. If an extension cord is used, the marked electrical rating of the extension cord must be at least 10 amps and 120 volts. The resulting extended cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

***This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.**



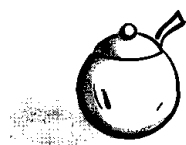

Setting up your coffeemaker

Congratulations on your new MR. **COFFEE®** thermal carafe coffeemaker purchase! Please read these Instructions carefully before using your new coffeemaker. Proper use, care and maintenance will ensure trouble-free operation and the long life of this appliance. **Save** these instructions for cleaning and, if necessary, replacement part information.

Coffeemaker features

Your new MR. **COFFEE®** Coffeemaker has the following features:


- **8-cup brewing capacity**
- **Thermal carafe** – Keeps your coffee hot and fresh up to 4 hours
- **Pause 'N Serve** – Can't wait for the coffee to finish brewing? The Pause 'N Serve feature allows you up to 30 seconds to pour a cup of coffee while the coffee is still brewing.
- **Removable water reservoir** (models URT83, URTX83 and URTX87D only) – Conveniently detaches for easy filling and cleaning. The reservoir is dishwasher safe.
- **Water level indicator** – The water level indicator on the water reservoir allows you to quickly and accurately see exactly how much water you have in the reservoir.
- **Removable filter insert** – The removable filter insert allows you to **easily lift the** filter Insert from the brew basket **to add** or remove a filter and ground coffee.
- **Cord storage** – Allows you to store extra cord length for a tidy countertop.
- **Comfort fit carafe handle** – Provides comfort, control and confidence when pouring.
- **Drip-free thermal carafe** – Designed to eliminate drips during and after pouring.

Models URT83 and URT83


- **Lighted ON/OFF indicator** – This **safety** feature **reminds you** that your coffeemaker is on.
- **Automatic shut off** – The unit shut off automatically after the brew cycle.

Models URTX83 and URTX87D

- **Lighted ON/OFF indicator** – This safety feature reminds you that your coffeemaker is on.
- **Programmable controls**
 - **Clock**: The LED clock serves as a handy kitchen clock, as well as allows you to set the timer.
 - **Timer**: Would you like to wake up to a fresh pot of coffee? The timer allows you to preset when you would like the coffeemaker to brew your coffee automatically, up to 24 hours in advance.
 - **Auto shut off**: The unit shuts off automatically after the brew cycle.
 - **Clean cycle**: The indicator light will blink when your coffeemaker needs to be cleaned.
- **Audible ready signals** – Tell you when the brew cycle and the clean cycle are complete.
- **Wipe clean membrane control panel**

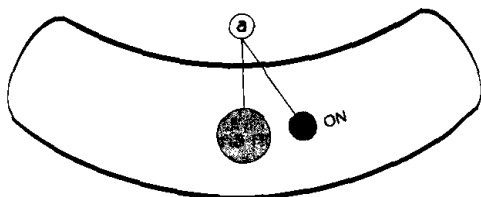

① models UN733 and URT83

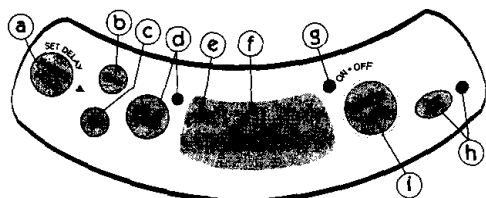 

② models URTX83 and URTX87D



Models UNT83 and URT83

1. Control panel
 - a. ON switch and indicator

Models URTX83 and URTX87D

2. Control panel
 - a. PRESS/HOLD button
 - b. Hour button
 - c. Min. (minute) button
 - d. DELAY BREW button and indicator
 - e. PM indicator
 - f. Clock display
 - g. ON-OFF Indicator
 - h. Clean Cycle button and indicator
 - i. BREW NOW button

3. Brew basket lid
4. Hinged water reservoir lid
5. Water window
6. Removable water reservoir (models URTB3, URTX83 and URTX87D only)
7. Power cord
8. MR. COFFEE® brand 8-1 2 CLIP basket style coffee filters (not included)
9. MR. COFFEE® gold-tone permanent filter (not included)
10. Thermal carafe
11. Brew basket
12. Removable filter

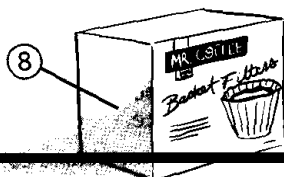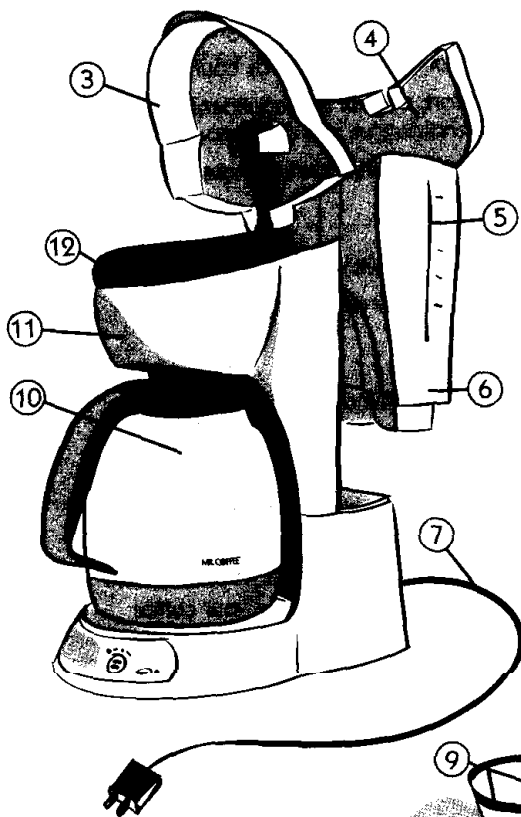


Adjusting the power cord length

You can customize the length of the power cord up to 2 1/2 feet so that it is the exact length you desire.


To increase the length of the power cord:

Grasp the power cord (not the power plug) and gently pull it away from the coffeemaker.

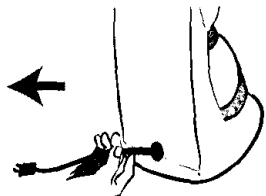

To decrease the length of the power cord:


Grasp the power cord a few inches away from where it attaches to the coffeemaker. Slowly feed it into the coffeemaker.

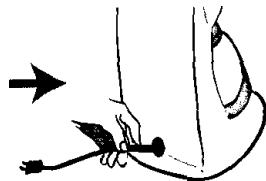

Setting the clock


(models URTX83 and URTX87D only)

The clock flashes on the control panel to indicate that it has not been set.


 You must set **the** clock if you want to use **the** timer feature.

To set the clock:

- 1.) Press and hold the HOUR button until the clock displays the correct hour. See fig. A.
The PM indicator will light to indicate a PM time; if the PM indicator is not lit the time is AM.

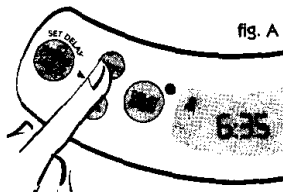

 - 2.) Press and hold the MIN. button until the clock displays the correct minute. See fig 6.
The clock is now set.

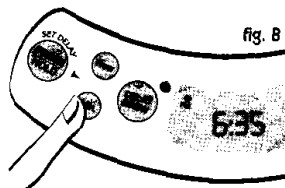

Brewing coffee

Cleaning the coffeemaker before first use

Follow the steps under "Adding water and ground coffee" and "Brewing coffee now," (pages 4-5) but do not add coffee grounds.

Selecting and measuring ground coffee


For best results, use coffee ground for use with automatic drip coffee makers. The amounts shown below are suggested amounts.


To brew...	Use this amount of ground coffee
8 cups	7 tablespoons or 3+1/2 scoops
6 cups	6 tablespoons or 3 scoops
4 cups	5 tablespoons or 2+1/2 scoops
2 cups	3 tablespoons or 1 +1/2 scoops

- two level tablespoons = one level scoop
- one cup = five ounces brewed coffee




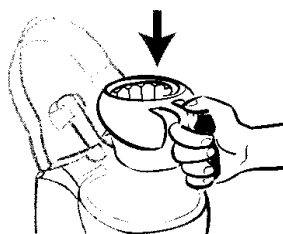
Adding water and ground coffee

- 1.) Open the brew basket lid and lift out the removable filter insert.
 Make sure to remove **the** cardboard insert before **first** time use.
- 2.) Place a MR. **COFFEE**® B-I 2 cup paper filter or a MR. **COFFEE**® permanent gold-tone filter in the removable filter insert.
- 3.) Add the desired amount of ground coffee to the filter. Gently shake the filter insert to level the ground coffee.

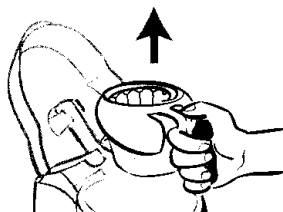

- 4.) Return the filter insert to the brew basket. Be certain that the filter is centered in the filter insert. Close the lid to the brew basket.


 Do not brew coffee while **the brew basket lid is open.**




- 5.) For model UNT83: Open the reservoir lid and fill the reservoir with cold water for the desired cup level on the water window (up to 8 cups).

For models URT83, URTX83 and URTX87D:


Remove the water reservoir by grasping the handle in the back of the reservoir, and pulling up. Fill it with the desired amount of cold water. Replace the reservoir on the coffeemaker, making sure that it is firmly attached to the coffeemaker body.


 **Make sure the reservoir is squarely centered on the coffeemaker or the water may overflow. An overflow may cause personal injury or damage to property.**

Do not remove the water reservoir at any time during the brewing cycle.

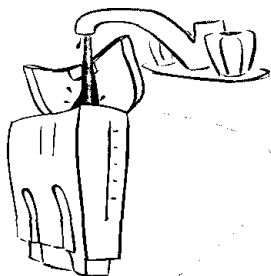

- 6.) Place the empty thermal carafe on the base.

 To achieve the best performance, rinse the thermal carafe with warm water. This will improve the heat retaining capabilities of the thermal carafe. While brewing, the Brew-Thru lid must be on the thermal carafe and the POUR arrow of the lid must be aligned with the spout. Otherwise, the carafe may overflow.

 **Make sure the thermal carafe is squarely centered on the base or the water and grounds will overflow from the brew basket. An overflow may cause personal injury or damage to property.**

To reduce the risk of damaging the thermal carafe and/or the risk of personal injury, do not add cold water to the thermal carafe if the thermal carafe is already hot. Allow the thermal carafe to cool before using.


Brewing coffee now

For models UNT83 and URT83:

Press the ON button.

The ON indicator will illuminate, indicating that the coffeemaker is on and the brew cycle will begin. When the coffee stops flowing, the brew cycle is complete.

The coffeemaker will turn off automatically. The indicator light will go out to let you know the brew cycle is complete.

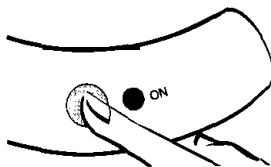


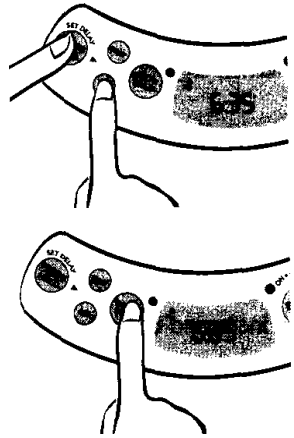
- 3.) While still pressing and holding the PRESS/HOLD button, press and hold the Min. button until the clock displays the desired minute setting.

- 4.) Release the PRESS/HOLD button.

- 5.) Press the DELAY BREW button.

The Delay Brew indicator will light. The delay timer is set and the coffeemaker will begin brewing the coffee at the time you selected.

 If you want your coffee to brew at the same time the following day, simply add the desired amount of ground coffee, fill the water reservoir and press the DELAY BREW button.



Cleaning the coffeemaker between brew cycles

To clean up the used coffee grounds and filter:

- 1.) Discard the grounds and paper filter and rinse the filter Insert. You may also wash the filter insert in the dishwasher (top rack dishwasher safe only).
- 2.) Use warm water to clean inside of thermal carafe and air dry. The thermal carafe is NOT dishwasher safe, except for the carafe lid.



Do not rapidly fill the glass liner by filling with water that is too hot or too cold. Do not immerse in water. Do not remove glass liner for cleaning or any purpose.

Brewed coffee and grounds are both very hot. Handle them with care to avoid scalding injuries.

Unplug the coffeemaker's power cord if you are not using the coffeemaker or clock.

Maintaining your coffeemaker

Maintaining your coffeemaker and its parts will help extend the life of the appliance.

Cleaning the coffeemaker

Your coffeemaker must be cleaned when you notice any of the follow conditions:

- cleaning cycle indicator light is blinking during normal brew mode (models URTX83 and URTX87D)
- excessive steaming
- increased brew cycle times
- the pumping action stops before all of the water has been pumped from the water reservoir

These conditions are caused by lime or other mineral deposits.

How frequently you clean your coffeemaker depends upon the hardness of your tap water. The following table gives suggested cleaning intervals.

Type of water	Cleaning frequency
Soft water	Every 80 brew cycles
Hard water	Every 40 brew cycles

To clean mineral deposits from your coffeemaker

- 1.) Pour four cups of dissolved Mr. **Coffee**® Cleaner or undiluted white household vinegar into the water reservoir.
- 2.) Place a paper filter into the removable filter insert and close the brew basket lid.
- 3.) Place the empty thermal carafe on the base.





Maker sure to center the thermal carafe squarely on the base to avoid the possibility of overflow.

- 4.) Start the cleaning cycle for models:

- UNT83 and URT83
 - a. Press the ON button.

- b. As soon as the brew cycle is complete and the coffeemaker turns off, pour dissolved Mr. **Coffee**® Cleaner or vinegar back into the reservoir and allow to stand for 30 minutes while the unit is "off."

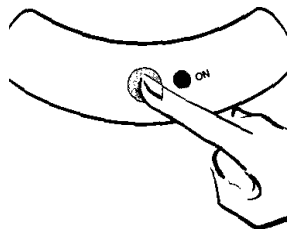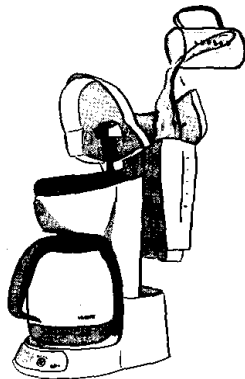

- c. After 30 minutes, place the empty carafe back on the base. Turn the coffeemaker back on to let all of the dissolved Mr. **Coffee**® Cleaner or vinegar flow through.
- d. When the cleaning cycle is complete, discard both the dissolved Mr. **Coffee**® Cleaner or vinegar and the paper filter.

For models:

- URTX83 and URTX87D

- a. Press the Clean Cycle button.


The Clean Cycle indicator will illuminate, in addition to the ON/OFF indicator.



- b. The dissolved Mr. **Coffee**® Cleaner or vinegar will flow through the machine at a reduced rate for thorough cleaning. When the clean cycle is complete you will hear 1 beep tone.

- c. Discard the dissolved Mr. **Coffee**® Cleaner or vinegar and the paper filter.

- 5.) Fill the water reservoir with cold water.
On models URT83, URTX83 and URTX87D replace the removable reservoir on the coffeemaker. Make sure that the reservoir is firmly attached to the coffeemaker body.

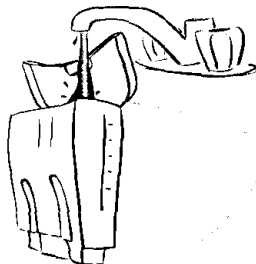


- 6.) Place the thermal carafe on the base and turn the coffeemaker on and allow it to complete a brew cycle.
- 7.) Discard the water in the thermal carafe and turn the coffeemaker off. Repeat steps 5 through 7 to flush all traces of dissolved Mr. **Coffee**® Cleaner or vinegar from the coffeemaker.

Cleaning the thermal carafe

If coffee stains appear on the glass liner, fill the carafe three quarters full of hot water and add a packet of Mr. **Coffee**® Cleaner. Let the water stand for 10 - 15 minutes and then rinse thoroughly.



Do not rapidly fill the glass liner with water that is too hot or too cold. Do not immerse in water. Do not remove glass liner for cleaning or any

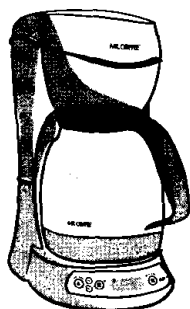

Service and maintenance

Replacement parts

- FilterS

For better tasting coffee, we recommend that you use a MR. COFFEE® 8-12 cup paper filter, or a Mr. Coffee® permanent gold-tone filter. These filters are available at most grocery stores.

- Thermal carafe

You can usually purchase a replacement thermal carafe from the store where you purchased your coffeemaker. If you are unable to find a replacement, please call 1-800 MR COFFEE (1-800-672-6333) in the U.S. and Canada for information on where you can find a store that carries replacement thermal carafes.

Repairs

If your coffeemaker requires service, do not return it to the store where you purchased it. All repairs must be made by Sunbeam or by an authorized Sunbeam Service Center. If you live in the U.S. or Canada, please call us at the following toll-free telephone number to find the location of the nearest authorized service center:

1-800 MR COFFEE (1.800-672-6333)

Monday through Friday, 9 a.m. - 6 p.m., Saturday 9 a.m. - 3 p.m. EST

To assist us in serving you, please have the model number (UNT83, URT83, URTX83 or URTX87D) and date of purchase when you call.

Questions, comments and suggestions

We welcome your thoughts; please include your complete name, address and telephone number when you e-mail or write us at:

E-mail: consumeraffairs@consumer.Sunbeam.com

Mail:
Consumer Service Department
MR. COFFEE®
A Product of Sunbeam Products, Inc.
P.O. Box 948389
Maitland, FL 32794-8389



Do not send product to the above address

NOTES/NOTAS

One-year limited warranty

Exclusive of thermal carafe

Sunbeam Products, Inc. ("Sunbeam") warrants that for a period of one year from the date of purchase, the product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component, if the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or in any way change the terms or conditions of this warranty.

This warranty does not cover normal wear or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tomatoes.

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

How to obtain Warranty Service

Take the product to an authorized Sunbeam service center. You may obtain a list of service centers and other repair/replacement instructions by calling (1-800-672-6333) or send an e-mail to ConsumerAffairs@consumer.sunbeam.com, or write to Sunbeam Consumer Service, PO Box 94838, Maitland, FL 32794-8389. Please include name, address, telephone number, product model number and description of the problem.

DO NOT SEND PRODUCT TO THE ABOVE ADDRESS
DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE

Printed in China.

©2000 Sunbeam Products, Inc. All rights reserved.

Mr. Coffee® is a registered trademark of Sunbeam Products, Inc.