CG100R / CG100RV2

ZIGBEE REMOTE

USER MANUAL

VERSION 1.0 18 JULY, 2012 (PRELIMINARY)



CG100R ZigBee Remote



CG100RV2 ZigBee Remote



Disclaimers and Copyright

Nothing contained in this publication is to be construed as granting any right, by implication or otherwise, for the manufacture, sale, or use in connection with any method, apparatus, or product covered by letters patent, or as insuring anyone against liability for infringement of letters patent.

Efforts have been made to ensure the accuracy and reliability of the data contained in this publication; however, Citygrow Energy Systems Limited. makes no representation, warranty, or guarantee in connection with this publication and hereby expressly disclaims any liability or responsibility for loss or damage resulting from its use or from the use of any product or methodology described herein; for any violation of any federal, state, or municipal regulation with which this publication may conflict; or for the infringement of any patent from the use of this publication. Nothing contained in this publication should be viewed as an endorsement by Citygrow Energy Systems Limited. of any particular manufacturer's products.

Copyright © 2012 Citygrow Energy Systems Limited, All Rights Reserved



Table of Contents

1.	Introduction				
2.	Gett	ing S	Started	2	
3.	Bind	Bindings			
3	.1.	Gro	up Configuration	4	
	3.1.	1.	Add Device into Group	4	
	3.1.2.		Edit Device Information in Group	6	
	3.1.3.		Show Device Address in Group	7	
	3.1.4.		Delete Device in Group	8	
	3.1.	5.	Edit Group Name	9	
	3.1.	6.	Delete All Groups	11	
3	3.2. Mod		d Configuration	12	
	3.2.	1.	Add Device into Mood	12	
	3.2.	2.	Edit Device Information in Mood	14	
	3.2.3.		Show Device Address in Mood	15	
	3.2.4.		Delete Device in Mood	16	
	3.2.5.		Delete All Devices in Mood	17	
	3.2.	6.	Edit Mood Name	18	
	3.2.	7.	Copy Moods	20	
	3.2.8.		Delete All Moods	21	
4.	Device Control				
4	.1.	Gro	up Control	22	
4	.2.	Moo	od Control	23	
	Sett	ings.		25	
	.1.	Moo	od Display	25	
5	.2.	Cop	y Setting	26	
	.3.	Rese	et	28	
	.4.	Men	nory Info	29	
5	.5.	Abo	ut	31	
6.	App	endix	<	32	
6	.1.	Spe	cifications	32	



1. Introduction

Thank you for choosing Citygrow's product. This intelligent automation system is a wireless system using a new, green technology called Zigbee. Through Zigbee, you are able to use one remote control to control Citygrow's devices.

This system brings you to a new generation. It enhances your quality of life, and at the same time helps you to have a green living by saving energy.




CG100R ZigBee Remote



CG100RV2 ZigBee Remote



2. Getting Started

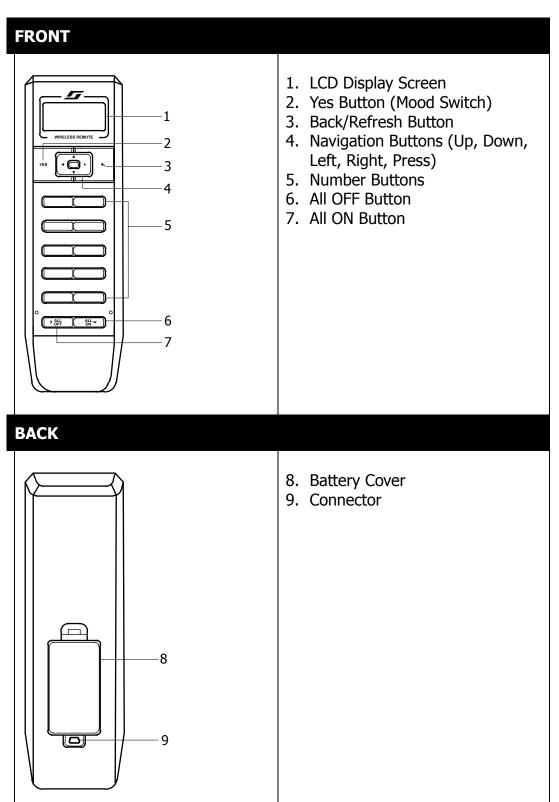



LCD DISPLAY ICON Indication Icon Display Z **Processing** Processing request, busy Key Up Enable/ Operation of navigation button up and Key Down Enable down is enabled 77 **Battery Level** Battery full Battery half **Battery Low** Need to replace battery immediately




3.Bindings

3.1. Group Configuration

3.1.1. Add Device into Group

NOTE: A total of **8** devices in total can be added to 1 Group.

NOTE: Curtain devices (CG100S2-CCP, CG110S2-CCP, CG400S2-CCP) **CANNOT** be added in the same group as any other devices.

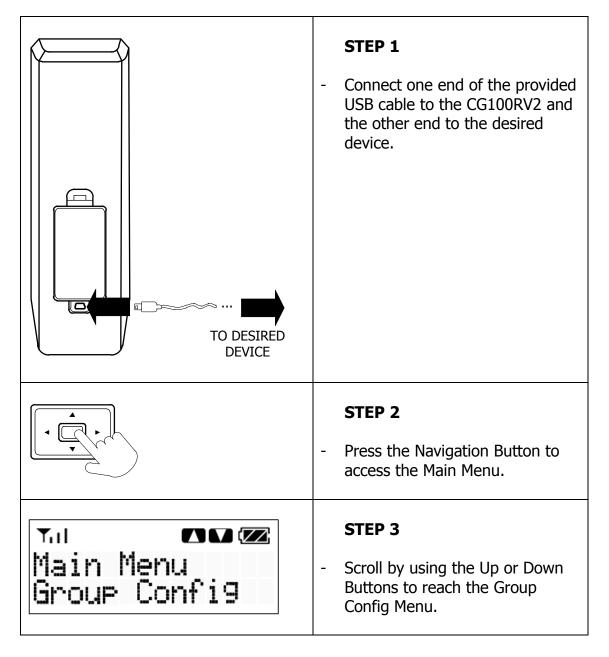





	- Press the Navigation Button.
Select Group 1.(Empty)	 STEP 4 If a Group does not have any Devices, it will show "Empty". Press the Navigation Button to edit Group 1.
Group 1 Add Device	 STEP 5 All Devices in the Group are displayed. If there are no devices it will display a "No Device" message. Scroll to reach "Add Device". Press the Navigation Button yet.
Ynı 🏿 🚾 Press Desired Device	 STEP 6 Refer to the desired device's User Manual (Bindings section) for instructions on how to confirm the binding.
Add Device Success	STEP 7The device has now been successfully added to the Group.




3.1.2. Edit Device Information in Group

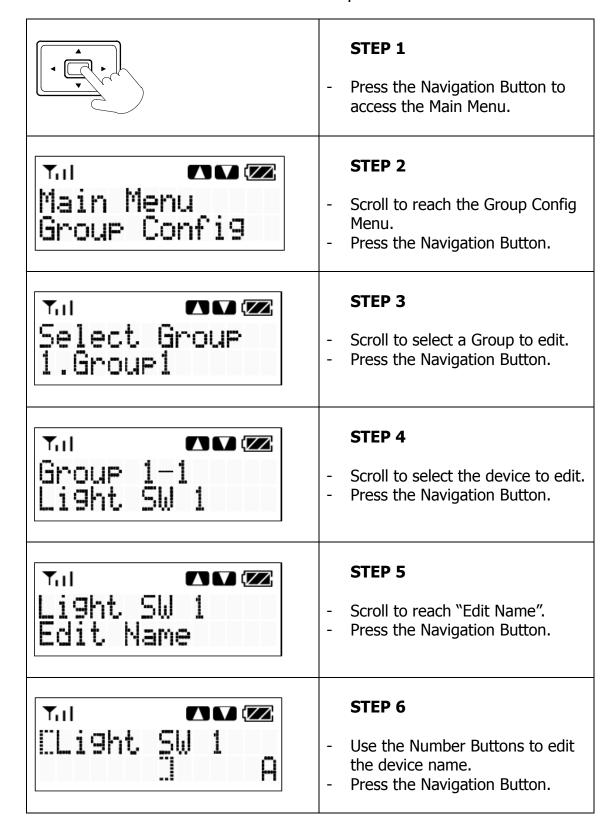




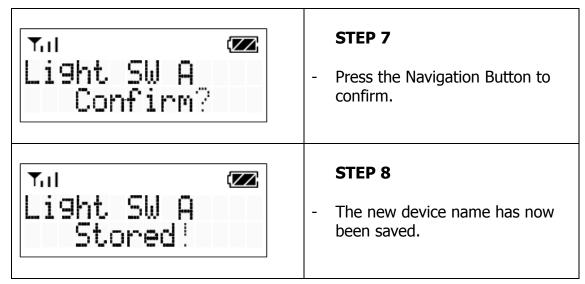


3.1.3. Show Device Address in Group

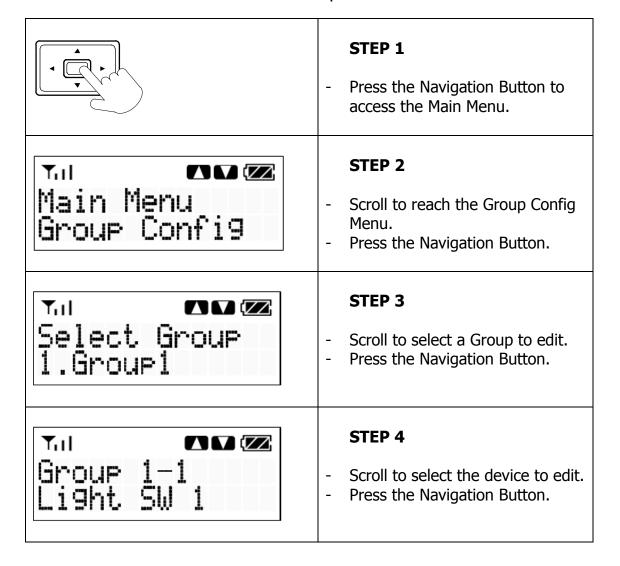




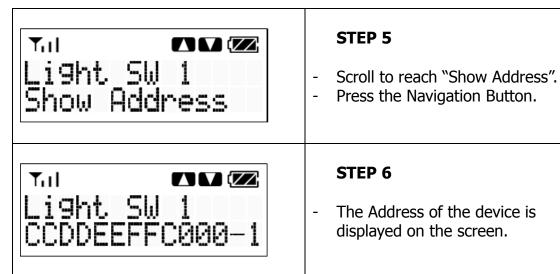


3.1.4. Delete Device in Group

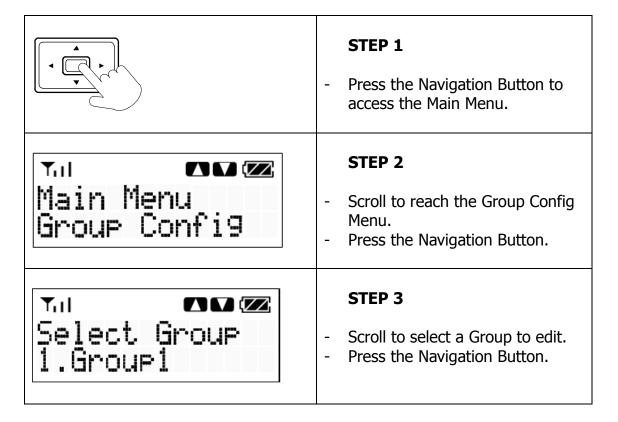



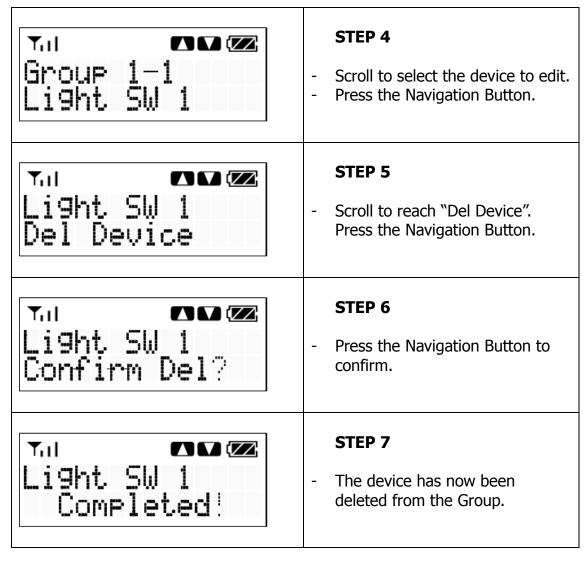

3.1.5. Edit Group Name

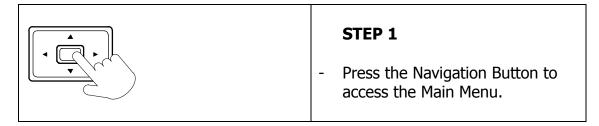




STEP 2 Main Menu Group Confi9 - Scroll to reach the Group Config Menu. Press the Navigation Button. STEP 3 Yul Select Group 1.Group1 - Scroll to select a Group to edit. - Press the Navigation Button. STEP 4 Tul Group - Scroll to reach "Edit Name". - Press the Navigation Button. STEP 5 Till [Group - Use the Number Buttons to edit the Group Name. - Press the Navigation Button. STEP 6 Till ablaGroup A Confirm? Press the Navigation Button to confirm. STEP 7 Tul ablaGroup A Stored! The new Group name has now been saved.



3.1.6. Delete All Groups

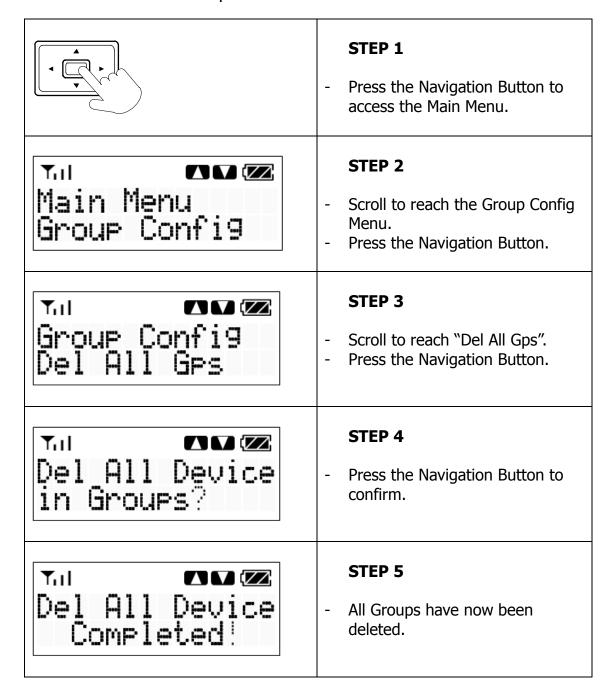




3.2. Mood Configuration

3.2.1. Add Device into Mood

NOTE: A total of **8** devices in total can be added to 1 Mood.

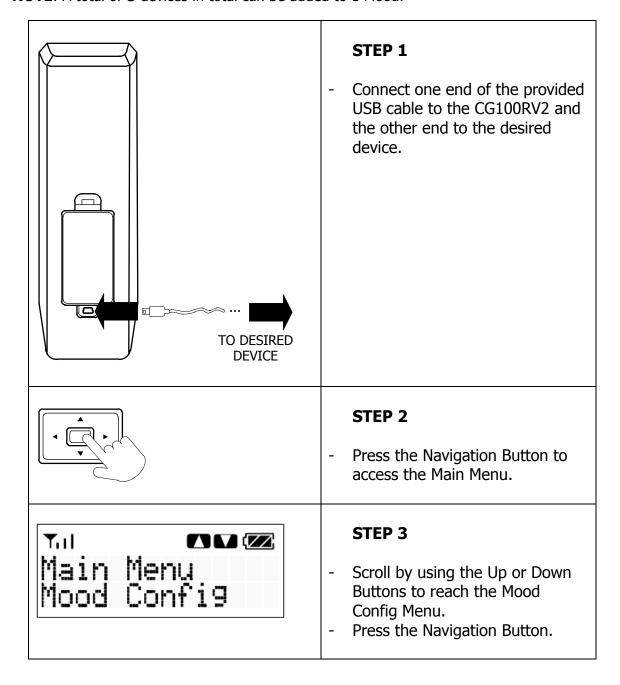





STEP 4 Select Mood 1.(Empty) - If a Mood does not have any Devices, it will show "Empty". - Press the Navigation Button to edit Mood 1. STEP 5 Tul Mood 1 - All Devices in the Mood are Add Device displayed. If there are no devices it will display a "No Device" message. Scroll to reach "Add Device". - Press the Navigation Button yet. STEP 6 Tul Press Desired Refer to the desired device's User Manual (Bindings section) Device for instructions on how to confirm the binding. STEP 7 Till Add Device The device has now been successfully added to the Mood. Success STEP 8 Tul Set Action - Choose an Action for the device. **SWITCH** = ON/OFF **DIMMER** = 0 - 100%**CURTAIN** = Open/Close




3.2.2. Edit Device Information in Mood

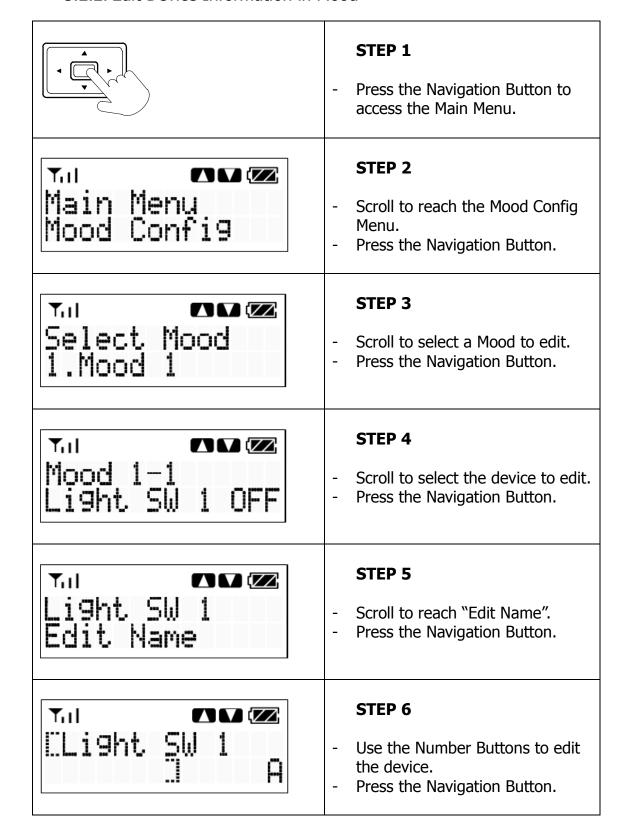




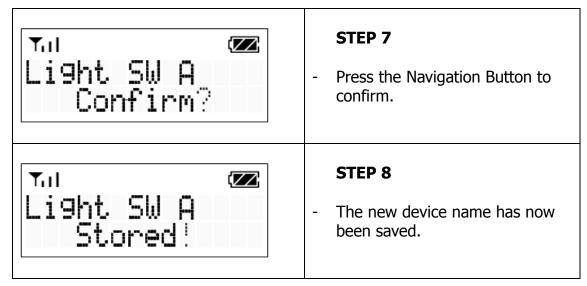


3.2.3. Show Device Address in Mood

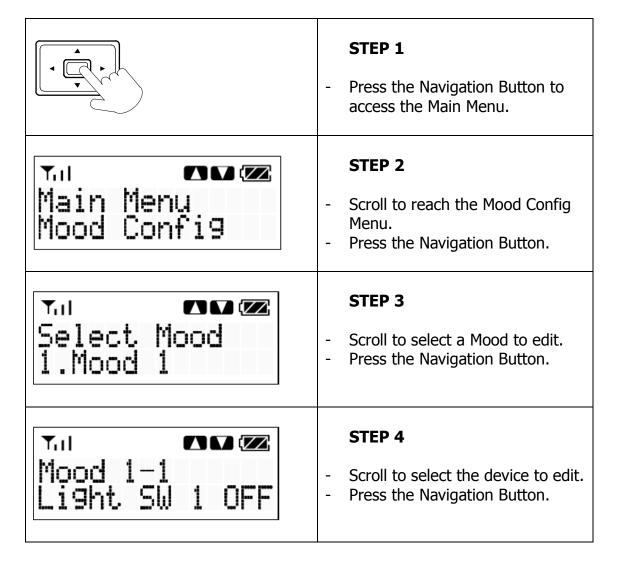




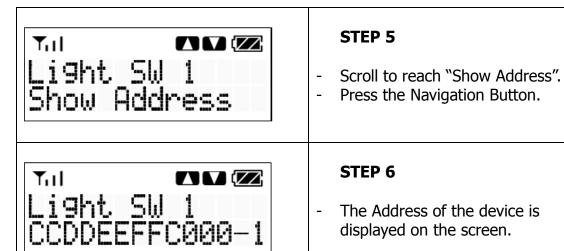


3.2.4. Delete Device in Mood

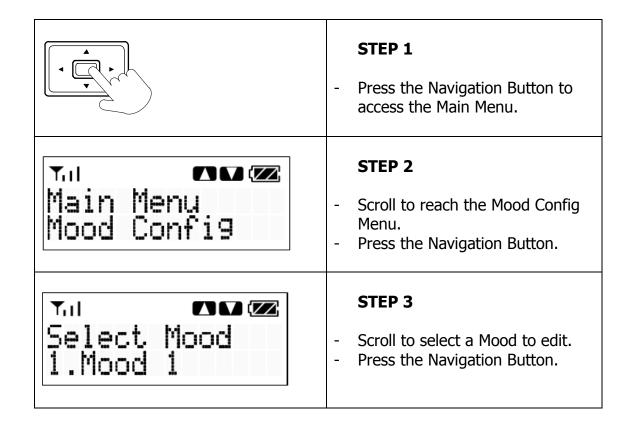




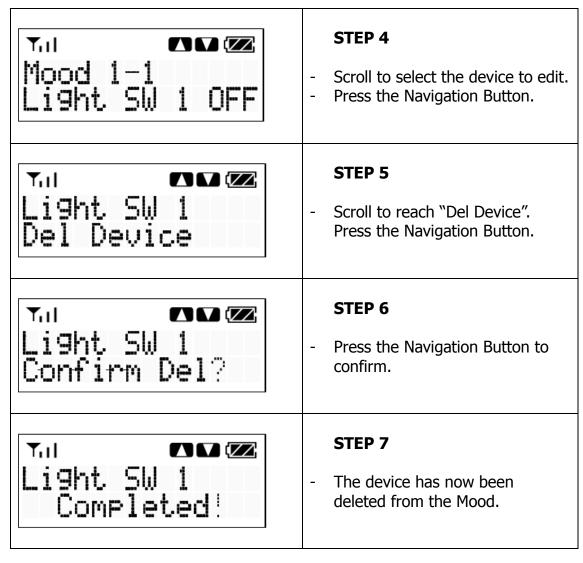


3.2.5. Delete All Devices in Mood

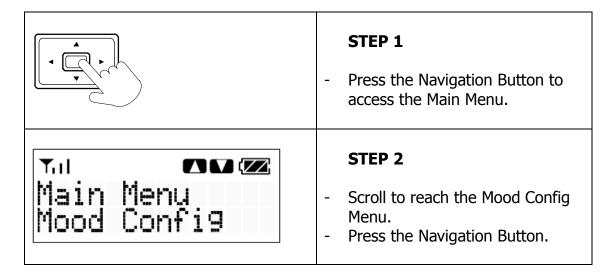



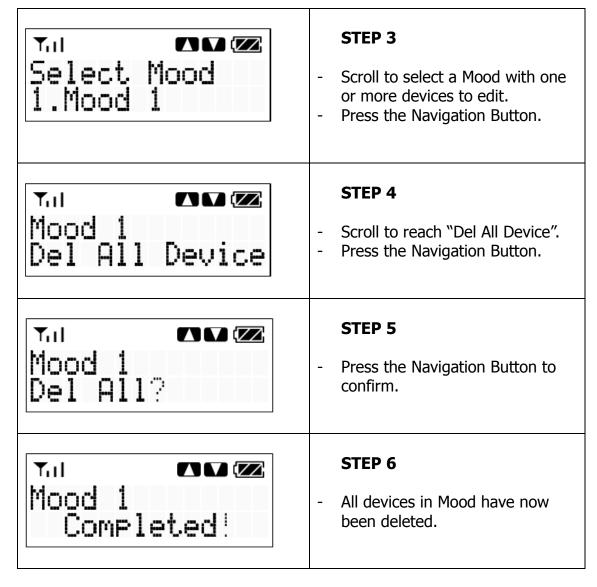

3.2.6. Edit Mood Name

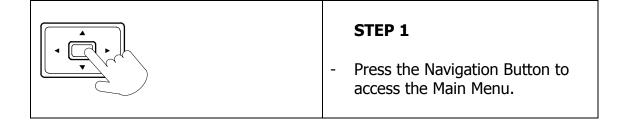




STEP 2 Till Main Menu Mood Config - Scroll to reach the Mood Config Menu. Press the Navigation Button. STEP 3 Yul Select Mood 1.(Empty) Scroll to select a Mood to edit. - Press the Navigation Button. STEP 4 Tul Mood 1 Edit Name Scroll to reach "Edit Name". Press the Navigation Button. STEP 5 Tul ...Mood - Use the Number Buttons to edit the Mood Name. Press the Navigation Button. STEP 6 Tul ablaMood A Confirm? Press the Navigation Button to confirm. STEP 7 Tul ablaMood A Stored! The new Mood name has now been saved.




3.2.7. Copy Moods

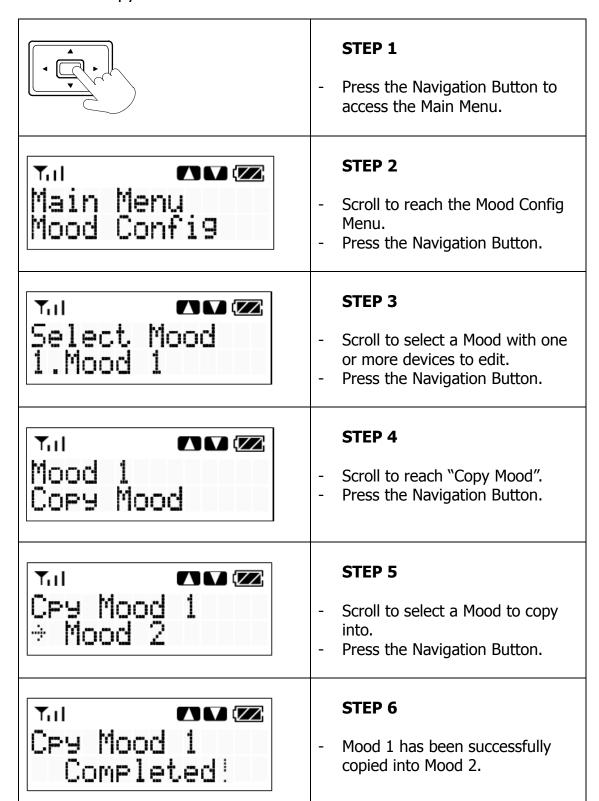




3.2.8. Delete All Moods

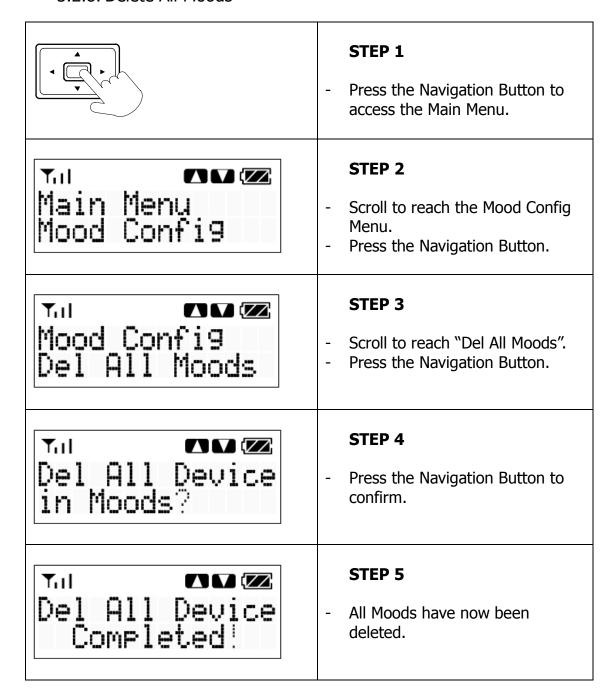




4. Device Control


4.1. Group Control

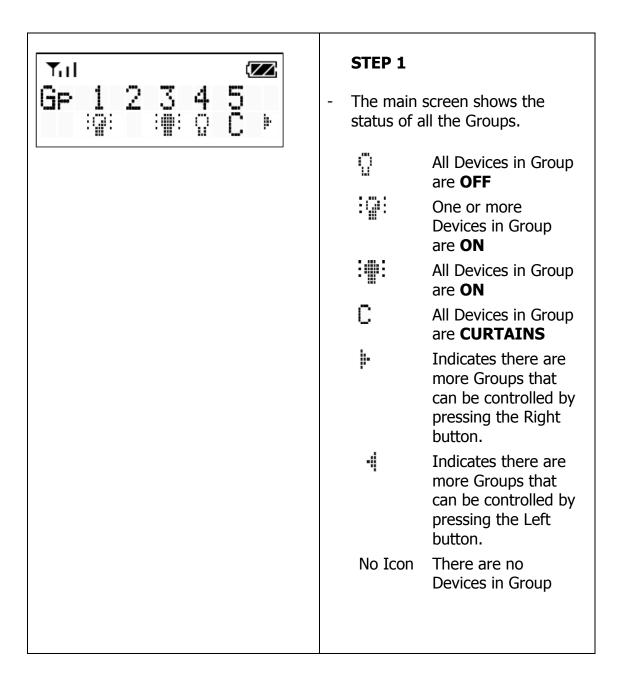




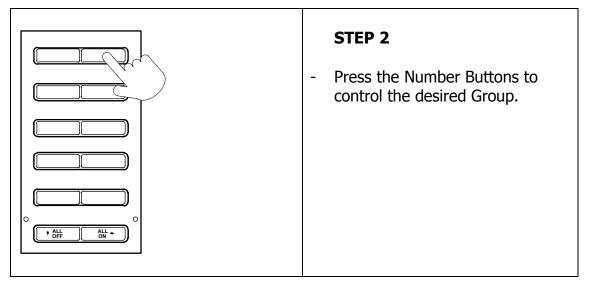


4.2. Mood Control

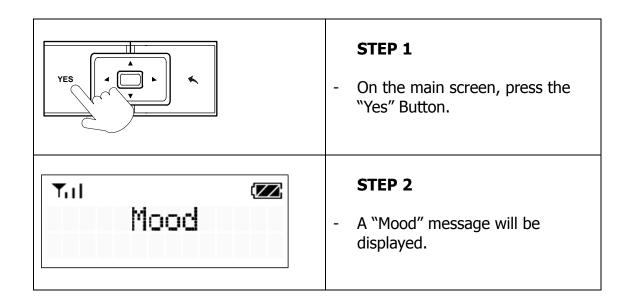




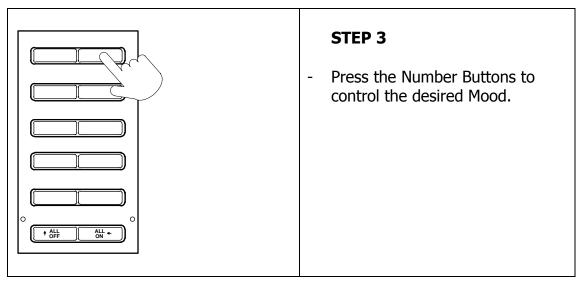

If the "Mood Display" setting has been changed to "**SHOW STATUS**", follow the below steps on Mood Control instead. (See Section 5.1 Mood Display on how to change setting).

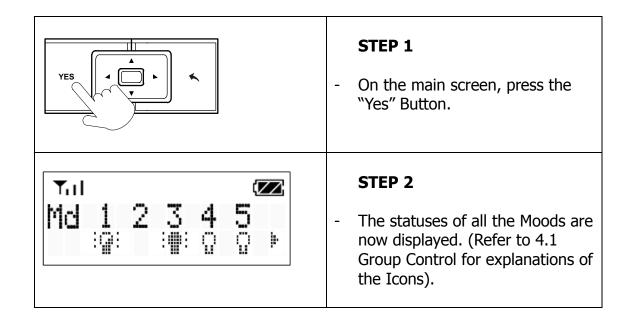




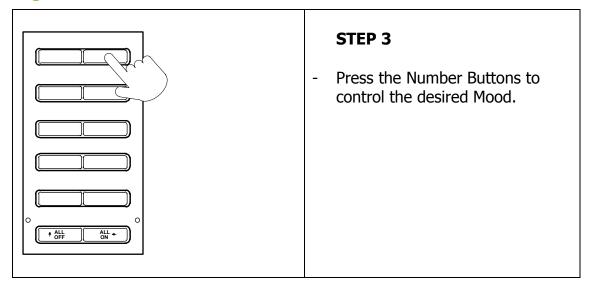

5. Settings

5.1. Mood Display

This "Mood Display" screen is used for changing the way Moods can be controlled. Please follow the below steps to navigate to the screen.

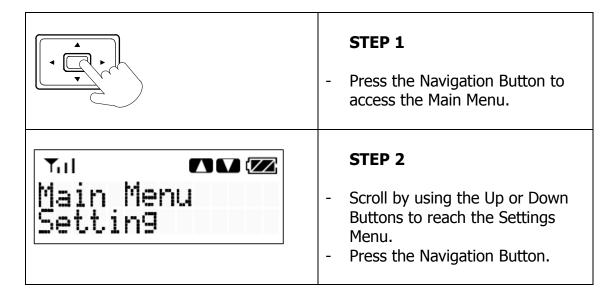






STEP 3

- Scroll to reach "Mood Display".
- Press the Navigation Button.

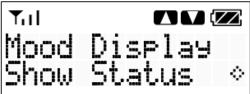



STEP 4

 Choose either the "Show Status" or "Show Name" option.




STEP 5

- Press the Navigation Button to select the option.
- The icon indicates that the option is selected, while the icon indicates that the option is not.
- Please refer to Section 4.2 Mood Control to see the difference in the two options.

5.2. Copy Setting


This "Copy Setting" screen is used for copying all settings (Registered Devices, Groups and Moods) from one CG100RV2 to another CG100RV2. Please follow the steps below to navigate to the screen.



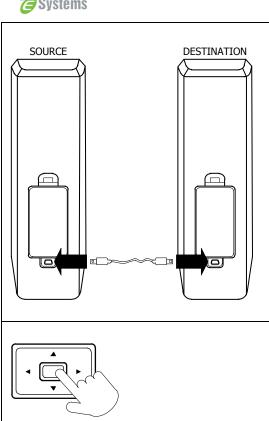

STEP 1

- Connect two CG100RV2's together with the provided USB Cable
- The **SOURCE** remote is the remote to copy the settings FROM.
- The **DESTINATION** remote is the remote to copy the settings TO.

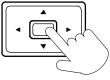


STEP 2

Using the **SOURCE** remote, press the Navigation Button to access the Main Menu.




STEP 3

- Scroll by using the Up or Down Buttons to reach the Settings Menu.
- Press the Navigation Button.

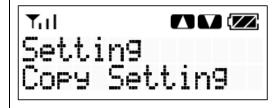

STEP 4


- Scroll to reach "Copy Setting".
- Press the Navigation Button.

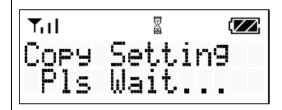

STEP 5


A "Please Wait" screen will display while the **DESTINATION** remote is being



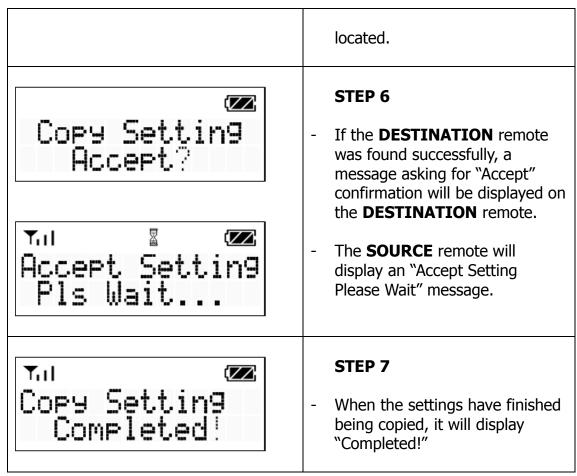


5.3. Reset

This "Reset" screen is used for removing all previously registered devices from the CG100RV2 as well as Groups and Moods. However, it will **NOT** reset the ID. Please follow the steps below to navigate to the screen.

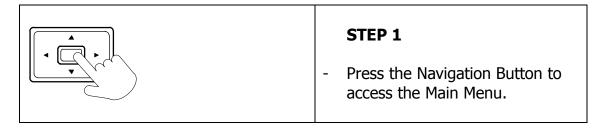




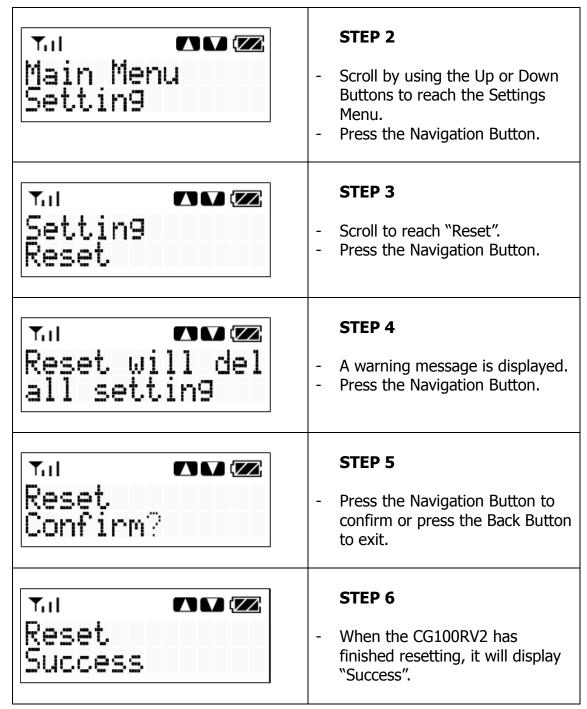


5.4. Memory Info

This "Memory Info" screen shows the total number of registered devices as well as the total number of devices added to Groups and Moods. Please follow the steps below to navigate to the screen.



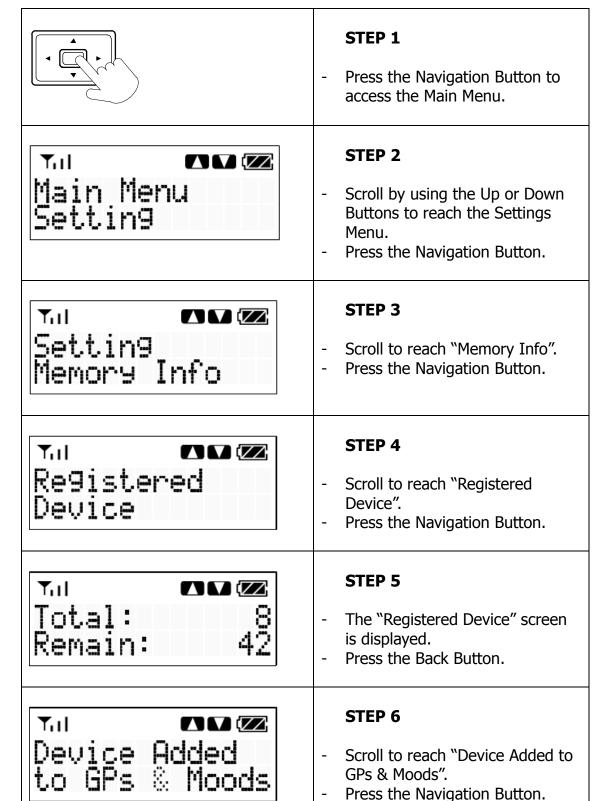



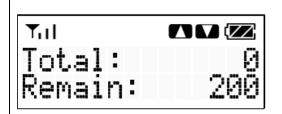


STEP 7

 The "Device Added to GPs & Moods" screen is displayed.

5.5. About

This "About" screen shows the product information of the CG100RV2. Please follow the below steps to navigate to the screen.

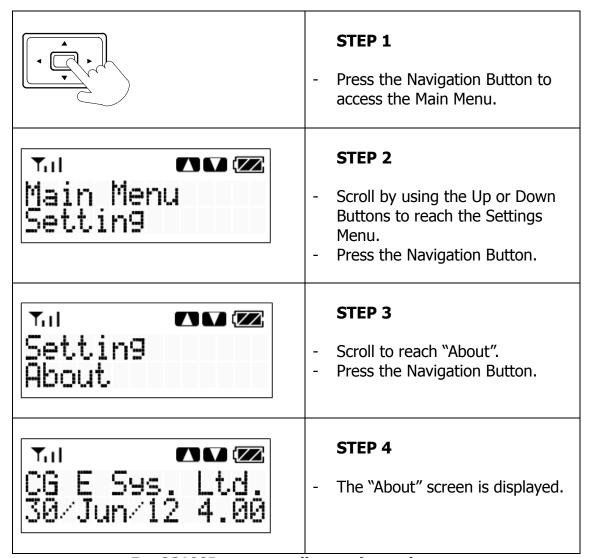

For CG100R, same as all procedures above



6. Appendix

6.1. Specifications

SPECIFICATION				
Power Supply	CG100RV2: 2 x AA Alkaline Batteries (Not Included)			
	CG100R: 2 x AAA Alkaline Batteries (Note Included)			
Screen	Dot Matrix Monochrome			
Functions	Group/Individual Control of Citygrow's Zigbee Devices			
Operating Temperature	0 – 40 °C			
Range	100m (Line of Sight)			
Dimensions:	CG100RV2: 195 x 54 x 29mm CG100R: 124 x 57 x 16mm			