

YK-4000

USER Manual

& Song List





Safety Notice	p.02
What's Included	p.05
Notice before installing hardware	p.06
How to Connect	p.07
* How to connect main unit to the TV	
* How to connect TV & Audio	
How to select songs	p.09
Buttons & Functions	p.10
A/S Trouble Shooting	p.14
Product Specifications	p.15
Optional Devices	p.16
* Additional Song Packs & SUB Microphones	
Product Maintenance Guide	p.17
Warranty Information	p.17
Internal Song List	p.18

Safety Notice

Please read 'Safety Notice' before using YK-4000 for a proper use.



WARNING

There may be a risk of death or serious injury when ignoring the indicated sign shown on left.



CAUTION

Ignoring 'Safety Notice' and improper operation of this machine may cause a serious personal injury or property damage.



WARNING



There can be a cause of potential fire or electric shock when operating this machine under smoke, weird noise or smell. Please turn off the power switch and unplug the power cord immediately to prevent further serious damage. Consult with the service center for any repair needs.



DO NOT attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel for any repair or disassemble needs.



If the unit is exposed to water or any flammable materials, turn off the power switch immediately and unplug the power cord. Consult with the service center for any repair needs.



If the unit is dropped or its cover case is damaged, turn off the power switch immediately and unplug the power cord. DO NOT use the machine as broken, it may cause fire or potential electric shock



If there's an indication of the power cord getting heat up or the main unit turns off and on, please turn off the machine completely and unplug the cord. It may cause a fire or electric shock if constantly used in above condition.



All power cords should be routed so that they are not likely to be walked on or pinched by heavy items upon or against them. Open cut on the cord may cause a fire or electric shock.

Safety Notice



If the power cord is damaged (open cut or cutted,) replace the power cord immediately to prevent from a fire or electric shock.



DO NOT twist, bend hard, burn, pull hard, or damage the power cord. It may cause a fire or electric shock.



After thunder or lightening shock, DO NOT touch the power cord. It may cause an electric shock.



Only use the item under its indicated voltage. It may cause an electric shock if used over or below its indicated voltage.



DO NOT place the item on the surface where it may fall. Make sure children are not abusing the product. It may cause serious personal injury or damage.



Be careful when using this product under snowy, rainy, or moistened area. It may cause an electric shock.



DO NOT touch the power cord with moistened hands. It may cause an electric shock.



Notice



DO NOT place the item exposed of dusts or moist. It may cause a fire or electric shock.



DO NOT place the item exposed of oils or moistures; such as burner or humidifier. It may cause a fire or electric shock.



Place the item in a ventilated area and try to avoid the following:

- * Storing the item upside down or sideways.
- * Storing the item where no ventilation exists such as closet.

Safety Notice



DO NOT place the item under a direct heat from the sun light.



Unplug the power cord from the wall outlet before cleaning. It may cause a fire when accumulated.



DO NOT operate this machine under a weird noise for a long period of time. It may blow out the speakers.



DO NOT put heavy items or lean on the product. It may damage the item.



Please disconnect all wires, cables, and cords before moving the unit to another place. Do not place the unit close to the heated area for it may cause a fire by melting the cords close to it.



DO NOT pull the power cord to disconnect it. It may damage the cord and cause fire.



It is highly recommended to plug the power cord directly to the wall outlet without using any extensions. It will reduce the chance of causing fire.




Please unplug the power cord from its wall outlet before cleaning the unit. It will prevent the electric shock.




For safety reason, please unplug the power cord when the unit is not in use for a long period of time.


Please check to see if any of the included items are missing. Contact the dealer or retail store if any of the included items are either missing or damaged.

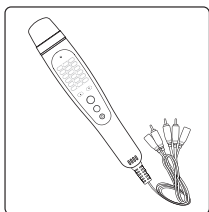


Main Unit

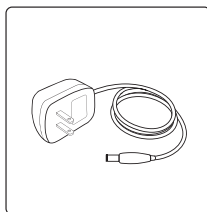

AC Adapter

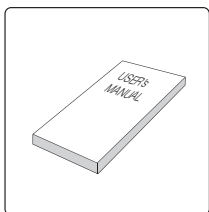 

Manual

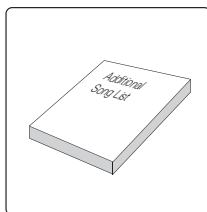 


Additional Song List

Notice before installing hardware

Read instructions on how to connect first before connecting your YK-4000.

- 1** Turn off the power before insert/remove additional song pack. It may damage the data saved on song pack if inserted/removed while power is on.
- 2** Never make or change connections with the power switch on.
- 3** Avoid dust, oil residue, excessive physical power on connection of connection cord terminal and connector types. It may cause loose contact or contact failure.
- 4** Do not disassemble or convert MyStage. It may cause permanent damage to the unit, and electric shock or burning hazard to the user.
- 5** Do not use MyStage near electric induction sources (i.e. microwave). It may cause noise and howling.

 Connecting TV

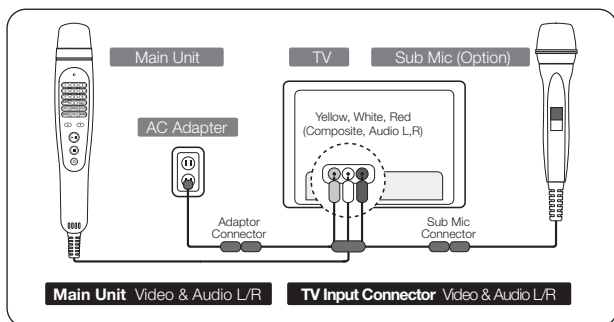


- 1 Connect AV cord to the RCA jack terminal on your TV.

*Use the composite cable (yellow) to connect the yellow RCA jack to the other RCA jack terminal of your TV. *Caution: The video may be faded or out if cable is not connected properly.

*Use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the MyStage to the corresponding AUDIO IN jacks on the stereo. For mono TV, there is only white cord.

- 2 After everything is connected properly, plug in the AC power cord to the power outlet.
- 3 Turn TV on and select menu for remote control of other optional video sources (VCD, DVD, VIDEO1 or 2). Read user's manual of TV for detail.
- 4 Turn MyStage on.
- 5 When the logo display appears on the TV screen, there must be a theme song coming up within ten seconds after.

Connecting TV & Audio

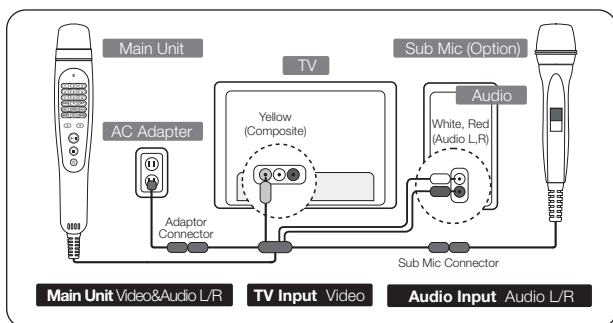

- 1 TV's video input terminal (composite video) is indicated in yellow color located on either back of the TV or on the side. Please connect it with the main unit's video jack (yellow male jack).
 - Please check to make sure wires are properly connected for its best performance.
Please purchase any extra A/V Extension Cable if necessary.
- 2 Then, connect the two red & white male jack from the main unit's A/V Cable to the Audio System's audio input terminal (Audio In) in their matching colors (red & white.)
- 3 Turn both TV and Audio System on.
- 4 Turn both TV and Audio System's Input Source Channel to the correct channel and test to see if everything comes up properly.
- 5 When the logo display appears on the TV screen, there must be a theme song coming up within ten seconds after.

Using up/down button or search button, or press song's own number found in list.


Press ►/|| button to start playing, press button ►/|| again to pause.

To stop playing, press “STOP” button.

- Performance of MyStage may be affected by own function of your TV. Please turn off the function “Automatic Level Control” (AVL/AVC : This function may be shown as different words, please check your TV manual for detail) on your TV set. It may cause excessively low volume if ALC function is on.

* ALC function
Automatic volume leveling function to protect your hearing from noise attack.

MIC Buttons & Functions

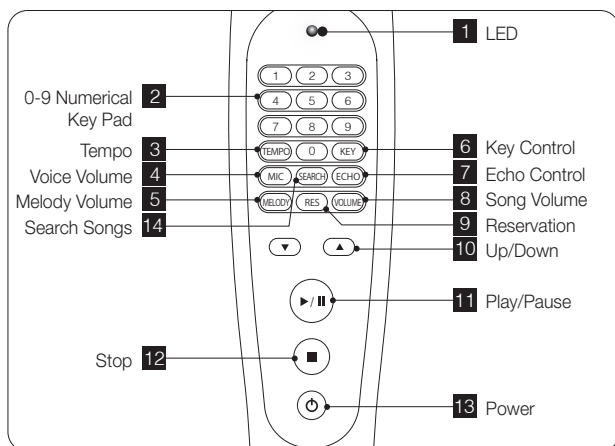

1 LED

Steady green light is on when power is on.

2 0-9 Numerical Key Pad

Select numbered items in a menu and search words.

3 Tempo Control (+/- 7 levels)



Control speed of song playing using up/down key.

4 Voice Volume Control (+/- 7 levels)



Control volume of voice using up/down key.

5 Melody Volume Control (+/- 7 levels)



Control volume of melody playing using up/down key.

6 Key Control (+/- 7 levels)



Control key of song playing using up/down key.

7 Echo Control (+/- 7 levels)



Control volume of echo on voice using up/down key.

8 Song Volume Control (+/- 7 levels)



Volume of song playing using up/down key.

9 Reservation

BOOKING

 
00030

BEAUTY'S EYES

Reserve songs to be played next. Find song number from song list, press number using numeric keys, then press RES button to complete. Reserved song title and singer will be displayed on upper corner of screen. To cancel reservation, press the song number again, then press RES button again, or choose the song to be canceled on reserved list, then press RES button.

10 Up/Down

When press this key on display mode, changes to song search mode. Control using numeric keys and up/down key (For details, check the bottom of screen).

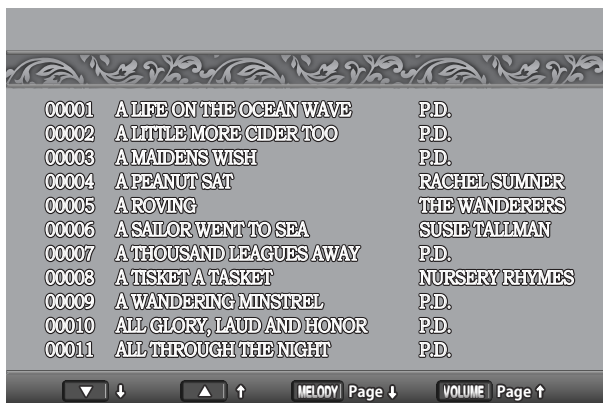

00001	A LIFE ON THE OCEAN WAVE	P.D.
00002	A LITTLE MORE CIDER TOO	P.D.
00003	A MAIDENS WISH	P.D.
00004	A PEANUT SAT	RACHEL SUMNER
00005	A ROVING	THE WANDERERS
00006	A SAILOR WENT TO SEA	SUSIE TALLMAN
00007	A THOUSAND LEAGUES AWAY	P.D.
00008	A TISKET A TASKET	NURSERY RHYMES
00009	A WANDERING MINSTREL	P.D.
00010	ALL GLORY, LAUD AND HONOR	P.D.
00011	ALL THROUGH THE NIGHT	P.D.

11 Play/Pause

Play and pause songs playing. Press once to play and press this button again to pause.

12 Stop

Stop songs completely.

13 Power

Turn on or off the power (press and stay for about 2 seconds).

14 Search songs

Search, select, reserve, and play songs using numerical key pad and up/down key. (check bottom of screen when search songs for detailed instruction)



1 There's no power on the main unit.

Please check if the power cord is connected properly to either the wall outlet or the main unit itself.

2 There's no sound from either the main unit or TV.

Try to turn up the volume from either the main unit or TV.

3 There's no video from either the main unit or TV.

 
Please check connection of the RCA cable if properly connected to the TV from the main unit. Please check if the input mode is properly selected.

4 Songs cannot neither be played nor selected.

Please check the song numbers again to make sure the numbers are correctly inputted. Please reserve songs from its main song list provided only.

5 Power turns off automatically.

This machine turns off automatically after 10 minutes when not in used.

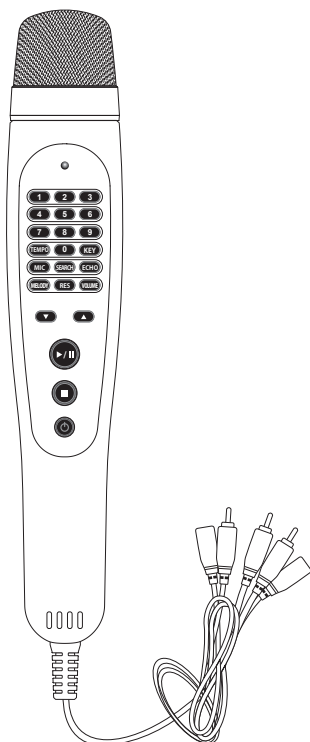


Product Number	YK-US100
Voltage	DC 9V / 500mA
Dimension	46(Width) x 250(Hight) x 48(Depth)
Weight	370g (w/ cable)
Wattage Usage	Approx. 2w (adapter used)

Optional Devices

1 Additional Song Pack

 Song Packs are available to add more songs to the unit.




How to install Song Pack

Please turn off the power before inserting a Song Pack.

1. Please remove the back cover pushed downward.
2. Please insert a Song Pack with the arrow positioned upward.
(You may insert up to 4 Song Packs)
3. When finished installing Song Packs,
please follow the order of Number 1 in reverse way.

 2 Wired Sub Microphone

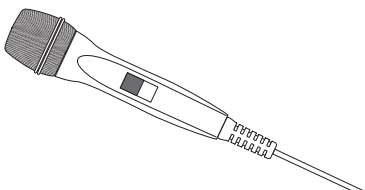

Two people may sing simultaneously.

How to connect Sub Wired Microphone

Connect male part of the cord from Sub Wired Microphone to female part of the cord from the main unit.

Please use dried towel to wipe the exterior of the product only. DO NOT disassemble nor use alcohol to clean the product.

1 When product is stained with chemicals,

Use only dried towels to wipe out the chemicals. Please contact the local dealer if the stain is severe.

2 When product is stained with sodas or alcohols,

Use dried towels to wipe the liquid first, and then finish wiping them out by using wetted towels. If liquids are unverifiable whether they went inside of the unit or not, please contact the local dealer for help.

3 When product is damaged physically

If the unit is damaged physically while in-use, please contact the local dealer for repair.

4 When storing this product...

Please store the unit out of moistures and heat. It may damage the unit. It is highly recommended to store the unit inside the ventilated area.

A/S

Contact Product Seller

When you need an assistance with solving an issue with the product, please contact the store where you originally purchased the product first. If you still cannot resolve a product related issue, please follow the instruction below.

Tech Support

Please visit www.bzinc.net and follow the link to tech support page to perform a simple troubleshooting. If you still can't resolve an issue, please email at tech@bzinc.net for further assistance.

POP SONGS

Internal Songs List - POP

11017	20TH CENTURY BOY	T.REX
11046	A HORSE WITH NO NAME	AMERICA
11081	ADDICTED TO LOVE	ROBERT PALMER
11117	ALFIE	DIONNE WARWICK
11120	ALL 4 LOVE	COLOR ME BADD
11163	ALL THE MAN THAT I NEED	WHITNEY HOUSTON
11180	ALONE	HEART
11190	AMANDA	BOSTON
11192	AMAZED	LONESTAR
11216	ANGEL OF MINE	MONICA
11230	ANNIE'S SONG	JOHN DENVER
11234	ANOTHER DAY IN PARADISE	PHIL COLLINS
11238	ANOTHER ONE BITES THE DUST	QUEEN
11252	ANYTHING FOR YOU	GLORIA ESTEFAN
11274	ARE YOU LONESOME TONIGHT	ELVIS PRESLEY
11289	AS LONG AS YOU LOVE ME	BACKSTREET BOYS
11300	AT THE HOP	DANNY AND THE JUNIORS
11319	BABY DON'T GET HOOKED ON ME	MAC DAVIS
11328	BABY LOVE	THE SUPREMES
11335	BACK IN MY ARMS AGAIN	THE SUPREMES
11349	BAILAMOS	ENRIQUE IGLESIAS
11360	BARBIE GIRL	AQUA
11371	BE WITH YOU	ENRIQUE IGLESIAS
11373	BEAT IT	MICHAEL JACKSON
11400	BEFORE THE NEXT TEARDROP FALLS	FREDDIE FENDER
11411	BELIEVE	CHER
11414	BEN	MICHAEL JACKSON
11415	BENNIE AND THE JETS	ELTON JOHN
11439	BIG GIRLS DON'T CRY	THE 4 SEASONS
11445	BILLIE JEAN	MICHAEL JACKSON

POP - Internal Songs List

11458	BLACK OR WHITE	MICHAEL JACKSON
11476	BLUE MOON	MARCELS
11480	BLUE VELVET	BOBBY VINTON
11489	BOOGIE FEVER	THE SYLVERS
11508	BORN TO BE WILD	STEFFEN WOLF
11509	BORN TO LOSE	RAY CHARLES
11518	BOUNCE	BON JOVI
11540	BREATHLESS	THE CORRS
11557	BROWN SUGAR	THE ROLLING STONES
11568	BUS STOP	THE HOLLIES
11598	CANDIDA	TONY ORLANDO AND DAWN
11599	CANDLE IN THE WIND	ELTON JOHN
11607	CAN'T FIGHT THIS FEELING	REO SPEEDWAGON
11612	CAN'T GET YOU OUT OF MY HEAD	KYLIE MINOGUE
11614	CAN'T HELP FALLING IN LOVE	ELVIS PRESLEY
11621	CAN'T STOP LOVING YOU	VAN HALEN
11630	CARIBBEAN QUEEN	BILLY OCEAN
11646	CENTERFOLD	J. GEILS BAND
11688	CLOSE TO YOU	CARPENTERS
11714	COME SEE ABOUT ME	THE SUPREMES
11718	COME UNDONE	DURAN DURAN
11742	COULD'VE BEEN	TIFFANY
11759	CRAZY LITTLE THING CALLED LOVE	QUEEN
11762	CRAZY	AEROAMITH
11780	CRY	FAITH HILL
11841	DELILAH	TOM JONES
11907	DON'T CRY FOR ME ARGENTINA	MADONNA
11921	DON'T KNOW WHY	NORAH JONES
11941	DON'T STOP BELIEVIN'	JOURNEY
11942	DON'T STOP 'TIL YOU GET ENOUGH	MICHAEL JACKSON

Internal Songs List - POP

11943	DON'T STOP	FLEETWOOD MAC
11953	DON'T YOU WANT ME	THE HUMAN LEAGUE
11960	DOWN UNDER	MEN AT WORK
11988	DRIVE MY CAR	THE BEATLES
12011	EBB TIDE	THE RIGHTEOUS BROTHERS
12012	EBONY AND IVORY	PAUL MCCARTNEY
12078	EVERYDAY PEOPLE	SLY & THE FAMILY STONE
12086	EVERYTHING YOU WANT	VERTICAL HORIZON
12095	EVIL WAYS	SANTANA
12113	FALLIN'	ALICIA KEYS
12138	FEEL LIKE MAKING LOVE	ROBERTA FLACK
12201	FOREVER YOUR GIRL	PAULA ABDUL
12247	GANGSTA'S PARADISE	COOLIO
12249	GENIE IN A BOTTLE	CHRISTINA AGUILERA
12251	GEORGIA	BOZ SCAGGS
12255	GET BUSY	SEAN PAUL
12256	GET DOWN TONIGHT	KC & THE SUNSHINE BAND
12259	GET IT TOGETHER	SEAL
12265	GET THE PARTY STARTED	PINK
12270	GHOSTBUSTERS	RAY PARKER JR.
12281	GIRLS JUST WANT TO HAVE FUN	CYNDI LAUPER
12300	GOD SAVE THE QUEEN	SEX PISTOLS
12315	GOOD LUCK CHARM	ELVIS PRESLEY
12320	GOOD VIBRATIONS	BEACH BOYS
12331	GOT MY MIND SET ON YOU	GEORGE HARRISON
12349	GROOVY KIND OF LOVE	PHIL COLLINS
12361	HANGIN' TOUGH	NEW KIDS ON THE BLOCK
12364	HAPPINESS IS A WARM	THE BEATLES
12369	HAPPY SONG	BONEY M.
12371	HAPPY TOGETHER	TURTLES

POP - Internal Songs List

12381	HARLEM DESIRE	LONDON BOYS
12387	HAVE YOU EVER REALLY LOVED A WOMAN?	BRYAN ADAMS
12399	HEAL THE WORLD	MICHAEL JACKSON
12404	HEART OF GLASS	BLONDIE
12405	HEART OF GOLD	NEIL YOUNG
12424	HEAVEN	BRYAN ADAMS
12441	HELP ME RHONDA	BEACH BOYS
12450	HERE COMES THE RAIN AGAIN	EURYTHMICS
12452	HERE I AM	AIR SUPPLY
12477	HEY YA	OUTKAST
12498	HOLDING BACK THE YEARS	SIMPLY RED
12519	HOT CHILD IN THE CITY	NICK GILDER
12535	HOW DEEP IS YOUR LOVE	BEE GEES
12545	HOW YOU REMIND ME	NICKELBACK
12547	HUMAN NATURE	MICHAEL JACKSON
12553	HUSH	DEEP PURPLE
12558	I AIN'T GONNA STAND FOR IT	ERIC CLAPTON
12563	I BELIEVE I CAN FLY	R. KELLY
12569	I CAN HELP	BILLY SWAN
12581	I CAN'T HELP MYSELF (SUGAR PIE HONEY BUNCH)	THE FOUR TOPS
12598	I DO I DO I DO I DO I DO	ABBA
12625	I GET AROUND	THE BEACH BOYS
12628	I GOT A WOMAN	RAY CHARLES
12634	I HAVE NOTHING	WHITNEY HOUSTON
12637	I HEARD IT THROUGH THE GRAPEVINE	MARVIN GAYE
12647	I JUST WANT TO BE YOUR EVERYTHING	ANDY GIBB
12658	I LOVE A RAINY NIGHT	EDDIE RABBITT
12693	I SAW THE LIGHT	TODD RUNDGREN
12905	INTO THE NIGHT	SANTANA FEAT. CHAD KROEGER
12957	IT'S MY LIFE	BON JOVI

Internal Songs List - POP

13006	JOLENE	OLIVIA NEWTON JOHN
13087	LADIES NIGHT	ATOMIC KITTEN
13206	LIVE FOREVER	OASIS
13224	LONG TRAIN RUNNIN'	THE DOOBIE BROTHERS
13247	LOVE HURTS	NAZARETH
13271	LOVE ME TONIGHT	TOM JONES
13315	LUKA	SUZANNE VEGA
13354	MANDY	WESTLIFE
13373	ME AGAINST THE MUSIC	BRITNEY SPEARS
13620	NOT GONNA GET US	T.A.T.U.
13637	NOTORIOUS	DURAN DURAN
13959	RISING FORCE	YNGWIE MALMSTEEN
13982	ROLLING IN THE DEEP	ADELE
14050	SCREAM	M JACKSON/J JACKSON
14104	SHAPE OF MY HEART	STING
14125	SHE'S GONE	BLACK SABBATH
14192	SMOOTH	SANTANA
14493	THAT'LL BE THE DAY	BUDDY HOLLY
14543	THE GREEN LEAVES OF SUMMER	THE BROTHERS FOUR
14598	THE ONE	ELTON JOHN
14603	THE POWER OF LOVE	CELINE DION
14605	THE RAINBOW CONNECTION	CARPENTERS
14628	THE THRILL IS GONE	B.B.KING
14787	TRUE	SPANDAU BALLET
14831	UNCHAIN MY HEART	RAY CHARLES
14913	WATERLOO	ABBA
14931	WE WILL ROCK YOU	QUEEN
15016	WHENEVER I SAY YOUR NAME	STING
15023	WHERE DOES MY HEART	CELINE DION
15092	WITHOUT YOU	MARIAH CAREY

POP - Internal Songs List

[illegible]

SPANISH

SONGS

SPANISH - Internal Songs List

20001	¡AY MAM?	CHAYANNE
20002	19 DIAS Y 500 NOCHES	JOAQUIN SABINA
20003	20 A?S	AZUCAR MORENO
20004	40 Y 20	JOS?JOS?
20005	A AQUELLA	BUKIS
20006	A CADA PASO	LA 5A ESTACION
20007	A CAMBIO DE QUE	LUCHA VILLA
20008	A ESA	PIMPINELA
20009	A FUEGO LENTO	MANJAR
20011	A GATAS	GLORIA TREVI
20012	A LA CELDA	YERBA BRAVA
20013	A LA MADRE	GLORIA TREVI
20014	A LA MISMA HORA EN EL MISMO LUGAR	PIMPINELA
20015	A LA ORILLA DE UN PALMAR	G. SALINAS
20016	A MEDIA LUZ	HUGO JORDÁN
20017	A MEDIAS DE LA NOCHE	LUCHA VILLA
20018	A MI LINDO ECUADOR	PUEBLO NUEVO
20019	A MI MANERA	RAPHAEL
20020	A PURO DOLOR(SALSA)	SON BY FOUR
20021	A QUE NEGAR	HNOS. MTZ. GIL
20022	A QUIEN LE IMPORTA	THALIA
20023	A QUIEN QUIERES ENGA?R	LOS TEMERARIOS
20024	A TU LADO	SORAYA
20025	A VECES SI A VECES NO	JULIO IGLESIAS
20026	A VECES VUELVO	CATUPECU MACHU
20027	A VER CUANDO	LOS PIOJOS
20028	ABANDONADA	LOS BRIBONES
20029	ABRAZADO DE UN POSTE	LORENZO DE MONTECLARO
20030	ABRE TU CORAZON	R. OCULTOS
20031	ABRIENDO PUERTAS	GLORIA ESTEFAN

Internal Songs List - SPANISH

[illegible]

PHILIPPINES

SONGS

Internal Songs List - PHILIPPINES

30001	2001-02-08	APRIL BOY REGINO
30002	214	RIVER MAYA
30003	2MAMBLING	K AND THE BOXERS
30004	A.I.D.S.	KAMIKAZEE
30005	A BETTER MAN	OGIE ALCASID
30006	A CERTAIN SMILE	INTROVOYS
30007	A GIRL CAN DREAM	NINA
30009	A LITTLE KISS, A LITTLE HUG	VERNIE VARGA
30010	A LOVE TO SHARE	RIVERMAYA
30011	A MILLION THANKS TO YOU	PILITA CORRALES
30012	A WOMAN'S NEED	ARIEL RIVERA
30013	ABOT KAMAY	ORANGE & LEMONS
30014	ABSORBING MAN	PAROKYA NI EDGAR
30015	ACERCATE MAS	OSVALDO FARRES
30016	ADAPTATION	MAE RIVERA
30017	ADIOS MARIQUITA LINDA	MARCO A. JIMENEZ
30018	ADIOS	SLAPSHOCK
30019	AFRAID FOR LOVE TO FADE	JOSE MARI CHAN
30020	AFTERTHOUGHTS ON A TV SHOW	JOSE MARI CHAN
30021	AH DOO DOO DOO	WILLIE REVILLAME
30022	AISHTERU, I LOVE YOU	YA CHANG
30023	AKAP	IMAGO
30024	AKIN KA NA LANG	ITCHYWORMS
30025	AKIN NA LANG SANA SIYA	JIMMY BONDOC
30026	AKING MINAHAL	ROCKSTAR 2
30027	AKO AY MAGHIHINTAY	CENON LAGMAN
30028	AKO AY PILIPINO	KUH LEDESMA
30029	AKO NA LANG ANG LALAYO	FREDRICK HERRERA
30030	AKO SI M16	JUNIOR KILAT
30031	AKO SI SUPERMAN	REY VALERA

USER's MANUAL 32
VERSION 1.00

JAPANESE SONGS

JAPANESE - Internal Songs List

40960	紅とんぼ	ちあきなおみ
41686	嵐を呼ぶ男	石原 裕次郎
41771	まわり道	琴風豪規
41803	あんたの花道	天童よしみ
41870	いい日旅立ち	山口百恵
41916	粹な別れ	石原裕次郎
42323	祝い船	門脇陸男
42480	上を向いて歩こう	坂本 九
42658	海の匂いのお母さん	鳥羽一郎
43459	男の港	鳥羽一郎
43527	おはん	五木ひろし
43569	おまえに惚れた	美空ひばり
43722	お嫁においで	加山雄三
43885	女のきもち	角川 博
44358	喝采	ちあきなおみ
44884	木曽路の女	原田悠里
44980	北の漁場	北島 三郎
44985	北へ	小林旭
46131	恋のパカンス	ザ・ピーナッツ
46451	心のこり	細川たかし
46900	さくら貝の唄	倍賞千恵子
46931	酒きずな	天童 よしみ
46967	細雪	五木 ひろし
47686	忍ぶ雨	伍代夏子
48002	純子	小林旭
48157	じょんから女節	長山洋子
48423	スーダラ節	植木等
48873	青春時代	加藤久仁彦&トップギャラン
49095	千年の古都	都はるみ
49824	誰もいない海	トワ・エ・モア

Internal Songs List - JAPANESE

49967	千曲川	五木 ひろし
50071	ついて来るかい	小林旭
50095	津軽の花	原田悠里
50097	津軽平野	千昌夫
50196	紬の女	竜鉄也
51222	どんなときも	槇原敬之
51299	長崎は今日も雨だった	内山田 洋とクールファイブ
51327	長良川艶歌	五木 ひろし
51551	浪花恋しぐれ	都はるみ 岡千秋
53065	氷雨	日野美歌
54304	望郷酒場	千 昌夫
55504	麦畑	オヨネーズ
55546	霧笛が俺を呼んでいる	赤木 圭一郎
55561	むらさき雨情	藤 あや子
55629	夫婦坂	都はるみ
55638	夫婦善哉	石川さゆり
55928	桃色吐息	高橋真梨子
56189	ゆうべの秘密	小川知子
56196	夕焼け雲	千 昌夫
56245	雪 椿	小林幸子
56341	夢追い酒	渥美 二郎
56662	夜空ノムコウ	SMAP
56710	夜のめぐり逢い	石原裕次郎・八代亜紀
57288	ルビーの指環	寺尾聡
57887	ありがとう	いきものがかり
57905	BEGINNER	AKB48
57914	MONSTER	嵐
58269	演歌兄弟	北島三郎・鳥羽一郎
58322	職人	北島三郎
58338	長崎の雨	川中美幸

JAPANESE - Internal Songs List

[illegible]

CHINESE SONGS

CHINESE - Internal Songs List

60001	1000朵玫瑰	罗百吉
60002	101变	刚泽斌
60003	1990台湾人<台>	台湾流行歌曲
60004	2002年第一场雪	刀郎
60005	21世纪查某人	白冰冰
60006	2月14日	深蓝乐队
60007	5.6.7.8.GOING	徐怀钰
60008	929	苏慧伦
60012	B 面的歌	霍正奇
60013	BAD BOY	张惠妹
60014	BECAUSE I LOVE YOU<粤>	佚名
60015	CALL ME	徐怀钰
60016	CHA CHA CHA	叶倩雯
60017	CRAZY LOVE	
60018	CRY	张学友
60019	CRYSTAL	
60020	Da De Dum (我失恋)	陈慧琳
60021	di da di	李玟
60022	Do Re Mi	
60023	DON' T BREAK MY HEART	黑豹
60024	DON' T SAY GOODBYE	许如芸
60025	DOREMI	
60026	ELAINE	谭咏麟
60027	ELECTRIC GIRL	张立基
60028	FEVER	邝美云
60029	GALA GALA HAPPY	草蜢
60030	Happy 2000	黎明
60031	HAPPY BIRTHDAY	生日歌
60032	HAPPY HOURS	苏慧伦
60033	HELLO (哈罗)	阿杜

Internal Songs List - CHINESE

[illegible]

MYANMAR

SONGS

Internal Songs List - MYANMAR

80001	မနေ့က ကောင်မလေး	မြင့်မိုးအောင်
80002	စွန့်သွားတော့ နေခြည်	မြင့်မိုးအောင်
80003	မင်းနဲ့မှ ချစ်တတ်ပြီ	ကေအေတီ
80004	အချစ်များ သူ့ဆီမှာ	စောဇူဆဲ
80005	၂၀၁၁ အချစ်လား	ကိုမျိုး
80006	စိတ်ထဲကပဲ နှုတ်ဆက်ချင်တယ်ဋီ	ကေအေတီ
80008	ဆိုင်သူမသိတဲ့ အချစ်	စောဇူဆဲ
80009	ဓီကစောင့်နေသူ	ကေအေတီ
80010	ဆုံချင်ပြီ	စောဇူဆဲ
80014	ကောင်းကင်ရဲ့အလင်း	ဆောင်းဦးလှိုင်
80015	မဆုံသောလမ်း	ငယ်ဆူးသစ်
80017	မြတ်နိုးခြင်းမှီးတိမ်	ကေအေတီ
80018	ကြယ်တွေကြွေသွားသည့်တိုင်	မြင့်မိုးအောင်
80019	ရင်ခုန်ရလွန်းလို့	ငယ်ဆူးသစ်
80020	မေ့မှာပါ	ကေအေတီ
80021	အိပ်မက်ကဗျာ	နိုင်နိုင်
80022	အနှိုင်းမဲ့	မင်းချစ်သူ
80023	ခါး	သေဦးဝေ
80024	မှားတဲ့ဘက်မှာ	စောဘွဲ့.မှူး
80030	အချစ်မရှိနေ့ရက်များ	ဆောင်းဦးလှိုင်
80031	မျှော်လင့်ခြင်းလမ်း	လင်းမောင်မောင်
80033	ရွှေရောင်ကောင်းကင်	
80034	မင်းရင်ခွင်ထဲ	မစ်ကီကိုးလ်
80035	အလှသစ၊တရား	စန္ဒရားလှထွတ်
80050	အတွေးပန်းချီ	ကိုနိုင်မင်း
80051	အရမ်းလွမ်းနေပြီ	ကိုဇာ
80052	အချစ်စစ်ဆိုတာ	ကိုရဲလွင်
80053	နေရာတိုင်းမှာ	စိုင်းခမ်းလိတ်
80054	အတောင်ပံပါရင်မင်းဆီကို	ဇေယျာ (စတီရီယို)
80055	တစ်သက်လုံးပဲသတိရနေမယ်	ကိုဇာ

MYANMAR - Internal Songs List

80056	ကံကောင်းမဲ့ အချစ်	ဆောင်းဦးလှိုင်
80057	အချစ်အတွက်တစ်ဖန်မွေးဖွားခြင်း	စိုင်းခမ်းလိတ်
80058	ချစ်သူရဲ့သီချင်း	သုခမိန်လှိုင်
80059	တို့ဝေးရာ	ကေအေတီ
80060	သီချင်းစဉ်သည်	စတုန်း
80061	ဇွတ်ချစ်မယ်	တကျီလ်စိုး
80062	မျက်လုံးချင်းစကားပြောနေပြီ	ဦးကျော်မိုး
80063	ကျေးဇူး	ထွန်းခမ်း
80064	ပန်ပေးပါရစေ စံပယ်တစ်ကုံး	စန္ဒာငွေစိုး
80065	အဲဏီ	ကေအေတီ
80066	ကိုကိုရေချစ်မိပြီ	ဦးနား
80067	ဝဋ်ကြွေး	ကေအေတီ
80069	ချစ်တာတစ်ခုတည်းသိတယ်	စိုင်းခမ်းလိတ်
80070	လာမယ့်နှစ်မှာငှာရည်းစားထားမယ်	ပုသိမ် မောင်စိမ်းသူ
80071	မောင်ပေးတဲ့အချစ်ပြန်ဆပ်ခဲ့ပါ	စိုင်းသောင်းမြင့်
80076	ခွင့်မတောင်းပေမယ့်ရပါတယ်	စိုင်းခမ်းလိတ်
80077	ရင်နာတယ်	ကိုလေးလွင်
80081	ချယ်ရီသက်သေမောင့်မျက်ရည်	စိုင်းဆိုင်မောင်
80083	ဝေးခဲ့ပြီပန်းခရမ်းပြာ	ကိုရဲလွင်
80084	ယနေ့မှစနစ်တစ်ရာတိုင်	နွဲ့ယဉ်ဝင်း
80085	ဘယ်ပန်းချီရေးလို့မမှီ	မုဝမောင်ဆွေတင့်
80086	သဘာဝ	စိုင်းခမ်းလိတ်
80087	လွန်းကြင်ငှက်	နေဇော်အောင်
80088	တမ်းတတဲ့အချစ်	မင်းချစ်သူ
80089	တူနှစ်ကိုယ်တိုင်းပြည် (၂)။	နိုင်မြန်မာ
80091	အချစ်က မင်းအနားမှာပါ	စိုင်းခမ်းလိတ်
80092	အချစ်သီချင်း ဩဇာလေးတစ်ပွင့်	သုခမိန်လှိုင်
80093	ကိုပေါ	စောဘွဲ့မှူး
80094	အစမ်းသပ်ခံ အသည်းနှလုံး	မင်းချစ်သူ
80098	အလွမ်းကစီး	ဂျန်သင်ဇမ်း

Internal Songs List - MYANMAR

[illegible]

