

Get Started



Congratulations on your purchase! Please take a few minutes and read this poster to set up your device.

T-Mobile SDA™



- Data Connection Status** (G icon)
- Battery Level** (Battery icon)
- Signal Strength** (Signal bars)
- Applications** (Most recently used icons)
- Ring Profile** (Select to change ring profile)
- Wi-Fi Status** (Select to turn on/off Wi-Fi)
- T-Mobile My E-Mail** (Select to sign up for My E-mail)
- Text Messaging** (Select to open the Inbox)
- Appointments** (Select to view)
- Hide My E-Mail** (Select if you want to hide T-Mobile My E-mail)
- Start** (Select to open the Start menu)
- Contacts** (Select to open the contacts list)


Setting Up

1 Insert SIM card and battery

1. Push here to detach the SIM card.



3. Slide the SIM card tray away from the center of the device and then lift it up.

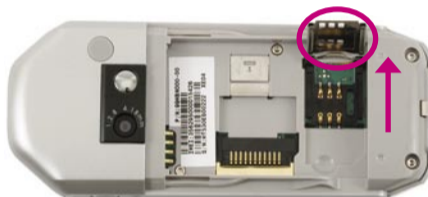

5. Lower the SIM card tray and press down gently to lock it.



2. Press down on the back cover and slide it open. Remove the battery by lifting it up.



4. Align the angled corner of the SIM card with the angled corner of the SIM card tray. Slide the SIM card into the tray.



6. Align the gold contacts on the battery with the contacts in the battery compartment. Press the battery down and slide the back cover closed.



2 Charge battery

Charge using AC adapter
Insert the AC adapter plug into an electrical outlet and the other end into the sync connector port of the device.

OR

Charge using USB cable
Insert the USB plug into a USB port on your computer and the other end into the sync connector port of the device.

Note: If battery power is completely drained, then you have to use the AC adapter to charge it instead of using the USB cable.



USB Cable AC Adapter




3 Turn on device and make calls

Now you are ready to turn on your device and start making calls. To turn on, press on top of the device.



<p>Make a call Dial the number and press </p>		<p>Answer a call Press </p>	
<p>Call voicemail Press and hold </p>		<p>End a call Press </p>	
	<p>Check balance Press #BAL# and press </p>		<p>Reset voicemail password Press #PWD# and press to reset your password to the last 4-digits of your phone number.</p>
<p>Find your number Press #NUM# and press </p>		<p>Add a contact At Home screen, select Contacts > New. Type contact's information and select Done.</p>	
<p>Check minutes used Press #MIN# and press </p>			

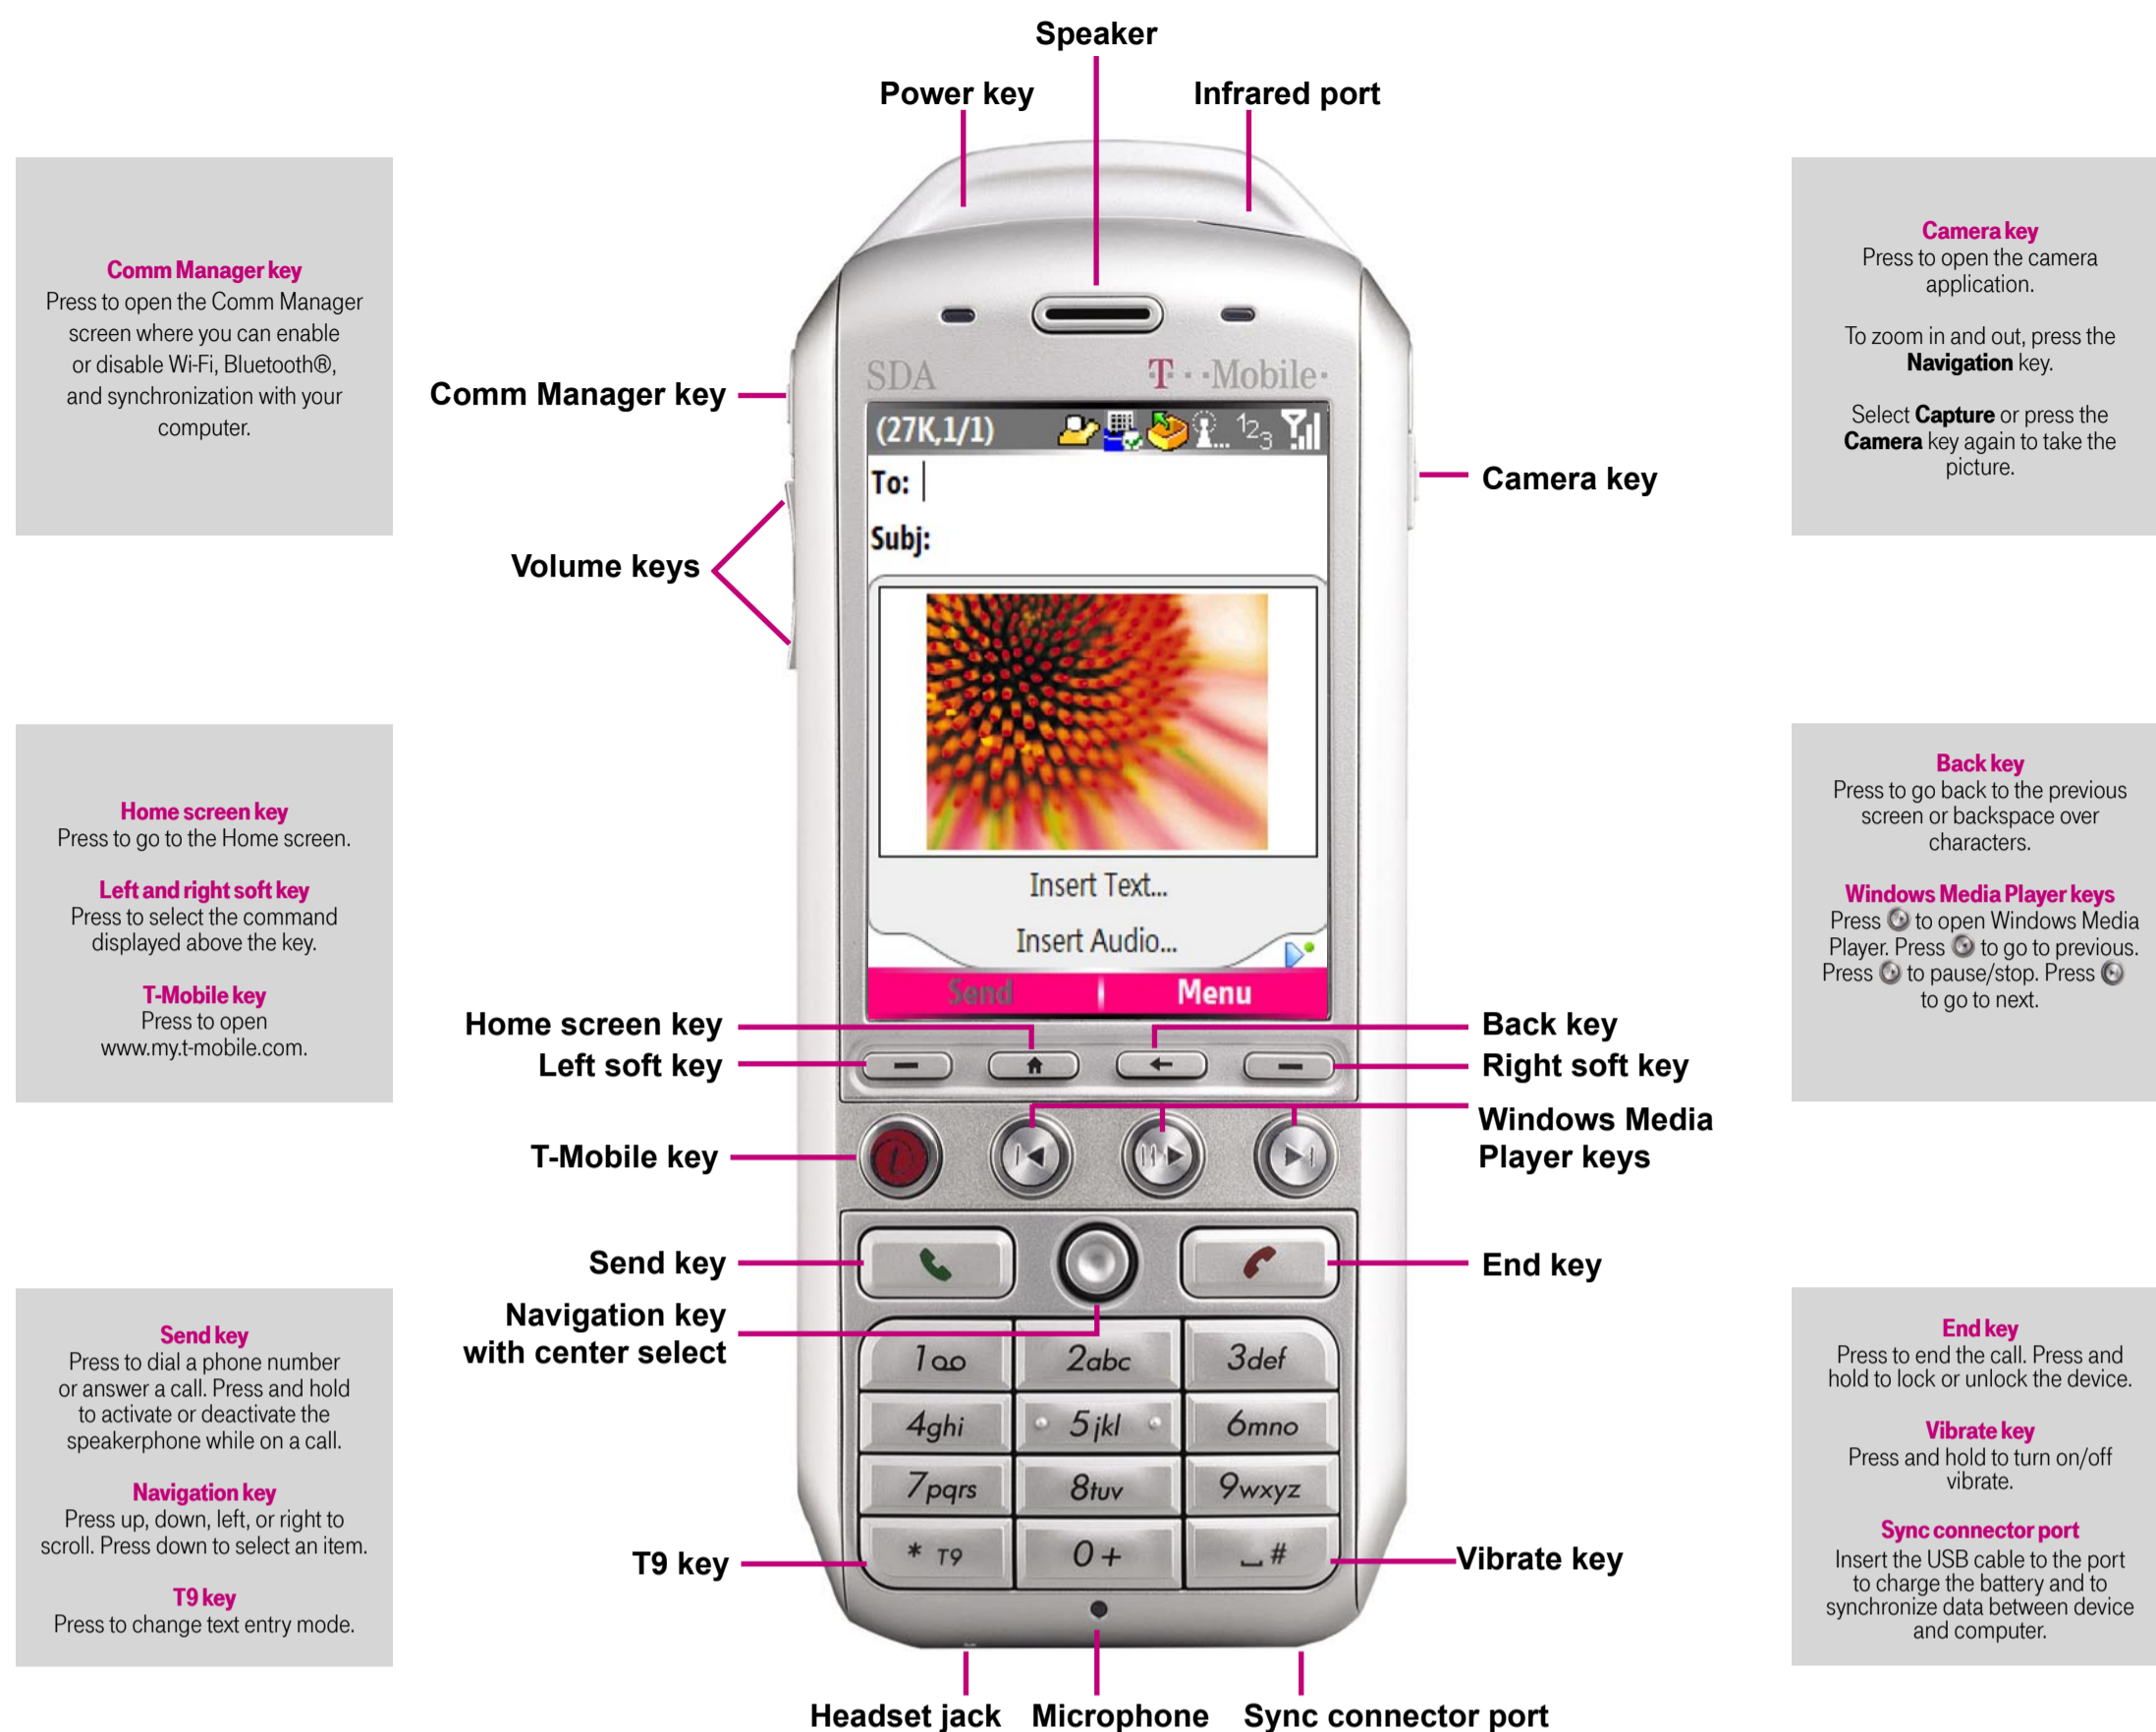

Tips

Type using your device

Your device supports four text entry modes: **Multipress**, **T9®**, **Number**, and **Symbol**. When you are typing text, your device automatically selects the appropriate text entry mode.

Multipress allows you to type letters by pressing the key labeled with the letter you want until the correct letter displays. For example, to type **Hey**, you press **4** twice, then **3** twice, then **9** three times.

T9 allows you to type words with one keystroke per letter. The device analyzes your keypresses and attempts to complete the word. For example, to type **Hey**, you press **4, 3, 9**.

Number and Symbol allow you to type numbers and symbols.

To insert symbols

Press until the Symbols list appears. Scroll to and select the symbol that you want.

To insert a space

Press to add a space after a word.

To change text mode

Press until you see the desired mode.



Text Mode Indicator
T9 for T9 mode
abc for Multipress mode
123 for Number mode

To type punctuation mark

Press repeatedly until you see the symbol you want.

To delete characters

Press to delete single character. Press and hold to delete entire text field.

To add a + to a phone number

In Numeric mode, press and hold .

Features and Services

For more information on how to use these features and services and the applicable charges for usage, please refer to the T-Mobile SDA™ Welcome Guide, User Manual on the CD, and visit www.t-mobile.com.

E-Mail

T-Mobile My E-Mail provides you unlimited access to your work and personal e-mail. Instantly access your e-mail from AOL®, Yahoo!® Mail Plus, EarthLink™, Comcast®, Microsoft® Exchange, Lotus Notes®/Domino®, and more, including any POP3 or IMAP4 e-mail server. Select **My E-mail** on the Home screen to begin.

Pocket MSN allows you to send and receive e-mails from your free Hotmail account and send and receive instant messages with MSN® Messenger.

Data

T-Mobile Internet (GPRS/EDGE) gives you wireless access to the Internet over the GPRS / EDGE network in many locations across the U.S. and worldwide.

T-Mobile HotSpot (Wi-Fi) gives you wireless access to the Internet over the T-Mobile Wi-Fi network in convenient locations across the U.S., such as airports, coffeehouses, bookstores, universities, and more. To turn on Wi-Fi, select **Wi-Fi** on the Home screen to open the Comm Manager.

Messaging

Text messaging allows you to send, receive, and reply to short text messages using your device.

Picture Messaging allows you to send and receive picture / video messages.

At Home screen, select **Start > Messaging** to read and send text and picture messages.

Instant Messaging allows you to log in to AOL®, ICQ®, and Yahoo!® using your device.

Synchronization

You can synchronize e-mail, calendar, contact, tasks, and notes by connecting your device to your computer using the USB cable.

You can also wirelessly synchronize if you have Microsoft Exchange Server 2003, and if the server is set up for wireless synchronization. Set up synchronization by using the Comm Manager and selecting **Menu > Add server source**.

FOR MORE INFORMATION

To find more information on how to use your device, go to:

T-Mobile SDA™ Welcome Guide
Comes with your device

User Manual
On the CD that comes with your device

Microsoft Windows Mobile Web site
<http://www.microsoft.com/windowsmobile>

T-Mobile Web site
<http://support.t-mobile.com>
Select your device from the drop-down box

T-Mobile Customer Care
For general questions, call **1-800-937-8997** or dial 611 from your mobile phone. For T-Mobile HotSpot questions, call **1-877-822-SPOT**. We are available 24 hours a day, 7 days a week.

T-Mobile is a federally registered trademark, and T-Mobile SDA is a trademark, of Deutsche Telekom AG. All other brand names, product names, company names, trademarks and service marks are the property of their respective owners. (c) 2006 T-Mobile USA, Inc.