



Model: T1002S

USER MANUAL

Content

Content	1
1 Introduction	3
1.1 Acknowledgement	3
1.2 Announcements	3
2 PC - Tablet Introduction	4
2.1 Startab T1002S Operation and Preparation.....	4
2.2 Startab T1002S Status and Reminder.....	4
3 Quick Start Guide	5
3.1 Keys Function.....	5
3.2 Startup and Shutdown	5
3.3 Open and Close of the Screen.....	5
3.4 Usage of Touch Screen	6
3.5 Home Page	7
3.6 Visit Application Procedures.....	8
3.7 USB Connection	8
3.8 Typing words	9
4 Basic Setting	11
4.1 Wireless and Internet	11
4.2 Bluetooth.....	11
4.3 Data Usage	12
4.4 Connectivity.....	12
4.5 Display	14
4.6 Storage	15
4.7 Battery.....	17
4.8 Application program	17
4.9 Account and Sync	19
4.10 Location service	19
4.11 Safety setting.....	20
4.12 Language and Input Method	22
4.13 Backup and Reset.....	23
4.14 Date and Time	23
4.15 Fixed-time Startup and Shutdown	24
4.16 Assistance Function	24
4.17 Engineer Selection	25
4.18 About Tablet.....	26
5 Multi-Media.....	27
5.1 Music	27
5.2 Video.....	28
5.3 Photo Gallery	28
5.4 Camera	29
5.5 FM Radio	30

6 Internet.....	31
6.1 Browser.....	31
6.2 Email.....	31
7 Other Application Procedures.....	33
7.1 Clock.....	33
7.2 Calculator.....	33
7.3 File Manager.....	33
7.4 Recorder.....	35
8 Installation of Procedures.....	36
8.1 Installation	36
8.2 Uninstall.....	36
9 Troubles Shooting.....	37

1 Introduction

1.1 Acknowledgement

Thanks for your purchase of our product. 3nStar-T102S, high definition tablet PC, CPU Rockchip 3026, Cortex-A9, dominant frequency is 1.0GHz, OS Android 4.4.2.

The product is designed with various functions, including, WIFI, BT and so on. It is easy to achieve wireless communication and internet, you have access to surf in the internet anytime and anywhere; There are many sensors which offer you brand-new operation and entertainment; besides, it has camera shooting, which leads electronic consumption to enter into a fresh palm internet entertainment time.

The manual systemically introduces the functions, use techniques and announcements, please read this manual carefully before use.

1.2 Announcements

Preventive maintenance

- Please always keep the tablet PC dry. To avoid the device short trouble, corrosion fault and electric short, please prevent the device, battery and charger from water and moisture, and don't operate the device or charger with wet hand.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock, shake, over heating or cold temperature.
- Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

2 PC - Tablet Introduction

2.1 Startab T1002S Operation and Preparation

Battery Charging











Before using this device, proceed to charge it.

1. Apply the power adaptor to charge.

2.2 Startab T1002S Status and Reminder

Reminder icons

When some remind message appears in your reminder window, please click column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons:

	New email		Airplane Mode on
	USB connected		USB debugging connected
	Return button		Downloading
	Show recently-used application		Home button
	Current electric volume.		WIFI connected,

Reminder board

Reminder icons will work while receiving emails, WI-FI is open, you can open the reminder board to view the detailed information.





Open the reminder board

When the reminder column shows new reminder icon, please hold the column and slip down your finger, then the reminder board is opened.

3 Quick Start Guide

3.1 Keys Function

Keys Function Description:

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)	increase the volume
Volume - (down)	decrease the volume
HOME button (home) 	Click it in any interface will return to main interface.
Back button (back) 	click it in any interface will return to previous menu
Menu button 	This button will display in menu interface.
Setting button 	display recently browsed history

3.2 Startup and Shutdown

Startup

Long press **POWER key for three seconds**, you can enter into startup picture. The system enters into screen lock status, please unlock it.

Shutdown

1. Long press POWER, it will popup shutdown window.
2. Shutdown window contains mute mode, airplane mode, reboot mode and shutdown four options.
3. Click Shutdown is the last step.

 
3.3 Open and Close of the Screen

1. Screen will be closed automatically when is not being used in order to save battery power

2. When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen.

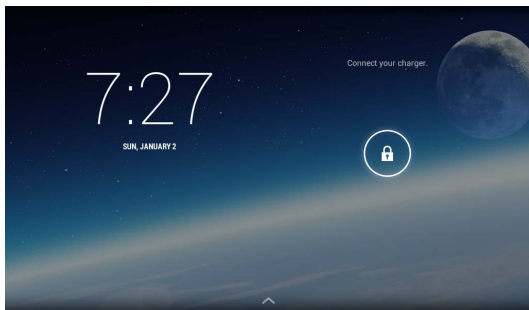

Picture 3.1

3.4 Usage of Touch Screen

T1002S operating methods:

There are below methods to view the main screen, menu and application procedure in your PC-tablet.

Click

When you want to use the screen keyboard or choose application in the main interface, you only need to touch it by your finger.

Press on

If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizontal movement by finger.

Pull

Before you pull, you need to hold the it with strength until you pull it into the position you want.

Rotate


For most pictures, you only need to rotate the PC Tablet sidewise to change the screen direction from horizontal to vertical. For instance, when you are typing words, and watching movies.

3.5 Home Page

Main interface as below picture 3.2, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.




Remove the icons in desktop

1. Long press the icons need to be remove, then on the right above of the screen, it will appear  icons.
2. Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

Change the wallpaper of desktop

1. In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.
2. Click the gallery or wallpaper gallery to select the wallpaper.

3.6 Visit Application Procedures

Click  in right top of Picture 3.2, enter into main interface as Picture 3.3, choose the application procedure you want to visit.



Picture 3.3

 
Return to home page

3.7 USB Connection

Storage configuration

Before transmitting documents, you have to conduct storage configuration for your PC Tablet:

1. Connect the PC-Tablet and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the PC-Tablet status and reminder to learn how to open the board.
3. In the reminder board, click the "USB Connected", it will as below Picture 3.4, then click "open USB storage configuration".
4. Now the USB is connected successfully.

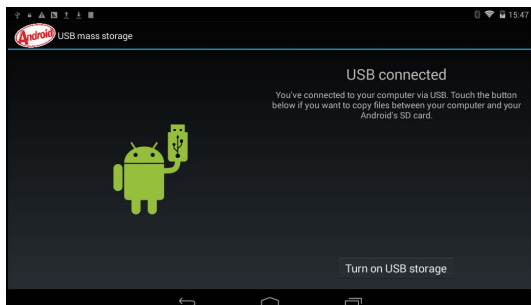

Picture 3.4

Copy the document into memory card

1. Connect the PC Tablet to computer with USB cable.
2. As the PC Tablet storage configuration, it is connected with computer successfully.
3. Open the "My computer" in your computer, check the items in "removable disc".
4. Copy the documents you need into "removable disc".
5. After copying finishes, click "shutdown the USB storage configuration" to uninstall.

Notice: When the PC Tablet is connected with USB cable, and you open the USB storage configuration, you can't view the memory card. Only after you detach the USB cable, you can view the memory card.

3.8 Typing words

Use the screen keyboard

When you start the procedure or choose the words or numbers edition, it will show the screen keyboard. The keyboard contains below typing options:

 
1. Android keyboard
2. Google Pinyin

Choose the typing method you want

1. Click Setting pocedure application.
2. Click Language and Keyboard.

3. In the text setting area will reveal all the installed words-typing methods in your PC Tablet.
4. Tick the typing method you want.

Use and switch of input method

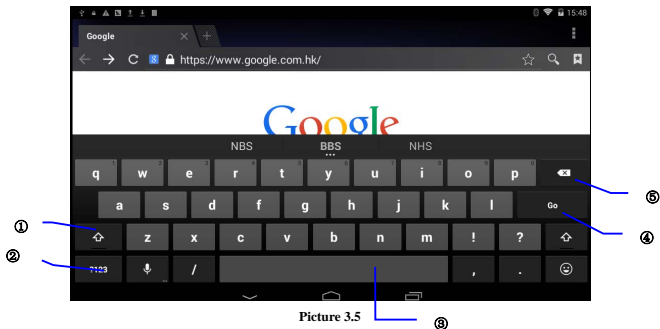

Picture 3.5

1	switch the capital and small letter
2	switch the mode of words input
3	click to insert the space
4	click input to execute
5	delete the character in the left of cursor, click and hold to delete all the characters in the left of the cursor.

4 Basic Setting

4.1 Wireless and Internet

1. Connect Wi-Fi

- (1) In the main menu or interface, choose **setting** application procedure.
- (2) Click WLAN, open Wi-Fi, The PC Tablet will automatically search the available Wi-Fi wireless internet. Choose the Wi-Fi internet you want to connect, if it has password, it will pop up the password window, enter password, click connect.

2. Add Network


1. Click  icon in right top

- 1) Input network SSID, the wireless network name, click save.
- 2) Click user name already saved, click connect to use network.

2. Network Notice


If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network, as Picture 4.6

3. Keep WI-FI on during sleep...

- (1) Click  icon in right top of Picture 4.8, select **advanced**.
- (2) Click **Keep WI-FI on during sleep, and choose" always"** option.


4.2 Bluetooth

 
Bluetooth function operation

1. Click setting application in main menu interface
2. Click bluetooth and open it.
3. If somebody open bluetooth in your surroundings, click search device in right above, then MID will automatically search the bluetooth device nearby.
4. Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.
5. After match successfully, choose the operation you want to, click  to enter into Bluetooth setting center.

4.3 Data Usage

Check WIFI data usage

Click  icon in right top of Picture 4.15, click **Data Usage**, as Picture 4.3.1

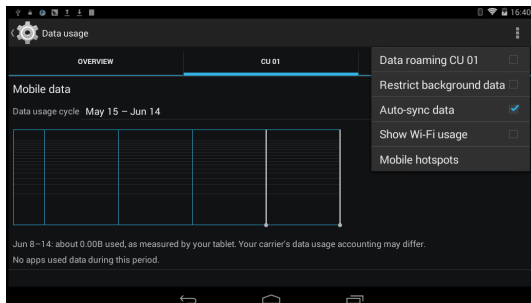

Picture 4.3.1

 
4.4 Connectivity

4.4-1 Airplane Mode

Airplane Mode can turn off W1-FI and Bluetooth function quickly, when airplane mode is turned on, WIFI and Bluetooth can't get any signal, then airplane mode is turned off, WIFI and Bluetooth module will recover to previous state.


4.4-2 VPN

Open VPN, click **add VPN network**, as Picture 4.4.1. Input **name** and server address, then save.

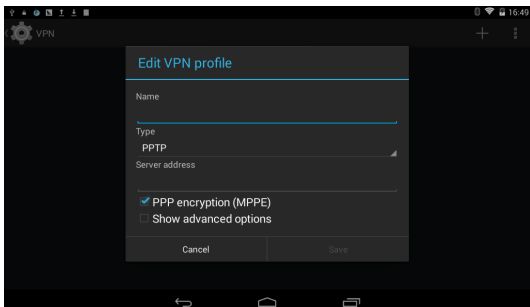

Picture 4.4.1

 Click VPN, as Picture 4.4.2, input VPN user name and password, click connect.

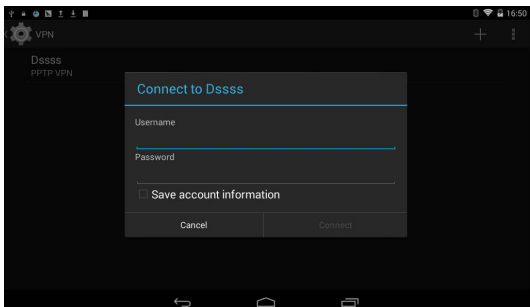

Picture 4.4.2

4.4-3 Network sharing and portable hotspots

Portable WI-FI hotspots

 
1. Click setting application in main menu.
2. Click more when Wi-Fi is well connected, open network share and portable hotspot
3. Click keep WI-FI hotspots on, choose open time.

4. Return to previous menu, open portable WLAN hotspots, and click set up WI-FI hotspots.
5. Set passwords you want to, password should be more than 8 numbers.

4.5 Display

4.5-1 Adjust the screen brightness

1. Click **Setting** application procedure.
2. Click **display**, choose brightness,
3. Drag the portlito to adjust the brightness volume.As Picture 4.5.1

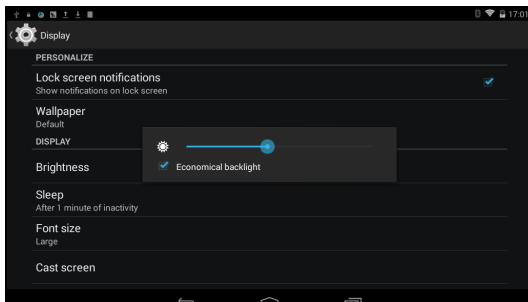


Picture 4.5.1

4. Click OK after brightness is adjusted.

4.5-2 Wallpapers

 1. Click **setting** application.
2. Click **display**, click **wallpaper**.
3. You can choose different wallpapers as you like—live wallpapers---gallery(user defined)---wallpapers (system defect)---video wallpaper, as **Picture 4.5.2**

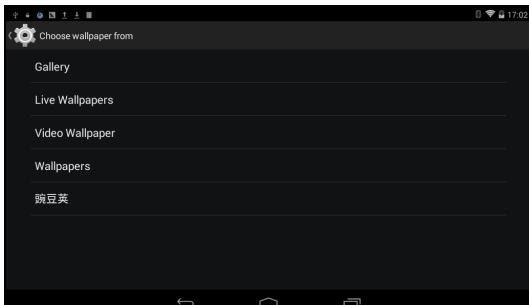

Picture 4.5.2

4.5-3 Auto rotation

System is defaulted as open auto rotation, when it is turned off, system won't rotate the PC Tablet screen by G-sensor.

4.5-4 Sleep

1. Click setting application.
2. Click display.
3. Click sleep.
4. Set the sleep time as you want,

4.5-5 Font size

Click **font size** to adjust the font size

4.6 Storage

Open setting function, click memory, click **preferred install location**, you can choose install new application to choose preferred install location.

 
Check SD card and PC Tablet storage space.

5. Enter into setting application.
6. Click storage, check storage space.

1. Storage

(1) System storage


System storage is the space available in the PC Tablet, as Picture 4.6.1. it can't be viewed.

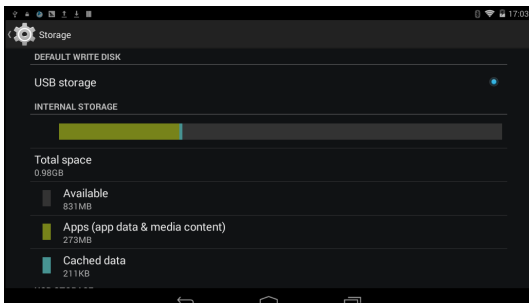

Picture 4.6.1

(2) Internal storage

 
Internal storage for the PC Tablet is local NAND storage, as Picture 4.6.2, if you need to check the storage content, you can check it in main menu.

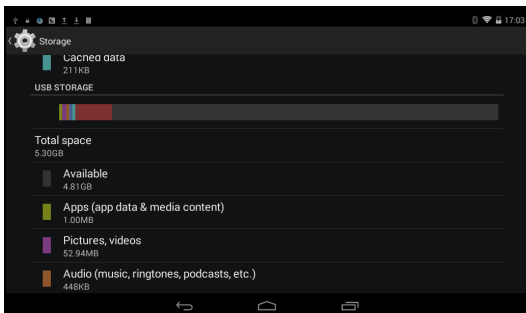

Picture 4.6.2

2. SD card

 You can check storage space, SD card available space, unmount SD card and erase SD card, as Picture 4.6.3

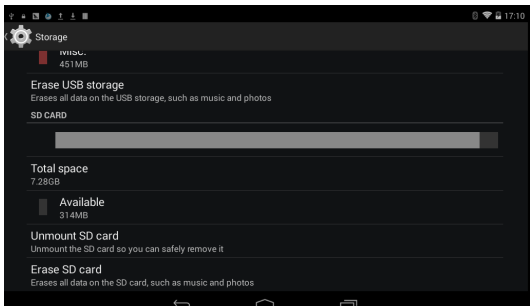

Picture 4.6.3

Safely remove SD card

1. Click setting application.
2. Click memory.
3. Click uninstall SD card.
4. Now you can remove SD card safely.

 
Note: Removing SD card safely can protect SD card and increase its lifetime.

4.7 Battery

Click setting function, select battery, you can view the battery situation


4.8 Application program

1. Click setting application in Apps.
2. Select application, after enter, you can manage and delete installed application and check system used storage space and left space. (As Picture 4.8.1)

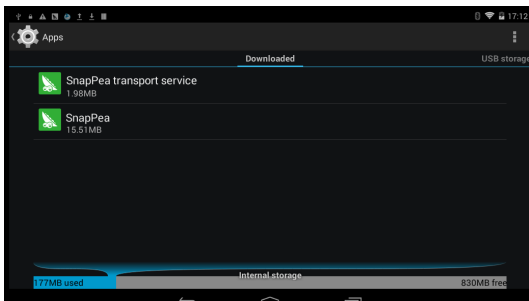


Picture 4.8.1

 3. View internal storage used space and left space, as Picture 4.8.2

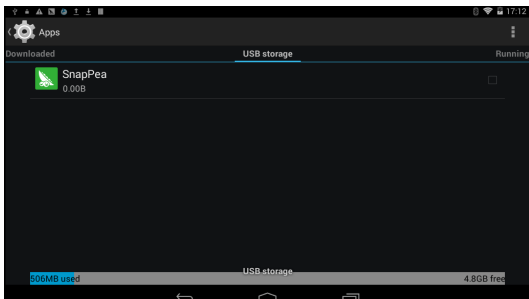

Picture 4.8.2

 4. View the working device, used space and available space, as Picture 4.8.3

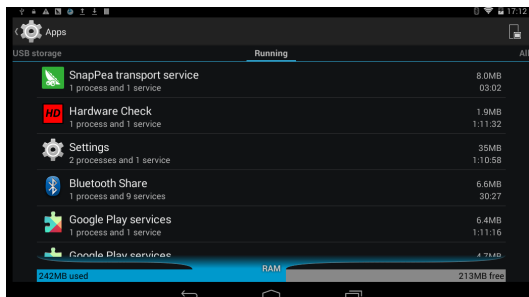


Picture 4.8.3

4.9 Account and Sync

1. Select setting application
2. Open account and sync
3. Click **add an account**
4. After successfully load, it will open the sync function

4.10 Location service

 Click **setting**, select **Mode**, as Picture 4.10

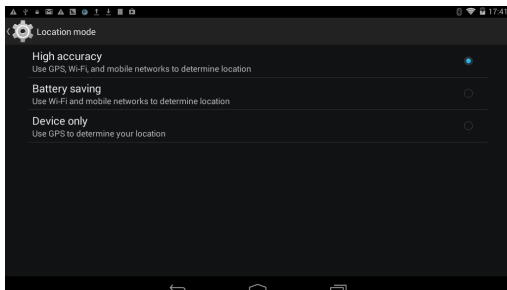

Picture 4.10

4.11 Safety setting

 
Set locked screen

Lock the touch screen by unlock icon or password to protect your PC Tablet.

Note: After setting screen locked, you should enter the passcode each time when you startup or screen is locked

Set unlocked picture

1. Click setting application in main interface.
2. Click **safe**.
3. Click **locked the screen**.
4. Choose **picture** in text setting area.
5. Click next following the remind message.
6. The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction. As Picture 4.10, move your finger from the screen when finish. The system will record your new unlock pattern.
7. Click **continue**.
8. When you see the reminder, enter the unlock pattern, then click **confirm**.

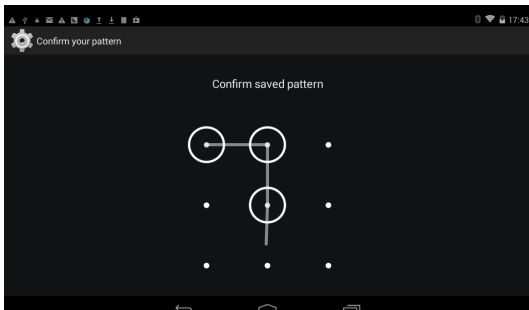

Picture 4.11.1

Set unlock PIN code

 
1. Click **setting** application in main interface.
2. Click **safe**.
3. Click **screen locked**.
4. Choose **PIN** in text setting area.
5. Enter new PIN code(numbers) and click **continue**.
6. Enter new PIN code again and click **confirm**.

Set unlock password

1. Click **setting application** in main interface.
2. Click **safe**.
3. Click **screen locked**.
4. Set password in text seting area.
5. Set new password(letters and numbers) and then click **continue**.
6. Enter the password again and the click **confirm**.

Unknown source

1. In main interface, click **setting**.
2. Click **safety**.
3. Click **unknown source**,as Picture 4.11.2

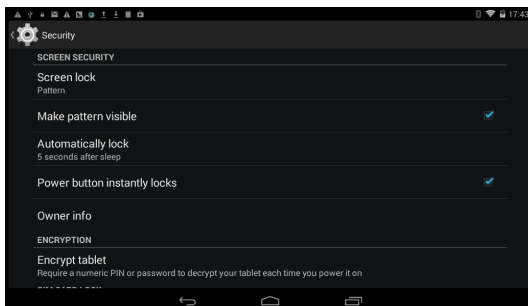


Picture 4.11.2

Note: Manual installing APK files needs to turn on unknown source.


4.12 Language and Input Method

 Click setting, select language and input method, choose language to switch language, as picture 4.12.1

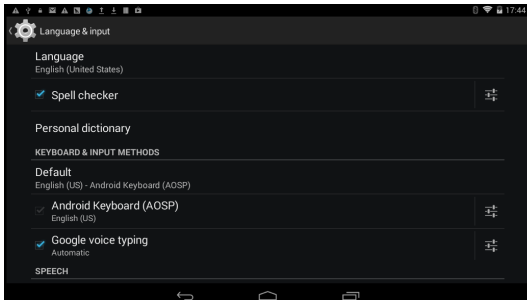

Picture 4.12.1

 Click setting, choose language and input, choose Android keyboard setting, click input language, as Picture 4.12.2

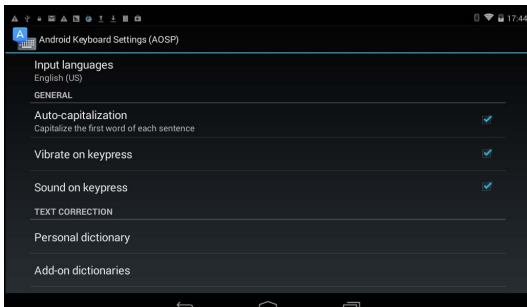


Picture 4.12.2

Choose the language you want to change in the language list,

4.13 Backup and Reset

Connect WI-FI and login your google account, choose **backup my data**, system will backup your data into google server.

 If you need to recovery factory reset, please click reset, as Picture 4.13.1, if you need to formulate NAND, please click reset tablet.

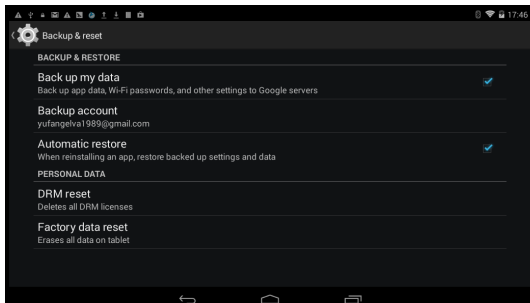

Picture 4.13.1

4.14 Date and Time

According to the preset, system will voluntarily apply the date, zone, and time provided by internet.

Manual set date, time and zone

1. Click Setting application procedure.
2. Slide down the screen, then click **date and time**.
3. Turn off "auto setting of date and time".
4. Turn off "auto setting zone".
5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.

6. Click **Date setting**, then click upper or down button to adjust date, month, and year, click **setting** when you finish selection.
7. Click **Time setting**, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon (there is no such selection when you se 24-hour format). Click **Setting** to finish.
8. Click **24-hour format**, switch between 12-hour or 24-hour formay, the time format you choose will be used on the alarm clock.
9. Click date format setting, then choose the time format you want to show on MID.

Note: If you use the time internet provided, you will not able to set the date, time and time zone.

4.15 Fixed-time Startup and Shutdown

 
1. Click **Setting** application procedure
2. Click **fixed-time startup and shutdown**.
3. Operate as below Picture 4.15

Click it into
fixed-time.

Click it into
fixed-time
shutdown

Turn
on/off

Turn on/off
fixed-time
shutdown

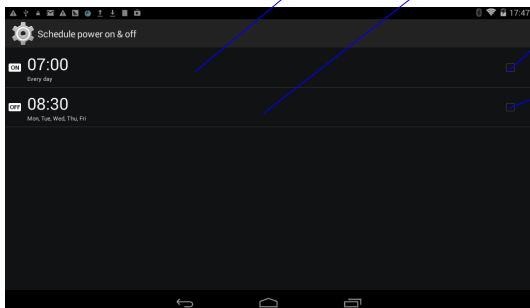

Picture 4.15

4.16 Assistance Function

4.16-1. Large size

 
Click it to make system font large size

4.16-2. Click power button to end calls

When Click call, press “power” button, call will end but not hold.

4.16-3. Touch and hold delay

Click touch and hold delay to increase time, as Picture 4.62

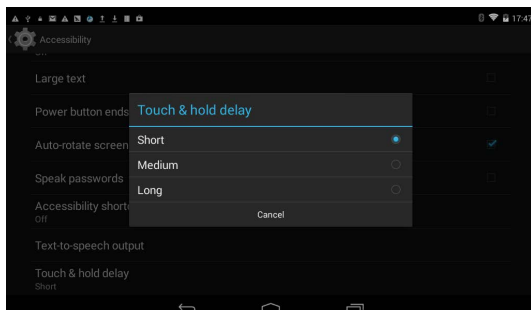

Picture 4.16.1

4.16-4 Install webpage script

It will allow you install webpage scrip when you open system, but it will increase the risk when you are browsing webpage.

4.17 Engineer Selection

4.17-1 USB adjustment

After opening USB adjustment, you can use some software to read the PC Tablet software, but when USB adjustment is turned on, USB storage needs to manual adjust.

4.17-2 Keep awaken state

If you open keep awaken state, it will never auto sleep when your PC Tablet is charging.

4.17-3 Pointer Location

If you open pointer location, it will display touch vertical and horizontal direction.

4.17-4 Show touches

 
If you open display touch screen operation, it will display touch opeation on the screen. It is suggested to use with same direction as pointer location.

4.17-5 Show screen update

If you open screen refresh, it will display related area when the area is refreshing.

4.17-6 Show CPU usage

After open CPU usage, in the right top of the PC Tablet will show CPU usage situation.

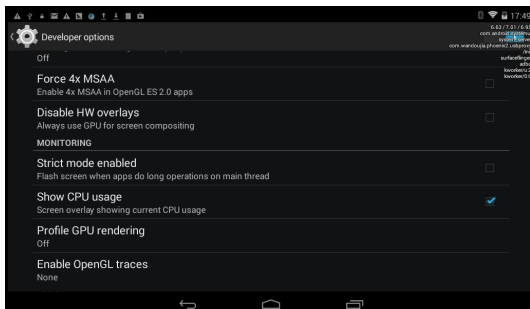

Picture 4.17

4.18 About Tablet

 
Check the PC Tablet state

1. Check **Setting** application.
2. Click **about tablet**, check **state message**, **model**, **Android version**, **version No** and so on.
3. Click **state message**, check **battery state**, **battery volume**, **IP address**.


5 Multi-Media

5.1 Music

Enter into music player: in menu or desktop click music  icon to enter into music player, click the music you want to play, as Picture 5.1:

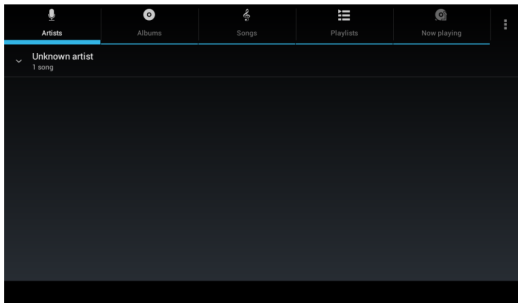


Picture 5.1

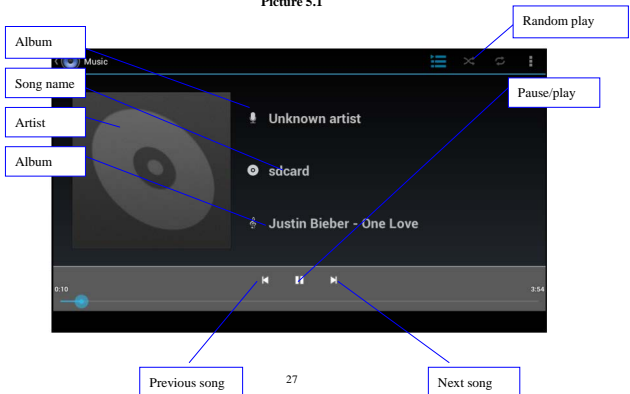 


Picture 5.2

- Drag the progress bar to adjust play progress.
- Operation of music player button as Picture 5.2

5.2 Video

 - Enter video player: choose  application in main menu, choose the video you want to play.
- Operation of video player button as Picture 5.3

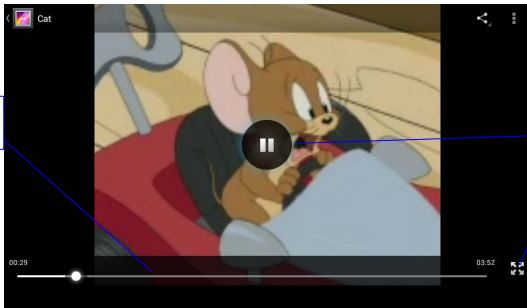

Picture 5.3

5.3 Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

1. Click gallery application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will play it in full screen mode automatically.
4. The pictures can be zoom in and zoom out, put two fingers on the screen, the


separate the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

- **Slide Show**

1. Open a picture, use virtual key to click menu key, display menu selection.
2. Click **slide show**, it will auto loop play(or choose  button in picture folder)

- **Crop**

1. Click **menu** key to display menu selection.
2. Then click crop, click and drag related area to adjust the cropper.
3. Click cropper and drag it inside and outside to adjust the image.
4. After adjust the size you want, click **crop**.
5. If you wish to give up to crop, click **cancel** to return to picture browse.

 
- **Edit**

1. Click **menu** key, display the menu selection.
2. Click **edit**.
3. Adjust the brightness, style, color, antialias setting in selection.
4. Click **save**.
5. If you want to give up edit, click **return** key, click **not** to return to picture browse.

5.4 Camera

In the main interface or desktop, click camera application procedure  enter into camera


- Operation of camera ,Switch camera: choose **Menu** key, click **switch front/back camera**, as Picture 5.4

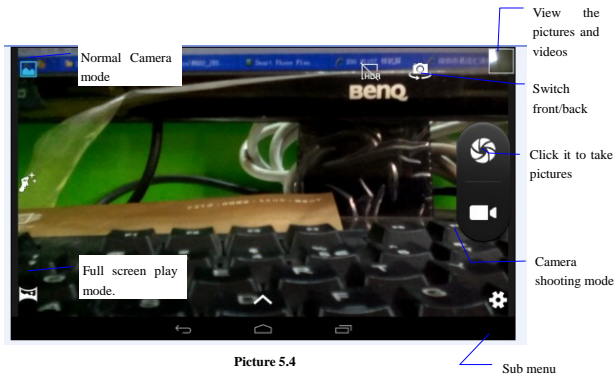


Picture 5.4

 5.5 FM Radio



Click  in the main interface or desktop to enter into FM radio interface:

 
- Radio button operation instruction as Picture 5.5:
-

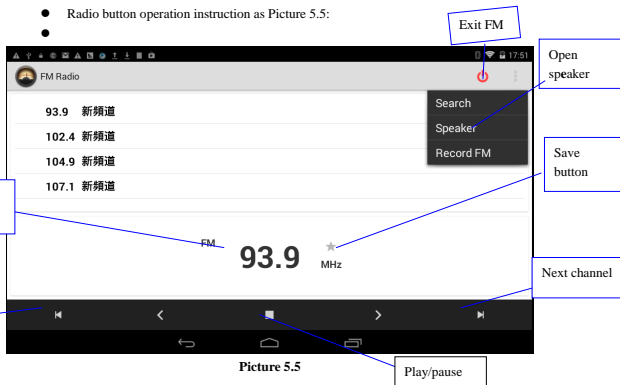

Picture 5.5

 
6 Internet

6.1 Browser

In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser  in the main menu or desktop to enter the IE interface.


6.2 Email

Email application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Yahoo, Gmail, Hotmail and 163), as Picture 6.2

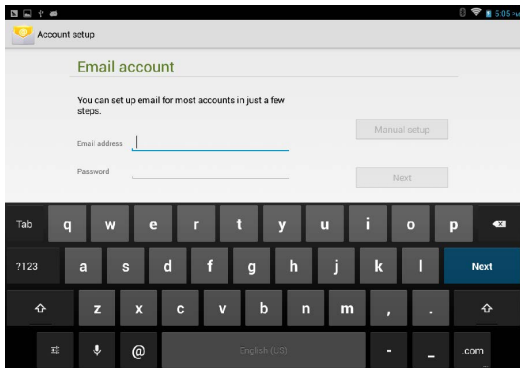

Picture 6.2

a. Email Setting

1. After you click the sending email icon , you can see the email setting guide, which can help you to set.
2. Input your email address and password.
3. Click “Next step” button, choose your email type is POP3 or IMAP.
4. Click “Next Step” button to check whether the email box servicer can receive or

send emails

5. Input the email account and display the email subject, and click **finish**.
6. If the email box is available, you will enter into your mail box automatically.



b. Delete the email account

You can delete setted POP3 or IMAP email account from your PC-Tablet.

Click .

1. Enter into your mail box.
2. Press Menu key.
3. Click Account
4. Press the account you want to delete.
5. Click confirm to remove.

c. Send E-mail

 
1. Click  to display your mail box.
2. Click the inbox, it will refresh the new emails automatically; click it to read new email.
3. Press Menu key. Menus will popup.
4. Click **Edit**  to enter into new email editing interface.
5. Input the receiver's email address.
6. Input the subject and email content.
7. If you want to add attachment, click menu key, the menu popup.
8. Click "Attach file" (photo, music, video, contacts).
9. Click "send" to send the email out.

7 Other Application Procedures

7.1 Clock


Click **Clock** procedure, enter into below interface as Picture 7.1.

There are clock, picture, music and homepage buttons.

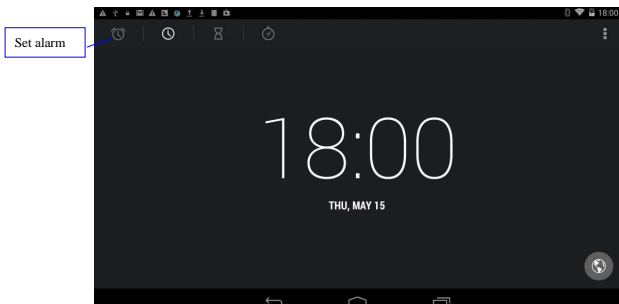


Picture 7.1

7.2 Calculator

 
1. Click .
2. Enter into the basic board of calculator.
3. Soft touch the numbers or operator in calculator to calculate.

7.3 File Manager



File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc.


In the main menu or desktop, click the document manager icon  to enter into documents manager.

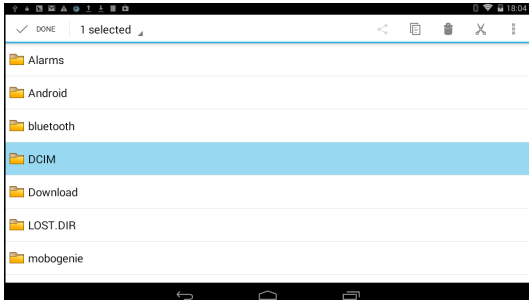a、Copy, cut, delete, rename the files and folder: choose the file or folder, long pressthe file or folder to enter into the interface as Picture 7.2, you can operate the file or folder.




Picture7.2

 b、Paste the copy or cut file: choose the file you want to paste, choose right top  icon to enter into Picture 7.3, choose right top  icon to enter into Picture 7.4

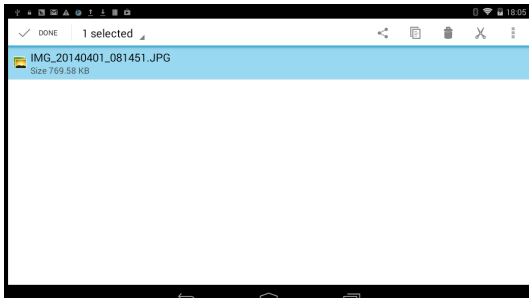


Picture7.3

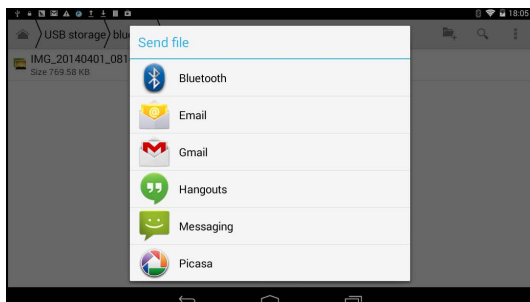 





Picture 7.4

C. Share file: choose any file, long press it, it will popup "share", choose the share way you want in the list

D. Install apk file Choose the file suffixed .apk in the file manager, you can install the third part software as reminder.

E. Build new folder: Choose the menu you want to build the file, click  icon in right top, choose new folder, you can build new folder as reminder.

7.4 Recorder

In the main interface or desktop, click recorder icon  to enter into record interface, click record key  to start record. Click Stop key  to stop recording. Click Play key  to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually.

Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.

8 Installation of Procedures

8.1 Installation

Install the third party application procedure

1. Click “file manager” application procedure; choose the application procedure you need to install.
2. Hold the application procedure you need to install.
3. It popup **install**, click **install apk**.
4. Finish the installation as guide, it will operate.

Note: The third party procedure searched from internet to use on the system are all suffixed with .apk.

8.2 Uninstall

Uninstall application procedure

1. Click setting icon in main interface.
2. Click **manage application procedure**, list all the application procedures insralled in the system.
3. Click the APK you want to uninstall, click **uninstall**.
4. Click **confirm** to finish uninstallation.

Skill: The procedure manager installed by system has many convinient methods to uninstal after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

9 Troubles Shooting

1. Slow the first startup of the PC Tablet

After the PC tablet system upgraded, the first startup need to install the pre-installed application softwares, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

2. The PC Tablet can't connect Wi-Fi

- Make sure the wireless router of internet service is working.
- Ensure the PC Tablet and wireless router in certain distance, and no wall or other barrier between them.
- Ensure the user name and password are correct.

3. The PC Tablet feels hot

When many application procedures are used or the brightness of screen open to the lightest or under charging the PC tablet may gets hot. It is normal.

4. Email can't be set or Registration of application procedure.

- Ensure your internet is well connected.
- Make sure your email setting way is correct.
- Keep your system time and local time consistent.

5. The system is abnormal and can't work.

When you install some third party application procedure, it may cause abnormal work, you can press **Reset key**(next to power port) to reset the system.

6. The webpage can't be opened

- Please keep the distance between from route to the PC Tablet in effective range.
- Please restart WI-FI and try again.

7. The PC Tablet works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resource.