



D70V50G

User Manual

Content

Welcome	3
About The Manual	4-5
Disclaimer	6
The Android Advantage	7
Safety Instructions	8-9
Device Layout	10
Basics	11
Getting Started	12
SIM Card Insertion	13-14
Memory Card Insertion	15-16
Charging the Battery	17-18
Turning the Device On/Off	19
Adjusting the Volume	20
Lock/Unlock Screen	21
Reset the Tablet	22
Using the Touch Screen	23-26
USB Connection	27
Bluetooth	28
Connecting to the Internet	29-32
Communication (Voice Calls)	33-34
Contacts	35-36
Messages	37
Basic Tablet Features	38-40
Multi Media Features	41-42
Managing Accounts	43-44
Android Market	45
Google Maps	46
Troubleshooting	47-48
Taking Care of Your Device	49
Recycle your Tablet PC	50
Copyrights	51

Welcome

Welcome to the AOC family. Congratulations on becoming a proud owner of the AOC D70V50G Android Tablet PC. Your Tablet PC offers you a range of exciting features and much more. Please read the user manual carefully before using your Tablet PC to understand your device and its usage better.

About The Manual

Your AOC device provides high quality mobile communication and entertainment using AOC's high standards and technological expertise. This user manual details the device's functions and features.

- Please read this manual before using the device to ensure safe and proper use.
- Descriptions are based on the device's default settings.
- Images and screenshots may differ in appearance from the actual product.
- Content may differ from the final product, or from software provided by service providers or carriers, and is subject to change without prior notice. For the latest version of the manual, refer to the AOC website, www.aocindia.com
- Content (high quality content) that requires high CPU and RAM usage will affect the overall performance of the device. Applications related to the content may not work properly depending on the device's specifications and the environment that it is used in.
- Available features and additional services may vary by device, software, or service provider.
- Applications and their functions may vary by country, region, or hardware specifications. AOC is not liable for performance issues caused by applications from any provider other than AOC.
- AOC is not liable for performance issues or incompatibilities caused by edited registry settings or modified operating system software. Attempting to customize the operating system may cause the device or applications to work improperly.
- Software, sound sources, wallpapers, images, and other media provided with this device are licensed for limited use. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Users are entirely responsible for illegal use of media.
- You may incur additional charges for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select an appropriate data tariff plan. For details, contact your service provider.

- Default applications that come with the device are subject to updates and may no longer be supported without prior notice. If you have questions about an application provided with the device, contact an AOC Service Centre. For user-installed applications, contact service providers.
- Modifying the device's operating system or installing software from unofficial sources may result in device malfunctions and data corruption or loss. These actions are violations of your AOC license agreement and will void your warranty.

Disclaimer

- The colors, specifications, functions and graphics shown/mentioned in the user manual may differ from the actual product. In such a case, the latter shall govern. Images shown are for representation purpose only. Specifications are subject to change without prior notice. AOC keeps the right to modify the content in this user guide without prior notice.
- Upon first use of your device, your device will send information related to your mobile, IMEI numbers, location details and other software details through SMS* automatically. This information may be used as further specified in AOC privacy policy**.
- Talk and standby times are affected by network preferences, type of SIM cards, connected accessories and individual usage patterns. Services and some features may be dependent on the network, service/content providers, SIM cards, compatibility of the devices used and the content formats supported.
- Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

*Operator tariff shall be applicable for SMS.

**AOC privacy policy is available at www.aocindia.com

The Android Advantage

AOC D70V50G comes with Kit Kat 4.4.2 that is capable of performing various functions just like your personal computer and can be personalized according to your needs. For example, you can add and remove applications or upgrade existing applications to improve the functions. At the Android market, an ever growing range of applications, games, movies, and books are available for you to download.

Safety Instructions



Remember to comply with legal requirements and local restrictions when using the phone.



Your device's radio waves may interfere with inadequately shielded medical devices. Consult a physician or manufacturer of the medical device to know whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations require you to do so.



Always keep the device and accessories out of reach of small children. Small parts such as the SIM card, dust cap, lens ring and lens cap as well as the micro SD card can be dismantled and swallowed by small children.



Do not place the device near electromagnetic data carriers such as credit/Debit cards. Information stored on them could be lost.



Permanent hearing loss may occur if you use earphones at high volume for prolonged periods. Set your volume to a safe level. If you experience discomfort in your ears, reduce the volume or discontinue the use of your earphones.



Ring tones, info tones and hands-free talking are reproduced through the loudspeaker. Do not hold the device to the ear when it rings or when you have switched on the hands-free function.



The mains voltage (V) specified on the power supply unit must not be exceeded to prevent damage to the charging device. The power supply must be plugged into an easily accessible AC power socket when charging the battery.



You are advised not to open the device to replace the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the warranty.



The device may cause interference in the vicinity of TV sets, radios and PCs.



All batteries can cause property damage, injury or burns if a conductive material tap the exposed terminals. Exercise care in handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. Do not dispose of batteries in fire as they may explode.



Do not use the device while driving. When you have to use the device please use the personal hands-free. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.



Flight is influenced by interference caused by the device. It is illegal to use a calling device on the airplane. Please turn off your device during a flight.



Professional service: The device must be installed or repaired by AOC authorized personnel. You are likely to suffer a huge risk when you install or repair this phone by yourself, which also goes against the warranty rules.

Device Layout























1	Micro USB	2	Front Camera
3	Headphone	4	Receiver
5	Volume	6	Power on/off
7	Reset	8	Speaker
9	MIC	10	Rear Camera
11	Proximity Sensor	12	3.5mm Headphone Jack

Basics

Indicator Icons

The icons displayed provide information about the status of the device. The icons listed in the table below are most common.

Icon	Meaning
	No signal
	Signal strength
	Roaming
	GPRS network connected
	EDGE network connected
	UMTS network connected
	HSDPA network connected
	HSPA+ network connected
	Wi-Fi connected
	Bluetooth activated
	GPS activated
	Call in progress
	Missed call
	Silent mode on
	Synced with the web
	Connected to computer
	No SIM card
	New text or multimedia message
	Alarm activated
	Flight mode activated

Getting Started

In Your AOC Box

Check the product box for the following items:

 
- Tablet PC
 - Headset
 - Power Adaptor
 - Micro USB Cable
 - OTG Cable
 - Warranty Card
 - Quick Start Guide
-
- i. The items supplied with the device and any available accessories may vary depending on the region or service provider
 - ii. The supplied items are designed only for this device and may not be compatible with other devices
 - iii. Appearances and specifications are subject to change without prior notice
 - iv. You can purchase additional accessories from your AOC retailer. Make sure they are compatible with the device before purchase
 - v. Use only AOC approved accessories. Malfunctions caused by using unapproved accessories are not covered by the warranty service.
 - vi. Availability of all accessories is subject to change depending entirely on manufacturing companies. For more information about available accessories, refer to the AOC website.

SIM Card Insertion

Insert the SIM card provided by the mobile telephone service provider. A regular SIM card works with AOC D70V50G. Your device is a dual SIM Tablet PC.

To insert the SIM card:

1. Switch off your device and remove the SIM cover.
2. Insert the SIM card correctly with the gold-colored contacts facing downwards in the card slot(s).
3. Push the SIM card into the card slot until fully inserted.
4. Close the SIM cover.

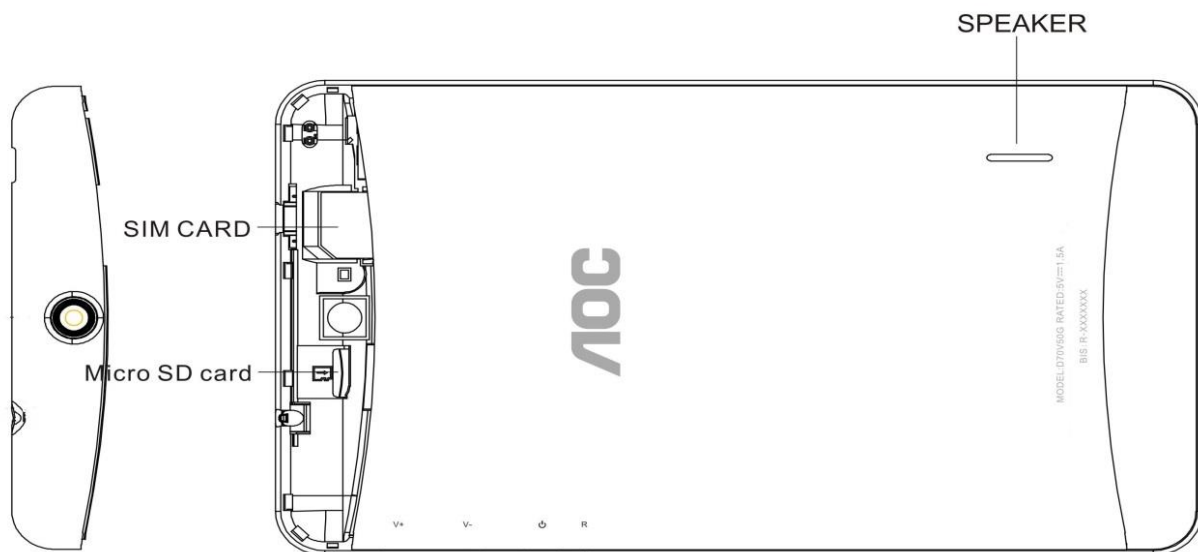

To remove the SIM card:

1. Switch off your device and remove the SIM cover
2. Pull the SIM card out gently

**CAUTION:**

1. Do not bend or twist the back cover excessively. Doing so may damage the cover
2. Do not insert a memory card into the SIM card slot. If a memory card happens to be lodged in the SIM card slot, take the device to an AOC Service Centre to remove the memory card.
3. Use caution not to lose or let others use the SIM card. AOC is not responsible for any damages or inconveniences caused by lost or stolen cards.

Memory Card Insertion

Inserting a Memory Card:

Your device accepts memory cards with maximum capacity of 32 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.

- Some memory cards may not be fully compatible with the device. Using an incompatible card may damage the device or the memory card, or corrupt the data stored in it.
- Use caution to insert the memory card right-side up.
- When inserting a card formatted in a different file system, the device asks to reformat the memory card.
- Frequent writing and erasing of data shortens the lifespan of memory cards.
- When inserting a memory card into the device, the memory card's file directory appears in the File Manager → Home → SD card folder.

1. Remove the SIM cover.
2. Insert a memory card with the gold-colored contacts facing downwards.
3. Push the memory card into the slot until it locks in place.
4. Replace the SIM cover.

Removing the Memory Card:

Before removing the memory card, first unmount it for safe removal. On the Home screen, tap Settings → Device → Storage → Unmount SD card.

1. Remove the SIM cover.
2. Pull out the memory card.
3. Replace the SIM cover.

 
Do not remove the memory card while the device is transferring or accessing information. Doing so can cause data to be lost or corrupted or damage to the memory card or device. AOC is not responsible for losses that result from the misuse of damaged memory cards, including the loss of data.

Formatting the memory card:

A memory card formatted on a computer may not be compatible with the device. Format the memory card on the device.

On the Home screen, tap Settings → Device → Storage → Format SD card → Erase everything.

Before formatting the memory card, remember to make backup copies of all important data stored on the device. The manufacturer's warranty does not cover loss of data resulting from user actions.

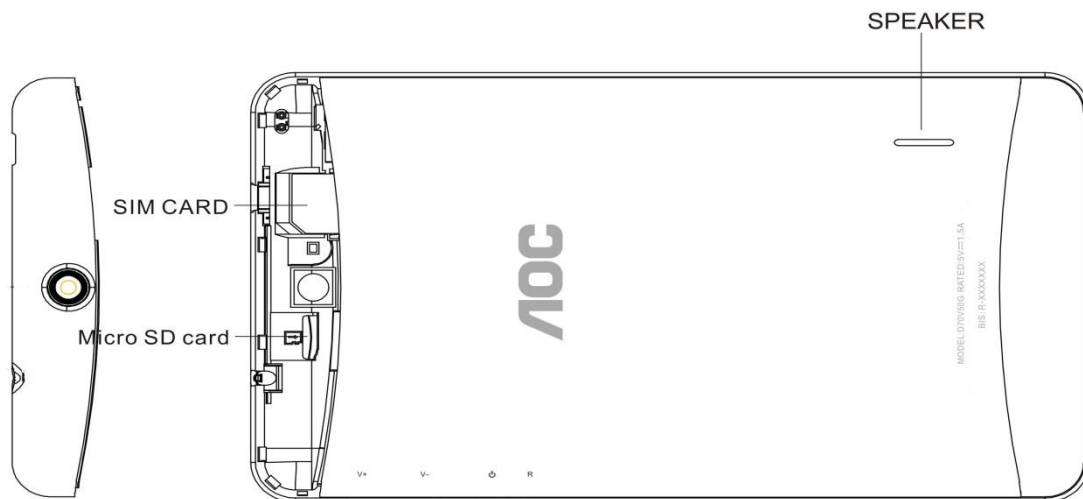

Charging the Battery

Use the charger provided in the box to charge the battery before using the device for the first time. While using the device for the first time, it is advised to charge the device completely for 8 hours. A computer can also be used to charge the device by connecting them via the USB cable. But it is advised to charge the device using the power adapter.

- Use only AOC-approved chargers, batteries, and cables. Unapproved chargers or cables can cause the battery to explode or damage the device.
- When the battery power is low, the device emits a warning tone and displays a low battery power message.
- If the battery is completely discharged, the device cannot be turned on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the device.
- If you use multiple applications at once, network applications, or applications that need a connection to another device, the battery will drain quickly. To avoid disconnecting from the network or losing power during a data transfer, always use these applications after fully charging the battery.

Charging with the charger

Connect the USB cable to the USB power adaptor and then plug the end of the USB cable into the multipurpose jack. When using a USB 2.0 cable, plug the USB cable into the right side of the multipurpose jack.



CAUTION:

- Connecting the charger improperly may cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.
- The device can be used while it is charging, but it may take longer to fully charge the battery.
- If the device receives an unstable power supply while charging, the touch screen may not function. If this happens, unplug the charger from the device.
- While charging, the device may heat up. This is normal and should not affect the device's lifespan or performance. If the battery gets hotter than usual, the charger may stop charging.

- If the device is not charging properly, take the device and the charger to an AOC Service Centre.

After fully charging, disconnect the device from the charger. First unplug the charger from the device, and then unplug it from the electric socket.

- To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The charger should remain close to the electric socket and easily accessible while charging.

NOTE:

1. Check the detailed charging status of the device through:
Settings → About Device → Status → Battery Level
2. To extend your device's battery life, avoid charging the battery frequently when it is well charged (over 90% charged). It is recommended not to charge your device when it is well charged.

Checking the battery charge status:

When you charge the battery while the device is off, the following icons will show the current battery charge status:



Charging



Fully charged

Reducing the battery consumption:

Your device provides options that help you save battery power. By customizing these options and deactivating features in the background, you can use the device longer between charges:

- When you are not using the device, switch to sleep mode by pressing the Power button.
- Close unnecessary applications with the task manager.
- Deactivate the Bluetooth feature.
- Deactivate the Wi-Fi feature.
- Deactivate auto-syncing of applications.
- Decrease the backlight time.
- Decrease the brightness of the display.

Turning the Device On and Off

When turning on the device for the first time, follow the on-screen instructions to set up your device.

Press and hold the Power button for a few seconds to turn on the device.

NOTE:

- Follow all posted warnings and directions from authorized personnel in areas where the use of wireless devices is restricted, such as airplanes and hospitals.
- Press and hold the Power button and tap Flight mode to disable the wireless features.

To turn off the device, press and hold the Power button, and then tap Power off.

Adjusting the volume

Press the Volume button up or down to adjust the ringtone volume, or to adjust the sound volume when playing music or video.

 
Switching to Silent mode

Use one of the following methods:


- Press and hold the Volume button down until it switches to silent mode.
- Press and hold the Power button, and then tap Mute or Vibrate.

Lock/Unlock the screen

Short press the Power key to lock/unlock the screen. To unlock the screen, you may set any of the following screen locking method:

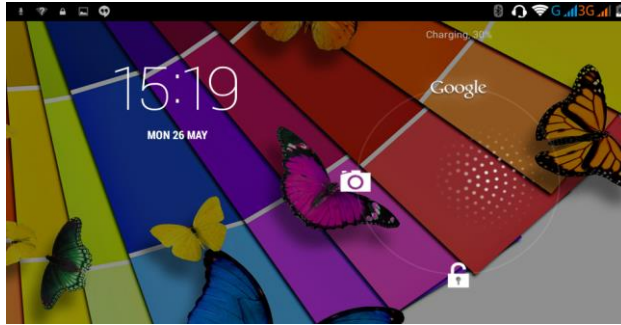

 - Slide the lock symbol towards the unlock symbol.
- Provide PIN or Password, as set by you.
- Draw a pattern, as illustrated below

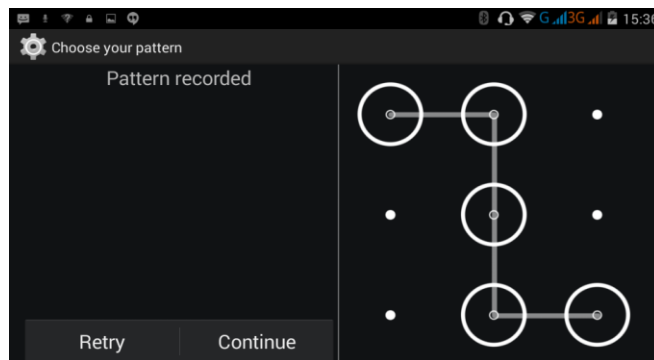

Slide unlock will be the default unlocking method in the tablet. To unlock the screen:

1. Press the power key.
2. Hold and drag the lock icon towards the unlock icon.

You may be required to unlock your tablet based on the unlock method in settings.

NOTE:

- You can set your unlock method from Home Screen/Settings/Security → Security → Screen lock and then choosing your desired method.

Reset the Tablet

If required, you can take a backup of your data and reset factory settings of the tablet. When you choose to reset the tablet, all data in the internal memory of the tablet gets erased. However, clearing the data in the SD card is optional.

To take a backup of your data, go to Settings /Personal/ → Backup & Reset → Back up my data and select your preferences as desired.

To reset your tablet:

1. Go to Settings → Backup & Reset → Factory data reset.
2. If required, select the Erase SD card option and tap Reset tablet.
3. Tap Erase everything.

NOTE:




1. Reset tablet is an irreversible action. Once erased, data cannot be retrieved.
2. Wireless connection needs to be set-up again.

Using the Touch Screen

Use your fingers to manipulate icons, buttons, menus, the onscreen keyboard, and other items on the touch screen. You can also change the screen's orientation.

Get Around

- At the bottom left corner of the screen, you will find three navigation buttons. You can always get back to the main Home screen or return to previous screens using these buttons.

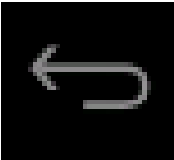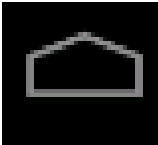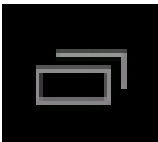Symbol	Description	What does it do?
	Back	Takes you back to the previous screen you were working on, even if it was on a different application. Once you are back to the Home screen, you can't go back any further.
	Home	Use this key to return to the Home screen directly.
	Context Menu	Displays the task manager with all currently running applications.

Touch and Hold

Tap and hold an item to view the list of actions based on the selected item and condition. Also, you can move an item from the Menu screen to the Home screen using this method.

Drag an Item

Tap and hold an item and move your finger on the screen until you reach the target position. The item follows your finger. You can generally drag items from one location to another on the home screen. Also, you can delete items from the home screen by holding the item and dragging it to the Remove label that becomes available only when you hold the item on the Home screen.

Scroll or Swipe

 
To scroll a list, slide your finger across the surface of the screen upwards or downwards (without dragging an item). Place a finger on the screen and steadily slide your finger in the desired direction. For example, when you are viewing a picture, to view the next picture, swipe left.

Double-Tap

Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a section of a webpage in the browser to zoom that section. You can also double-tap to control the Camera zoom, in Maps, and in some other applications.


Extended Home Screen

The Home screen consists of the 5 panels that extend beyond the display width to provide more space for adding shortcuts, widgets, and folders. Slide your finger horizontally across the screen to scroll to the left or right side extended home screen. Slide your finger horizontally across the screen to scroll to the left or right side extended home screen.

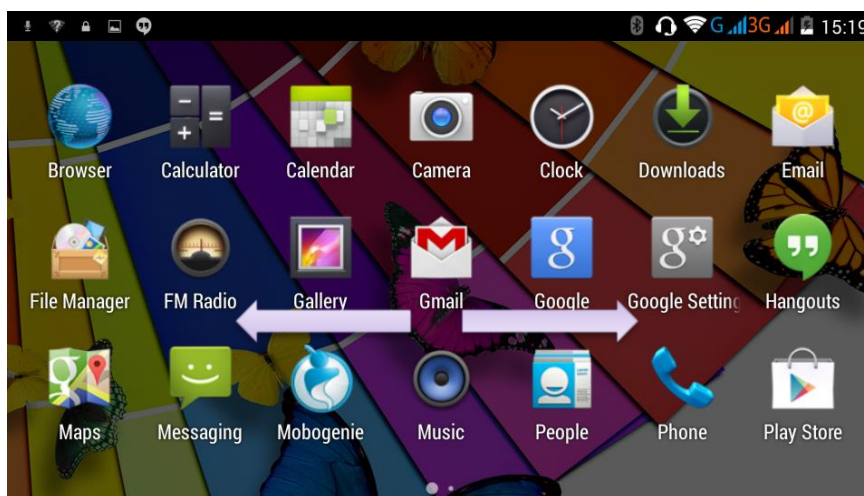

Arrange and Work with Applications

To see all your apps, go to Application Menu screen.

The Application Menu screen displays the grid view  of all your applications, including the ones downloaded from Android Market. You can move the app icons to any of your Home screens.

Application Menu allows you to:

- Place an app icon on a home screen: Touch and hold any desired app icon, slide your finger and lift your finger to drop the icon in place.
- Explore your widgets: Tap the **Widgets** tab at the top of the Application Menu screen.
- Get more apps: Tap the icon.
- To remove an app icon from the Home screen, touch and hold it, slide your finger toward the top of the screen and drop the app over the Remove link on the home screen.

Add Widgets

Widgets allow placing application shortcuts on your home screen. You can now place analog clock, calendar, and other such sections of your tablet on the home page and access them directly! To view the list of widgets available, just tap the launcher icon on the Home screen and swipe through menu icons to the widgets screen, as shown below.

To add any widget to your home screen, tap and hold the desired widget on the widget screen and release the hold at the home screen location, where you want to place the selected widget. You may be asked to make further choices before the widget activates. If there is no room where you dropped it, the widget would not get added to the Home screen.

 
View Notifications

Notification panel informs you of new messages and events. The notifications panel displays the current day, time and the battery percentage of the device. To open the notification panel, tap the time and signal icons in the Top right corner of the screen. You can clear all the notifications from the notifications panel by tapping on icon. Tap the icon in the notification panel to view other options that include:

- **Airplane Mode:** Turn on/off the airplane mode.

- **Wi-Fi:** Activate or deactivate the WLAN connection feature.
- **Display:** Adjust the screen brightness
- **Notification:** Activate or deactivate the notification icons to be displayed on the home screen.
- **Settings:** Navigate to the Settings section.

You can tap to respond to any notification in the notification panel.

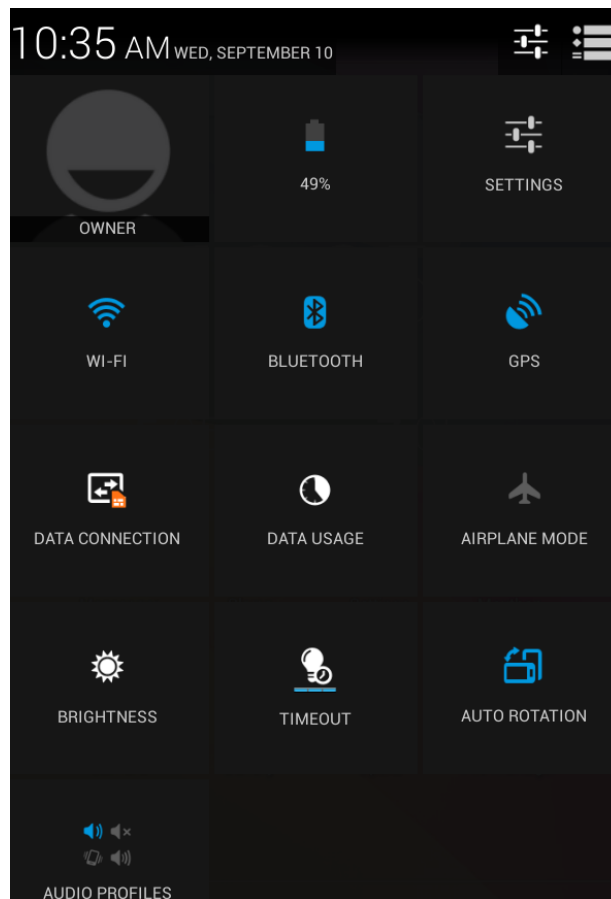


Connectivity

USB Connection

Device storage configuration

To transfer documents on your AOC device to any external device, you have to conduct storage configuration for your AOC device:

 - Connect the Tablet PC and your laptop / computer by USB cable, the notification panel will notify you that you about the USB connection status.
- Open the notification panel and view the device status.
- In the notification panel, click on “USB Connected”. Click “open USB storage configuration” and it will show the following window.

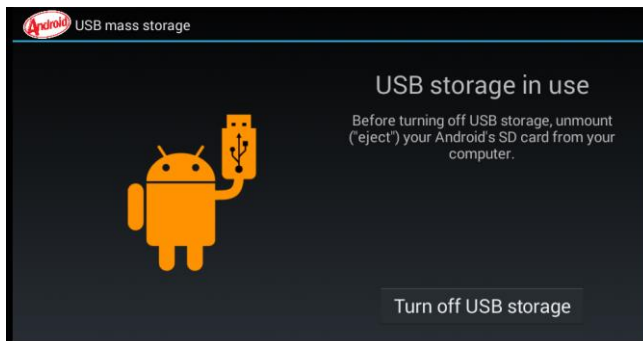

- Now the USB is connected successfully.

Copy the document into memory card

- Connect the Tablet PC to laptop or computer with USB cable. The device will be connected to the computer successfully.
- Click on “My computer” and check the items in “removable disc”.
- Copy the documents you need into “removable disc”.
- After copying finishes, click “Turn off USB storage” to disconnect the Tablet PC.

 
NOTE:

When the device is connected with USB cable and you open the USB storage configuration, you can't view the memory card through the device. Only after you detach the USB cable, you can view the memory card in the Tablet PC. Also some of the Applications may not work.


Bluetooth

To connect to Bluetooth:

- Go to **Application Menu** to access the **Settings**.
- Tap on Bluetooth to enable it.
- Once Bluetooth is enabled, you can click on scan to see available devices. Upon scanning, you can see a list of those devices that have enabled Bluetooth in your surroundings.
- To exchange files, images or music content with any of the available devices, click and pair with the desired device
- You could change the default name of your device in the Bluetooth setting by choosing the Rename your device option as shown in the illustration below:

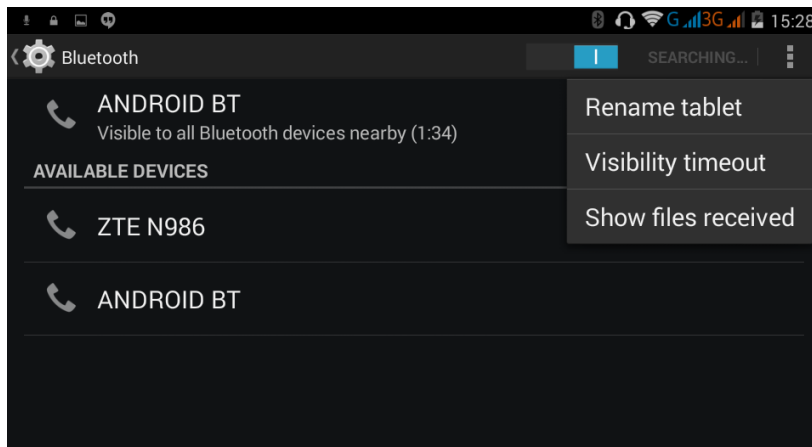

 - **Visibility Timeout option** allows you to keep your device visibly available to other Bluetooth active devices in your surroundings for the time as chosen by you as shown in the illustration below:

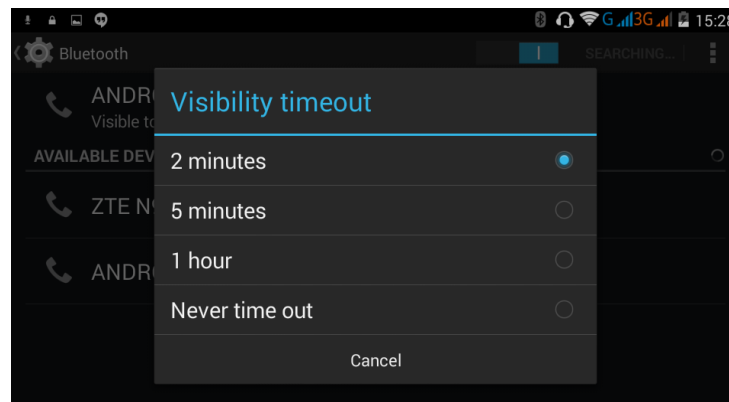

- You can view the download and upload files with Show files received.

Connecting to the Internet

To enjoy various features like Browser, Email, Gmail, Android Market Applications, Google Search, Downloads, and so on, you need to first configure your Internet connection.

For this, you can go to “Application Menu” **to access settings** and do one of the following:

- Enable **Wi-Fi** (If you have a Wi-Fi network within range with the required credentials). You can pick the available network from the list displayed.
- Use your **Mobile Network**
- Configure **VPN** or **Ethernet**

Connect to Wi-Fi

To connect to Wi-Fi:

- Go to **Application Menu** to access the **Settings**.
- Under **Wireless & Networks**, tap **ON** to enable **Wi-Fi**.
- Tap the desired Wi-Fi service from the list.
- Provide the **Wi-Fi** credentials for logging in.

Configure your own Wi-Fi Network

 
To configure your own Wi-Fi network, go to **Settings** and tap to add your Wi-Fi manually.

- Click on “Add Network” from the list
- Enter your network SSID, the wireless network name and click on **Save**.
- Click on User name already saved and connect to use network.

Portable Wi-Fi Hotspot

With Wi-Fi Hotspot option, your AOC Tablet can act as a wireless router and connect multiple devices to access internet seamlessly. To enable Wi-Fi Hotspot, follow the instructions below:

- Go to Application Menu to access the Settings.
- Under Wireless & Networks, tap on “Tethering and Portable Hotspot”.
- Return to previous menu, open portable WLAN hotspots, click configure WI-FI hotspots as shown below:

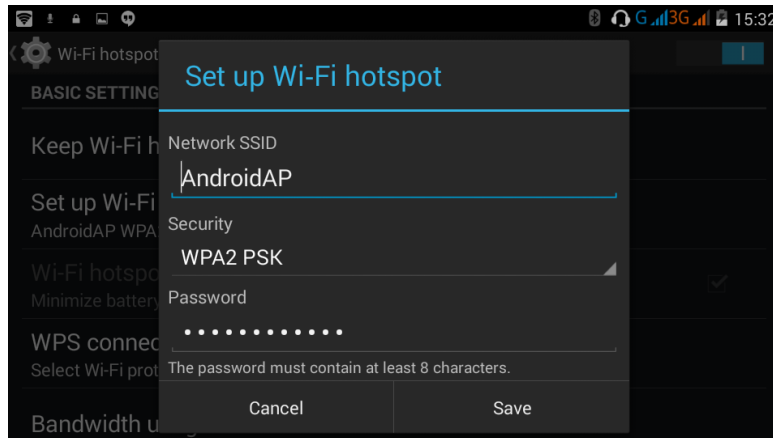

- The password you set up while configuring your Hotspot keeps your connection secure. Any other device trying to connect to your Hotspot will have to enter the same password as used by you during the set up to access internet through your device's Wi-Fi Hotspot


**CAUTION:**

 1. When you enable Wi-Fi Hotspot and let other devices connect to your device for internet access, you will be charged for the internet usage on your device as well as the other devices connected to you as per the applicable operator tariffs.



Mobile Network



Click on **Settings** in main menu, choose SIM management, click data connection and choose the default SIM card as shown in the illustration below:

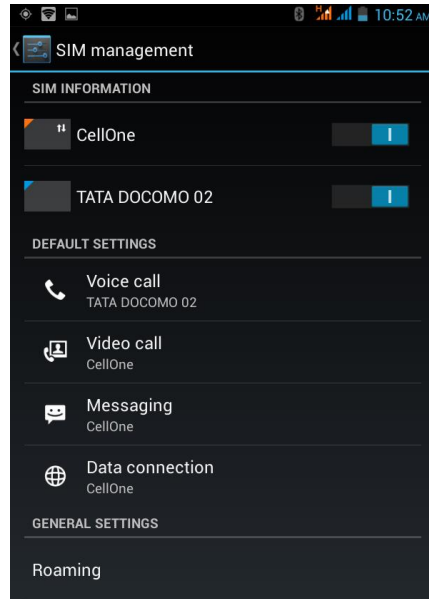


Upon choosing the default SIM, you can access internet through mobile network.

3G Service

  
Click 3G service, as shown in the illustration below, choose available defaulted SIM card, GSM is 2G network and WCDMA is 3G network.

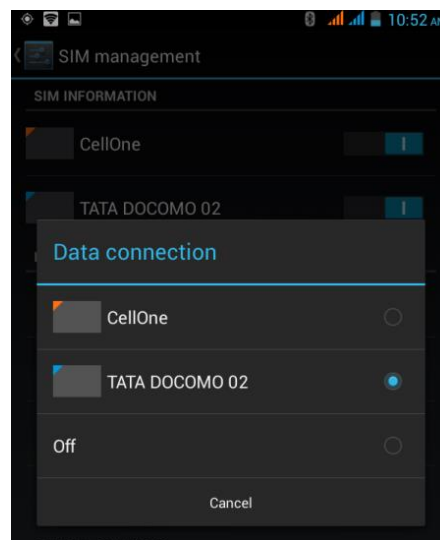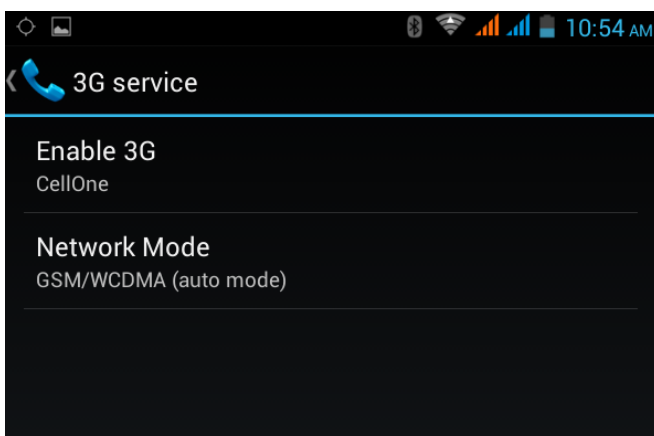

 Access Point Name (APN) - Click Mobile Network

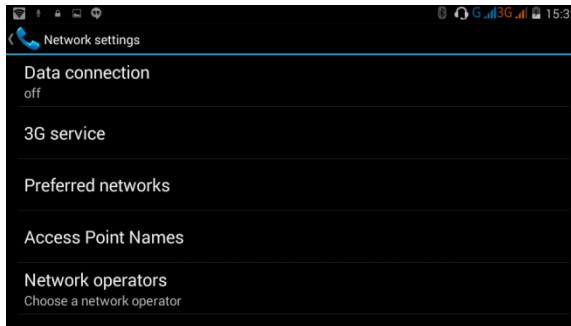


 Choose access points name (APN), choose SIM card you need to connect, choose the type of connection:

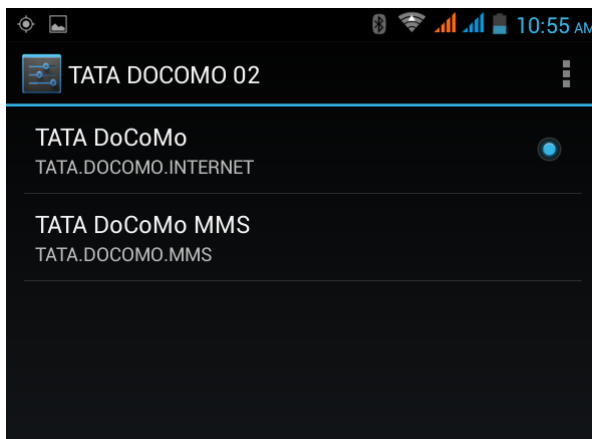

Network Operator

 Click network operator, choose SIM card you need to connect, system will search available GSM and WCDMA network

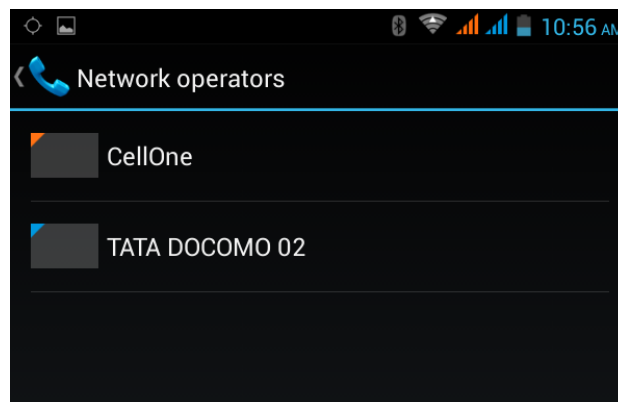


Communication

Voice Calls

Use the Phone application on your Tablet PC to make or answer a call.

Making a Call

Use one of the following methods:

- **Keypad:** Enter a number using the keypad and then tap 
- **Logs:** Make a call from the history of incoming and outgoing calls and messages.
- **Favorites:** Make a call from the list of favorite contacts.
- **Contacts:** Make a call from the contacts list.


Speed dial numbers

- For speed dial numbers, tap and hold the corresponding digit.

Finding contacts

Enter a name, phone number, or email address to find a contact in the contacts list. As characters are entered, predicted contacts appear. Select one to place a call to it.

Making an international call

Tap and hold 0 until the + sign appears. Enter the country code, area code, and phone number, and then tap 

Adding contacts

To add a phone number to the contacts list from the keypad, enter the number and tap Add to contacts.

Viewing call logs

Tap Logs to view the history of incoming and outgoing calls. To filter a call log, tap → View, and then select an option.

Call barring

The device can be set to prevent certain calls from being made. For example, international calling can be disabled.

Tap → Call settings → Additional settings → Call barring, select a call type, select a call barring option, and then enter a password.

Receiving calls

Answering a call

When a call comes in, drag outside the large circle. If the call waiting service is active, another call can be made. When the second call is answered, the first call is put on hold.

Rejecting a call

When a call comes in, drag outside the large circle.

To send a message when rejecting an incoming call, drag the reject message bar upwards. To create the rejection message, tap → Call settings → Set up call reject messages.

Automatically rejecting calls from unwanted numbers

Tap → Call settings → Call rejection → Auto reject mode → Auto reject numbers, and then tap Auto reject list. Tap Create, enter a number, assign a category, and then tap Save.

Missed calls

If a call is missed, appears on the status bar. Open the notifications panel to view the list of missed calls.

Call waiting

Call waiting is a service provided by the service provider. A user can use this service to suspend a current call and switch to an incoming call. This service is not available for video calls.

To make use of this service, tap → Call settings → Additional settings, and then tick Call waiting.

Call forwarding

The device can be set to send incoming calls to a specified number.

Tap → Call settings → Additional settings → Call forwarding, and then select a call type and condition. Enter a number and tap Enable.

Contacts

Use this application to manage contacts, including phone numbers, email addresses and others.

Tap **Contacts** in the Application screen.

Managing contacts

Tap Contacts.

Creating a contact

Tap and enter contact information:

- Add an image.
- Add or delete a contact field.

Editing a contact

Select a contact to edit and then tap the edit icon.

Deleting a contact

Tap → Delete.

Setting a speed dial number

Tap → Speed dial setting, select a speed dial number, and then select a contact for it. To remove a speed dial number, tap and hold it, and then tap Remove.

Searching for contacts

Tap Contacts.

Use one of the following search methods:

Scroll up or down the contacts list.

Use the index at the right side of the contacts list for quick scrolling, by dragging a finger along it.

Tap the search field at the top of the contacts list and enter search criteria.

Once a contact is selected, take one of the following actions:

- Add to favorite contacts.
- Make a voice or video call.
- Compose a message.
- Compose an email.

Displaying contacts

Tap Contacts. By default, the device shows all saved contacts.

Tap → Contacts to display, and then select a location where contacts are saved.

Moving contacts

Tap Contacts.

Moving contacts to Google

Tap → Merge accounts → Merge with Google.

Contacts moved to Google Contacts appear with in the contacts list.

Favorite contacts

Tap Favorites and then take one of the following actions:

- **Search:** Search for contacts.
- **Add to favorites:** Add contacts to favorites.
- **Remove from favorites:** Remove contacts from favorites.
- **Grid view / List view:** View contacts in grid or list form.
- **Help:** Access help information about using contacts.

Messages

Use this application to send text messages (SMS) or multimedia messages (MMS). Tap Messages on the Applications screen.

You may incur additional charges for sending or receiving messages while you are outside your home service area. For details, contact your service provider.

Sending messages

Tap on **Messages** in the Application screen, add recipients, enter a message, and then tap on Send.

Use the following methods to add recipients:

 
- Enter a phone number.
- Enter a contact name.

Basic Tablet Features

Contextual Model

Set up the Device Profile


- Open **Settings**, click contextual model and tap on **General**
- You can choose and set your change your device profile, ringtones and much more as shown in the illustration below:

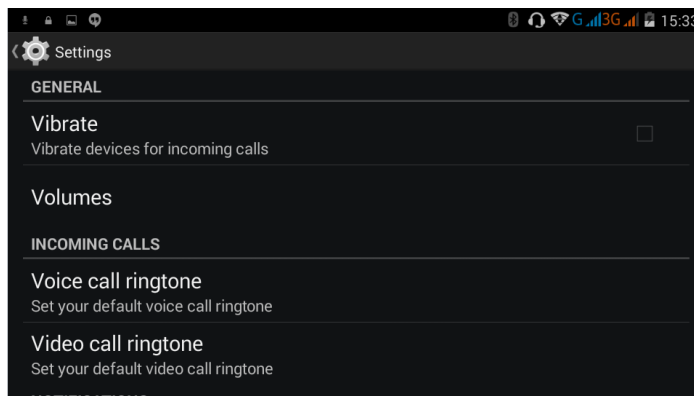

Display

Under the Display settings, you can make the following changes to your device:

 
- You can adjust the brightness of your screen. Click on **Setting**.
- Click **display**, choose brightness and customize your display as shown in the illustration below:

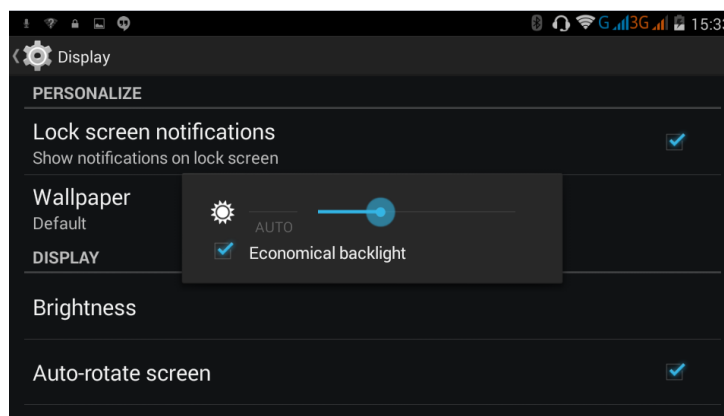

Changing the Wallpaper

To change the wallpaper of your device, go to home screen.

 - Long press on any blank space in the home screen. It will pop-up a window that asks you to change the wallpaper.
- Click on the Gallery or Wallpaper Gallery to select the wallpaper.

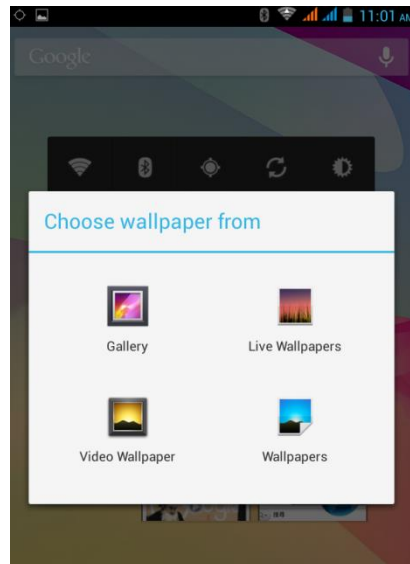


Auto rotation

The Auto-Rotation feature enables you to view your device in Portrait and Landscape mode. The default device setting enables the auto rotation. However, you can turn it off by going to **Display Settings**.


Device Font size

 Click **font size** to adjust the font size as shown in the illustration below:

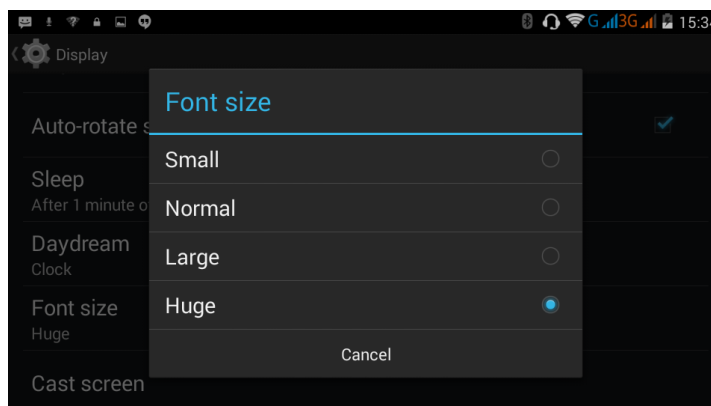

Storage

 
- Open **Settings**, click on **Memory**, click on the **Preferred Install Location**, you can choose install new application to choose preferred install location.
- Check SD card and Tablet PC storage space. Open **Settings**, click **Storage** and check available storage.

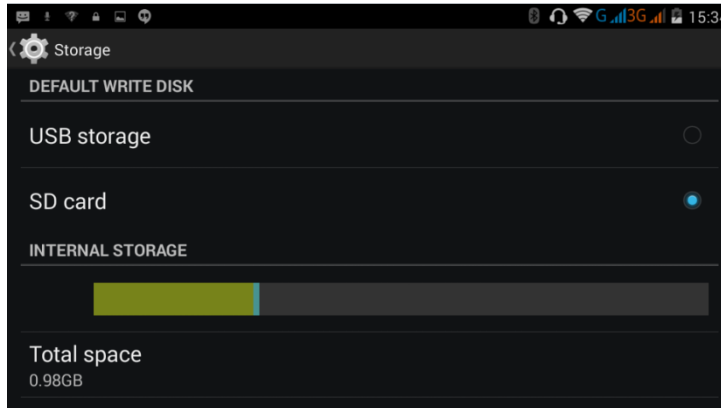

Date and Time

According to the preset, system will pick the system date and time depending on the time-zone you choose when you turn the device on the first time.

 - Open **Settings** and click on **Date and Time**. The following window will open. You can change your date and time settings with the various options available as shown in the illustration below:

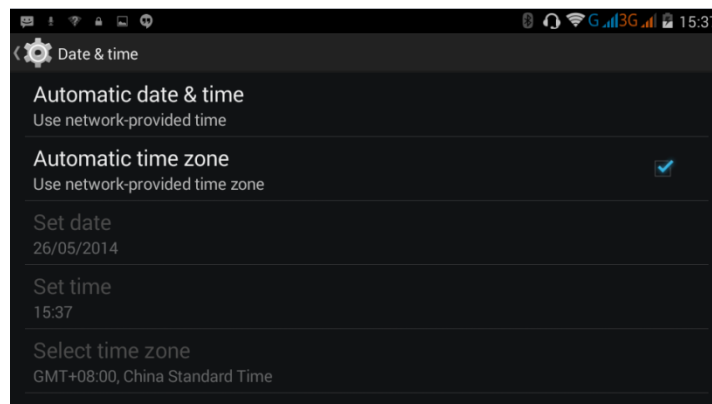

Multi Media Features

Music

You can easily transfer your favorite music from a PC to your AOC Tablet PC and experience a world of interesting and melodious music.

- Tap the Music icon from the Application Menu or the home screen. Use the intuitive buttons and icons in music interface to enjoy the features of your music player.
- Press the tablet's volume up/down keys on the right side of the device to adjust the volume.
- You can use an SD card to enhance the storage capacity for your multimedia files such as music, photos, emails, and so on.

Gallery

- You can use the Gallery to view pictures, play videos, and share files.
- Tap the icon in the Application Menu and then tap the desired album to open and view its contents.

Note:

- To share any picture or video, tap and hold the picture(s) or video(s) that you want to share and tap the icon and share via e-mail or any other application installed in your device.

Manage Downloads

- Files and other items downloaded using the browser or in other way can be stored at any desired possible location of your choice.
- To view and manage the list of applications installed on your tablet, go to Application Menu → Settings → Device → Apps.
- Swipe to the left or right to view the filtered list of apps according to their category, such as Downloaded, On SD Card, and Running. You may tap any application for actions, such as Move to SD card, Clear data, and Force stop.

Manage Your Calendar

- The in-built calendar lets you view and edit your daily schedules. Touch the Calendar icon to access the calendar.
- To change the calendar view, tap the current view (for example, "Month") at the top left corner and choose Day, Week, Month, or Agenda.

- Scroll vertically to view the other dates on the calendar. In the Day or Week views, spread your fingers apart or pinch them together to zoom in or out.
- Tap the icon at the top right corner of the Calendar to set your calendar preferences and settings.
- You may add an account to synchronize events in the calendar. To add an account to your calendar, tap icon at the top right corner of the Calendar and select **Settings**. In the Settings screen tap Add Account at the top-right corner and select the account to be synchronized.
- Tap icon to add an event for the selected date. You need to have an account added to the calendar before adding an event.

Set the Language and Keyboard

Go to Application Menu →Settings →Language & Input for keyboard, language, input methods, text to speech output, and pointer speed.

View Information about your Device

Tap Application Menu →Settings →System →About Tablet for viewing information about your AOC D70V50G Tablet PC.

Managing Accounts

Why Use a Google Account

Your Google Account lets you take full advantage of Google applications and services that you may want to use, such as Gmail, Maps, and various other applications.

Manage Accounts

You can set up a corporate, email, or Google account on your device.

- Go to **Application Menu > Settings > Accounts > Add account**.
- Select the type of account to be added (For example, Email, Gmail, etc).
- Follow the directed instructions with valid login credentials and configure the required email account on the device.

NOTE:

1. You may also be able to add other kinds of accounts, depending on your apps.

Start Gmail



Application Menu > Gmail Icon

- You can use Gmail to read and write email from the device. All your emails are always up-to-date and available no matter where you check it from.
- But Gmail is not just about email, your Gmail name and password signs you into to all Google apps and services, including Google search, news and weather, people, market, maps, places, talk, calendar, downloads and many more.
- To launch Gmail, tap the Gmail icon from the Application Menu.
- The first time you launch Gmail, you will be asked to sign-in or create an account. You can sign-in using any of your existing Gmail account(s) or create a new one.

NOTE:

1. You may also be able to add other kinds of accounts, depending on your apps.
2. You need to have Internet connectivity to access Google and all the other associated features described above.

3. Please refer to 'Connect to Internet' section to know how to configure your Internet connection.

Google Search

- Google Search can help you find anything you need on the web.
- Touch the icon on the Application Menu to access Google search.

Android Market

Downloading Applications from Android Market

The Android devices offer users access to unlimited entertainment sources. You can download applications, games, movies, and books from the ever increasing Android market. New items get added almost daily to the market to give users a never ending fun experience.

How to Download an Application

- To download applications, games, videos, wallpaper etc., configure and activate your Internet connection
- Go to Application Menu to access the Google Android Market.
- View the details and download items, as desired.

NOTE:

1. Not all items are free of cost in the Android Market.

How to Uninstall an Application

- To uninstall an application, go to Application Menu →Settings→ Device → Applications. List of applications under different category tabs will be displayed.
- Swipe to the left or right to view the filtered list of apps according to their category, such as Downloaded, On SD Card, and Running.
- Tap the application to be uninstalled.
- Tap “Uninstall”.

Google Maps

Google Maps is a web based service offered by Google Inc. which offers you access to various map based services. You can view various streets, landmarks and can even plan your routes with the help of Google Maps. This serves as a useful application for your day-to-day usage.

NOTE:

1. High Speed Internet connection is required for using Google Maps. For information on activating internet connection, refer to section 'Connect to Internet'.
2. The Google Maps application may not be available in every market, country or region.
3. AOC does not guarantee the accuracy of any directional services.
4. When you use the map, you use your Internet connection to transfer data to and from your tablet. To avoid data transfer costs, you can download and save the map to your device.

Required Settings:

- Go to Application Menu →Settings →Personal →Location access.
- Enable "Access my Location" option.

To open Google Map, go to **Application Menu** and start using Google Maps.

Troubleshooting

Device shuts down after start-up

- Power is not enough, please charge your device

First startup of the Tablet PC is slow

- When the device is upgraded, the first startup needs to install the pre-installed application software. The lead-time is around 2-3 minutes. The subsequent start-ups will be much quicker

Tablet PC is not connecting to Wi-Fi

- Make sure the wireless router of internet service can work in normal.
- Ensure the Tablet PC and wireless router in certain distance, and no wall or other barrier between them.
- Ensure the user name and password both correct.

Tablet PC heats up

- The device may heat up in case multiple applications are open at the same time or during charging. This is normal. However, it is advisable to turn all the applications off if the device heats up

Email can't be set or Registration of application procedure

- Ensure your internet is well connected.
- Make sure your email setting way is correct.
- Keep your system time and local time consistent.

The system is abnormal and can't work.

- When you install some third party application procedure, it may cause abnormal work, you can press Reset key(next to power port) to reset the system.

The webpage can't be opened

- Please keep the distance between from route to Tablet PC in effective range.
- Please restart Wi-Fi and try again.

Cannot copy file or play music

- Please check if the connection between the computer and the device is proper and correct.
- Check whether the memory storage space is already full.
- Check if the USB cable is not damaged.
- Check if USB is disconnected.

Tablet PC is hanging with no response

- Restart the tablet by long pressing and holding the power key.

Tablet PC works terribly slow sometimes

 
- It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resource

Taking care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care. The following suggestions will help you protect your device:

- Do not store the device in high or cold temperature. Extreme temperatures can shorten the life of electronic devices and damage batteries.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits.
- Do not use or store the device in dusty, dirty areas. Its electronic components can get damaged.
- Do not drop, knock, shake or bend the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time as it may interfere with the electronic circuits and display.
- Use manufacturer approved batteries, chargers, accessories and supplies. AOC will not be held responsible for user's safety when using unapproved accessories or supplies. This goes against the warranty rules.
- Do not attempt to repair the device by your own. Repairing the device by yourself other than our authorized service agents/centers goes against the warranty rules.

Recycle your Tablet PC

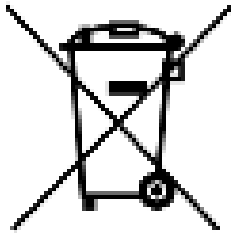

WEEE Declaration

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling in India please visit the below web link www.aocindia.com/ewaste.php

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of TPV is strictly prohibited.