
Road Safety Guard

Instruction Manual

Thank you for purchasing Portable DVR from our company. In order to help you operate it correctly, please read this instruction carefully before using.

Product Picture and Function

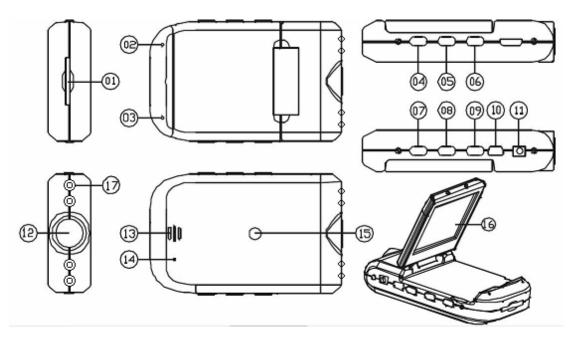

- 1. SD/MMC Card Slot
- 2. Working (Green) indicator

Charging (Red) indicator

- 3. Microphone
- 4. REC / Snap
- 5. Menu
- 6. ON/OFF Power Switch
- 7. Up /Down
- 8. Night Lights

- 9. Mode Button
- 10. USB Slot
- 11. TV-OUT
- 12. Lens
- 13. Speaker
- 14. Reset hole
- 15. Mount hole
- 16. 2.4 inch LCD

Attached Accessories

- Manual
 - Mount
- •USB Cable
- •Car Charger (Include the adaptor 12V/24V transfers to 5V)

Operate

Two Power options:

A) Use built-in Li-ion battery

DVR can be activated after it has been placed on the vehicle by pressing the Power Switch ⑥ for 1 second and turn off by pressing it for 2 seconds.

Charging: connect with USB cable or car charger.

B) Connect with Car Charger

DVR will record automatically when the car starts, turn off and save the last file when the car stops.

Recording

DVR will enter into defaulted recording mode when turn it on, the work indicator blinkers and indicates it is recording. The recording file is saved in the SD/MMC Card. To stop, press **Recording Button** ④ or ending when car stops , the work indicator won't blinker.

Camera mode

Turn on the DVR and press **Mode Button** (9) to enter into Camera mode. To take photo by pressing **Snap Button** (4).

Manual Focus Function

In Camera or Recording mode ,press UP/DOWN Button the screen will show focus icon them press UP/DOWN button to choose need focus, you can choose (1x~8x)

Night Vision Function

Press Menu button then choose Night vision , DVR will enter Night vision status ,if you want to exit choose off

Preview and Delete

Turn on the DVR and press **Mode Button** (9) twice to enter into Preview Mode. Press **Up or Down** to select the previewed file. If it is video file, it can play or pause by pressing **REC Button**, and stop by pressing **Mode Button**. If you want to delete it, press **Menu Button** to enter into delete mode, and then, select Single, All by **Menu Button** and **Up/Down** and confirm to delete the file by **Menu Button**. Also select **Slide show**, **Protect file**, **Thumbnail mode** and **volume** (from 1 to 8) under the **Preview Mode**.

Setting the functions:

Turn on the DVR and Press **Menu Button** under Video mode or Camera mode to enter into setting interface. Confirm by **Menu Button** and Select by **Up/Down** for the following setting. Press **REC Button** to exit.

A. Video mode

- 1. Size: Select VGA, QVGA, SXGA.
- 2. EV: -2.0, -5/3, -4/3, -1.0, -2/3, -1/3, +0.0, +1/3, +2/3, +1.0, +4/3, +5/3, +2.0

- 3. White Balance: Auto/Daylight/Cloudy/Tungsten/Fluorescent
- 4. Time Stamp: Off/Data Only/Data & Time
- 5. Motion Detect: Off/On
- 6. Video Time: 3Min/5Min/10Min/15Min
- 7. Audio: On/Off
- 8. Flip Screen: Off/On
- 9. Night Mode: Off/On

B. Camera mode:

- 1. Size: VGA/1.3M/2M/3M/5M/8M/12M
- 2. Quality: Fine/Standard/Economy
- 3. Scene Mode: Auto/Sport/Night/Portrait/Landscape/Backlight
- 4. EV: -2.0, -5/3, -4/3, -1.0, -2/3, -1/3, +0.0, +1/3, +2/3, +1.0, +4/3, +5/3, +2.0
- 5. White Balance: Auto/Daylight/Cloudy/Tungsten/Fluorescent
- 6. ISO: Auto/100/200
- 7. Color: Standard/Vivid/Sepia/Monochrome
- 8. Saturation: High/Normal/Low
- 9. Sharpness: Hard/Normal/Soft
- 10. Preview: On/Off
- 11. Time Stamp: Off/Data Only/Data & Time
- 12. Burst: Off/On

C. Setting Mode

Whether under idle Mode, Press **Menu Button** and then press **Mode Button** to enter into **Setup** interface.

- 1. Format: Select it if you want to format the SD card.
- 2. Beep: Off/On
- 3. Language: Select[English/ French/ Deutsch/Italian/Spanish/Portuguese / T-Chinese/ S-Chinese/ Russian/ Turkish/Korean]
- 4. Auto Off: 1Min/3Min/5Min/Off
- 5. System Reset: select [Cancel or Execute system] reset.
- 6. Light Frequency: 50Hz/60Hz

7. TV Output: NTSC/PAL

8. Data Input: Set correct recording data and time.

9. USB: PC Cam/Disk Drive

10. Version: Check software information

Preview on the TV

Connect the AV link of DVR with the TV, and enter into the preview mode automatically. The operating steps are same as preview on the screen.

USB Mode

Connect DVR with computer by USB cable, [My computer] will occur removable disk, the file id stored at Removable Disk/DCIM/100DSCIM. At the moment, the file of the DVR can be downloaded to the computer.

Note:

- 1) Please insert the SD/MMC card before recording.
- 2) This DVR Records in cycle if you choose 3/5/10/15 minutes as storage time. When the storage medium is full, it will record from the beginning again and erase over the previously recorded material automatically. It will have 3 seconds pause time, and namely the contents in the 3 seconds will not record.
- 3) Because the DVR is DC5Vinput, please use the attached car charger. It has adaptor 12V/24V transfers to 5V already.

Technical Specifications

1) Recording resolution: 1280*960/640*480/320*240 pixels

2) Video format: AVI

3) Repeat storage by section: 3/5/10/15 minutes

4) Power source: Built-in rechargeable battery or 5V Car Charger

5) Supports SD/MMC card(From 256MB up to 32GB)

6) Microphone: can record sound

Small Tip to Save You Big Headache

A DVR is in a way very similar to a computer. If the DVR hangs itself during operation, please follow the procedures below and most likely the DVR can be reactivated.

DVR will restart after press Restart Hole gently by diameter less then 1mm column.