

WINAUTO



(044)361-05-06

ICQ:495-089-192

(067)469-02-12

ICQ:613-211-859

(099)048-99-03

(093)672-77-76

User's Manual

Car Alarm Python 460 Max (3105P) One Way

In the online store Winauto you also can buy [one-way alarm Python 460 Max \(3105P\)](http://winauto.ua). Delivery in Kyiv and throughout Ukraine with payment upon receipt!

winauto.ua



Archive - Audio, video - Sound and Components - Security Systems - Video observation and parking - Car Goods - Automotive Lighting - Tweak - Car Chemicals and Power Supply - Sale -



460MAX

Owner's Guide

winauto.us

winauto.ua

Contents

What is included.....	2
Standard transmitter configuration.....	2
Three-button transmitter configuration	3
Important information	4
System maintenance.....	4
Your warranty.....	5
Transmitter functions	6
Standard configuration.....	6
Three-button configuration	7
Using your system	8
Active arming.....	8
Passive arming	8
Multi-level security arming.....	10
Arming while driving.....	11
Disarming.....	12
High security disarm	12
Disarming without a transmitter.....	13
Silent mode.....	14
Panic mode.....	14
Valet mode	14
Nuisance Prevention Circuitry®.....	15
Diagnostics	17
Arming diagnostics.....	17
Disarming diagnostics.....	18
System status chirps.....	18
Table of zones.....	19
Interpreting zone diagnostics.....	19
Code hopping	20
High frequency	21
Owner Recognition	21
Rapid resume logic.....	22
Power saver mode.....	22
Programming options	23
Additional options	26
Vehicle Recovery System (VRS).....	27
Arming the VRS	28
Triggered sequence.....	29
Disarming the VRS.....	30
Glossary of terms	31
Security & convenience expansions.....	33
Quick reference guide	35
Limited lifetime consumer warranty.....	36

What is included

- One control module
- A pair of four button transmitters, (p/n 7142P)
- A Stinger® Doubleguard® dual-stage shock sensor (on-board the control module)
- Control Center with integrated status LED and valet override switch (p/n 6111T)
- The Revenger® Soft Chirp® six-tone programmable siren
- Your warranty registration
- Failsafe® Starter Kill ready circuitry (may require additional charges, ask your dealer for details.)

Standard transmitter configuration



controls the Arm function.



controls the Disarm function.



controls Silent Mode™ and an Auxiliary Output.



controls the Panic function.



and pressed together control an Auxiliary Output.

Online-store car audio and autogoods Winauto

➤ Three-button transmitter configuration*



controls the Arm/Disarm function.



controls the Panic function.



controls Silent Mode™ and an Auxiliary Output.



and  together control an Auxiliary Output.

*Optional three-button transmitter (not included).

Important information

Congratulations on the purchase of your state-of-the-art vehicle security system. This system has been designed to provide years of trouble-free operation. Due to the complexity of this system, it must be installed by an authorized dealer only. Installation of this product by anyone other than an authorized dealer voids the warranty. All dealers are provided with preprinted dealer certificates to verify that they are authorized.

This owner's guide should help you to get the most out of your system. Please take the time to read it prior to using the system.

➤ System maintenance

The system requires no specific maintenance. Your remote control is powered by 2 small, lightweight CR2016 batteries. When the batteries weaken, operating range will be reduced and the LED on the remote will dim.

Online-store car audio and autogoods Winauto

➤ Your warranty

Your warranty registration must be returned and the bar code serial number must not be removed. If the warranty registration is not returned, you do not have a warranty. It is also necessary to keep your proof of purchase, which reflects that the product was installed by an authorized dealer. Make sure that you receive the warranty registration from your dealer.

➤ FCC/ID notice

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Directed Electronics, Inc.



**Tested to Comply
with FCC Standards**

DRW-369

Transmitter functions

The system uses a computer-based learn routine to learn the transmitter buttons. This makes it possible to assign any transmitter button to any system function. The transmitter initially comes programmed with Standard Configuration, but may also be customized by an authorized dealer. The buttons in all of the instructions in this manual correspond to a Standard Configuration transmitter.

➤ Standard configuration



Button

The arming function is controlled by pressing this button for one second.



Button

The disarming function is controlled by pressing this button for one second.



Button

Silent Mode™ and an optional auxiliary function are controlled by pressing this button. (Silent Mode works by pressing this button for less than one second before arming or disarming. An optional auxiliary function, such as trunk release, can be controlled by pressing this button for 1.5 seconds.)

The auxiliary output controls _____.

 Button

The panic feature is controlled by pressing this button for two seconds.

 and  Buttons

An optional auxiliary convenience or expansion function that you have added to your system can be activated by pressing these buttons simultaneously.

The auxiliary output controls _____.

➤ Three-button configuration

(Available with optional three-button transmitter.)

 Button

The arming and disarming functions are controlled by pressing this button for one second.

 Button

Silent Mode™ and an optional auxiliary function are controlled by pressing this button. (Silent Mode works by pressing this button for less than one second before arming or disarming. An optional auxiliary function, such as trunk release, can be controlled by pressing this button for 1.5 seconds.)

The auxiliary output controls _____.


 Button

The panic feature is controlled by pressing this button for two seconds.

Using your system

The buttons used in the instructions in this manual correspond to the standard configuration. Remember, this is not the only way your transmitter may be set up. It can be custom configured to meet your needs.

➤ Active arming

You can activate, or arm, the system by pressing  on your transmitter for one second. When the system arms, you will hear a short siren sound, or chirp, and the parking lights will flash once. If the vehicle's power door locks have been connected to the system, the doors will lock.

While the system is armed, the status LED will flash approximately once per second, indicating that the system is actively protecting your vehicle. If you hear a second chirp after arming, and see the status LED flashing in groups, refer to the Diagnostics section of this guide. This extra chirp is called Bypass Notification.

➤ Passive arming

The system also can be programmed to arm itself automatically (called passive arming). If the system is programmed for passive arming, it will automatically arm 30 seconds after the ignition is turned off and the system "sees" you leave the vehicle by opening and closing a door. Whenever the system is in its 30-second passive-arming countdown, the status LED will flash twice as fast as it does when the system is armed. The siren will chirp one time 20 seconds after the last door has been closed. The system is not actually armed at that point. The system arms and the doors lock (if connected and programmed for passive locking) at the 30 second mark, but the siren will not chirp. The early chirp provides you with a 10-second warning prior to arming.

Online-store car audio and autogoods Winauto

If any protected entry point (such as a door or a switch-protected trunk or hood) is open, the system will not passively arm (unless forced passive arming is programmed on). See Programming Options section of this guide. Additionally, each time a protected entry is triggered during the arming countdown, the 30-second countdown starts over.

When armed, your vehicle is protected as follows:

Light impacts will trigger the Warn Away[®] signal. When triggered, the siren will chirp and the parking lights will flash for a few seconds.

Heavy impacts will trigger the system. The triggered sequence is between 1-180 seconds of constant siren and flashing parking lights.

If a door is opened, the system will immediately start chirping the siren and flashing the parking lights. Three seconds later, the siren output changes to a continuous blast. This progressive response gives you time to disarm the system with your transmitter if you inadvertently open the door while the system is armed, while still providing an instant response (even if the door is immediately closed).


Turning on the ignition key will trip the same two-stage response as opening a door.

The optional starter kill prevents the vehicle's starter from cranking.






➤ Multi-level security arming

The Multi-Level Security Arming feature is available with the four-button transmitter only.

Multi-Level Security Arming allows you to select which of the security system's inputs or sensors are to be active and which are to be bypassed, when arming the system. (See the Table of Zones section of this guide.)

Pressing  again within five seconds of arming the security system will activate the Multi-Level Security Arming feature.

Each time  is pressed again, a different security level is selected. The different security levels can be selected as follows:

- Press  once. The siren chirps once. The system is armed.
- Press  twice within five seconds: The siren chirps twice followed by a long chirp. Zone 2 is now bypassed.
- Press  three times, within five seconds the siren chirps three times followed by a long chirp. Zone 4 is now bypassed.
- Press  a fourth time within five seconds: The siren chirps four times followed by a long chirp. Zones 2 and 4 are now bypassed.
- Press  a fifth time within five seconds: The siren chirps five times followed by a long chirp. All input zones, except the

Online-store car audio and autogoods Winauto


ignition, are now bypassed.

- Hold down the  to begin the Multi-Level Security Arming cycle over again.

Note: Multi-Level Security Arming only applies to a single arming cycle. Once the system is disarmed and then re-armed, all the zones will be active again.

➤ Arming while driving


Your system can be armed while driving the vehicle.

Press  on your transmitter for two seconds while the vehicle is running or while the ignition is on. The siren chirps once, and then once more indicating that the ignition is on. The security system does not respond to any input except the door triggers and the Failsafe® Starter Kill (if installed) will not activate.

The security system disarms automatically when the ignition is turned off. The siren chirps twice and the LED stops flashing.


Note: If programmed for the optional Vehicle Recovery System (VRS®) feature, arming with the transmitter arms the VRS® feature. (See VRS® section of this guide.)

➤ Disarming

To disarm the system, press . You will hear two chirps, and the parking lights will flash twice. If the power locks are connected to the system, the doors will unlock. If the siren chirps either four or five times when disarming, refer to the Diagnostics section of this guide. This is called Tamper Alert.

➤ High security disarm

This security system offers High Security Disarm. High Security Disarm is a feature that makes it possible to silence and reset the system while it is triggering, without disarming the system.

If the system is triggered and the siren has been sounding for longer than six seconds, pressing  on the remote transmitter will stop the trigger and return the unit to the armed state. The system will not disarm, but rather reset. This prevents you from disabling the system should you wish to disarm it without visually checking the vehicle.

 
Pressing  while the alarm is triggering will disarm the system.

➤ Disarming without a transmitter

This feature allows you to disarm the security system without the remote transmitter should it be lost, damaged, or disabled. In order to disarm the system without a remote transmitter, you must have the vehicle's ignition key and know where the Valet switch is located. Be sure to check with the installer for the location and the number of presses of the Valet switch required to disarm the system.



To disarm the security system, turn the ignition to the ON position. Press the Valet switch the preset number of times (one to five times) within 15 seconds.



After 5 seconds, the system will now disarm. If the system does not disarm, you may have waited too long; turn the ignition off and on and try again.


Location of Valet switch _____

Number of Presses _____

Important! The unit can be programmed to respond to one to five presses of the Valet switch for the disarm function. Be sure to check with the installer for the desired programming.



➤ Silent mode

To temporarily turn off the arm or disarm chirps, use Silent Mode™.

Press  for less than one second before arming or disarming, and the confirmation chirp(s) will be eliminated for that one operation only. If you want the arm/disarm chirps turned off permanently, your dealer can do this for you.

The Warn Away® response to lighter impacts is bypassed if the system is armed using Silent Mode. This ensures that no chirps will be emitted by the siren in an area you want chirp-free. The system is still fully capable of triggering, only the Warn Away® response is bypassed.

➤ Panic mode

If you are threatened in or near your vehicle, you can attract attention by triggering the system with your transmitter. Just press  for two seconds, and you will enter Panic Mode. The siren will sound and the parking lights will flash for the programmed siren duration. To stop Panic Mode at any time, press  on the remote transmitter again.

➤ Valet mode

 
You can prevent your security system from automatically arming and triggering by using Valet Mode. This is very useful when washing the vehicle or having it serviced. In Valet Mode, the security system will not arm, even with the remote transmitter, but all convenience functions (door locks, trunk release, etc.) will continue to work normally.

Online-store car audio and autogoods Winauto

To enter or exit Valet Mode:



1. Turn the ignition on.
2. Turn the ignition off.
3. Press and release the Valet switch within 10 seconds.



The status LED lights solidly if you are entering Valet Mode, and goes out if you are exiting Valet Mode.

To enter or exit Valet Mode using the transmitter:

1. Open any vehicle door.
2. Press .
3. Press .
4. Press  again.

The status LED will light solidly if you are entering Valet Mode, and it will go out if you are exiting Valet Mode.

➤ Nuisance Prevention Circuitry®

Your system has Directed's Nuisance Prevention® Circuitry (NPC®). It prevents annoying repetitive trigger sequences due to faulty door pin switches or environmental conditions such as thunder, jackhammers, airport noise, etc.

Example

If the alarm triggers three times within a 60-minute period and each time the same sensor or switch triggers the alarm, NPC will interpret those triggers as false alarms. After the third trigger, NPC ignores, or bypasses, that sensor or switch (along with any other sensors or switches sharing the same zone) for 60 minutes.

Online-store car audio and autogoods Winauto

If the bypassed sensor tries to trigger the system while it is being bypassed, the 60-minute bypass period will start over. This ensures that a sensor that continually triggers will remain bypassed. Doors are covered by NPC differently; if the alarm is triggered by an open door for three full cycles, the doors will be bypassed until the trigger ceases.

Arming and disarming the system does not reset this function!. The only ways to reset a bypassed zone are for it to not trigger for 60 minutes, or to turn on the ignition. If testing your system, it is important to remember that the NPC programming can cause zones to be bypassed and appear to stop working. If five chirps are heard when disarming, NPC has been engaged. If you wish to clear the NPC memory, turn the ignition key on.

NPC is programmable. See Programming Options section of this guide.

Diagnostics

The microprocessor at the heart of your security system is constantly monitoring all of the switches and sensors that are connected to it. It detects any faulty switches and sensors and prevents them from disabling the entire system. The microprocessor will also record and report any triggers that occurred during your absence. Refer to the System Status Chirps and Table of Zones charts for diagnostic information.

➤ Arming diagnostics

If the system is armed while an input is active (door open, sensor triggering, etc.) the unit will chirp once when arming and then one more time a few seconds later. This is called Bypass Notification.

Note: Bypass Notification will not occur when using Silent Mode™ or if chirps have been programmed OFF.

The security system will ignore the input that was active when the system was armed, until the input goes away. Three seconds later the system will monitor that input normally. For example, if your vehicle has interior light exit delay, and you arm the system before the interior light goes out, you may hear Bypass Notification chirps. Once the light shuts off, however, the doors are monitored normally.

➤ Disarming diagnostics

Extra disarm chirps are the Tamper Alert. If four chirps are heard when disarming, the system was triggered in your absence. If five chirps are heard, a zone was triggered so many times that Nuisance Prevention® Circuitry has bypassed that zone. In either case, the status LED will indicate which zone was involved. (See Table of Zones section of this guide.) The system will retain this information in its memory, and continue to chirp four or five times each time it is disarmed, until the next time the ignition key is turned on.

➤ System status chirps

The siren will chirp when arming/disarming the system. The pattern of chirps will audibly report the system's status as described below.

Action	Number of Chirps	Description
Arm	1	System armed
Arm	1 (3 second delay), 1	System armed with zone active
Disarm	2	System disarmed
Disarm	4	System disarmed with zone violation report
Disarm	5	System disarmed NPC® active

Online-store car audio and autogoods Winauto

➤ Table of zones

The zone number is the number of LED flashes used by the system to identify that input. The standard input assignments are listed below, along with spaces to write in any optional sensors or switches you have had installed.

Zone - Number of LED Flashes	Description	Dealer-Installed Options
1	Instant trigger - often used for hood/trunk pinswitches	
2	Instant trigger - a heavier impact detected by the shock sensor	
3	Door switch trigger	
4	Instant trigger - for optional sensors	
5	Ignition trigger	

➤ Interpreting zone diagnostics

Warn Away responses are not reported by arming or disarming diagnostics. If you receive a Bypass notification when arming or a Tamper Alert notification when disarming, look at the LED. Active or triggered zones will be indicated by a pattern of blinks by the LED.

Example: If zone 3 was active or triggered, the LED will blink three times with a two-second pause. Then it will blink three times again, and repeat until the ignition is turned on.

Your system stores the last two triggered zones in memory. If your system has been triggered but the LED has been reset by turning on the ignition, your dealer can still recall the last two zones that were triggered. Contact your dealer for details

Code hopping

The receiver and transmitters each use mathematical formulas called algorithms to change their codes each time the transmitter is used. This technology has been developed to increase the security of the unit. The control unit knows what the next codes should be. This helps to keep the transmitter "in sync" with the control unit even if you use the remote control out of range of the vehicle. However, if the transmitter has been pressed many times out of range of the vehicle, or if the battery has been removed, it may get out of sync with the control unit and fail to operate the system.

To re-sync the remote control press  of the transmitter several times within range of the vehicle. The alarm will automatically re-sync and respond to the transmitters normally.

High frequency

Your system transmits and receives at 434 MHz, using a super-hetrodyne XR+ receiver. This provides a cleaner spectrum with less interference and a more stable signal. Enjoy a phenomenal increase in range – even in areas with high radio interference.

Owner Recognition

Owner Recognition is a feature available exclusively from Directed. Using the Directed Bitwriter, a hand-held programming tool, your dealer can program many of the system settings. The programmer makes it possible to program different settings for each transmitter that is used with the system. Then, whenever a specific transmitter is used, the system will recall the settings assigned to that transmitter. Owner Recognition lets up to four users of the system have different settings that meet their specific needs. It is almost like having four separate alarms in your vehicle, one for each user.

Note: Owner Recognition cannot be programmed without a Directed Bitwriter and the necessary software. Check with your dealer for more information.

Rapid resume logic

This Directed system will store its current state to non-volatile memory. If power is lost and then reconnected, the system will recall the stored state from memory. This means if the unit is in Valet Mode and the battery is disconnected for any reason, such as servicing the car, when the battery is reconnected the unit will still be in Valet Mode. This applies to all states of the system including arm, disarm, VRS®, and Valet Mode.

Power saver mode

Your system will automatically enter Power Saver Mode while armed or in Valet Mode, after a period of time in which no operation has been performed. This lowers the current draw to the vehicle's battery. Power Saver Mode takes over under the following conditions:

- Power Saver when the system is armed: After the system has been armed for 24 hours, the LED will flash at half its normal rate, decreasing the system's current draw.
- Power Saver in Valet Mode: When the system enters Valet Mode the LED illuminates steadily. If the vehicle is not used (ignition is not turned on) for a period of one hour while the system is in Valet Mode, the LED will shut off. If the system remains in Valet Mode, the LED will come back on the next time the ignition is turned on and then back off.

Programming options

Programming options control what your system does during normal operation, and require few or no additional parts. However, some may require additional installation labor.

The following is a list of the program settings, with the factory settings in **Bold**:

- **Active** arming (only with the transmitter) or passive arming (automatic arming 30-seconds after the last door has been closed).
- Arming/disarming confirmation siren chirps **on** or off.
- The ignition controlled door lock feature on or off: With this feature on, the doors will lock three seconds after the ignition is turned on, and unlock when the ignition is turned off. The system will not lock the doors when the ignition is turned on with any door open. If your installer is programming the security system with the Directed Bitwriter, ignition lock and unlock are independent features and can be programmed separately.
- Passive door locking (with passive arming) or **active door locking** (only when arming with the transmitter). Passive locking allows the vehicle's doors to lock when the security system passively arms (after the 30 second countdown). This feature only works if passive arming has been programmed.

Note: When programmed for passive arming and active lock, if the system is disarmed without a door being opened, the system will relock the doors when it passively rearms.

Online-store car audio and autogoods Winauto

- Panic mode **enabled**/disabled with the ignition on: Some states have laws against siren capability in a moving vehicle.
- Forced passive arming **on** or off: If your system is programmed for passive arming and the forced passive arming feature has been programmed on, the system will passively arm after one hour, even if a protected entry has been left open. This feature is useful if a door has been left ajar when leaving the vehicle. Forced passive arming ensures that the security system will be armed in every situation.

Note: When the system passively arms after one hour, the entry point that has been left open, and anything connected to the same zone, is bypassed and cannot trigger the system. However, the remaining inputs to the system are fully operational.

- Automatic Engine Disable (AED) on or **off**: The purpose of this feature is to protect the vehicle from being stolen at all times, regardless of whether or not the alarm is armed. If AED is programmed on, the starter of the vehicle will be disabled 30 seconds after the ignition is turned off. Once the key is turned off, the LED will flash slowly (one-half its normal armed rate) to indicate the AED arming cycle. Thirty seconds later, the starter of the vehicle will be disabled. To start the car, it will be necessary to disarm the system with the transmitter. It is also possible to disarm the AED feature by turning the ignition key to the RUN position and pressing the Valet switch the programmed number of times. AED is disabled when the system is in Valet Mode.

Note: This feature will only function if the Failsafe® Starter Kill relay has been installed.

Online-store car audio and autogoods Winauto

- Comfort closure: To close the vehicles windows after remote locking. Can only be used on cars with the capability of closing windows (and on some cars the sunroof) with the key cylinder in the door.
- Full trigger response 30 or 60 seconds: This determines how long the full triggered sequence lasts. Some states have laws regulating how long a security system can sound before it is considered a nuisance. If your installer is programming the security system with the Directed Bitwriter, the full triggered response can be programmed for any duration ranging from 1 to 180 seconds.
- Nuisance Prevention Circuitry® **on** or **off**: Please refer to the NPC section of this manual for a complete explanation of how NPC operates. If NPC is programmed off, the security system will respond to inputs from any sensor indefinitely.
Note: Because many states have laws regulating security systems, programming NPC off may cause your system to violate state laws.
- Progressive door trigger **on** or **off**: When the system is armed and a door is opened, the system responds with ten chirps prior to beginning the full triggered sequence. If an instant trigger is desired, the progressive door trigger can be programmed off.
- Valet pulse count: The number of presses of the Valet switch required to disarm the security system, AED, or the VRS® system can be programmed from one to five presses. The default setting is **one** press.


Online-store car audio and autogoods Winauto

- Siren tones and chirp volume: The output of the Revenger® Soft Chirp® siren consists of six different tones in sequence.

Any of these tones can be eliminated by your dealer, resulting in a unique, easily identifiable siren sound. The siren chirps can be either full volume or **six decibels quieter** than the full alarm blast.

➤ Additional options

The system has many options that may require extra parts and labor. Some of the possibilities are listed here.

- Progressive unlocking: In most cars with electric power door locks, the system can be configured so that when the system is disarmed, only the driver's door unlocks. A second press of the  button unlocks the other doors. (This feature is available with the four-button transmitter only.)
- Vehicle Recovery System (VRS®): VRS® is an anti-carjacking device designed to help in the safe recovery of your vehicle in case of a carjacking. Please refer to the Vehicle Recovery System section of this guide for a complete explanation of how the Vehicle Recovery System operates.

Online-store car audio and autogoods Winauto

Vehicle Recovery System (VRS)

The optional VRS® feature is designed to ensure that any unauthorized user of your vehicle (even if using your keys and remote control) will not be able to permanently separate you from your vehicle.

The VRS cannot prevent a carjacking attempt; however, it does ensure that if your vehicle is taken by an unauthorized user, it will be disabled (after several progressive warnings) as safely as possible. Should a carjacking occur, the VRS allows you to concern yourself with your personal safety without worrying about your property.

Directed has engineered this vehicle security system, the Failsafe® Starter Kill, and the VRS feature to provide the best combination of personal safety and property protection available. When properly installed, the system can never inadvertently stop your vehicle in traffic or on railroad tracks while the vehicle is in operation. It is unlike other systems that shut down your engine while it is running. This system is designed to perform starter interrupt, or starter kill. The Failsafe Starter Kill cannot shut down an already-running engine – it can only prevent an engine from starting in the first place.

Important! Any installation that allows this product to shut down a vehicle's engine when it is running is contrary to the product's design and intended usage, and Directed hereby expressly disclaims any liability resulting there from..

➤ Arming the VRS

To arm the VRS®, turn the ignition to the ON position and press the arm button on the remote transmitter for one second. The parking lights will flash and the siren will chirp once. This can be done before driving or while driving the vehicle. Once the system is armed, it will initiate its triggered sequence (see below) if any door is opened and closed. If you are forced from the vehicle, the system will trigger as the door is opened and closed. This is how the system works to combat intersection carjacking. To protect against parking lot carjacking, arm the VRS before leaving the vehicle. The system will now trigger automatically the next time you or anyone drives the vehicle. This helps to protect the vehicle if someone takes your keys and remote transmitter by force in a parking lot.

Note: If the VRS system is armed while operating the vehicle and not disarmed prior to leaving the vehicle, it is still armed and will trigger the next time the vehicle is driven.

➤ Triggered sequence

Fifteen seconds after the last door has closed, the system's status LED will begin flashing. This delay is intended to allow you time to distance yourself from your vehicle in the event of a carjacking.

Forty-five seconds later, the siren begins chirping and the parking lights begin flashing. This time could be used to notify authorities that your vehicle has been hijacked, and tell them what the VRS will do next.

Fifteen seconds after the siren chirps begin, the siren's output will change to a continuous blast.

From this point on, when the ignition key is turned off, the VRS® will immediately turn on the starter kill. This will prevent the vehicle from being restarted, thus immobilizing it at that spot.

Three minutes after the constant siren output begins, the flashing parking lights and the siren will stop. The starter kill will remain active until the system is disarmed. If the door is opened or the ignition is turned off and on in an attempt to restart the car, the siren and light flashing will begin again.


➤ Disarming the VRS

Take the time to familiarize yourself with the VRS® triggering sequence and the disarm procedure. It is important to recognize and identify the VRS trigger sequence and know how to disarm it in case of accidental activation.

Once the VRS is armed, it does not disarm automatically. You must disarm it the next time you operate the vehicle. You must disarm it with one of the following procedures:

 
If the system has not entered the triggered sequence (siren has not started chirping):



1. Turn the ignition on.
2. Press  on the transmitter for one second. The lights will flash and the siren will chirp twice. If the system has entered the triggered sequence (siren has begun chirping), pressing the disarm button of the transmitter will not disarm VRS. To disarm the VRS during a VRS trigger sequence:



1. Turn the ignition on.
2. Press the Valet switch the pre-programmed number of times to disarm the VRS system.



Note: If the VRS system has begun its chirping sequence, the ignition must be turned off, then on to disarm. If you are driving the vehicle at the time, pull to a safe place away from traffic and follow the triggered sequence disarm procedure.

Glossary of terms

Control Unit: The “brain” of your system. Usually hidden under the dash area of the vehicle. It houses the microprocessor which monitors your vehicle and controls all of the system’s functions.

Control center: The control center contains the system’s radio frequency antenna, the valet and override switch, and the status LED. For maximum remote control range, the control center is usually located at the top of the windshield, centered near the rear view mirror.

Fail-Safe Starter Kill: An automatic switch controlled by the security system which prevents the vehicle’s starter from cranking whenever the system is armed. The vehicle is never prevented from cranking when the system is disarmed, in Valet mode, or should the starter interrupt switch itself fail. Your system is ready for this feature, however installation may require additional labor.

Input: A physical connection to the system. An input can be provided by a sensor, pinswitch or through an existing system in the vehicle, such as ignition or courtesy lights.

LED: A blue display light used to indicate the status of your system, located on the control center.

Shock Sensor: This is a sensor mounted in the vehicle that is designed to pick up impacts to the vehicle or glass.

Online-store car audio and autogoods Winauto

Siren: Noise generating device usually installed in the engine compartment of the vehicle. It is responsible for generating the “chirps” you hear, as well as the six tones you hear while the alarm is triggered.

Transmitter: Hand-held, remote control which operates the various functions of your system.

Trigger or Triggered Sequence: This is what happens when the alarm “goes off” or “trips”. The triggered response of your system consists of the siren sounding and parking light flashing for the programmed duration.

Valet Switch: Located on the control center, it is used to override the alarm when a transmitter is lost or damaged, or to enter or exit Valet mode.

Warn-Away Response: Lighter impacts to the vehicle will generate the Warning Zone response. It consists of several seconds of siren chirps and parking light flashes.

Zone: A zone is a separate input that the alarm can recognize as unique. Each input to the system is connected to a particular zone. Two or more inputs often share the same zone.

Security & convenience expansions

Listed below are some of the many expansion options available. Please contact your dealer for a complete explanation of all the options available to you.

Audio Sensor: Metal on glass, glass cracking, and breaking glass each produce distinctive acoustic signatures. The 506T audio sensor uses a microphone to pick up sounds, and then analyzes them with proprietary acoustic software to determine if the glass has been struck.

Backup Battery: The 520T keeps the system armed, triggers the alarm and keeps the starter kill active if main battery power is disconnected.

Field Disturbance Sensor: An invisible dome of coverage is established by installing the 508D "radar" sensor. Your security system can then react to any intrusions into this field with the triggered sequence.

Digital Tilt Sensor: The 507M can detect any changes to your car's parking angle, such as those caused by jerking or towing.

Power Trunk Release: The channel two output of the system can operate a factory power release for the vehicle's trunk or hatch. (An additional relay may be required.) If the factory release is not power activated, then Directed's 522T trunk release solenoid can often be added.

Online-store car audio and autogoods Winauto


Power Window Control: Automatic power window control is provided with the 529T and 530T systems.

Valet® Start System: For the ultimate in convenience, the Valet® start system can start your vehicle, monitor engine functions, and power your climate control system with a push of a button. Over-rev protection, open-hood lockout, brake pedal shutoff, and automatic timer shutoff are all included. (This feature is only for automatic transmission, fuel-injected gasoline vehicles.)


Ultrasonic Cabin Sensor: With the 509U Ultrasonic cabin sensor you can protect the belongings inside your car.

Quick reference guide

To arm using your remote

You can activate, or arm, the system by pressing  on your transmitter for one second. When the system arms, you will hear a short siren sound, or chirp, and the parking lights will flash once. If the vehicle's power door locks have been connected to the system, the doors will lock.

To disarm using your remote

To disarm the system, press . You will hear two chirps, and the parking lights will flash twice. If power locks are connected to the system, the doors will unlock. If the siren chirps either four or five times when disarming, see Diagnostics section. This is called Tamper Alert.

Arming while driving

Press  on your transmitter for two seconds while the vehicle is running. The system will chirp once and then once more to indicate that the ignition is on.

Disarming without a transmitter

Turn on the ignition. Press the Valet switch the programmed number of times within 15 seconds. The system should now disarm. If it does not, you may have waited too long. Turn the ignition off and on and try again.

To enter or exit Valet Mode

Turn ignition to RUN position, then turn to OFF position. Press and release the Valet switch within 10 seconds. The status LED will light solid if you are entering Valet Mode, and it will go out if you are exiting Valet Mode.


To activate Panic Mode

Press and hold  down for one second.

To exit Panic Mode

Press  on the transmitter.

To activate Silent Mode™

Press  briefly before arming or disarming, and the confirmation chirp(s) will be eliminated for that one operation only.

Location of Valet switch

Number of Valet switch pulses for disarming _____

Cut along the dotted line and fold to keep in purse or wallet for a quick and easy reference.

Limited lifetime consumer warranty

Directed Electronics. ("Directed") promises to the original purchaser to repair or replace (at Directed's election) with a comparable reconditioned model any Directed unit (hereafter the "unit"), excluding without limitation the siren, the remote transmitters, the associated sensors and accessories, which proves to be defective in workmanship or material under reasonable use during the lifetime of the vehicle provided the following conditions are met: the unit was purchased from an authorized Directed dealer, the unit was professionally installed and serviced by an authorized Directed dealer; the unit will be professionally reinstalled in the vehicle in which it was originally installed by an authorized Directed dealer; and the unit is returned to Directed, shipping prepaid with a legible copy of the bill of sale or other dated proof of purchase bearing the following information: consumer's name, telephone number and address; the authorized dealers name, telephone number and address; complete product description, including accessories; the year, make and model of the vehicle; vehicle license number and vehicle identification number. All components other than the unit, including without limitation the siren, the remote transmitters and the associated sensors and accessories, carry a one-year warranty from the date of purchase of the same. ALL PRODUCTS RECEIVED BY DIRECTED FOR WARRANTY REPAIR WITHOUT PROOF OF PURCHASE WILL BE DENIED. This warranty is non-transferable and is automatically void if: the original purchaser has not completed the warranty card and mailed it within ten (10) days from the date of purchase to the address listed on the card; the unit's date code or serial number is defaced, missing or altered; the unit has been modified or used in a manner contrary to its intended purpose; the unit has been damaged by accident, unreasonable use, neglect, improper service, installation or other causes not arising out of defects in materials or construction. The warranty does not cover damage to the unit caused by installation or removal of the unit. Directed, in its sole discretion, will determine what constitutes excessive damage and may refuse the return of any unit with excessive damage.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, ALL WARRANTIES, INCLUDING BUT NOT LIMITED TO EXPRESS WARRANTY, IMPLIED WARRANTY, WARRANTY OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE AND WARRANTY OF NON-INFRINGEMENT OF INTELLECTUAL PROPERTY, ARE EXPRESSLY EXCLUDED; AND DIRECTED NEITHER ASSUMES NOR AUTHORIZES ANY PERSON OR ENTITY TO ASSUME FOR IT ANY DUTY, OBLIGATION OR LIABILITY IN CONNECTION WITH ITS PRODUCTS. DIRECTED DISCLAIMS AND HAS ABSOLUTELY NO LIABILITY FOR ANY AND ALL ACTS OF THIRD PARTIES INCLUDING ITS AUTHORIZED DEALERS OR INSTALLERS. DIRECTED SECURITY SYSTEMS, INCLUDING THIS UNIT, ARE DETERRENTS AGAINST POSSIBLE THEFT. DIRECTED IS NOT OFFERING A GUARANTEE OR INSURANCE AGAINST VANDALISM, DAMAGE OR THEFT OF THE AUTOMOBILE, ITS PARTS OR CONTENTS; AND HEREBY EXPRESSLY DISCLAIMS ANY LIABILITY WHATSOEVER, INCLUDING WITHOUT LIMITATION, LIABILITY FOR

Online-store car audio and autogoods Winauto

THEFT, DAMAGE AND/OR VANDALISM. THIS WARRANTY DOES NOT COVER LABOR COSTS FOR MAINTENANCE, REMOVAL OR REINSTALLATION OF THE UNIT OR ANY CONSEQUENTIAL DAMAGES OF ANY KIND. IN THE EVENT OF A CLAIM OR A DISPUTE INVOLVING DIRECTED OR ITS SUBSIDIARY, THE VENUE SHALL BE SAN DIEGO COUNTY IN THE STATE OF CALIFORNIA. CALIFORNIA STATE LAWS AND APPLICABLE FEDERAL LAWS SHALL APPLY AND GOVERN THE DISPUTE. THE MAXIMUM RECOVERY UNDER ANY CLAIM AGAINST DIRECTED SHALL BE STRICTLY LIMITED TO THE AUTHORIZED DIRECTED DEALER'S PURCHASE PRICE OF THE UNIT. DIRECTED SHALL NOT BE RESPONSIBLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGE TO VEHICLE, DAMAGES FOR THE LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, THE MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE SUBJECT TO THE CONDITIONS AS DESCRIBED HEREIN. THIS WARRANTY IS VOID IF THE UNIT HAS NOT BEEN PURCHASED FROM DIRECTED, OR AN AUTHORIZED DIRECTED DEALER, OR IF THE UNIT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, ACTS OF GOD, NEGLIGENCE, IMPROPER SERVICE, OR OTHER CAUSES NOT ARISING OUT OF DEFECT IN MATERIALS OR CONSTRUCTION.

Some states do not allow limitations on how long an implied warranty will last or the exclusion

or limitation of incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights that vary from State to State.

This warranty is only valid for sale of product(s) within the United States of America. Product(s) sold outside of the United States of America are sold "AS-IS" and shall have NO WARRANTY, express or implied. This product may be covered by a Guaranteed Protection Plan ("GPP"). See your authorized Directed dealer for details of the plan or call Directed Customer Service at 1-800-876-0800.

Make sure you have all of the following information from your authorized Directed dealer:

A clear copy of the sales receipt, showing the following:

- o Date of purchase
- o Your full name and address
- o Authorized dealer's company name and address
- o Type of alarm installed
- o Year, make, model and color of the automobile
- o Automobile license number
- o Vehicle identification number
- o All security options installed on automobile
- o Installation receipts

920-0003 06-06

Online-store car audio and autogoods Winauto

The company behind this system is Directed Electronics.

Since its inception, Directed® has had one purpose, to provide consumers with the finest vehicle security and car stereo products and accessories available. The recipient of nearly 100 patents and Innovations Awards in the field of advanced electronic technology, Directed® is ISO 9001 registered.

Quality Directed Electronics products are sold and serviced throughout North America and around the world. Call (800) 274-0200 for more information about our products and services



Directed Electronics is an ISO 9001 registered company.

Directed® is committed to delivering world-class quality products and services that excite and delight our customers.

Directed Electronics
Vista, CA 92081

www.directed.com

© 2008 Directed Electronics - All rights reserved
G3105P 2008-12