




A Capital Safety Company

48 SPECIFIC INSTRUCTIONS



140kg

= 49

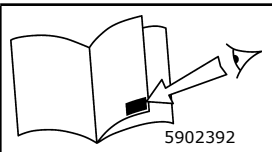

5902392

**Rebel™
SRLs**

1

78

Model Numbers:

3590520	3590531	3590580	3590620	3590660	3590700
3590521	3590532	3590581	3590621	3590661	3590701
3590522	3590570	3590610	3590650	3590690	
3590530	3590571	3590611	3590651	3590691	



3

EN360:2002
CNB/P: 11.060

8

CE TYPE TEST






No. 0082
APAVE SUDEUROPE SAS
Z.I. avenue Gay Lussac
BP3
33370 ARTIGUES-pres-
BORDEAUX
France

9

CE PRODUCTION
QUALITY CONTROL

No. 0086
BSI Product Services
Kitemark House
Mayland Ave.
Hemel Hempstead
HP2 4SQ UK



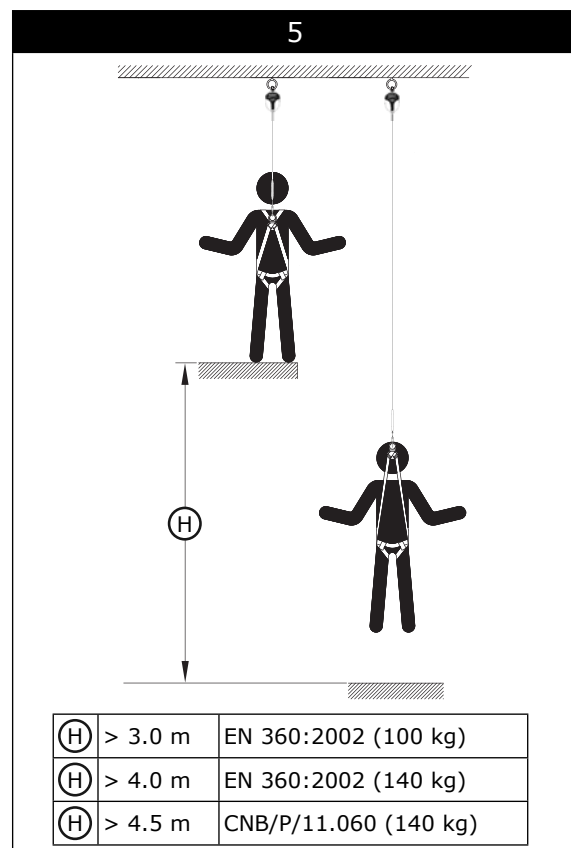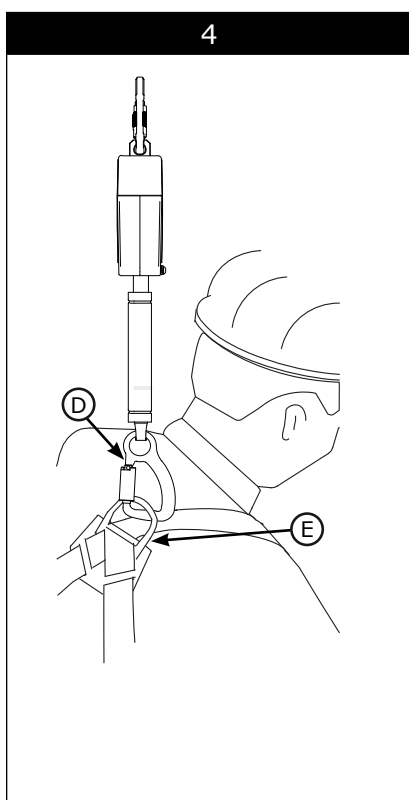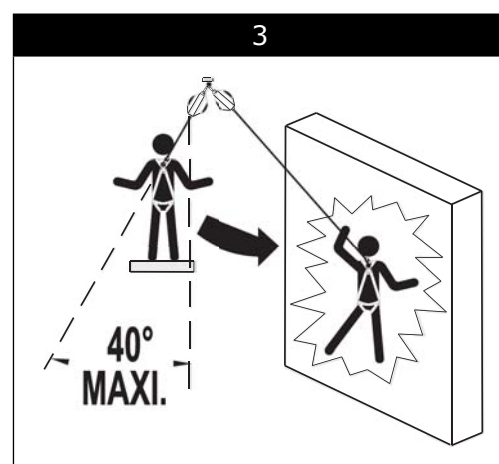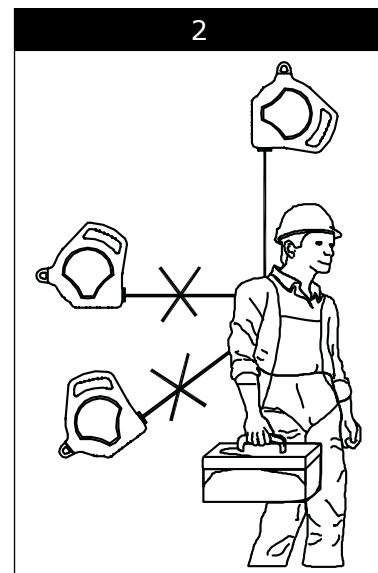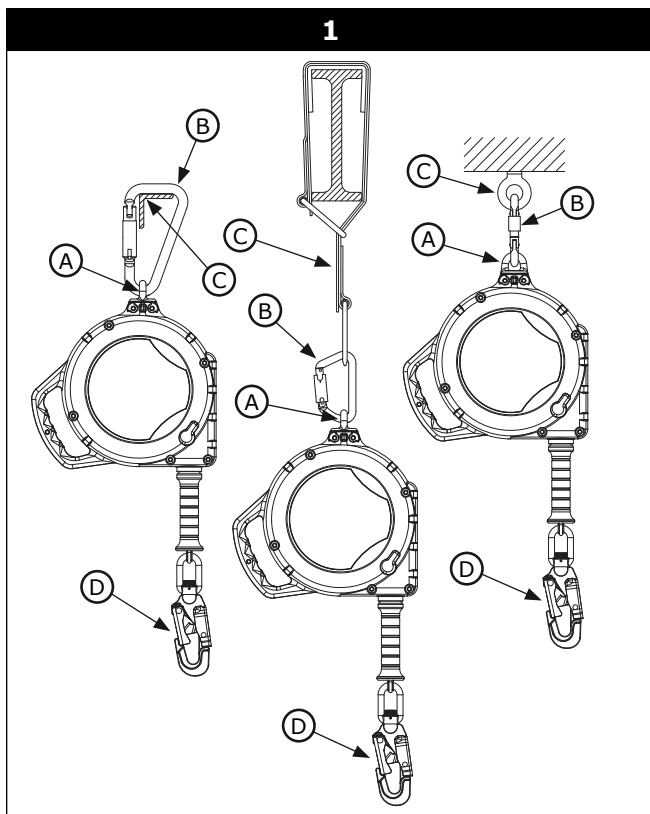

USER INSTRUCTIONS - Carefully read all instructions before using the Self-Retracting Lifeline (SRL). See 'Glossary' in "General Instructions for Use and Maintenance" for identification of numbered items in a white box.

TRAINING: It is the responsibility of the users of this equipment to understand these instructions, and to be trained in the correct installation, use, and maintenance of this equipment. These individuals must be aware of the consequences of improper installation or use of this equipment. This user manual is not a substitute for a training program. Training must be provided on a periodic basis to ensure proficiency of the users.

USE: The Self-Retracting Lifeline (SRL) may be used to provide continuous fall protection while ascending, descending, or moving laterally. The SRL is intended for use with fall arrest equipment in compliance with EN 361.

- Avoid working where the lifeline will be in contact with or abrade against unprotected sharp edges. Provide protection for the lifeline.
- Do not allow any lifelines to pass under arms or between legs during use.
- If a fall occurs, the employer must have a rescue plan and the ability to implement a rescue.
- Equipment which has been subjected to fall arrest forces must be removed from service for inspection (see *Inspection*).

WARNING: Figure 1 illustrates acceptable anchorage methods for the SRL. The anchorage structure must be capable of supporting a load of 10 kN (2,248 lbs.). Make only compatible connections to anchors conforming to EN 795. Connect only to an overhead anchorage. Do not work above the anchorage. (Figure 2).

WARNING: Swing falls may occur when the anchorage point is not directly above the point where a fall occurs (Figure 3). The force of striking an object in a swing fall may cause serious injury or death. Minimize swing falls by working as close to the anchorage as possible. Do not permit a swing fall if injury could occur.

WARNING: Use of this equipment in areas with environmental hazards may require additional precautions to reduce the possibility of injury to the user or damage to the equipment. Hazards may include, but are not limited to: heat, chemicals, corrosive environments, high voltage power lines, abrasive surfaces, and sharp edges. Contact Capital Safety if you have questions about using this equipment where environmental hazards exist.

OPERATION: During operation, the hook (D) on the end of the SRL lifeline is attached to the back (dorsal) D-ring (E) on a full body harness (Figure 4). The swivel eye (A) on the top end of the SRL is secured to the anchorage connector (C) or anchorage (C) with a compatible carabiner (B) (Figure 1). The worker is free to move about within recommended working areas at normal speeds. The lifeline should extend smoothly and retract without hesitation. If slack line condition is created in normal use, the SRL should be returned to Capital Safety for service. Should a fall occur, the SRL will lock and arrest the fall. Upon rescue, remove the SRL from use. Inspect as described in *Inspection*. When working with the SRL, allow the lifeline to recoil back into the device under control. A short tag line may be required to extend or retract the lifeline during connection and disconnection. Allowing the lifeline to be fully extended for long periods of time may cause premature weakening of the retraction spring.




TRANSPORT AND STORAGE: Transport and store the SRL in a cool, dry, clean environment; out of direct sunlight. Avoid transporting or storing the SRL in areas where chemical vapors exist. Thoroughly inspect the SRL after extended storage or transport.


MAINTENANCE:

- **Exterior:** Periodically clean the exterior of the SRL with water and a mild detergent. Position the SRL so water can drain out. Clean labels as required.
- **Lifeline:** Clean the lifeline with water and a mild detergent. Rinse and thoroughly air dry or towel dry. Do not force dry with heat. An excessive buildup of dirt or other contaminants may prevent the lifeline from fully retracting, causing a potential free fall hazard. Return the SRL to an authorized service center for lifeline replacement if necessary.
- **System Components:** Clean and store associated system components according to manufacturer's instructions.

WARNING: Do not disassemble the SRL. Do not lubricate any part of the SRL. Additional maintenance and servicing must be performed by an authorized service center.

Inspection Guidelines: To ensure safe, efficient operation, the Rebel™ SRL must be inspected per the instructions in Table 1 at the indicated frequencies.

 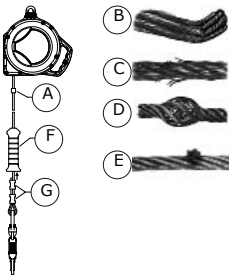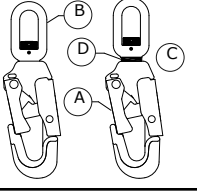Table 1 - Inspection Procedures		Before Each Use	Yearly	After A Fall
SRL 	Inspect the SRL for loose bolts and bent or damaged parts.	X	X	X
	Inspect the Housing (A) for distortion, cracks, or other damage.	X	X	X
	Inspect the Swivel Eye (B) for cracks or damage and verify that it swivels freely.	X	X	X
	Ensure the SRL locks up when the Lifeline is jerked sharply. Lockup should be positive with no slipping.	X	X	X
	Inspect the entire unit for signs of corrosion.	X	X	X
	Verify all labels are present and are fully legible (see <i>Labels</i>).	X	X	X
Lifeline 	Verify the Lifeline pulls out and retracts fully without hesitation or slack in the line.	X	X	X
	Inspect the Reserve Lifeline payout. If a fall has been arrested with most of the lifeline out, the Reserve Lifeline may have been deployed. Pull the Lifeline out of the SRL until it stops. If a red band (A) is visible, the Reserve Lifeline has been deployed and the SRL must be serviced by and authorized service center before reuse.	X	X	X
	Slide the Cable Bumper (F) up and inspect the ferrules (G) for cracks or damage and the cable for corrosion or broken wires.	X	X	X
	Inspect the entire lifeline for cuts, kinks (B), broken wires (C), bird-caging (D), welding splatter (E), corrosion, chemical contact areas, or severely abraded areas.	X	X	X
	NOTE: Replace the wire rope assembly if there are six or more randomly distributed broken wires in one lay, or three or more broken wires in one strand in one lay. A "lay" of wire rope is the length of wire rope it takes for a strand (the larger groups of wires) to complete one revolution or twist along the rope. Replace the wire rope assembly if there are any broken wires within 1 inch (25mm) of the ferrules.			
Snaphook 	Inspect the Snaphook for signs of damage or corrosion.	X	X	X
	Verify the Gate (A) opens and closes correctly and the Swivel (B) rotates freely.	X	X	X
	Inspect the Snaphook Impact indicator, if present. If the Snaphook is in 'Indicated Mode' (C); as indicated by an exposed red band (D), the SRL has been subjected to an impact load and must be removed for service by an authorized service center. Do not attempt to reset the Impact Indicator.	X	X	X
Connectors & Full Body Harness	Inspect Anchorage Connectors for damage, corrosion, and proper working condition.	X	X	X
	Inspect the Full Body Harness per the manufacturer's instructions.	X	X	X
AFTER INSPECTION: Record Inspection results in the Inspection & Maintenance Log (see back cover). If inspection reveals an unsafe or defective condition, remove from service immediately and contact an authorized service center for repair.				

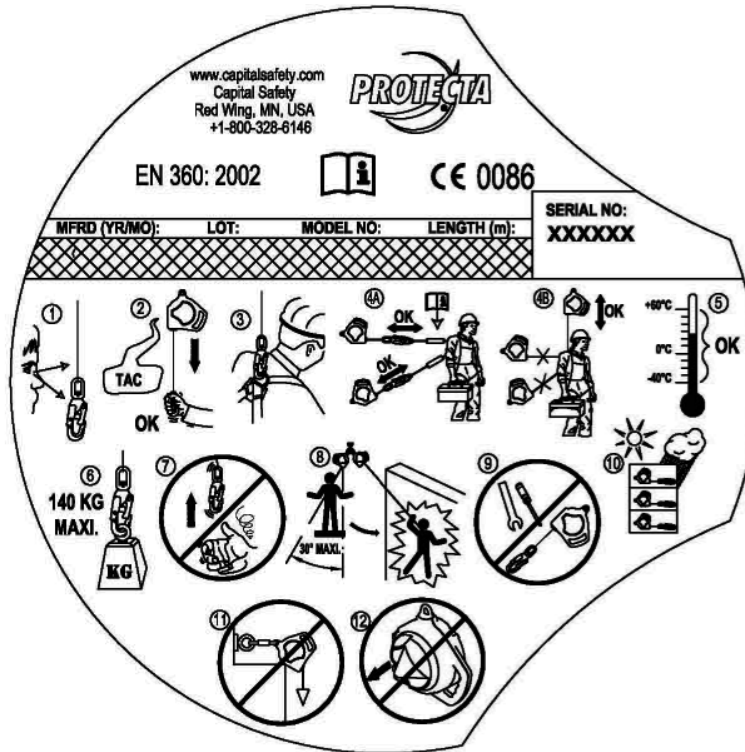

Label Image Identification

1	Inspect snap Hook and Impact Indicator
2	Inspect Locking Action of SRL
3	Correct Way of Connecting SRL to Harness
4A	Horizontal Use- Must Use Sling with SRL.
4B	Vertical Use-Must Use SRL alone. Do not use sling with SRL in this application.
5	Temperature Usage Range -40°C-+60°C
6	Maximum Capacity 140kg
7	Always Allow the Lifeline to Recoil Back Into The SRL Under Control
8	Swing Fall Hazard-To Avoid Be Sure to Anchor Directly Above Head
9	Do Not Repair and Send to An Authorised Repair Center
10	Inspect More Frequently Under Extreme Weather Conditions
11	Do Not Load Over an Edge
12	Do Not Remove Label

Identification des images des étiquettes

1	Inspecter le mousqueton et l'indicateur d'impact
2	Inspecter l'action de verrouillage de la SRL
3	Connexion correcte de la SRL au harnais
4A	Utilisation horizontale - la sangle doit être utilisée avec la SRL.
4B	Utilisation verticale - la SRL doit être utilisée sans aucun autre dispositif. Ne pas utiliser de sangle avec la SRL dans ce cas.
5	Plage de température d'utilisation : de -40° C à +60° C
6	Capacité maximum 140 kg.

EN	LIMITED LIFETIME WARRANTY Warranty to End User: CAPITAL SAFETY warrants to the original end user ("End User") that its products are free from defects in materials and workmanship under normal use and service. This warranty extends for the lifetime of the product from the date the product is purchased by the End User, in new and unused condition, from a CAPITAL SAFETY authorised distributor. CAPITAL SAFETY'S entire liability to End User and End User's exclusive remedy under this warranty is limited to the repair or replacement in kind of any defective product within its lifetime (as CAPITAL SAFETY in its sole discretion determines and deems appropriate). No oral or written information or advice given by CAPITAL SAFETY, its distributors, directors, officers, agents or employees shall create any different or additional warranties or in any way increase the scope of this warranty. CAPITAL SAFETY will not accept liability for defects that are the result of product abuse, misuse, alteration or modification, or for defects that are due to a failure to install, maintain, or use the product in accordance with the manufacturer's instructions. THIS WARRANTY IS THE ONLY WARRANTY APPLICABLE TO OUR PRODUCTS AND IS IN LIEU OF ALL OTHER WARRANTIES AND LIABILITIES, EXPRESSED OR IMPLIED.	FR
IT	Garanzia di durata limitata Garanzia dell'utente finale: CAPITAL SAFETY garantisce all'utente finale originale (di seguito "Utente finale") che i suoi prodotti sono privi di difetti dei materiali e di fabbricazione se utilizzati nelle normali condizioni d'uso e di servizio. La garanzia copre l'intera durata del prodotto dalla data di acquisto del prodotto da parte dell'Utente finale come prodotto nuovo e mai usato da un distributore autorizzato CAPITAL SAFETY. La responsabilità complessiva di CAPITAL SAFETY nei confronti dell'Utente finale e il ricorso esclusivo dell'Utente finale ai sensi della presente garanzia sono limitati alla riparazione o alla sostituzione in natura dei prodotti difettati entro la durata (così come stabilita a propria esclusiva discrezione da CAPITAL SAFETY). Eventuali informazioni orali o scritte o consigli forniti da CAPITAL SAFETY, dai suoi distributori, direttori, funzionari, agenti o dipendenti non potranno in alcun modo dare origine a garanzie diverse o aggiuntive né potranno ampliare l'ambito della presente garanzia. CAPITAL SAFETY non potrà essere ritenuta responsabile alle difetti derivati da un cattivo o errato utilizzo del prodotto, da alterazioni o modifiche o da difetti dovuti ai mancati installazione, manutenzione o uso del prodotto in conformità alle istruzioni del produttore. LA PRESENTE GARANZIA È L'UNICA GARANZIA APPLICABILE AI NOSTRI PRODOTTI E SOSTITUISCE QUALSIASI ALTRA GARANZIA E RESPONSABILITÀ, ESPRESSE O IMPLICITE.	DE
ES	Garantía limitada de por vida Garantía para el Usuario final: CAPITAL SAFETY garantiza al usuario final original ("Usuario final") que sus productos están libres de defectos en materiales y mano de obra bajo condiciones normales de uso y servicio. Esta garantía abarca toda la vida útil del producto, desde la fecha de compra del producto por parte del Usuario final, en estado nuevo y sin uso, a un distribuidor autorizado de CAPITAL SAFETY. Toda la responsabilidad de CAPITAL SAFETY para con el Usuario final y el recurso exclusivo del Usuario final en virtud de esta garantía, se limita a la reparación o sustitución en especie de cualquier producto defectuoso dentro de su vida útil (como CAPITAL SAFETY lo determine y estime conveniente a su sola discreción). Ninguna información oral o escrita, o información dada por CAPITAL SAFETY, sus distribuidores, directores, técnicos, agentes o empleados, creará ninguna garantía distinta o adicional, ni de alguna manera ampliará el alcance de esta garantía. CAPITAL SAFETY no acepta responsabilidad por defectos que sean resultado del abuso, mal uso, alteración o modificación del producto, ni por los defectos que se deban a una instalación, mantenimiento o utilización que no esté de acuerdo con las instrucciones del fabricante. ESTA GARANTÍA ES LA ÚNICA GARANTÍA APLICABLE A NUESTROS PRODUCTOS Y SUSTITUYE A CUALQUIER OTRA GARANTÍA O RESPONSABILIDAD, EXPRESA O IMPLÍCITA.	PT
SW	Begränsad livstidsgaranti Garanti för slutanvändare: CAPITAL SAFETY garanterar den ursprungliga slutanvändaren (slutanvändaren) att produkterna inte har några material- eller produktionsfel vid normal användning och service. Garantin omfattar produktens livslängd från det datum då produkten köps av slutanvändaren i nytt och oanvänt skick från en auktoriserad återförsäljare för CAPITAL SAFETY. CAPITAL SAFETYs hela ansvarskylighet gentemot slutanvändaren och slutanvändarens enda gottgörelse inom ramen för denna garanti begränsas till reparation eller byte av trasiga produkter under deras livslängd (enligt vad CAPITAL SAFETY bestämmer och bedömer som lämpligt efter eget gottfinnande). Inga muntliga eller skriftliga uppgifter eller råd från CAPITAL SAFETY, dess återförsäljare, chefer, tjänstemän, företrädare eller anställda får upprätta några andra eller ytterligare garantier eller på något sätt ändra garantins omfattning. CAPITAL SAFETY tar inget ansvar för fel som uppstår på grund av felaktig användning, missbruk, ändring eller modifiering av produkten eller fel som uppstår på grund av att produkten inte har monterats, underhållits eller använts i enlighet med tillverkarens anvisningar. DENNA GARANTI ÄR DEN ENDA GARANTI SOM GÄLLER FÖR VÅRA PRODUKTER OCH DEN ERSÄTTER ALLA ANDRA GARANTIER OCH ANSVAR, BÅDE UTTRYCKLIGA OCH UNDERFÖRSTÅDDA.	FI
NO	Begrenset livstidsgaranti Garanti for sluttbruker: CAPITAL SAFETY garanterer den opprinnelige sluttbrukeren ("Sluttbrukeren") at materialene og håndverket som gikk med i tilvirkningen av produktene er uten defekter i sammenheng med vanlig bruk. Garantien gjelder for produktets livstid fra datoen Sluttbrukeren kjøper produktet i ny og ubrukt stand fra en autorisert leverandør av CAPITAL SAFETY. CAPITAL SAFETYs fulle og hele ansvar overfor Sluttbrukeren og Sluttbrukerens eneste rettighet under denne garantien er begrenset til reparasjon og erstatning i natura for alle defekte produkter innen sin livstid (som CAPITAL SAFETY anslår og anser som passende etter sitt eget forgdottbefinnende). Verken muntlig eller skriftlig rådgivning fra CAPITAL SAFETY eller dets leverandører, styremedlemmer, ledere, agenter eller ansatte skal opprette ulike eller ytterligere garantier, eller på noen måte utvide omfanget til denne garantien. CAPITAL SAFETY tar ikke ansvar for defekter som er resultatet av produktmisbruk, misbruk, endring eller modifikasjon, eller defekter som skyldes montering, vedlikehold eller bruk som ikke samsvarer med produsentens anvisninger. DENNE GARANTIE ER DEN ENESTE GARANTIE SOM GJELDER FOR VÅRE PRODUKTER, DEN GJELDER I STEDET FOR ALLE ANDRE GARANTIER OG ALT ANNET ANSVAR, BÅDE UTTRYKT OG UNDERFORSTÅTT.	DA
SK	Obmedzená doživotná záruka Záruka pre koncového používateľa: Spoločnosť CAPITAL SAFETY zaručuje pôvodnému koncovému používateľovi (ďalej len „Koncový používateľ“), že jej výrobky sú bez chýb materiálu a vyhovovania pri bežnom používaní a servise. Táto záruka platí po celú dobu životnosti výrobku, od dátumu, kedy bol výrobok zakúpený Koncovým používateľom, v novom a nepoužívanom stave, od autorizovaného distribútora spoločnosti CAPITAL SAFETY. Celkové ručenie spoločnosťou CAPITAL SAFETY voči Koncovému používateľovi a výhradný nápravný prostriedok podľa tejto záruky sa obmedzuje na fyzickú opravu alebo výmenu každého chybného výrobku po dobu jeho životnosti (ako spoločnosť CAPITAL SAFETY určí podľa svojho vlastného uváženia a aké považuje za primerané). Žiadne ústne alebo písomné informácie ani rady poskytnuté spoločnosťou CAPITAL SAFETY, jej distribútormi, štatutárnymi predstaviteľmi, riaditeľmi, zástupcami alebo zamestnancami nezadávajú žiadne iné ani ďalšie záruky, ani akýmkoľvek spôsobom nerozširujú rozsah tejto záruky. Spoločnosť CAPITAL SAFETY neručí za chyby spôsobené nevhodným, neodborným používaním výrobku, jeho úpravami alebo zmenami, ani za chyby, spôsobené nesprávnou inštaláciou, údržbou alebo používaním výrobku v rozpore s pokynmi výrobcu. TÁTO ZÁRUKA JE JEDINÁ ZÁRUKA NA NAŠE VÝROBKY A NAHRADZA VŠETKY OSTATNÉ ZÁRUKY A ZODPOVEDNOSTI, ČI UŽ POTVRDENÉ SLOVNE ALEBO IMPLICITNE.	



A Capital Safety Company

CSG USA & Latin America

3833 SALA Way
Red Wing, MN 55066-5005
Toll Free: 800.328.6146
Phone: 651.388.8282
Fax: 651.388.5065
solutions@capitalsafety.com

CSG Canada

260 Export Boulevard
Mississauga, ON L5S 1Y9
Phone: 905.795.9333
Toll-Free: 800.387.7484
Fax: 888.387.7484
info.ca@capitalsafety.com

CSG Northern Europe

Unit 7 Christleton Court
Manor Park
Runcorn
Cheshire, WA7 1ST
Phone: + 44 (0)1928 571324
Fax: + 44 (0)1928 571325
csgne@capitalsafety.com

**CSG EMEA
(Europe, Middle East, Africa)**

Le Broc Center
Z.I. 1ère Avenue
5600 M B.P. 15 06511
Carros
Le Broc Cedex
France
Phone: + 33 4 97 10 00 10
Fax: + 33 4 93 08 79 70
information@capitalsafety.com

CSG Australia & New Zealand

95 Derby Street
Silverwater
Sydney NSW 2128
AUSTRALIA
Phone: +(61) 2 8753 7600
Toll-Free : 1 800 245 002 (AUS)
Toll-Free : 0800 212 505 (NZ)
Fax: +(61) 2 87853 7603
sales@capitalsafety.com.au

CSG Asia

Singapore:
16S, Enterprise Road
Singapore 627666
Phone: +65 - 65587758
Fax: +65 - 65587058
inquiry@capitalsafety.com

Shanghai:

Rm 1406, China Venturetech Plaza
819 Nan Jing Xi Rd,
Shanghai 200041, P R China
Phone: +86 21 62539050
Fax: +86 21 62539060

www.capitalsafety.com



Certificate No. FM 39709