 
 

TomTom ONE XL HDT

1. What's in the box

① Your TomTom ONE XL HDT

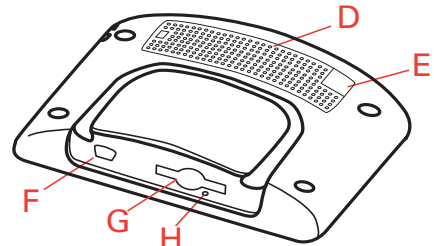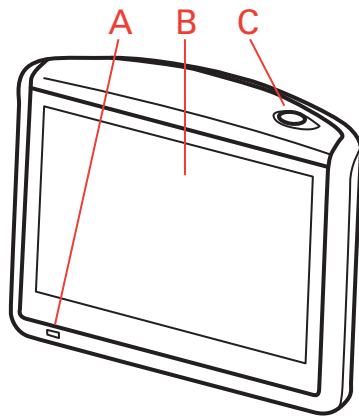 


- Ⓐ Charging light
- Ⓑ Touchscreen
- Ⓒ On/off button
- Ⓓ Speaker
- Ⓔ External antenna connector
- Ⓕ USB connector
- Ⓖ Memory card slot (SD card not included) for optional additional maps
- Ⓗ Reset button


② Car charger




③ Documentation pack

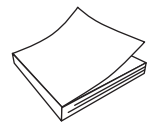

④ Windscreen holder

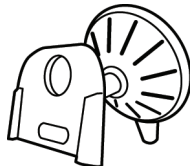 

⑤ USB cable

 

2. Before you start...

Safety Notice

Your TomTom ONE XL HDT contains a GSM module which can interfere with electrical devices such as cardiac pacemakers, hearing aids and aviation equipment.

Interference with these devices may endanger the health or life of others.

Do not use near unprotected electrical units nor in areas where the use of mobile telephones is prohibited, such as hospitals and airplanes.

Switching on and off

To switch your TomTom ONE XL HDT on or off, press and hold the On/Off button for 2 seconds. The first time you switch on, it may take a short while for your device to start.

Note: *In rare cases, your ONE XL HDT may not start correctly. If this happens, press the reset button, then switch on the device again.*

Setting up

To set up your TomTom ONE XL HDT you need to answer a few questions by tapping the screen.

Important: Take care to select the correct language, since the language you choose will be used for all menus and written instructions.

Battery notes

We recommend that you fully charge your TomTom ONE XL HDT the first time that you use it. To do this, you need to connect the device to your computer using the USB cable and then turn on your computer. It takes up to 2 hours to charge the battery completely.

For information on connecting your computer, see **Using TomTom HOME** (53).

Note: *Your TomTom ONE XL HDT uses a small amount of battery power to remember the last screen being shown when the device is switched off.*

If you do not charge your ONE XL HDT for a prolonged period of time, the next time you start your ONE XL HDT it will show the default starting screen. All other device settings will still be maintained.

Improving reception

If your TomTom ONE XL HDT takes longer than 5 minutes to find your current position, make sure that the device is in an open space away from tall objects, such as buildings or trees.

Important: Some vehicles have heat reflective shielding in the windscreen. This may prevent your ONE XL HDT from locating your current position.

The TomTom External Antenna Kit (available for purchase as an accessory) can help to improve reception.

Windscreen holder

Use the windscreen holder to install your TomTom ONE XL HDT inside your car.

To attach the holder, press the suction cup firmly to the windscreen in your car, in an area of the windscreen where the glass is flat.

Make sure that both the holder and your windscreen are clean and dry before you attach the holder. Place the holder so that it does not interfere with your view of the road.

Take care of your TomTom ONE XL HDT

Never leave your TomTom ONE XL HDT or accessories on view when you leave the car or they may become an easy target for thieves.

You can set a password for your TomTom ONE XL HDT which must be entered every time you start your ONE XL HDT. For more information, see **Using TomTom HOME** (53).

It is important to take care of your ONE XL HDT.

 
- Your ONE XL HDT is not designed for use in extreme temperatures and any such exposure may cause permanent damage.
- Do not open the casing of your ONE XL HDT under any circumstances. Doing so may be dangerous and will invalidate the warranty.
- Wipe or dry the screen of your ONE XL HDT using a soft cloth. Do not use any liquid cleaners.

3. Driving View

When your TomTom ONE XL HDT starts, you are shown the Driving View along with detailed information about your current location.

Tap the centre of the screen at any time to open the Main Menu.

Note: The Driving View is shown in black and white until your ONE XL HDT locates your current position.

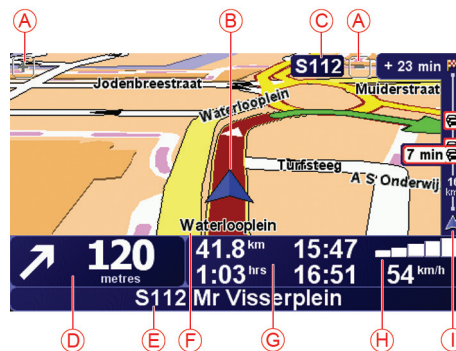

- Ⓐ Tap + and - to zoom in and out.
- Ⓑ Your current position.
- Ⓒ The name of the next major road or road sign information, if applicable.
- Ⓓ Navigation instruction for the road ahead.

Tap this area to repeat the last spoken instruction and to change the volume.

- Ⓔ The name of the next street to turn onto.
- Ⓕ The name of the street you are on.
- Ⓖ Information about your journey such as journey time, remaining distance and arrival time.

To select what will be shown, tap **Status bar preferences** in the **Preferences** menu.

- Ⓗ GPS signal strength.
- Ⓘ HD Traffic sidebar.

4. Making your first journey

 
Planning a route with your TomTom ONE XL HDT is easy. To plan your first route, follow the steps below.

Important: You should always plan your journey before you start driving. It is dangerous to plan a route while driving.


1. Tap the screen to bring up the Main Menu.

Note: The buttons on your ONE XL HDT are shown in full colour unless a button is currently unavailable. For example, the button named **Find alternative...** in the Main Menu is not available until you have planned a route.

2. Tap **Navigate to...**

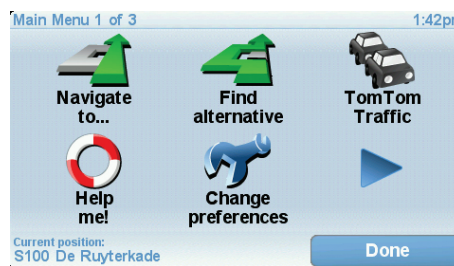

 3. Tap **Address**.

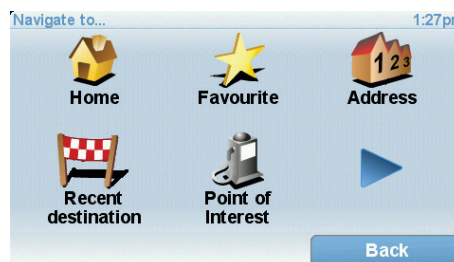

When you enter an address, you can choose from the following options:

 
- **City centre** - tap this button to set your destination as the centre of a city or town.
- **Street and house number** - tap this button to set an exact address as your destination.
- **Postcode** - tap this button to enter a postcode as your destination.

Note: You can enter a postcode for any country. In the UK and the Netherlands, postcodes are detailed enough to identify a house on their own. In other countries you can enter a postcode to identify a town or area. You will then have to enter a street and house number.

- **Crossing or intersection** - tap this button to set your destination as the point where two streets meet.

For your first journey, we will enter an exact address.

4. Tap **Street and house number**.

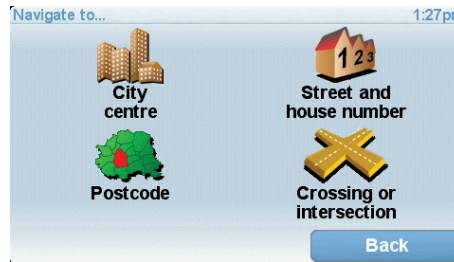

Note: When planning a trip for the first time your ONE XL HDT asks you to choose a country. Your choice is saved and used for all routes you plan.

You can change this setting at any time by tapping the country flag.

5. Start to type the name of the town where you want to go.

 


As you type, the names of the towns that match what you have typed are shown. When your destination appears in the list, tap the name of the town to set the destination.

6. Start to type the name of the street and select it when it is shown.

As with the name of the town, the names of the streets that match what you have typed are shown. When your destination appears in the list, tap the name of the street to set the destination.

7. Now enter the house number of your destination and then tap **Done**.

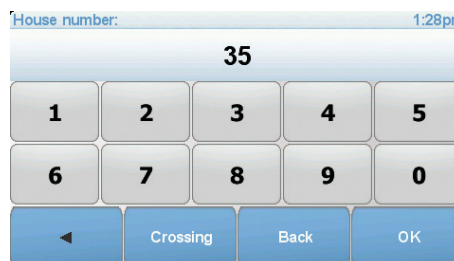


8. Your ONE XL HDT asks if you need to arrive at a particular time. For this exercise, tap **NO**.

The route is calculated by your ONE XL HDT.

9. When the route has been calculated, tap **Done**.

 Your ONE XL HDT will warn you about any traffic delays and immediately begin to guide you to your destination, using both spoken instructions and on-screen directions.

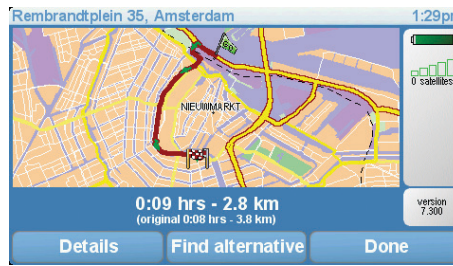

Arrival times

When you plan a route, your TomTom ONE XL HDT asks you if you need to arrive at a particular time.

Tap **YES** to enter a preferred arrival time.

Your ONE XL HDT calculates your arrival time and shows you whether you will arrive on time.

You can also use this information to work out when you need to leave. If your ONE XL HDT shows that you will arrive 30 minutes early, you can wait and leave in 30 minutes time, rather than arrive early.

Your arrival time is constantly recalculated during your journey. The status bar shows whether you will arrive on time or if you are going to be late, as shown below:



You will arrive 55 minutes before the arrival time you entered.

If the estimated arrival time is more than five minutes before the time you entered, it is shown in green.



You will arrive 3 minutes before the arrival time you entered.

If the estimated arrival time is less than 5 minutes before the time you entered, it is shown in yellow.



You will arrive 19 minutes late.

If the estimated arrival time is later than the time you entered, it is shown in red.



Status bar preferences

Tap **Status bar preferences** in the Preferences menu, to enable or disable arrival time notifications.

Select the required options on the first menu screen and then tap **Done**.

To enable arrival time notifications, select **Show leeway to arrival time**.

To disable arrival time notifications, unselect **Show leeway to arrival time**.

What are the other navigation options?

When you tap **Navigate to...**, you can set your destination in many ways, not just by entering the address. The other options are listed below:

 Home	Tap this button to navigate to your Home location. You will probably use this button more than any other. For information about setting your Home location, see Change Home location (45).
 Favourite	Tap this button to select a Favourite as your destination. For more information about Favourites, see Favourites (23).
 Address	Tap this button to enter an address as your destination.
 Recent destination	Tap this button to select your destination from a list of places you have recently used as destinations.
 Point of Interest	Tap this button to navigate to a Point of Interest (POI). For more information about POIs and navigating to a POI, see Points of Interest (28).
 GPS position	Tap this button to select your GPS position, as your destination. For more information about GPS, see Global Positioning System (GPS) (54).
 Point on map	Tap this button to select a point on the map as your destination using the map browser. For more information about the map browser, see Driving View (5).
 Latitude Longitude	Tap this button to enter a destination using latitude and longitude values.
 Position of last stop	Tap this button to select your last recorded position, as your destination. For more information about the GPS, see Global Positioning System (GPS) (54).

Planning a route in advance

You can also use your ONE XL HDT to plan journeys in advance by selecting both your starting point and your destination. You could, for example, do the following:

- Find out how long a journey is going to take before you start.
- Check the route of a journey you are planning.
- Check a route for someone who is coming to visit you, so that you can explain the route to them.

To plan a route in advance, follow these steps:

1. Tap the screen to bring up the main menu.
2. Tap the arrow button to move to the next menu screen and tap **Prepare route**.



Prepare route

3. Select the starting point for your journey in the same way that you would select your destination.
4. Set the destination for your journey.
5. Choose the type of route that should be planned.
 - **Fastest route** - the route which takes the least time.
 - **Shortest route** - the shortest distance between the locations you set. This may not be the quickest route, especially if the shortest route is through a town or city.
 - **Avoid motorways** - a route which avoids motorways.
 - **Walking route** - a route designed for making the journey on foot.
 - **Bicycle route** - a route designed for making the journey on a bicycle.
 - **Limited speed** - a route for a vehicle which can only be driven at a limited speed. You have to specify the maximum speed.
6. Your TomTom ONE XL HDT plans the route between the two locations you selected.

More information about a route

You can access these options for the route you last planned, by tapping **View route** in the Main Menu.

To find out about your route in detail, tap the **Details** button on the route summary screen.

You can then select from the following options:



Browse as text

Tap this button for a list of all the turn instructions on the route.

This is very useful if you need to explain a route to someone else.



Tap this button to see each turn in the journey. Tap the right and left arrows to move forwards and backwards through the journey.

Tap the screen to turn off the 3D display and view the map from above.



Tap this button to see an overview of the route using the map browser.

For more information about the map browser, see **Driving View** (5).



Tap this button to watch a demo of the journey. You can interrupt the demo at any time by tapping the screen.



Tap this button to open the route summary screen.

5. Finding alternative routes

Once you have planned a route, you may want to change something about the route, without changing your destination.

Why change the route?

Maybe for one of these reasons:

- You can see a roadblock or a line of traffic ahead.
- You want to travel via a particular location, to pick someone up, stop for lunch or fill up with petrol.
- You want to avoid a difficult junction or a road you don't like.



Tap **Find alternative...** in the Main Menu to change the route that is currently planned.

Then tap one of the options below.



Tap this button to calculate an alternative to the route already planned.

Your ONE XL HDT will look for another route from your current location to your destination.

If you decide you would prefer to use the original route after all, tap **Recalculate original**.

Why would I need to do this?

Apart from the roads near your position and near your destination, the new route will use totally different roads to reach your destination. This is an easy way of calculating a totally different route.



Tap this button if you can see a roadblock or a line of traffic ahead. You then have to choose how much of the route ahead you want to avoid.

Choose from the different options: 100m, 500m, 2000m, 5000m. Your ONE XL HDT will recalculate your route avoiding the section of the route for the distance you selected.

Don't forget that once a new route is calculated, you may have to turn off the road you are on very soon.

If the roadblock suddenly clears, tap **Recalculate original** to return to your original route.



Travel via...

Tap this button to change your route so that it passes a particular location, perhaps to pick someone up on the way.

You choose the location you want to pass in the same way as you choose a destination. So you can select from all the same options: for example, **Address, Favourite, Point of Interest** and **Point on map**.

Your ONE XL HDT will calculate a new route to your destination that passes the location you chose.



Recalculate original

Tap this button to return to the original route without deviations to avoid roadblocks or travelling via particular locations.



Avoid part of route

Tap this button to avoid a part of the route. Use this button if you see that your route includes a road or junction you don't like, or which is well-known for traffic problems.

You then choose the road you want to avoid from a list of the roads on your route.



Minimise traffic delays

Tap this button to recalculate your route so that it avoids traffic problems as much as possible. Your ONE XL HDT will check if there are any traffic problems on your route and work out the best route to avoid the problems.

6. Sounds and voices

The sound on your TomTom ONE XL HDT is used for features such as:

- Spoken instructions
- Warnings

How do I change the volume level?

You can change the volume in three ways:

- Tap the bottom left hand area of the Driving View. The last spoken instruction is repeated and the volume level is shown.

Move the volume slider to adjust the volume.

- In the Main Menu, tap **Change preferences**, then tap **Volume preferences**.

Tap **Test** to check your changes.

Changing the volume automatically



Your TomTom ONE XL HDT can change the volume automatically.

1. In the Main Menu, tap **Change preferences**.
2. Tap **Volume preferences**.
3. Select **Link volume to car speed**.
4. Tap **Done**.

Selecting a voice



Change voice

To change the voice being used by your TomTom ONE XL HDT, tap **Change voice** in the Preferences menu and select a voice from the list.

7. Help me!

Help me! provides an easy way to navigate to emergency services centres and other specialist services and contact them by phone.

For example, if you are involved in a car accident, you could use Help me! to call the nearest hospital and tell them your exact location.

Tip: If you do not see the **Help me!** button in the Main Menu, tap **Show ALL menu options** in the Preferences menu.

How do I use Help me! to phone a local service?

You can use Help me! to find and make contact with a service centre.

When you select a service centre, your current location and the phone number of the POI are shown.

To use Help me! to locate a service centre, contact the centre by phone and navigate from your current location to the centre, do the following:

1. Tap the screen to bring up the Main Menu.
2. Tap **Help me!**
3. Select the type of service you require, for example, Nearest hospital.
4. Select a centre from the list, the nearest is shown at the top of the list.

Your ONE XL HDT shows the location of the service centre on the map and the contact details.

5. To navigate your way to the centre on foot, tap **Walk there**.

Your ONE XL HDT starts guiding you to your destination.

Options



Phone for help

Use your TomTom ONE XL HDT to find the location of a service, and the contact details.

- **Emergency services**
- **Emergency breakdown services**
- **Nearest police station**
- **Nearest doctor**
- **Nearest hospital**
- **Nearest public transport**
- **Nearest car repair services**
- **Nearest dentist**
- **Nearest pharmacy**
- **Nearest vet**

Note: *In some countries, information may not be available for all services.*



Drive to help

Use your TomTom ONE XL HDT to navigate your way by road to a service centre.

- **Nearest car repair services**
- **Nearest hospital**
- **Nearest doctor**
- **Nearest police station**
- **Nearest pharmacy**
- **Nearest dentist**

Note: *In some countries, information may not be available for all services.*



Walk to help

Use your TomTom ONE XL HDT to navigate your way on foot to a service centre.

- **Nearest petrol station**
- **Nearest public transport**
- **Nearest police station**
- **Nearest pharmacy**
- **Home**
- **Nearest doctor**

Note: *In some countries, information may not be available for all services.*



Where am I?

Your TomTom ONE XL HDT shows your current location.

You can then tap **Phone for help** to select the type of service you want to contact.



First Aid guide

Tap this button to read the British Red Cross First Aid guide.



Other guides

Tap this button to read a selection of useful guides.

8. TomTom Map Share

TomTom Map Share™ is a free technology that lets you make updates to your map and if you want to, share those updates with other members of the TomTom Map Share community.

If you find a street that has recently been blocked to traffic which was open before, you can use Map Share to update your map and then share the update with other Map Share members.

You can use Map Share to send and receive map updates during the first year after the map's release date. This means that one year after the release date, you will no longer be able to send or receive map updates for that version of the map - You will still be able to make updates to your own map for use on your own device.

When you join the TomTom Map Share community you can keep your maps up-to-date with the latest updates made by other Map Share community members.

You choose the type of updates you want and each time you connect your TomTom ONE XL HDT to TomTom HOME, the map is automatically updated.

TomTom Map Share community

To join the Map Share community, do the following:

1. Tap **Map corrections** in the Main Menu.

Tip: If you cannot see the **Map corrections** button in the Main Menu, tap **Show ALL menu options** in the Preferences menu.

2. Tap **Download corrections made by others.**
3. Tap **Join.**

When you connect your TomTom ONE XL HDT to computer, TomTom HOME automatically downloads any available map updates and sends any changes you have made, to the Map Share community.

Map updates

There are two types of map update:

- Updates that are immediately shown on the map. These include, changing the traffic flow of a street, blocking or renaming a street and adding or editing POIs.

This type of change is immediately shown on your own map. You can hide these updates at any time in the Map Share preferences menu.

For more information on showing and hiding updates, see **Changing my preferences for map updates** (20).

- Updates that are reported to TomTom but not shown immediately on your map. These include, missing streets, errors in motorway entrances and exits and missing roundabouts.

This type of update is investigated by TomTom and once verified, is included in the next map release. These updates are therefore not shared with the Map Share community.

Tip: If you cannot see the **Map corrections** button in the Main Menu, tap **Show ALL menu options** in the Preferences menu.

Making a map update



1. Tap **Map corrections** in the Main Menu.
2. Tap **Correct a map error**.
A list of possible map updates is shown.
3. Select the type of update you want to report.

Note: If you tap **Add missing POI** or **Report other error** you will be asked for some additional information before the next step.

4. Select the method you want to use for selecting the location of the update.
5. When you have found the location, tap **Done**.
6. Enter update or confirmation of update now.

For more information on the different types of updates you can make, see **Map update categories** (20).

Marking a map error while on the move

If you notice an item on your map that needs attention, you can mark the location using the **Report** button and then enter the details when you are no longer driving.

To show the **Report** button in the Driving View, do the following:

1. Tap **Map corrections** in the Main Menu.

Tip: If you cannot see the **Map corrections** button in the Main Menu, tap **Show ALL menu options** in the Preferences menu.

2. Tap **Correction preferences**.
3. Tap **Done** and then tap **Done** again.
4. Select **Show report button**, then tap **Done**.

The **Report** button is shown on the left-hand side of the Driving View. After you mark a location, you can add more information about the change when you open the **Map corrections** menu.

For example, you are driving to a friend's house and you notice that the name of the street you are on is different from the one on your map. To report the

change, tap the **Report** button and your ONE XL HDT will save your current location. You can then send the update to TomTom Map Share when you have finished your journey.

For more information see **Changing my preferences for map updates** (20).

Receiving the latest map updates

When you connect your TomTom ONE XL HDT to your computer, TomTom HOME automatically downloads any available map updates and sends any changes you have made, to the Map Share community.

There are several types of updates which can be set in the Correction preferences menu.

For information about how to do this, see **Changing my preferences for map updates** (20).

Changing my preferences for map updates

Correction preferences is used to set the way TomTom Map Share runs on your device.

You can set the following preferences:

- Choose what types of updates you want to use on your maps.
- Decide if you want to share your updates with others.
- Show or hide the **Report** button in the Driving View.

To set your preferences, do the following:

1. Tap **Map corrections** in the Main Menu.
2. Tap **Correction preferences**.
A list of update types is shown.
3. Tick the box next to each update type you want use.
4. Tap **Done**.
5. Choose how you want to share your map updates with the Map Share community, then tap **Done**.
6. Choose if you want to see the **Report** button in the Driving View.
7. Tap **Done**.

Tip: If you later decide you want to remove updates from the map, clear the checkbox next to the types of update you want to remove. If you clear all the checkboxes, your map returns to the original state before the first update.

For more information on how to use the **Report** button, see **Marking a map error while on the move** (19).

Map update categories

There are several types of update that you can make to a map.

To make an update to your map, tap **Map corrections** in the Main Menu then tap **Correct a map error**. The following types of updates are shown.



(Un)block street

Tap this button to block or unblock a street. You can block or unblock the street in one or both directions.

 
For example, to correct a street near to your current location, do the following:

1. Tap **(Un)block street**.
2. Tap **Near you** to select a street near your current location. You can select a street by name, a street near your Home location or a street on the map.
3. Select the street or section of a street you want to correct by tapping it on the map.

The street you select is highlighted and the cursor shows the name of the street.

4. Tap **Done**.

Your device shows the street and whether the traffic is blocked or allowed in each direction:

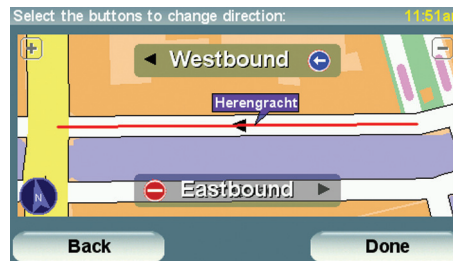

5. Tap one of the direction buttons to block or unblock the flow of traffic in that direction.
6. Tap **Done**.

The next time you connect your device to TomTom HOME, your updates are shared with the TomTom Map Share community.



Reverse traffic direction

Tap this button to correct the traffic direction of a one-way street, where the direction of traffic is different to the direction shown on your map.

Note: Reverse traffic direction only works for one-way streets. If you select a two-way street you will be given the chance to block/unblock the street rather than changing the direction.



Edit street name

Tap this button to change the name of a street on your map.

For example, to rename a street near to your current location:

1. Tap **Edit street name**.
2. Tap **Near you**.
3. Select the street or section of a street you want to correct by tapping it on the map.

The street you select is highlighted and the cursor shows the name of the street.

4. Tap **Done**.
 5. Type the correct street name.
 6. Tap **Done**.
-



Add missing POI

Tap this button to add a new Point of Interest (POI).

For example to add a new restaurant near to your current location:

1. Tap **Add missing POI**.
2. Tap **Restaurant** in the list of POI categories.
3. Tap **Near you**.
4. Select the location of the missing restaurant.

You can select the location by entering the address or by selecting the location on the map. Select **Near you** or **Near home** to open the map at your current location or at your Home location.

5. Tap **Done**.
6. Type the name of the restaurant then tap **OK**.
7. If you know the telephone number of the restaurant you can type it, then tap **OK**.

If you don't know the number, just tap **OK** without typing a number.



Edit POI

Tap this button to edit an existing POI.

You can use this button to make the following changes to a POI:

- Delete the POI.
 - Rename the POI.
 - Change the telephone number of the POI.
 - Change the category that a POI belongs to.
 - Move the POI on the map.
-



Report other error

Tap this button to report other types of update.

These updates are not immediately corrected on your map. Your TomTom ONE XL HDT sends a special update report to TomTom Map Share.

You can report missing streets, errors in motorway entrances and exits and missing roundabouts. If the update you want to report is not covered by any of these report types, enter a general description then tap **Other**.

9. Favourites

What are Favourites?

Favourites are places that you often visit. You can create Favourites so that you don't have to enter the address every time you want to navigate there.

They don't have to be places you especially like, just useful addresses.

How can I create a Favourite?

From the Main Menu, tap **Add Favourite**.

Note: The button **Add Favourite** may not be shown on the first page of the Main Menu. Tap the arrow to open other pages in the Main Menu.

You can then select the location of the Favourite from the list below.

Give your Favourite a name that is easy to remember. Your ONE XL HDT will always suggest a name, usually the address of the Favourite. To enter the name, just start typing. You don't have to delete the suggested name.



Home

You can set your Home location as a Favourite.



Favourite

You cannot create a Favourite from another Favourite. This option will always be unavailable in this menu.

To rename a Favourite, tap **Manage Favourites** in the Preferences menu.

For more information, see **Manage Favourites (44)**.



Address

You can specify an address to be a Favourite. When you enter an address, you can choose from four options.

- **City centre**
 - **Street and house number**
 - **Postcode**
 - **Crossing or intersection**
-



**Recent
destination**

Select a Favourite location from a list of places you have recently used as destinations.



**Point of
Interest**

You can add a Point of Interest (POI) as a Favourite.

Does it make sense to do this?

If you visit a POI you particularly like, for example a restaurant, you can add it as a Favourite.

To add a POI as a Favourite, tap this button, then do the following:

1. Narrow your choice of POIs by selecting the area where the POI is.

You can select one of these options:

- **POI near you** - to search from a list of POIs near your current position.
- **POI in city** - to choose a POI in a particular town or city. You have to specify a town or city.
- **POI near Home** - to search from a list of POIs near your Home location.

If you are currently navigating to a destination, you can also select from a list of POIs which are on your route or near your destination. Choose one of these options:

- **POI along route**
- **POI near destination**

2. Select the category of POI.

Tap the category of POI if it is shown or tap the arrow to choose from the complete list.

Tap **Any POI category** to search for a POI by name.

For more information about POIs, see **Points of Interest** (28).



My location

Tap this button to add your current position as a Favourite.

For example, if you stop somewhere interesting, while you are there you can tap this button to create the Favourite.



Point on map

Tap this button to create a Favourite using the map browser.

Select the location of the Favourite using the cursor, then tap **Done**.

For more information about the map browser, see **Browse Map** (26).



**Latitude
Longitude**

Tap this button to create a Favourite by entering latitude and longitude values.



Tap this button to select your last recorded position as your destination.

For more information about the GPS, see **Global Positioning System (GPS)** (54).

How can I use a Favourite?

You will normally use a Favourite as a way of navigating to a place without having to enter the address. To navigate to a Favourite, do the following:

1. Tap the screen to bring up the Main Menu.
2. Tap **Navigate to...**
3. Tap **Favourite**.
4. Select a Favourite from the list.

Your ONE XL HDT calculates the route for you.

5. When the route is calculated, tap **Done**.

Your ONE XL HDT will immediately start guiding you to your destination with spoken instructions and visual instructions on the screen.

How many Favourites can I create?

You can create up to 48 Favourites. If you want to add more than 48, we suggest that you make some POI categories and add some of your Favourites as POIs.

For more information about POIs, see **Points of Interest** (28).

How can I delete a Favourite?

1. Tap the screen to bring up the Main Menu.
2. Tap **Change preferences** to open the Preferences menu.
3. Tap **Manage Favourites**.

Tip: Tap the arrow to move to the next page.

4. Tap the Favourite you want to delete.
5. Tap **Delete**.

How can I change the name of a Favourite?

1. Tap the screen to bring up the Main Menu.
2. Tap **Change preferences** to open the Preferences menu.
3. Tap **Manage Favourites**.

 
Tip: Tap the arrow to move to the next page of buttons.

4. Tap the Favourite you want to rename.
5. Tap **Rename**.

10. Browse Map

To look at the map in the same way as you might look at a traditional paper map, tap **Browse map** in the Main Menu.

You can move the map by touching the screen and moving your finger across the screen.

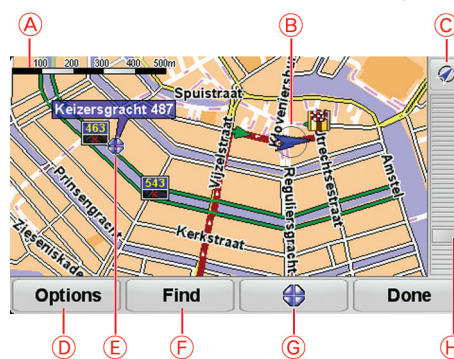

Ⓐ The scale bar

Ⓑ Your current position.

Ⓒ GPS button

Tap this button to centre the map on your current position.

Ⓓ Options

Ⓔ The cursor

Ⓕ The Find button

Tap this button to find specific addresses.

Ⓖ The Cursor button

Tap this button to navigate to the cursor position, make a Favourite of the cursor position, or find a Point of Interest near the cursor position.

Ⓗ The zoom bar

Zoom in and out by moving the slider.

Cursor button

You can use the map to find addresses and Points of Interest (POIs), for example, restaurants, train stations and petrol stations.

Tap the cursor button then tap one of the following buttons:



Tap this button to navigate to the cursor position. Your ONE XL HDT will calculate the route.



Tap this button to find a POI near the cursor position. For example, if you have found a restaurant to go to, you can search for a parking garage nearby.



Tap this button to bring the location currently highlighted by the cursor to the centre of the screen when looking at the map.



Tap this button to create a Favourite at the cursor position.

For more information about Favourites, see **Favourites** (23).



Tap this button to create a POI at the cursor position.

For more information about POIs, see **Points of Interest** (28).



Tap this button to correct the location shown at the cursor position.

11. Points of Interest

Points of Interest or POIs are useful places on the map. Here are some examples:

- Restaurants
- Hotels
- Museums
- Parking garages
- Petrol stations

Showing POIs on the map

1. Tap **Show POIs on map** in the Preferences menu.



2. Select the POI categories to display on the map.

Tap **Find** to search for a POI by name.

3. Tap **Done**.

The POIs you have selected are shown as symbols on the map.

Navigating to a POI

You can use a POI as your destination. For example, if you are travelling to an unfamiliar city, you could choose a POI to help find a parking garage.

1. Tap the screen to bring up the Main Menu.
2. Tap **Navigate to...** in the Main Menu.
3. Tap **Point of Interest**.
4. Tap **POI in city**.
5. Narrow your choice of POIs by selecting the area where the POI is located.

You can select one of these options:

- **POI near you** - to choose from a list of POIs near to your current location.
- **POI in city** - to find a POI in a particular town or city.
- **POI near Home** - to choose from a list of POIs near to your Home location.

You can select from a list of POIs which are along your route or close to your destination. Choose from one of these options:

- **POI along route**
- **POI near destination**

6. Type the name of the town you want to visit and select the town when it appears in the list.

7. Tap **Parking garage**.

8. Select the category of POI:

Tap **Any POI category** to search for a POI by name.

Tap the category of POI, if it is shown.

Tap the arrow to choose from the complete list of categories. Select the category from the list or start to type the name of the category and select it when it appears in the list.

9. Select a parking garage. The distance listed next to each POI is the distance from the city centre.

10. From the list of POIs shown, select the POI you want to navigate to.

The table below explains the distances listed next to each POI.

POI near you	Distance from your current location
POI in city	Distance from the city centre
POI near Home	Distance from your Home location
POI along route	Distance from your current location
POI near destination	Distance from your destination
Last POI	Distance to the last POI you visited

If you know the name of the POI, tap **Find** and type the name. Select it from the list when it is shown.

11. Select a parking garage. The distance listed next to each POI is the distance from the city centre.

Once you have selected a POI, the route to the POI is calculated by your TomTom ONE XL HDT.

The route to the POI is then calculated by your TomTom ONE XL HDT.

Managing POIs



Tap **Manage POIs** from the Preferences menu.

Note: The **Manage POIs** button is only available when all menu buttons are shown. To show all menu buttons, tap **Show ALL menu options** in the Preferences menu.

You can, for example, do the following:

- Create your own POI categories and add POIs to them.
- Set warnings when you get close to POIs.

Why would I want to create my own POIs?

A POI acts like a shortcut - once you have saved a location as a POI you never have to type the address of that POI again. But when you create a POI you can save more than just the location.

- Phone number - when you create a POI, you can save a phone number with it.
- Categories - when you create a POI you have to put it in a category.

For example, you could create a category of POIs called 'Favourite restaurants'. With each POI, save their phone number so that you can call them to reserve a table.

How can I create my own POIs?

1. Tap the screen to bring up the Main Menu.
2. Tap **Change preferences**.
3. Tap **Manage POIs**.
4. Before you can add a POI, you have to create at least one POI category. Every POI is assigned to a POI category. You can only add POIs to POI categories you have created yourself.



Tap **Add POI category**.

5. Enter a name for your POI category, for example, 'Friends' or 'Favourite restaurants'. Then select a marker for your POI category.
6. Tap **Add POI**.



Tap this button to add a POI.

7. Select the POI category in which you want to add the POI.
8. Select the location of your POI from the list below.



You can set your Home location as a POI.

If you want to change your Home location, you can create a POI of the Home location before you change it.



Favourite

You can create a POI from a Favourite.

You can only create a limited number of Favourites. If you want to create more Favourites you have to delete some Favourites first. Before you delete a Favourite, make it into a POI so that you don't lose the address.



Address

You can specify an address to be a POI. When you enter an address, you can choose from four options.

- **City centre**
- **Street and house number**
- **Postcode**
- **Crossing or intersection**



Recent destination

Select a POI location from a list of places you have recently used as destinations.



Point of Interest

You can add a Point of Interest (POI) as a POI. For example, if you are creating a category of POIs for your favourite restaurants, use this option instead of entering the addresses of the restaurants.



My location

Tap this button to add your current position as a POI.

For example, if you stop somewhere you like, while you are there you can tap this button to create the POI.



Point on map

Tap this button to create a POI using the map browser.

 
Select the location of the POI using the cursor, then tap **Done**.

For more information about the map browser, see **Driving View** (5) and **How can I create my own POIs?** (30)



Latitude Longitude

Tap this button to create a POI by entering latitude and longitude values.



Position of last stop

Tap this button to select your last recorded position as your destination.

This may be useful if your ONE XL HDT is unable to maintain a strong GPS signal, for example, when you drive through a long tunnel.

For more information about the GPS, see **Global Positioning System (GPS)** (54).

How can I set warnings for POIs?

1. Tap the screen to bring up the main menu.
2. Tap **Change preferences**.
3. Tap **Manage POIs**.

Note: The **Manage POIs** button is only available when all menu buttons are shown. To show all menu buttons, tap **Show ALL menu options** in the Preferences menu.

4. Tap **Warn when near POI**.



Tap this button to receive a warning when you travel near to the location of a POI.

5. Select the category of POI you want to be warned about.

Select the category from the list or start to type the name of the category and select it when it is shown in the list.

6. Set how close the POI should be when you receive a warning.

7. Choose the warning sound for the category of POI you selected.

12. Itinerary planning

 
What is an Itinerary?

An Itinerary is a plan for a journey including more locations than your final destination.

An Itinerary can include the following items:

- Destination - a location on your journey where you want to stop.
- Waypoint - a location on your journey where you want to travel through without stopping.

Here's an example of an Itinerary:

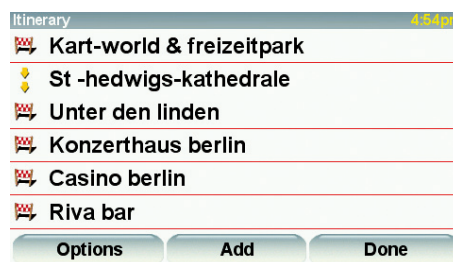

Destinations are shown using this symbol.



Waypoints are shown using this symbol.

When would I use an Itinerary?

You could use an Itinerary for trips such as:

- A driving holiday through a country with lots of stops.
- A two day car journey with an overnight stop.
- A short drive which passes by Points of Interest.

In all these examples you could tap **Navigate to...** for each place. However, if you use an Itinerary, you can save time by planning everything in advance.

Creating an Itinerary

1. Tap the screen to bring up the Main Menu.
2. Tap **Itinerary planning**.



**Itinerary
planning**

The Itinerary planning screen opens. At first, there are no items on the Itinerary.

Note: This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features (42)**.

3. Tap **Add** and select a location.

Tip: You can add items to your Itinerary in any order and rearrange the order later.

Start using an Itinerary

Tap **Options**, then tap **Start navigation**.

To save an Itinerary, tap **Save Itinerary**.

To load a saved Itinerary, tap **Load Itinerary**.

To create a new Itinerary, tap **New Itinerary** and to delete one, tap **Delete Itinerary**.

Following an Itinerary

When you use an Itinerary to navigate, the route will be calculated to the first destination on the Itinerary. Your TomTom ONE XL HDT calculates the remaining distance and time to the first destination and not for the whole Itinerary.

As soon as you start to use an Itinerary, the route is calculated from your current position. You do not need to set a departure point.

When you have passed a waypoint or reached a destination, it is marked as visited.

Waypoints are shown on the map. Your ONE XL HDT will not warn you, when you are approaching a waypoint or when you arrive at a waypoint.

Managing an Itinerary

Tap an item on your Itinerary to open a menu of buttons for editing the item. The buttons shown below are available.



**Mark as
waypoint**

You can change a destination into a waypoint using this button.

Waypoints are locations where you want to pass through on your way to your chosen destination(s).

Destinations are locations where you want to stop.

This button is only shown if the item you tapped is a destination.

 Mark as destination	You can change a waypoint into a destination using this button. Waypoints are locations where you want to pass through on your way to your chosen destination(s). Destinations are locations where you want to stop. This button is only shown if the item you tapped is a waypoint.
 Mark 'visited'	Tap this button to miss out part of your Itinerary. Your ONE XL HDT will ignore this item and all the items before it in the Itinerary. It will navigate you to the next item in the Itinerary. This button is only shown if you are still due to visit this item.
 Mark 'to visit'	Tap this button to repeat part of your Itinerary. Your ONE XL HDT will navigate you to this item followed by the rest of the items in the Itinerary. This button is only shown if you have already visited this item.
 Move item up	Tap this button to move the item up the Itinerary. This button is unavailable if the item is at the top of the Itinerary.
 Move item down	Tap this button to move the item down the Itinerary. This button is unavailable if the item is at the bottom of the Itinerary.
 Show on map	Tap this button to see the location of the item on the map. For more information about the map browser, see Driving View (5).
 Delete item	Tap this button to delete the item from the Itinerary.

13. TomTom HD Traffic information

TomTom HD Traffic is a unique TomTom service for receiving up-to-date traffic information. It helps you plan the smartest route possible to your destination.

Your device automatically receives updates on the traffic information. When you plan a journey, your route is calculated by taking into account the current local traffic conditions. If any delays are found on your route, you are given the chance to re-plan a faster route avoiding one or more incidents.

Using TomTom HD Traffic



The HD Traffic sidebar on the right side of the Driving View, warns you about any traffic incidents on your route.

In the example shown here, sidebar warns of a traffic jam on your route that is 9 kms ahead and will cause an expected delay of 38 minutes. The total delay over your route is 44 minutes (including other additional incidents further along your route).

For more information about the sidebar, see **The HD Traffic sidebar** (37).

To find the quickest route to your destination, do the following:

1. Tap the sidebar.

Tip: If you have trouble tapping the sidebar and the Main Menu is being displayed instead of the traffic menu, try tapping your finger half on the sidebar and half off the screen.

2. Tap **Minimise traffic delays**.

Your device looks for the quickest route to your destination.

It is possible that the new route may also include traffic delays, or may even be the same route as before. You can re-plan the route to avoid all delays, but this new route will take longer than the quickest route already shown.

3. Tap **Done**.

Tip: You can let your TomTom device automatically minimise traffic delays for you, to do this, see **Changing HD Traffic preferences** (37).

Automatically minimise delays

You can set HD Traffic to automatically minimise any delays for you whenever new traffic information becomes available. To set HD Traffic to automatically minimise delays, do the following:

1. Tap TomTom **Traffic** in the Main Menu.
2. Tap **Change Traffic preferences**.
3. Select **Automatically minimise delays after every traffic update**.
4. Tap **Done**.

Changing HD Traffic preferences



Use the **Change Traffic preferences** button to choose how HD Traffic works on your device.

To change your traffic preferences, do the following:

1. Tap TomTom **Traffic** in the Main Menu.
2. Tap **Change Traffic preferences**.

You can change the following preferences:

- **Automatically minimise delays after every traffic update** - your device automatically recalculates your route when new delays occur on your route.
 - **Beep when traffic situation on route changes** - your device beeps when a new traffic incident occurs on your current route.
 - **Show time gain statistics on device shut down** - your device will show you a summary of how much time you have saved using HD Traffic when you reach your destination (providing it is more than 5 minutes) and also whenever you turn off your device.
3. Select or clear the check box next to each preference you want to change.
 4. Tap **Done**.

 
The HD Traffic sidebar

The HD Traffic sidebar shows you traffic incidents on your route, displaying the following information:

- A symbol for each traffic incident in the order they occur along your planned route.
- The estimated delay of the next traffic incident on your route.
- The estimated delay for all incidents on your route.
- The distance from your current location to the next incident on the HD Traffic sidebar.

Note: The colour of the sidebar changes colour depending on how old the traffic information is on your device. For more information on what these colours mean, see **HD Traffic sidebar colours (39)**.

An example of an HD Traffic sidebar is shown below.

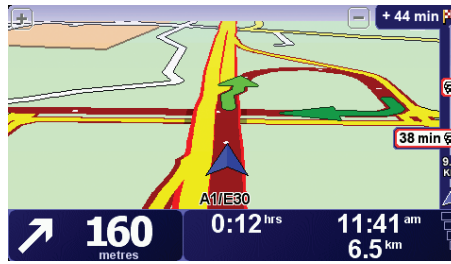

In the example, the sidebar shows you that there are two incidents ahead. Both incidents are traffic jams, the first is 9km ahead and is expected to delay you by at least 38 minutes.

To re-plan your route to avoid these incidents, tap the sidebar to open the TomTom **traffic** menu, then tap **Minimise traffic delays**.

Note: To make the Traffic sidebar more readable some incidents may not be shown. These incidents will always be of minor importance and only cause short delays.

For more information see **Using TomTom HD Traffic (36)**.

Making commuting to work easier

The **Home to work** or **Work to home** buttons in the Traffic menu lets you check your route to and from work with one tap of a button. When you use either of these buttons, your device checks the route for possible delays and if it finds any, provides you with the possibility to avoid them.

The first time you use **Home to work**, you must set your traffic home and work locations, do the following:



1. Tap TomTom **Traffic** in the Main Menu.
2. Tap **Show home-work traffic**.
3. Tap **Change home-work**
4. Set your home location
5. Set your work location.

You can now use the **Home to work** and **Work to home** buttons of the Show home-work traffic menu.

Note: The home location you set here is not the same as the home location you can set in the **Preferences Menu**. In addition, the locations you use here do not have to be your actual home and work locations. If there is another route that you often travel, you can set Work/Home to use these locations instead.



For example, to check for delays on your route home, do the following:

1. Tap TomTom **Traffic** in the Main Menu.
2. Tap **Show home-work traffic**.
3. Tap **Work to home**.

The driving view is shown. If the Traffic sidebar shows any delays on your route, tap the Traffic sidebar and then **Minimise traffic delays** to see your fastest route to home.

Checking traffic incidents in your area

Get an overview of the traffic situation in your area, using the map. To find local incidents and their details, do the following:



Browse map

1. Tap TomTom **Traffic** in the Main Menu.
2. Tap **Browse map**.

The map browser screen is shown.

3. Tap the blue compass image in the top right of the screen.

The map centres itself on your current location and any traffic incidents in the area are shown. The symbols used to show traffic incident are described in **Traffic incidents (40)**.



4. Tap on any traffic incident to get more information.

A screen is shown that gives you detailed information about the incident you chose. To display information about surrounding incidents use the left and right arrows at the bottom of this screen.

HD Traffic sidebar colours

The HD Traffic sidebar changes colours depending on how old the traffic information is on your device. The sidebar colours are:

-  **Dark blue** - The traffic information on your device is up to date.
-  **Lilac** - The traffic information on your device has not been updated for at least 10 minutes. HD Traffic still warns you about traffic incidents, but the information is at least ten minutes old.
-  **Grey** - The traffic information on your device has not been updated for at least 15 minutes. HD Traffic will only warn you about traffic incidents once it has been able to update this information.

Note: The traffic information on your device is updated automatically and the HD Traffic sidebar will normally remain dark blue. However, it is possible that device might not update traffic information, if for example there is no or poor

network coverage in your area, or you are driving in a country other than the one for which you purchased TomTom HD Traffic.

Traffic incidents

Traffic incidents are displayed as small symbols on the Driving View and the HD Traffic sidebar. There are two type of symbols:

- Symbols shown in a red square are incidents that HD Traffic can help you to avoid.
- Symbols shown in a red rectangle are weather related. You cannot use HD Traffic to avoid them.

Traffic incident symbols:



Accident



Road closed



Road works



Traffic incident



One or more lanes closed



Traffic jam

Weather related symbols:



Fog



Ice



Rain



Snow



Wind



Note: The incident avoided symbol is shown for any traffic incident that you avoid using TomTom HD Traffic.

Traffic menu

To open the Traffic menu, tap the HD Traffic sidebar in the Driving View or tap TomTom **Traffic** in the Main Menu. The following buttons are available:



Minimise traffic delays

Tap this button to re-plan your route based on the latest traffic information.



Show traffic on route

Tap this button to get an overview of any traffic incidents along your route. Use the left and right buttons of the overview screen to see more detailed information about each incident. You can also use the **Replan** button of the overview screen to replan your route avoiding the traffic incidents.



Show home-work traffic

Tap this button to calculate and show the quickest route from your home location to your place of work and back.

See **Making commuting to work easier** (38).



Browse map

Tap this button to browse the map and see the traffic information displayed on the map.

See **Checking traffic incidents in your area** (39).



Change Traffic preferences

Tap this button to change your preferences for how TomTom HD Traffic works on your device.

See **Changing HD Traffic preferences** (37).

In addition to the above buttons, there are a further two buttons that relate to TomTom HD Traffic. The first is the **Account Info** button, that can be found in the Main Menu.



Account Info

Tap this button to see information about your HD Traffic subscription. A screen is shown that tells you when your subscription started and how long it is before it ends.

The second additional button can be found in the **Guided tours** menu. To open the **Guided tours** menu, tap the HD Traffic sidebar in the Driving View or tap TomTom **Traffic** in the Main Menu. The following button relates to HD Traffic.



TomTom Traffic

Tap this button to see a short guided tour of how to use TomTom HD Traffic.

14. Preferences

You can change the way your TomTom ONE XL HDT looks and behaves.

Tap **Change preferences** in the Main Menu.

Hidden buttons and features

When you first start using your TomTom ONE XL HDT, all the buttons are shown in the menu.

The buttons for the more advanced features can be hidden. This is a useful option because you are unlikely to use certain features very often.



Show fewer menu options

Tap this button in the Preferences menu, to reduce the number of buttons that are shown.

You might want to do this so that only frequently used buttons are shown.

When you need to use the buttons that are hidden, you can press **Show ALL menu options** in the Preferences menu to show all buttons.



Show ALL menu options

Tap this button in the Preferences menu, to show all the buttons available on your TomTom ONE XL HDT.

Use night colours / Use day colours



Use Night colours

Tap this button to reduce the brightness of the screen and show darker colours on the map.

When should I use this?

When it's dark, it is easier to see the screen if the display on your ONE XL HDT is not brightly lit.



Use day colours

To change back to a brighter screen showing brighter colours on the map, tap **Use day colours**.

Show POI on map



Tap this button to set which categories for the Points of Interest (POIs) should be shown on the map.

Select the POIs that you want to see on the map from the list.

When you select a POI, it is shown on the map using the symbol you can see next to each category in the list.

To find a POI category quickly, tap **Find**, then start to type the name of the POI category. As soon as the category is shown in the list, you can select it.

For more information about POIs, see **Points of Interest** (28).

Safety preferences



Tap this button to set the following safety preferences:

- **Hide most menu options while driving**
- **Suggest driving breaks**
- **Show safety reminders**
- **Warn when near places of worship or schools**
- **Warn when driving faster than allowed**
- **Warn when driving faster than a set speed**
- **Warn not to leave the device in the car**

If you select one or more of the warnings, you will also be asked to select a sound to be played whenever a warning is displayed.

Select whether or not your TomTom ONE XL HDT should warn you about which side of the road you should be driving on.

Decide if you want the map display to be turned off in special circumstances and press **Done**.

What happens when I use the Turn off map display option?

When you turn off the map display, instead of seeing your position on a map in the Driving View, you will only see information about the next instruction.

Tap the button and select an option for when the map should be turned off. These are the options:

- **Always** - The map will not be shown and you will only see information about the next instruction and arrows showing direction.
- **Above a certain speed** - you set the speed at which point the map will be turned off. This option is useful for situations when the map might be distracting, such as when you are driving fast.
- **Never** - the map is never turned off.

Turn off sound / Turn on sound



Turn off sound

Tap this button to turn off spoken instructions.

The button changes to **Turn on sound**. If you turn off the sound, warnings for upcoming POIs are also turned off.

Tips

To change the volume, tap **Volume preferences** in the Preferences menu.

 
For more information, see **Volume preferences** (44).

To change the volume quickly while you are driving, tap the bottom left-hand section of the Driving View and move the slider.

To change the voice being used by your ONE XL HDT, tap **Change voice** in the Preferences menu.

For more information, see **Selecting a voice** (14).

Volume preferences



Volume preferences

Tap this button to change the volume for spoken instructions.

Manage Favourites



Manage Favourites

Tap this button to rename or delete Favourites.

To find a Favourite quickly, tap **Find**, then start to type the name of the Favourite. As soon as the Favourite is shown in the list, you can select it.

For more information about Favourites, see **Favourites** (23).

TomTom Safety Cameras



TomTom Safety Cameras

Tap this button to use TomTom Safety Cameras.

Change voice



Change voice

Tap this button to change the voice that is used for announcing commands directions.

For more information about Voices, see **Sounds and voices** (14).

Warn when near POI



Warn when
near POI

Tap this button to announce a warning when your are approaching a Point of Interest.

For more information about Points of Interest, see **Points of Interest** (28).

Change Home location



Change Home
location

Tap this button to set or change your Home location.

Do I need to use my actual home address for the Home location?

No. Your Home location can be a place you go often, for example, your office. It can be your actual home address, but it can be any address you like.

Why should I set a Home location?

Having a Home location means that you have a quick and easy way to navigate there, by tapping the Home button in the **Navigate to...** menu

Manage maps

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** (42).



Manage maps

Tap this button to do the following:

- **Download a map** - you can buy new maps using TomTom HOME.

For more information, see **Using TomTom HOME** (53).

- **Switch map** - tap this button to change the map you are using.
- **Delete a map** - tap this button to delete a map. This might be necessary to create more space on your ONE XL HDT, for example when you want to load a different map.

Note: *Don't delete a map unless you have already made a backup of the map. If you delete a map before you make a backup, you will no longer be able to load the map on your ONE XL HDT.*

For more information about making a backup, see **Using TomTom HOME** (53).

You can also download, add and delete maps using TomTom HOME.

Change 2D/3D display / Turn on 2D display



Turn on 2D display

Tap **Turn on 2D display** to change the perspective for viewing the map.

For example, the 2D view shows a two dimensional view of the map as though viewed from above.



Change 2D/3D display

To switch the view to a three dimensional perspective, tap **Change 2D/3D display** and select a view from the list.

When should I use this?

In some situations, it is easier to see the map from above. Perhaps if the road network is complicated or for times when you are walking while using your ONE XL HDT to navigate.

Compass preferences



Compass preferences

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** (42).

Tap this button to configure the compass. The following options are available:

- **None** - the compass is not shown.
- **One with arrow pointing north** - the arrow always points towards north and the direction you are moving is shown at the top of the compass.
- **One with arrow showing your heading** - the arrow always shows the direction you are moving.

If you select one of these options, you then need to select the features that are shown in the middle of the arrow:

- **Direction** - your direction is shown as a compass point, displayed in the centre of the compass arrow.
- **Degrees** - your direction is shown as compass degrees, displayed in the centre of the compass arrow.
- **Nothing**
- **One with arrow pointing to your destination** - the arrow always points towards your destination. The distance to your destination is displayed in the compass arrow.

Change map colours

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** (42).



**Change map
colours**

Tap this button to select the colour schemes for day and night map colours.

You can also download more colour schemes from TomTom PLUS.

Brightness preferences

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** (42).



**Brightness
preferences**

Tap this button to set the brightness of the screen.

You can set the brightness separately for day map colours and for night map colours.

You can set the map colour scheme by tapping **Change map colours**. For more information, see **Change map colours** (46).

Status bar preferences

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** (42).



Status bar preferences

Tap this button to select the information shown on the status bar:

- **Remaining time** - the estimated time left until you reach your destination.
- **Remaining distance** - the distance left until you reach your destination.
- **Current time**
- **Arrival time** - your estimated arrival time.
- **Speed**
- **Direction**
- **Show next street name** - the name of the next street on your journey.
- **Show current street name**
- **Show leeway to arrival time** - your ONE XL HDT shows how late or early you will be compared with the preferred arrival time that is set during the planning of a route.
- **Show max speed next to speed** - only available when speed (above) is also selected.
- **How should the status bar be displayed?**

Horizontal - If you choose this option, the status bar will be shown at the bottom of the Driving view.

Vertical - If you choose this option, the status bar will be shown at the right-hand side of the Driving view.

Note: *If the speed limit for the road you are on is available, it is shown next to your speed.*

If you drive faster than the speed limit, your speed is shown in red.

Guided tours

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** (42).



 
Guided tours

Tap this button to show one of the Guided tours on how to use your TomTom ONE XL HDT.

Set units

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** (42).



Set units

Tap this button to set the type of units that will be shown for the following:

- Distance
- Time
- Latitude and longitude
- Temperature
- Air pressure

Operate left-handed / Operate right handed

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** (42).



Operate left-handed

Tap this button to move important buttons, for example, the **Done** and **Cancel** buttons as well as the zoom bar, to the left hand side of the screen. This makes it easier to tap the buttons with your left hand without blocking the screen.

To move the buttons back to the right hand side of the screen, tap **Operate right-handed**.

Keyboard preferences



Keyboard preferences

You use the keyboard to enter your destination or to find an item in a list, such as a POI.

Tap this button to select the size of the keys on the keyboard and the keyboard layout. You can select from two sizes:

- **Large keyboard**
- **Small keyboard**

Three keyboard layouts are available:

- **ABCD keyboard**
- **QWERTY keyboard**
- **AZERTY keyboard**

Note: The keyboard does not include accents of any kind for any language so you don't have to worry about entering letters with accents. Simply type the letter without the accent and your ONE XL HDT will recognise the word.

Planning preferences

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** (42).



Planning preferences

Tap this button to set the kind of route planned when you select a destination.

The following options are available:

- **Ask me every time I plan**
- **Always plan fastest routes**
- **Always plan shortest routes**
- **Always avoid motorways**
- **Always plan walking routes**
- **Always plan bicycle routes**
- **Always plan for limited speed**

Then answer the following question:

Do you want the route summary screen to close automatically after 10 seconds?

Set owner

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** (42).



Set owner

Tap this button to enter your name and address as the owner of your ONE XL HDT and to change or delete a 4-digit password for your ONE XL HDT.

Note: You can only change or delete a 4-digit password on your TomTom ONE XL HDT.

You can create a 4-digit password for your ONE XL HDT using TomTom HOME:

1. Connect your ONE XL HDT to your computer and turn on your ONE XL HDT and your computer.

TomTom HOME starts automatically.

For information about installing TomTom HOME on your computer, see **Using TomTom HOME** (53).

2. From the Options menu in TomTom HOME, click My ONE XL HDT.
3. Click the ON/OFF button on the picture of your ONE XL HDT to start the application on your computer.
4. From the Main Menu, click **Change preferences**.
5. Click **Set Owner**. You can now set a 4-digit password for your ONE XL HDT.

You can only create a 4-digit password using TomTom HOME.

Change language



Change language

Tap this button to change the language used for all the buttons and messages you see on your ONE XL HDT.

You can choose from a wide range of languages. When you change the language, you are also given the opportunity to change the voice.

Set clock



Set clock

Tap this button to select the type of clock that is shown and set the time.

The easiest way to set the time is by tapping the **Sync** button. Your ONE XL HDT will then take the time from GPS information.

For more information about GPS, see **Global Positioning System (GPS)** (54).

Note: After using **Sync** to set the time, you may have to adjust the hours depending on your time zone. Your ONE XL HDT works out your time zone and always keeps the time correct using GPS information.

You can only use **Sync** if you have GPS reception, so you cannot set the clock in this way when you are indoors.

Hidden buttons and features

When you first start using your TomTom ONE XL HDT, all the buttons are shown in the menu.

The buttons for the more advanced features can be hidden. This is a useful option because you are unlikely to use certain features very often.



Show fewer menu options

Tap this button in the Preferences menu, to reduce the number of buttons that are shown.

You might want to do this so that only frequently used buttons are shown.

When you need to use the buttons that are hidden, you can press **Show ALL menu options** in the Preferences menu to show all buttons.



Show ALL menu options

Tap this button in the Preferences menu, to show all the buttons available on your TomTom ONE XL HDT.

Reset factory settings

This button may only be available if all menu options are shown. To show all menu options, tap **Show ALL menu options**.

For more information, see **Hidden buttons and features** (42).



Tap this button to restore the factory settings to your TomTom ONE XL HDT.

All your settings, including Favourites, your Home location, warnings for POIs and any Itineraries you have created, as well as recent destinations and recent calls and callers, will be deleted.

15. Using TomTom HOME

TomTom HOME is a free software program for your computer that enables you to:

- Manage maps, voices, POIs and more.
- Buy TomTom services and manage your subscriptions.
- Update your TomTom with the latest software and services automatically.
- Make and restore backups.
- Set a password to restrict access.
- Read the full version of the user manual.

Installing TomTom HOME

Install TomTom HOME on your computer in the following way.

- Connect your computer to the Internet and then connect your TomTom ONE XL HDT to your computer using the USB cable.

A pop-up window appears. Select **Run** TomTom HOME. Click **OK** and follow the on-screen instructions.

If the pop-up window does not appear, browse to the TomTom device on your computer and run the file named **Install** TomTom HOME.

- TomTom HOME is also available for download from the TomTom website.

For more information visit www.tomtom.com/home

Once installed, TomTom HOME will start automatically whenever you connect your TomTom to your computer.

HOME Help Topics

In the TomTom HOME Help topics you can find all kinds of tips and tricks on how to use TomTom HOME.

MyTomTom Account

In order to buy content and services through TomTom HOME you will have to set up a MyTomTom account for the device you want to buy the content for. You will be asked to create an account when you start using TomTom HOME.

16. How does navigation work?

Global Positioning System (GPS)

In order to navigate you to your destination, your TomTom ONE XL HDT must know where you are now. To find your current position, your ONE XL HDT uses the Global Positioning System (GPS). GPS is available for free and without subscription.

The GPS uses satellites to transmit signals to GPS receivers. Your TomTom ONE XL HDT has a built-in GPS receiver. Using the GPS signal, your ONE XL HDT can work out where you are and how fast you are going. GPS signals work in all weather, anywhere in the world.

Note: Your TomTom ONE XL HDT does not transmit your position, so others cannot use it to track you while you are driving. You can however send your position to TomTom Buddies. For more information, visit www.TomTom.com/plus

Finding your position faster

If you use your TomTom ONE XL HDT in combination with TomTom HOME, your ONE XL HDT will download information about where the GPS satellites are going to be for the next 7 days.

With this information, your ONE XL HDT will be able to find your current position very quickly when it is first switched on.

Maps

Once your TomTom ONE XL HDT knows where you are and you have told it where you want to go, it uses the digital map on the memory card or hard disk to work out the best route to your destination.

17. TomTom limited warranty

WARRANTOR

Non-U.S. and non-Canadian purchases: If you have made your purchase outside the United States and Canada, this Limited Warranty is granted by and this Limitation of Liability is stipulated for the benefit of TomTom International B.V., Rembrandtplein 35, 1017 CT Amsterdam (The Netherlands).

WHAT THIS WARRANTY COVERS

1) TomTom International B.V. ("TomTom") warrants to you that the Hardware will be free from defects in workmanship and materials under normal use ("Defects") for a period of one (1) year from the date that the Hardware was first purchased by you ("Warranty Period"). During the Warranty Period the Hardware will be repaired or replaced at TomTom's choice ("Limited Warranty") without charge to you for either parts or labour. This Limited Warranty covers the replacement of the Hardware only. If the Hardware is repaired after the Warranty Period has expired, the Warranty Period for the repair will expire six (6) months after the date of repair.

WHAT THIS WARRANTY DOES NOT COVER

2) The Limited Warranty does not apply to normal wear and tear, does not apply when the Hardware is opened or repaired by someone not authorized by TomTom and does not cover repair or replacement of any Hardware or part thereof damaged by: misuse, moisture, liquids, proximity or exposure to heat and accident, abuse, non-compliance with the instructions supplied with the Hardware, neglect or misapplication. The Limited Warranty does not cover physical damage to the surface of the Hardware. This Limited Warranty does not cover any software that may accompany or be installed on the Hardware. The Limited Warranty does not cover the installation, removal or maintenance of the Hardware or any costs related herewith.

HOW TO MAKE A WARRANTY CLAIM

3) In order to make a claim of a Defect, you must contact TomTom by email during the Warranty Period via www.tomtom.com to explain the Defect and to obtain an RMA number (Return Materials Authorization) if necessary. You must return the Hardware during the Warranty Period, along with an explanation of the Defect, to the address provided to you by TomTom. If a defect arises and a valid claim under this Limited Warranty is received by TomTom after the first one hundred and eighty (180) days of the Warranty Period, TomTom is entitled to charge you for any reasonable shipping and handling costs made in connection with the repair or replacement of the Hardware. You must comply with any other return procedures stipulated by TomTom, if any.

YOUR LEGAL RIGHTS

4) Some countries may not allow the exclusion or limitation of damages. If any part of this Limited Warranty is held to be invalid or unenforceable, the remainder of the Limited Warranty shall nonetheless remain in full force and effect.

5) This Limited Warranty is the only express warranty made to you and is provided in lieu of any other express warranties or similar obligations (if any) created by any advertising, documentation, packaging, or other communications.

6) Except for the Limited Warranty and to the maximum extent permitted by applicable law, TomTom and its suppliers provide the Hardware "AS IS AND WITH ALL FAULTS", and hereby disclaim all other warranties and conditions, whether express, implied or statutory, including, but not limited to, any (if any) implied warranties, duties or conditions of satisfactory quality, of fitness for a particular purpose, of reliability or availability, of accuracy or completeness of responses, of results, of workmanlike effort, of lack of viruses, and of reasonable care and skill, all with regard to the Hardware, and the provision of or failure to provide support or other services, information, software, and related content through the Hardware or otherwise arising out of the use of the Hardware. Also, there is no warranty or condition of quiet enjoyment, quiet possession, or non-infringement with regard to the Hardware. This exclusion does not apply to (i) any implied condition as to title and (ii) any implied warranty as to conformity with description.

7) This Limited Warranty does not affect any legal rights under applicable national legislation governing the sale of consumer goods.

8) This Limited Warranty cannot be transferred to any other person.

LIMITATION OF LIABILITY

9) Neither TomTom nor its suppliers shall be liable to you or to any third party for any damages either direct, indirect, incidental, consequential or otherwise (including in each case, but not limited to, damages for the inability to use the equipment or access data, loss of data, loss of business, loss of profits, business interruption or the like) arising out of the use of or inability to use the Hardware even if TomTom has been advised of the possibility of such damages.

10) Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract or anything else), the entire liability of TomTom and any of its suppliers shall be limited to the amount actually paid by you for the Hardware.

11) TomTom shall not be liable for (i) any fraud on the part of its employees and/or agents; or (ii) any fraudulent misrepresentation on the part of its employees and/or agents.

12) Notwithstanding the above, neither party's liability for death or personal injury resulting from its own negligence shall be limited.

18. Addendum

Important Safety Notices and Warnings

Global Positioning System

The Global Positioning System (GPS) is a satellite-based system that provides location and timing information around the globe. GPS is operated and controlled under the sole responsibility of the Government of the United States of America which is responsible for its availability and accuracy. Any changes in GPS availability and accuracy, or in environmental conditions, may impact the operation of your TomTom device. TomTom does not accept any liability for the availability and accuracy of GPS.

Use with Care

Use of a TomTom device for navigation still means that you need to drive with due care and attention.

Aircraft and Hospitals

Use of devices with an antenna is prohibited on most aircraft, in many hospitals and in many other locations. A TomTom device must not be used in these environments.

Battery

This product uses a Lithium-Polymer battery. Do not use it in a humid, wet and/or corrosive environment. Do not put, store or leave your product in or near a heat source, in a high temperature location, in strong direct sunlight, in a microwave oven or in a pressurized container, and do not expose it to temperatures over 60 C (140 F). Failure to follow these guidelines may cause the Lithium-Polymer battery to leak acid, become hot, explode or ignite and cause injury and/or damage. Do not pierce, open or disassemble the battery. If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately. For safety reasons, and to prolong the lifetime of the battery, charging will not occur at low (below 0 C/32 F) or high (over 45 C/113 F) temperatures.

Temperatures: Standard operation: -10 C (14 F) to +55 C (131 F); short period storage: -20 C (-4 F) to + 60 C (140 F); long period storage: -20 C (-4 F) to +25 C (77 F).



THE LITHIUM-POLYMER BATTERY CONTAINED IN THE PRODUCT MUST BE RECYCLED OR DISPOSED OF PROPERLY. USE YOUR TomTom ONLY WITH THE SUPPLIED DC POWER LEAD (CAR CHARGER/BATTERY CABLE) AND AC ADAPTER (HOME CHARGER) FOR BATTERY CHARGING.

To recycle your TomTom unit please see your local approved TomTom service center.

CE Marking



This equipment complies with the requirements for CE marking when used in a residential, commercial, vehicular or light industrial environment.

R&TTE Directive

Hereby, TomTom declares that this personal navigation device is in compliance with the essential requirements and other relevant provisions of the EU Directive 1999/5/EC. The declaration of conformity can be found here: www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

Hiermit erklärt TomTom, dass dieses persönliche Navigationsgerät die grundlegenden Anforderungen und andere relevante Bestimmungen der EU-Richtlinie 1999/5/EC erfüllt. Die Konformitätserklärung finden Sie hier: www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

Par la présente, TomTom déclare que cet appareil de navigation personnelle est conforme aux principales exigences et autres dispositions applicables de la directive UE 1999/5/CE. La déclaration de conformité peut être consultée à l'adresse suivante :

www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

TomTom verklaart hierbij dat dit persoonlijke navigatiesysteem voldoet aan alle essentiële vereisten en overige relevante bepalingen in de EU-richtlijn 1999/5/EC. De conformiteitsverklaring vindt u hier:

www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

Con la presente, TomTom dichiara che questo dispositivo di navigazione personale è conforme ai requisiti essenziali e alle clausole pertinenti della Direttiva 1999/5/EC dell'UE. La dichiarazione di conformità è consultabile all'indirizzo:

www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

Por la presente, TomTom declara que este dispositivo de navegación personal se ha fabricado en conformidad con los requisitos esenciales y otras provisiones relevantes de la Directiva de la UE 1999/5/EC. La declaración de conformidad puede consultarse en:

www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

TomTom erklærer herved, at denne personlige navigationsenhed er i overensstemmelse med de væsentligste krav og andre relevante bestemmelser i Europa-Parlamentets og Rådets direktiv 1999/5/EF. Overensstemmelseserklæringen findes her:

www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

Härmed förklarar TomTom att denna personliga navigationsenhet uppfyller de grundläggande kraven och andra relevanta föreskrifter i EU-direktiv 1999/5/EG. Konformitetsdeklarationen finns här:

www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

TomTom täten vakuuttaa, että tämä henkilökohtainen navigointilaitte täyttää EU-direktiivin 1999/5/EY olennaiset vaatimukset ja sen muut asiaankuuluvat määräykset. Vaatimustenmukaisuusvakuutus löytyy täältä:

www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

A TomTom declara por este meio que este equipamento de navegação pessoal está em conformidade com os requisitos fundamentais e outras cláusulas relevantes da Directiva da UE 1999/5/CE. A declaração de conformidade (em inglês) está disponível em:

www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

Společnost TomTom tímto prohlašuje, že toto osobní navigační zařízení splňuje všechny nezbytné náležitosti a další relevantní ustanovení Směrnice

EU 99/5/ES. Prohlášení o shodě naleznete zde:
www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

Spoločnosť TomTom vyhlasuje, že toto osobné navigačné zariadenie vyhovuje základným požiadavkám a ďalším základným predpisom smernice EÚ 1999/5/EC. Prehlásenie o zhode nájdete na:
www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

A TomTom ezennel kijelenti, hogy ez a személyi navigációs eszköz megfelel az 1999/5/EC EU irányelv alapvető követelményeinek és egyéb rá vonatkozó rendelkezéseinek. A megfelelőségi nyilatkozat a következő helyen található:
www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

Firma TomTom oświadcza, że niniejsze, osobiste urządzenie nawigacyjne jest zgodne z najważniejszymi wymaganiami i innymi istotnymi postanowieniami Dyrektywy 1999/5/WE. Deklaracja zgodności znajduje się tutaj:
www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

TomTom kinnitab käesolevaga, et see personaalne navigeerimisese on kooskõlas EL direktiivi 1999/5/EÜ oluliste nõuete ja sätetega. Vastavusdeklaratsiooni vt aadressil
www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

TomTom nurodo, kad šis asmeninis navigavimo įrenginys atitinka pagrindinius ir kitus reikiamus ES direktyvos 1999/5/EC reikalavimus. Patvirtinimo deklaraciją rasite:
www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

Ar šo TomTom pažiū, ka ši personālā navigācijas ierīce atbilst ES direktīvas 1999/5/EK būtiskajām prasībām un citiem svarīgajiem nosacījumiem. Atbilstības paņojumu var lasīt šeit:
www.tomtom.com/lib/doc/CE DoC__GO520 720 920.pdf

WEEE Directive



This symbol on the product or its packaging indicates that this product shall not be treated as household waste. In line with EU Directive 2002/96/EC for waste electrical and electronic equipment (WEEE), this electrical product must not be disposed of as unsorted municipal waste. Please dispose of this product by returning it to the point of sale or to your local municipal collection point for recycling.

Dieses auf dem Produkt oder der Verpackung angebrachte Symbol zeigt an, dass dieses Produkt nicht mit dem Hausmüll entsorgt werden darf. In Übereinstimmung mit der Richtlinie 2002/96/EG des Europäischen Parlaments und des Rates über Elektro- und Elektronik-Altgeräte (WEEE) darf dieses Elektrogerät nicht im normalen Hausmüll oder dem Gelben Sack entsorgt werden. Wenn Sie dieses Produkt entsorgen möchten, bringen Sie es bitte zur Verkaufsstelle zurück oder zum Recycling-Sammelpunkt Ihrer Gemeinde.

Ce symbole sur le produit ou son emballage signifie que ce produit ne doit pas être traité comme un déchet ménager. Conformément à la Directive 2002/96/EC sur les déchets d'équipements électriques et électroniques (DEEE), ce produit électrique ne doit en aucun cas être mis au rebut sous forme de déchet municipal non trié. Veuillez vous débarrasser de ce produit en le renvoyant à son point de vente ou au point de ramassage local dans votre municipalité, à des fins de recyclage.

Dit symbool op het product of de verpakking geeft aan dat dit product niet bij het huishoudelijk afval mag worden gegooid. In navolging van richtlijn 2002/96/EG van het Europees Parlement en de Raad betreffende afgedankte elektrische en elektronische apparatuur (AEEA) mag dit elektrische product niet als ongescheiden huisvuil worden weggedaan. Breng dit product terug naar de plaats van aankoop of naar het gemeentelijke afvalinzamelingspunt voor recycling.

Questo simbolo sul prodotto o sulla relativa confezione indica che il prodotto non va trattato come un rifiuto domestico. In ottemperanza alla Direttiva UE 2002/96/EC sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE), questo prodotto elettrico non deve essere smaltito come rifiuto municipale misto. Si prega di smaltire il prodotto riportandolo al punto vendita o al punto di raccolta municipale locale per un opportuno riciclaggio.

Este símbolo en el producto o su embalaje indica que el producto no debe tratarse como residuo doméstico. De conformidad con la Directiva 2002/96/CE de la UE sobre residuos de aparatos eléctricos y electrónicos (RAEE), este producto eléctrico no puede desecharse con el resto de residuos no clasificados. Deshágase de este producto devolviéndolo al punto de venta o a un punto de recogida municipal para su reciclaje.

Dette symbol på produktet eller emballagen angiver, at produktet ikke må behandles som husholdningsaffald. I henhold til EU-direktiv 2002/96/EF om affald af elektrisk og elektronisk udstyr (WEEE) må dette udstyr ikke bortskaffes som usorteret husholdningsaffald. Bortskaf dette produkt ved at returnere det til salgsstedet eller til det lokale indsamlingssted, så det kan genbruges.

Den här symbolen på produkten eller förpackningen anger att produkten inte ska hanteras som hushållsavfall. I linje med EU-direktiv 2002/96/EG om avfall som utgörs av eller innehåller elektriska eller elektroniska produkter (WEEE) får denna elektriska produkt inte bortskaffas som osorterat kommunalt avfall. Bortskaffa den i stället genom att lämna in den på försäljningsstället eller din lokala återvinningsstation.

Tämä symboli tuotteessa tai sen pakkauksessa osoittaa, että tätä tuotetta ei saa käsitellä kotitalousjätteenä. EU:n sähkö- ja elektroniikkalaiteromudirektiivin (2002/96/EY) mukaisesti tätä elektroniikkalaitetta ei saa laittaa lajittelemattoman yhdyskuntajätteen sekaan. Hävitä laite palauttamalla se ostopaikkaan tai viemällä se elektroniikkaromun keräyspisteeseen.

Este símbolo no produto ou na embalagem indica que o produto não deve ser tratado como lixo doméstico. De acordo com a Directiva Europeia 2002/96/EC sobre resíduos sólidos de equipamento eléctrico e electrónico (WEEE), este produto eléctrico não pode ser deitado fora juntamente com o lixo municipal indiferenciado. Por favor, no final da vida útil deste produto, devolva-o ao estabelecimento de aquisição, ou entregue-o no local de recolha apropriado para reciclagem designado pelo seu município.

Tento symbol na výrobku nebo na balení znamená, že výrobek nepatří do domácího odpadu. V souladu se směrnicí EU č. 2002/96/ES o odpadních elektrických a elektronických zařízeních (OEEZ) se tento elektrický výrobek nesmí likvidovat jako netříděný komunální odpad. Při likvidaci tento výrobek vraťte prodejci nebo ho odevzdejte k recyklaci do komunálního sběrného zařízení.

See sümbol tootel või pakendil viitab sellele, et antud toodet ei tohi hävitada koos majapidamisprügiga. Vastavalt EL direktiivile 2002/96/EÜ, mis käsitleb elektri- ja elektroonikaseadmete jäätmeid (WEEE), ei või antud toodet visata majapidamisjäätmete hulka. Palun tagastage antud toode taaskasutamise eesmärgil müügipunkti või kohaliku piirkonna jäätmekogumise punkti.

Ez a jel a terméken vagy annak csomagolásán azt jelenti, hogy ezt a terméket nem kezelheti háztartási hulladékként. Az elektromos és elektronikus berendezések hulladékairól szóló 2002/96/EK (WEEE) irányelvnek megfelelően ezt az elektromos berendezést tilos szortírozatlan, közösségi hulladékgyűjtőbe dobni. A terméket használatá befejeztével vigye vissza az eladási ponthoz vagy a helyi közigazgatási újrahaznosító gyűjtőhelyre.

Šis simbolis ant produkto arba jo pakuotės reiškia, kad jis neturi būti utilizuojamas kartu su buitinių atliekomis. Pagal ES Direktyvą 2002/96/EB

dēl elektros ir elektroninēs ģrangos atliekų (WEEE), šio elektros gaminio negalima išmesti su buitinėmis atliekomis. Šį gaminį reikia grąžinti į tą vietą, kur jis buvo pirktas, arba į miesto atliekų perdirbimo punktą.

Šis simbolis uz produkta vai tā iesaiņojuma norāda, ka šo produktu nedrīkst izmest mājsaimniecības atkritumos. Saskaņā ar ES Direktīvu 2002/96/EC par elektrisko un elektronisko iekārtu atkritumiem (EEIA), šo elektrisko iekārtu ir aizliegts nodot kopā ar citiem nešķirotiem sadzīves atkritumiem. Lūdzu nododiet šo iekārtu atpakaļ tās tirdzniecības vietā vai Jūsu tuvākajā sabiedriskajā iekārtu savākšanas punktā to pārstrādei.

Jeśli na produkcie lub jego opakowaniu umieszczono ten symbol, wówczas w czasie utylizacji nie wolno wyrzucać tego produktu wraz z odpadami komunalnymi. Zgodnie z Dyrektywą Nr 2002/96/WE w sprawie zużytego sprzętu elektrycznego i elektronicznego (WEEE), niniejszego produktu elektrycznego nie wolno usuwać jako nie posortowanego odpadu komunalnego. Prosimy o usunięcie niniejszego produktu poprzez jego zwrot do punktu zakupu lub oddanie do miejscowego komunalnego punktu zbiórki odpadów przeznaczonych do recyklingu.

Tento symbol na výrobku alebo jeho balení znamená, že výrobok nepatrí do domáceho odpadu. V súlade so smernicou 2002/96/ES o odpade z elektrických a elektronických zariadení (OEEZ) sa toto elektrické zariadenie nesmie odstranovať ako netriedený komunálny odpad. Výrobok odstráňte jeho vrátením v mieste nákupu alebo odovzdaním v miestnom zbernom zariadení na recyklovanie.

This Document

Great care was taken in preparing this manual. Constant product development may mean that some information is not entirely up-to-date. The information in this document is subject to change without notice.

TomTom shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the performance or use of this material. This document contains information protected by copyright. No part of this document may be photocopied or reproduced in any form without prior written consent from TomTom International B.V.

Part numbers

TomTom ONE XL HD Traffic: 4Z00.003

19. Copyright notices

© 2007 TomTom International B.V., The Netherlands.

Patents Pending. All rights reserved.

TomTom and the TomTom logo are registered trademarks of TomTom International B.V., The Netherlands. All other trademarks are the property of their respective owners.

Our end user license agreement and a limited warranty apply to this product; they are included in this package. You can also review both at www.TomTom.com/legal

Data Source

© 2007 Tele Atlas N.V. Based upon:

Topografische ondergrond Copyright © dienst voor het kadaster en de openbare registers, Apeldoorn 2007.

© Ordnance Survey of Northern Ireland.

© IGN France.

© Swisstopo.

© BEV, GZ 1368/2007.

© Geonext/DeAgostini.

© Norwegian Mapping Authority, Public Roads Administration /

© Mapsolutions. © DAV.

This product includes mapping data licensed from Ordnance Survey with the permission of the Controller of Her Majesty's Stationery Office. © Crown copyright and/or database right 2007. All rights reserved. Licence number 100026920.

Some images are taken from NASA's Earth Observatory.

The purpose of NASA's Earth Observatory is to provide a freely-accessible publication on the Internet where the public can obtain new satellite imagery and scientific information about our home planet.

*The focus is on Earth's climate and environmental change:
earthobservatory.nasa.gov/*
