

TABLE OF CONTENTS



Chapter 1: Getting Started

Introduction	1-2
The Purpose of this Manual	1-2
About Getting Started	1-2
Supplemental Manuals and Other Help	1-2
Technical Support	1-2
Conventions Used	1-3
Key Topics for Each Chapter	1-3
Before you begin	1-4
Step 1: Install Programming Software	1-5
Step 2: Launch Programming Software	1-6
Step 3: Create a Project	1-8
Step 4: Compile and Save Project	1-14
Step 5: Apply Power	1-15
Step 6: Establish PC to PLC communications	1-16
Step 7: Write Project into PLC	1-25
Step 8: Place PLC in RUN Mode	1-26
Step 9: Test Project using Data View Monitor	1-27
Step 10: Y001 Output On?	1-28
Additional Training Resources	1-29

Chapter 2: Specifications

Overview	2-2
PLC System	2-2
PLC Units	2-3
Basic PLC Units	2-3
Standard PLC Units	2-4
Analog PLC Units	2-5

Table of Contents

Ethernet Basic PLC Units.....	2-6
Ethernet Standard PLC Units	2-7
I/O Modules.....	2-9
Power Supply	2-12
Programming Software	2-13
PC Requirements.....	2-13
PLC Numbering System.....	2-14
Data Types.....	2-14
Memory Types	2-15
I/O Numbering System	2-17
PLC Operation	2-18
Introduction	2-18
PLC Operating System	2-18
PLC Operating Modes.....	2-19
Stop Mode.....	2-19
Run Mode	2-19
Read Inputs	2-20
Service Peripherals and Force I/O	2-20
Update Special Control (SC) Relays and Special Data (SD) Registers.....	2-21
Solve Application Program	2-21
Write Outputs	2-21
Diagnostics.	2-21
Power Budgeting.....	2-22
What is Power Budgeting?	2-22
Power Budget Calculation	2-23
Power Budget Example	2-24
Power Budgeting using the CLICK Programming Software.....	2-24
General Specifications	2-25
General Specifications (all CLICK PLC products)	2-25
PLC Unit Specifications.....	2-26
Common Specifications.....	2-26
PLC LED Status Indicators.....	2-28
Memory Map	2-31
Basic PLC Unit Specifications	2-32
C0-00DD1-D – 8 DC Input/6 Sinking DC Output Micro PLC	2-32

C0-00DD2-D – 8 DC Input/6 Sourcing DC Output Micro PLC	2-34
C0-00DR-D – 8 DC Input/6 Relay Output Micro PLC	2-36
C0-00AR-D – 8 AC Input/6 Relay Output Micro PLC	2-38
Standard PLC Unit Specifications.....	2-40
C0-01DD1-D – 8 DC Input/6 Sinking DC Output Micro PLC	2-40
C0-01DD2-D – 8 DC Input/6 Sourcing DC Output Micro PLC	2-42
C0-01DR-D – 8 DC Input/6 Relay Output Micro PLC	2-44
C0-01AR-D – 8 AC Input/6 Relay Output Micro PLC	2-46
Analog PLC Unit Specifications	2-48
C0-02DD1-D – 4 DC Input/4 Sinking DC Output; 2 Analog In/2 Analog Out.....	2-48
C0-02DD2-D – 4 DC Input/4 Sourcing DC Output; 2 Analog In/2 Analog Out.....	2-51
C0-02DR-D – 4 DC Input/4 Relay Output; 2 Analog In/2 Analog Out.....	2-54
Ethernet Basic PLC Unit Specifications	2-57
C0-10DD1E-D – 8 DC Input/6 Sinking DC Output Micro PLC.....	2-57
C0-10DD2E-D – 8 DC Input/6 Sourcing DC Output Micro PLC	2-59
C0-10DRE-D – 8 DC Input/6 Relay Output Micro PLC.....	2-61
C0-10ARE-D – 8 AC Input/6 Relay Output Micro PLC	2-63
Ethernet Standard PLC Unit Specifications	2-65
C0-11DD1E-D – 8 DC Input/6 Sinking DC Output Micro PLC.....	2-65
C0-11DD2E-D – 8 DC Input/6 Sourcing DC Output Micro PLC	2-67
C0-11DRE-D – 8 DC Input/6 Relay Output Micro PLC.....	2-69
C0-11ARE-D – 8 AC Input/6 Relay Output Micro PLC	2-71
I/O Module Specifications.....	2-73
I/O Terminal Block Specifications for PLCs and I/O Modules	2-73
LED Indicators	2-73
C0-08ND3 – 8-Point Sink/Source DC Input Module.....	2-74
C0-08ND3-1 – 8-Point Sink/Source DC Input Module.....	2-75
C0-16ND3 – 16-Point Sink/Source DC Input Module.....	2-76
C0-08NE3 – 8-Point Sink/Source AC/DC Input Module.....	2-77
C0-16NE3 – 16-Point Sink/Source AC/DC Input Module.....	2-78
C0-08NA – 8-Point AC Input Module.....	2-79
C0-08TD1 – 8-Point Sinking DC Output Module	2-80
C0-08TD2 – 8-Point Sourcing DC Output Module	2-81
C0-16TD1 – 16-Point Sinking DC Output Module	2-82
C0-16TD2 – 16-Point Sourcing DC Output Module	2-83

Table of Contents

C0-08TA – 8-Point AC Output Module.....	2-84
C0-04TRS – 4-Point Relay Output Module.....	2-85
C0-08TR – 8-Point Relay Output Module	2-86
C0-16CDD1 – 8-Point DC Input and 8-Point DC Sinking Output Module.....	2-87
C0-16CDD2 – 8-Point DC Input and 8-Point DC Sourcing Output Module.....	2-89
C0-08CDR – 4-Point DC Input and 4-Point Relay Output Module.....	2-91
C0-04AD-1 – 4-Channel Analog Current Input Module.....	2-93
C0-04AD-2 – 4-Channel Analog Voltage Input Module.....	2-94
C0-04RTD – 4-Channel RTD Input Module	2-95
C0-04THM – 4-Channel Thermocouple Input Module	2-97
C0-04DA-1 – 4-Channel Analog Current Output Module.....	2-99
C0-04DA-2 – 4-Channel Analog Voltage Output Module.....	2-100
C0-4AD2DA-1 – 4-Ch. Analog Current In & 2-Ch. Analog Current Out Module ..	2-101
C0-4AD2DA-2 – 4-Ch. Analog Current In & 2-Ch. Analog Voltage Out Module ..	2-103
Power Supply Specifications	2-105
C0-00AC Power Supply.....	2-105
C0-01AC Power Supply.....	2-105
Accessories	2-106

Chapter 3: Installation and Wiring

Safety Guidelines	3-2
Plan for Safety	3-2
Three Levels of Protection	3-3
Orderly System Shutdown.....	3-3
System Power Disconnect	3-3
Emergency Stop Circuits	3-4
Introduction to the CLICK PLC Mechanical Design.....	3-5
CLICK PLC Modules	3-5
CLICK I/O Modules	3-8
CLICK Power Supplies	3-9
Battery Backup (Standard and Analog PLCs Only).....	3-10
Mounting Guidelines.....	3-11
Environmental Specifications	3-11
Agency Approvals.....	3-11
CLICK Unit Dimensions	3-11

Enclosures	3-14
Panel Layout and Clearances	3-14
Installing the CLICK PLC.....	3-16
Connecting the Modules Together.....	3-16
Mounting the CLICK PLC on a DIN Rail.....	3-17
Optional Mounting Method.....	3-17
Wiring Guidelines	3-18
Power Input Wiring to CLICK Power Supply.....	3-18
Power Input Wiring to CLICK PLC	3-18
Fuse Protection.....	3-19
Planning the I/O Wiring Routes.....	3-20
Wiring I/O Modules.....	3-21
ZIPLink Wiring System Compatibility Matrix for CLICK PLCs.....	3-22
I/O Wiring Checklist	3-24
System Wiring Strategies	3-25
PLC Isolation Boundaries	3-25
Powering I/O Circuits	3-26
Sinking/Sourcing Concepts	3-27
I/O “Common Terminal” Concepts.....	3-28
DC Input Wiring Methods.....	3-29
DC Output Wiring Methods.....	3-29
Relay Outputs - Wiring Methods	3-31
Relay Outputs - Transient Suppression for Inductive Loads in a Control System	3-32
Analog I/O Configuration	3-36
Terminal Block Wiring - Analog PLC Units	3-36
Terminal Block Wiring - Analog I/O Modules.....	3-36
Configuration in the CLICK Programming Software	3-37
Analog I/O Monitoring.....	3-40

Chapter 4: PLC Communication

Introduction.....	4-2
PLC Communication Ports Specifications.....	4-3
LED Status Indicators.....	4-5
LED Status Indicators.....	4-5

Table of Contents

DirectLogic Devices That Do Not Work With CLICK PLCs.....	4-5
3 Steps to Using the CLICK Communications	4-7
Typical Communications Applications	4-8
Port 1 (RS-232) - Modbus RTU Slave Mode Only	4-8
Port 1 (Ethernet) - Modbus TCP	4-9
Port 2 (RS-232) - Modbus RTU or ASCII	4-10
Port 3 (RS-485 - Modbus RTU or ASCII.....	4-11
W-1: Com Port 1 & 2 (RS-232) Wiring.....	4-12
W-2: Com Port 1 (Ethernet) Wiring.....	4-17
W-3: Com Port 3 Wiring.....	4-19
C-1: Com Port 1 (RS-232) Setup	4-20
C-2: Com Port 1 (Ethernet) Setup	4-21
C-3: Com Port 2 Setup (Modbus RTU)	4-22
C-4: Com Port 2 Setup (ASCII).....	4-23
C-5: Com Port 3 Setup (Modbus RTU)	4-24
C-6: Com Port 3 Setup (ASCII).....	4-25
P-1: Modbus Slave (Server) Programming	4-26
P-2: Modbus Master Programming (Modbus RTU)	4-29
P-3: Modbus Client (Modbus TCP) Programming	4-32
P-4: ASCII Receive Programming	4-35
P-5: ASCII Send Programming	4-38

Chapter 5: Maintenance

PLC Maintenance.....	5-2
Check LED Indicators.....	5-2
Project Backup	5-2
Check Operating Environment	5-2
Check Operating Voltage	5-2
Check Physical Condition	5-3
Check Project Functionality	5-3
Check the PLC Program from CLICK PLC Programming Software	5-3

Chapter 6: Troubleshooting

Troubleshooting Direction	6-2
PLC Unit Troubleshooting	6-3
Toggle Switch	6-3
LED Indicators	6-4
Power Supply Troubleshooting.....	6-5
The input voltage measures less than 20V DC.....	6-5
The input voltage measures greater than 28V DC	6-5
How to check the power budget.....	6-5
I/O Module Troubleshooting	6-6
Input Module Troubleshooting.....	6-6
Output Module Troubleshooting.....	6-7
How to Check the I/O Configuration	6-7
How to Check the I/O Status.....	6-8
Replacement of I/O Modules.....	6-9
Troubleshooting Electrical Noise Problems	6-10
Electrical Noise Problems.....	6-10
Reducing Electrical Noise.....	6-10
Error Codes	6-11

Notes