



Dura-JET

MODEL L0704A



CLEAN- RELIABLE- WORRY FREE



When using electrical equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read and follow all instructions before using the equipment
2. Keep the cord out of heavy traffic area. To avoid fire hazard NEVER put the cord under rugs, near heat generating devices, such as radiators, stoves or heaters
3. Always turn off the equipment before servicing
4. DO NOT drop or insert any object into any openings
5. Do not operate any appliance with a damaged parts
6. Any other use not recommended by the manufacturer may electrical shock or injury to persons
7. NEVER use outdoors
8. Keep unit away from heated surfaces and open flames
9. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.

After reading this owner's guide, if you have any questions or comments, please call +1-817-633-1080 or contact our technical support department at support@luraco.com or visit our website at www.luraco.com for more information

FEATURES - OPERATIONS

Dura-JET Features

- Sanitizable-Bacteria Free
- Military heavy duty water sealing technology- extremely reliable
- Dual powerful massage Jet-streams
- Easy to install, clean and service
- Automatic heat sinking with internal motor cooling-Extended motor service life
- Best warranty and best product support
- Manufactured in USA

Dura-JET Installation

1. Determine the surface of the tube that you want to install the Dura-Jet, ensure that the surface is flat
2. Locate a position to drill a hole with the dimensions as shown in Fig. 1
3. Insert the Dura-Jet into the hole from inside the tub
4. Use a hand screwdriver to tighten the four screws on the pump housing
5. Install the screw to lock the front cover
6. Plug the power cord of Dura-Jet into the spa power box

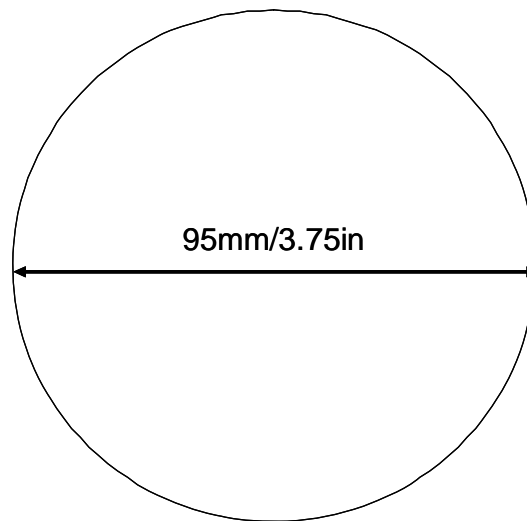


Figure 1. Drill Instruction

Attention: Any modification to the Dura-JET system will void the warranty

Cleaning Instructions

1. Ensure the Dura-JET is off
2. Use a screwdriver to remove the screw on the front cover
3. Remove the front cover, impeller, and impeller cover one piece at a time
4. Use anti bacterial solution to clean all the plastic parts
5. Reassemble the system

WARRANTY INFORMATION

Two (2) YEAR WARRANTY

1. This Warranty applies only to the original purchaser of this product.
2. This Warranty applies ONLY to repair or replacement of any supplied or manufactured parts of this product. The warranty does not cover dropped or abused unit.
3. Unless otherwise proscribed by law, The LURACO technologies, Inc. shall not be liable for any personal injury, property or any incidental or consequential damages of any kind resulting from malfunctions, defects, misuse, improper installation or alteration of this product.

Important Instructions

If you need to send a unit to us for service, please follow the steps below.

1. Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.
2. Before packing your unit; be sure to enclose:
 - Your name with full shipping address and telephone number
 - A dated receipt to PROOF OF PURCHASE
 - Attach a paper stating the problem of the product

Dura-JET Specifications

- Voltage: 120V
- Frequency: 60Hz
- Current: 1.0A

THANK YOU FOR BUYING LURACO TECHNOLOGIES' PRODUCT

LURACO TECHNOLOGIES, INC.

1132 107TH STREET

ARLINGTON, TX 76011

TEL: +1-817-633-1080

FAX: +1-817-633-1085

WWW.LURACO.COM