

Warning



Don't mix coins



Don't mix bills



Don't disassemble



Don't use near fans or air-conditioning



Keep TD clean and dry. Do not use cleaning fluid



Use on a flat stable surface. Keep the area around the tray clear

Contact us



www.tellermate.com

Tellermate Inc

1080 Holcomb Bridge,
Building 100,
STE 350,
Roswell,
Georgia,
30076

Tel: + 1 800 835 6283
Fax: + 1 770 220 0970


904 541P V3

User Guide




The Smarter Way to Count Cash

Contents

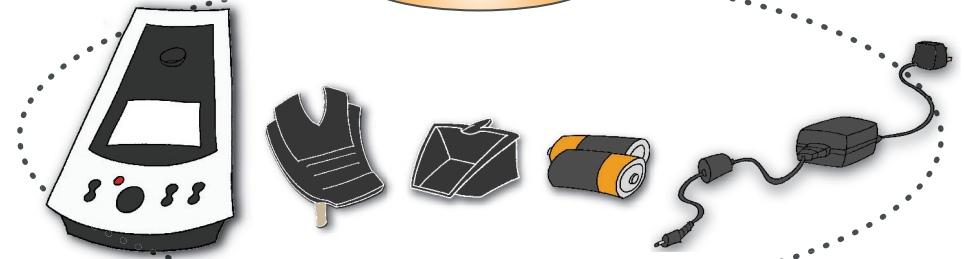


Assembly

1a

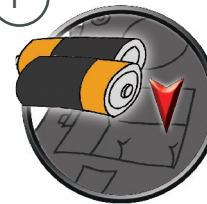


Insert batteries or plug from power adaptor.

1b

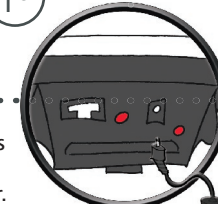

2

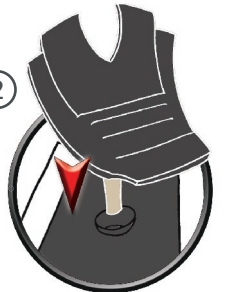

"Click"

Starting

1



Switch it ON/OFF by pressing the red button

2



Make sure the tray is empty before you switch on.

Key set



1
To select bill denomination



To add to the total




2
To select rolls of coin denomination




3
To select loose coin denomination

On-Off & to end count


Counting

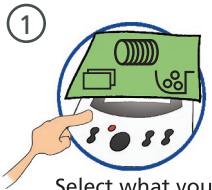

1
Select what you want to count

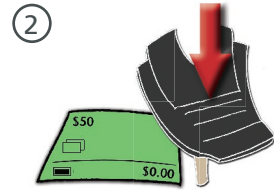


2
Place money on tray

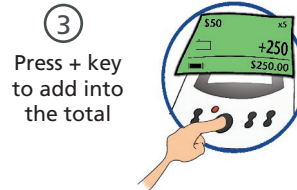


3
Press + key to add into the total



4
Remove the money and count the rest in the same way

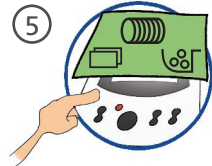

5
To count another denomination, go back to step 1 and repeat the process.

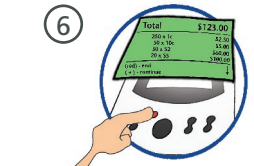

6
At the end of your count press the red key to see a summary. Press the red key again to end count

Bills



Pile up bills in stacks of 15-20

Roll of coin




Add one roll at a time

Loose coin




Place the cup on the tray

Set up

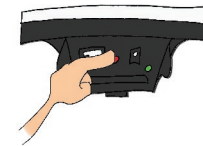

To change the set up press the **red** set up key at the rear of TD

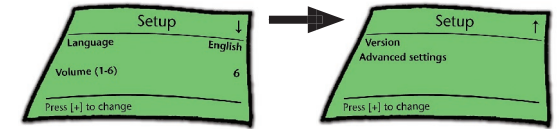

To change any of the set up settings follow the instructions below...

Press key 1 to move up and down.

Press + key to change or select setting.

Press red key to exit set up.

Advanced Settings

! Warning ! Changing these settings could cause TD to miscount. Please follow the on screen instructions with care.

