



ENGLISH



LG 550 USER GUIDE

Please read this manual carefully before operating your mobile phone. Retain it for future reference.

P/N : MMBB0229501 (1.0) H

Important Safety Precautions

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than -4°F or greater than 122°F.
4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.
6. Do not use a hand-held phone while driving.



7. Do not use the phone in areas where its use is prohibited. (For example: aircraft, hospital)

Important Safety Precautions

1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.
3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.
4. Do not use your phone in high explosive areas as the phone may generate sparks.
5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.
4. Store the battery out of reach of children.



5. Be careful that children do not swallow any parts. This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

Table of Contents

| | | | | | |
|-------------------------------------|-----------|----------------------------------------|-----------|--------------------------------------------|-----------|
| Important Safety Precautions | 1 | Getting Started with Your Phone | 15 | Quick Access to Convenient Features | 19 |
| Table of Contents | 4 | The Battery | 15 | Lock Mode | 19 |
| Welcome | 8 | Installing the Battery | 15 | Mute Function | 19 |
| Important Information | 8 | Removing the Battery | 15 | Volume Quick Adjustment | 19 |
| FCC Part 15 Class B Compliance | 8 | Charging the Battery | 16 | Call Waiting | 19 |
| Industry Canada Compliance | 8 | Battery Charge Level | 16 | Caller ID | 19 |
| Technical Details | 9 | Removing and Installing the Faceplate | 16 | Speed Dialing | 20 |
| Technical Details | 9 | Removing the Faceplate | 16 | Voice Control | 20 |
| FCC RF Exposure Information | 10 | Installing the Faceplate | 17 | Using Phone Menus | 21 |
| Bodily Contact During Operation | 10 | Turning the Phone On and Off | 17 | Web | 21 |
| Vehicle-Mounted External Antenna | 10 | Turning the Phone On | 17 | Call History | 22 |
| Caution | 10 | Turning the Phone Off | 17 | 1. Missed Calls | 23 |
| Phone Overview | 11 | Signal Strength | 17 | 2. Incoming Calls | 23 |
| Menus Overview | 13 | Screen Icons | 17 | 3. Outgoing Calls | 23 |
| | | Making Calls | 18 | 4. Recent Calls | 23 |
| | | Correcting Dialing Mistakes | 18 | 5. Delete History | 24 |
| | | Redialing Calls | 18 | | |
| | | Receiving Calls | 18 | | |

Some of contents in this user guide may be different from your phone depending on the software of the phone or your service provider. Features and specifications might be subject to change without prior notice.

| | |
|-----------------------|-----------|
| Media Player | 24 |
| 1. Channel Listing | 25 |
| 2. Memory Card | 25 |
| Bluetooth | 26 |
| 1. Add Device | 27 |
| 2. Trusted Devices | 27 |
| 3. Exchange Folder | 28 |
| 4. Supported Services | 28 |
| 5. Settings | 29 |
| 5.1 On/Off | 29 |
| 5.2 Visibility | 29 |
| 5.3 Exchange Folders | 29 |
| 5.4 Bluetooth Info | 30 |
| Missed Alerts | 30 |
| Music | 31 |
| Downloads | 32 |
| Games | 32 |
| Ringers | 32 |

| | |
|----------------------|-----------|
| Screen Savers | 33 |
| Applications | 33 |
| < Options > | 33 |
| Messaging | 34 |
| 1. Send Message | 35 |
| 2. Text Messages | 36 |
| 2.1 Inbox | 36 |
| 2.2 Sent | 37 |
| 2.3 Outbox | 37 |
| 2.4 Draft | 38 |
| 2.5 Edit Folder | 38 |
| 2.6 Send Message | 38 |
| 3. Pic/Video Msg | 39 |
| 4. WebAlerts | 39 |
| 5. Voicemail | 39 |
| 6. Settings | 40 |
| 6.1 Notification | 40 |
| 6.2 Message Reminder | 40 |
| 6.3 Callback Number | 40 |

| | |
|-----------------------|-----------|
| 6.4 Auto-Delete | 40 |
| 6.5 Signature | 41 |
| 6.6 Quick Messages | 41 |
| 6.7 Edit Voicemail # | 42 |
| 6.8 WebAlerts | 42 |
| Tools | 42 |
| 1. Memory Card | 43 |
| 2. Music Transmitter | 45 |
| 3. Alarm Clock | 45 |
| 4. Calculator | 46 |
| 4.1 Calculator | 46 |
| 4.2 Ez Tip Calculator | 46 |
| 5. Voice Control | 47 |
| 6. Scheduler | 47 |
| 7. Voice Memo | 48 |
| 8. Notepad | 49 |
| 9. World Clock | 49 |
| 0. Mass Storage | 50 |

Table of Contents

| | | | | | |
|----------------------|-----------|---------------------|----|--------------------------|----|
| Pic/Video | 51 | 1.5 Slide Show | 60 | 7.1 Lock Phone | 65 |
| 1. Camera | 51 | 1.6 Skins | 61 | 7.2 Pic/Video Msg | 65 |
| 2. Camcorder | 53 | 1.7 Menu Styles | 61 | 7.3 Change Lock Code | 66 |
| 3. Pic/Video Msg | 54 | 1.8 Font Size | 61 | 7.4 Special Numbers | 66 |
| 4. My Pics/Videos | 54 | 1.9 Backlight | 61 | 7.5 Delete Contacts | 66 |
| 5. PictBridge Print | 55 | 1.0 Power Save Mode | 62 | 7.6 Limit Calls | 67 |
| 6. Settings & Info | 55 | 1.* Status Light | 62 | 7.7 Selective Call Block | 67 |
| Contacts | 56 | 2. Sounds | 62 | 7.8 Reset Phone | 67 |
| 1. Find/Add Entry | 56 | 2.1 Ringers | 62 | 8. Setup/Others | 68 |
| 2. Groups | 57 | 2.2 Key Tones | 62 | 8.1 Auto Keyguard | 68 |
| 3. Speed Dials | 58 | 2.3 Volume | 63 | 8.2 Shortcuts | 68 |
| 4. My Name Card | 58 | 2.4 Alerts | 63 | 8.3 Answer Call | 68 |
| 5. Services | 58 | 3. Roaming | 63 | 8.4 Auto-Answer | 68 |
| Settings | 59 | 3.1 Set Mode | 63 | 8.5 Dialing Match | 69 |
| 1. Display | 59 | 3.2 Call Guard | 63 | 8.6 Text Entry | 69 |
| 1.1 Greeting | 59 | 3.3 Data Roam Guard | 64 | 8.7 Language | 70 |
| 1.2 Incoming Calls | 59 | 4. Location | 64 | 8.8 TTY Mode | 70 |
| 1.3 Screen Saver | 60 | 5. Messaging | 64 | 8.9 Airplane Mode | 70 |
| 1.4 Clock & Calendar | 60 | 6. Bluetooth | 64 | 9. Phone Info | 71 |
| | | 7. Security | 65 | 9.1 My Phone Number | 71 |

| | |
|-------------------------------------------------------------------------|-----------|
| 9.2 Version | 71 |
| 9.3 Icon Glossary | 71 |
| 9.4 Advanced | 71 |
| Safety | 72 |
| TIA (Telecommunications Industry Association) Safety Information | 72 |
| Exposure to Radio Frequency Signal | 72 |
| Antenna Care | 72 |
| Phone Operation | 72 |
| Tips on Efficient Operation | 73 |
| Driving | 73 |
| Electronic Devices | 73 |
| Pacemakers | 73 |
| Persons with Pacemakers: | 73 |
| Hearing Aids | 73 |
| Other Medical Devices | 74 |
| Health Care Facilities | 74 |
| Vehicles | 74 |

| | |
|---------------------------------------|-----------|
| Posted Facilities | 74 |
| Aircraft | 74 |
| Blasting Areas | 74 |
| Potentially Explosive Atmosphere | 74 |
| For Vehicles Equipped with an Air Bag | 75 |
| Charger and Adapter Safety | 75 |
| Battery Information and Care | 75 |
| Safety Information | 76 |
| Explosion, Shock, and Fire Hazards | 76 |
| General Warnings and Cautions | 77 |
| Avoid damage to your hearing | 78 |
| FDA Consumer Update | 78 |
| Consumer Information on SAR | 85 |
| Accessories | 87 |
| Warranty Information | 88 |
| Index | 90 |

Welcome

Thank you for choosing the advanced and compact LG 550 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

1. Large, easy-to-read, 11-line backlit LCD with status icons.
2. Paging, messaging, voicemail and caller ID.
3. 24-key keypad.
4. Speakerphone feature.
5. Menu-driven interface with prompts for easy operation and configuration.
6. Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
7. Bilingual (English and French) capabilities.
8. Easy-to-carry, compact and slim design.
9. Bluetooth® wireless technology.
10. Media Player.
11. Built-in Music Player.
12. Flash Wallpaper.
13. PictBridge Print capability.

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Industry Canada Compliance

This phone complies with Industry Canada RSS 133. This phone complies with the Class B limits for radio noise emissions as set out in the interference causing standard entitled "Digital Apparatus" (ICES-003) of Industry Canada.

Technical Details

Technical Details

The LG 550 is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 Mhz and Personal Communication Services (PCS) at 1.9 Ghz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base station Transmission System), and MS (Mobile Station).

* TSB -74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

The following table lists some major CDMA standards.

| CDMA Standard | Designator | Description |
|----------------------------------|----------------------------------|----------------------------------------------------------------------------------------------|
| Basic Air Interface | TIA/EIA-95A | CDMA Dual-Mode Air Interface |
| | TSB-74 | 14.4kbps radio link protocol and inter-band operations |
| | ANSI J-STD-008 TIA/EIA-IS2000 | IS-95 adapted for PCS frequency band CDMA2000 1xRTT Air Interface |
| Network | TIA/EIA/IS-634 | MAS-BS |
| | TIA/EIA/IS/651 | PCSC-RS |
| | TIA/EIA/IS-41 -C | Intersystem operations |
| | TIA/EIA/IS-124 | Non-signaling data comm. |
| Service | TIA/EIA/IS-96-B | Speech CODEC |
| | TIA/EIA/IS-99 | Async Data and Fax |
| | TIA/EIA/IS-637 | Short message service |
| | TIA/EIA/IS-657 | Packet Data |
| | IS-801 | Position Determination Service |
| | TIA/EIA/IS-707-A | High Speed Packet Data |
| 1x EVDO Related interface | TIA/EIA/IS-856 | CDMA2000 High Rate Packet Data |
| | TIA/EIA/IS-878 | Air Interface |
| | TIA/EIA/IS-866 | 1xEVDO Inter-Operability Specification for CDMA2000 Access Network Interfaces |
| | | Recommended Minimum Performance Standards for CDMA2000 High Rate Packet Data Access Terminal |
| | TIA/EIA/IS-890 | Test Application Specification(TAS) for High Rate Packet Data Air Interface |

Technical Details

FCC RF Exposure Information

WARNING! *Read this information before operating the phone.*

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic

components should not be used. Avoid the use of accessories that cannot maintain 0.6 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

A minimum separation distance of 8 inches (20 cm) must be maintained between the user / bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC and IC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

Phone Overview

Phone Overview

8. **TALK Key** Allows you to place or receive calls, answer Call Waiting, or activate Voice Control.
 9. **Voice Control Key** Allows you to dial by speaking a Contacts entry's name or to record voice memos. This key also turns the flash on/off while in camera or camcorder mode.
 10. **Accessory Jack** Allows you to connect optional accessories, such as a USB cable.
 11. **Charger Jack** Connects the phone to the battery charger.
 12. **Microphone** Allows other callers to hear you clearly when you are speaking to them.
 13. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
 14. **BACK Key** Deletes characters from the display in text entry mode. When in a menu, press the key to return to the previous menu.
 15. **END Key** Ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the main menu, it returns the phone to standby mode and cancels your input.
 16. **Camera Key** Press and hold to automatically launch the camera. A single press to the exterior camera key (right side key) will launch the camera.
 17. **Menu/OK Key** Displays the phone's main menu from standby mode. It also selects the highlighted choice when navigating through a menu.
 18. **Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations.
- CAUTION!** *Inserting an accessory into the incorrect jack may damage the phone.*
19. **Soft Keys** Let you select softkey actions or menu items corresponding to the bottom left and right lines on the display screen.
 20. **External Navigation Pad** Allows you to access the Music Store and music stored on your microSD card, as well as navigate through your music while playing a song.
 21. **Digital Camera** Allows you to take sharp, high-resolution digital pictures.
 22. **Flash** Allows you to take pictures indoors or at night and also functions as a Message Waiting Indicator (MWI).

Menus Overview

1. Web

2. Call History

1. Missed Calls
2. Incoming Calls
3. Outgoing Calls
4. Recent Calls
5. Delete History

1. Missed Calls

2. Incoming Calls

3. Outgoing Calls

4. Recent Calls

5. All Calls

3. Media Player

1. Channel Listing
2. Memory Card

4. Bluetooth

1. Add Device
2. Trusted Devices
3. Exchange Folder
4. Supported Services
5. Settings

5. Missed Alerts

6. Music

7. Downloads

Games

Ringers

Screen Savers

Applications

<Options>

8. Messaging

1. Send Message
2. Text Messages
 1. Inbox
 2. Sent
 3. Outbox
 4. Draft
 5. Edit Folder
 6. Send Message

3. Pic/Video Msg

4. WebAlerts

5. Voicemail

1. Call Voicemail

2. Voicemail Details


3. Clear Icon

6. Settings

9. Tools

1. Memory Card
2. Music Transmitter
3. Alarm Clock
4. Calculator
5. Voice Control
6. Scheduler
7. Voice Memo
8. Notepad
9. World Clock
0. Mass Storage

Menu Access

To use phone menus, press  **Menu** using Navigation Key to highlight and select. Press the number key that corresponds to the submenu.

Menus Overview

*. Pic/Video

1. Camera
2. Camcorder
3. Pic/Video Msg
4. My Pics/Videos
5. PictBridge Print
6. Settings & Info

0. Contacts

1. Find/Add Entry
2. Groups
3. Speed Dials
4. My Name Card
5. Services

#. Settings

1. Display
 1. Greeting
 2. Incoming Calls
 3. Screen Saver

4. Clock & Calendar

5. Slide Show
6. Skins
7. Menu Styles
8. Font Size
9. Backlight
0. Power Save Mode
 - *. Status Light

2. Sounds

1. Ringers
2. Key Tones
3. Volume
4. Alerts

3. Roaming

1. Set Mode
2. Call Guard
3. Data Roam Guard
4. Location
5. Messaging
 1. Notification

2. Message Reminder

3. Callback Number
4. Auto-Delete
5. Signature
6. Quick Messages
7. Edit Voicemail #
8. WebAlerts

6. Bluetooth

1. On/Off
2. Visibility
3. Exchange Folders
4. Bluetooth Info

7. Security

1. Lock Phone
2. Pic/Video Msg
3. Change Lock Code
4. Special Numbers
5. Delete Contacts
6. Limit Calls
7. Selective Call Block

8. Reset Phone

8. Setup/Others

1. Auto Keypad
 2. Shortcuts
 3. Answer Call
 4. Auto-Answer
 5. Dialing Match
 6. Text Entry
 7. Language
 8. TTY Mode
 9. Airplane Mode
- ## 9. Phone Info
1. My Phone Number
 2. Version
 3. Icon Glossary
 4. Advanced

Getting Started with Your Phone

The Battery

Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

To install, insert the battery into the opening on the back of the phone and gently press down until the latch snaps into place.



Note

Do not handle a damaged or leaking Lithium Polymer battery as you can be burned.

Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Press the battery release latch up and remove the battery from the phone at a 45-degree angle.



Getting Started with Your Phone

Charging the Battery

To use the charger provided with your phone:

WARNING! Use only the charger provided with the phone. Using any charger other than the one included with the LG 550 may damage your phone or battery.

1. Open the cap of the charger port at the bottom of your phone.
2. Plug the end of the adapter into the phone's charger port and the other end into an electrical outlet.
3. The charge time varies depending upon the battery level.

 
Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying a warning. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

Removing and Installing the Faceplate

Removing the Faceplate

To remove the faceplate, follow the sequence shown below.

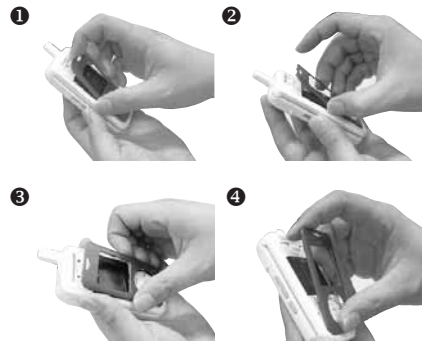

Note

Faceplates are fragile. Use carefully when removing them and follow the sequence above.

Installing the Faceplate


You can personalize your phone with a replaceable faceplate. To install a new faceplate, simply follow the reverse of the sequence shown above.

Tip

To clean the faceplate, remove it and wipe it with a damp cloth. Use a mild soap or detergent to remove stains. After drying the faceplate thoroughly, replace it on the phone.

Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery or connect the phone to an external power source such as a vehicle power charger or hands-free car kit.
2. Press  for a few seconds until the LCD screen lights up.

Note

Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

Turning the Phone Off

1. Press and hold  until the display turns off.

Signal Strength



Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Screen Icons

When the phone is powered on, the top line of the LCD screen displays icons indicating the status of the phone. To see the icons, go to **Menu->Settings->Phone Info->Icon Glossary**.

Getting Started with Your Phone

Making Calls

1. Make sure the phone is turned on. If not, press  for about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press .

If the phone is locked, enter the lock code.
Call Failed - indicates the call did not go through.
Restricted - indicates outgoing calls are in restricted mode.



Note

If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contacts. To turn off this function:


Menu -> Settings -> Security -> Enter Lock Code. -> Limit Calls -> Unlock -> OK

4. Press  to end the call.


Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to erase the last digit entered or hold down  for at least 2 seconds to delete all digits.



Redialing Calls

1. Press  twice to redial the last number you called, received or missed. The last 30 numbers are stored in the call history list and you can also select one of these to redial.

Receiving Calls

1. When the phone rings or vibrates press  to answer a call. Just open the flip and answer the call when the flip is closed.

Note

If you press  or  the side keys while the phone is ringing, the ringing or vibration is muted for that call.

2. Press  to end the call.

Quick Access to Convenient Features


Lock Mode

Sets your phone to require your 4-digit password in order to use the phone.

Note

By default, the lock code/password is the last 4 digits of your phone number. You can change this code/password in Security menu.

Mute Function

The Mute Function does not transmit your voice to the caller. To quickly activate Mute highlight the **Mute** and press .



Volume Quick Adjustment

Quickly adjust ringer and earpiece volumes by pressing the upper side key to increase and lower key to decrease.

Note

The earpiece volume can only be adjusted during a call and Key Beep volume can only be adjusted through the **Menu** -> **Settings** -> **Sounds** -> **Volume** -> **Key Beep**.

Call Waiting

During a call, one beep indicates another incoming call. Check with your service provider for information about this function. Press  to receive the waiting call then press  again to switch between calls.

Caller ID

Caller ID displays the number of the person calling when your phone rings. If the caller's identity is stored in Contacts, the name appears on the screen. Check with your service provider to ensure they offer this feature.

Quick Access to Convenient Features

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly and then dials it. Speed Dial number 1 is for Voicemail.

Dialing Single Digit Speed Dials (from 1 to 9)

Press and hold the Speed Dial number.

OR

Enter the Speed Dial number and press .

Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the last digit.


OR

Enter the first and second digits and press .

Voice Control

Voice Control is a convenient feature that allows you to make phone calls quickly and easily by saying a voice command that you have recorded in your Contacts.

To make a Voice Dial call:


1. From standby mode, press the Voice Control key (.
2. Say the recorded Voice Control command.
The phone confirms and dials the phone number.

Using Phone Menus

Web

The Web feature allows you to view Internet content especially designed for the mobile phone interface. For specific information on Web access through your phone, contact Bell Mobility.

Shortcut

Left Soft Key  is a quick access to Web.

Access and Options

Allows you to initiate a Wireless Web session.



1. Press  **Menu**.
2. Press  **Web**.

Accessing the Web

1. Press  ,  .

Overview

The Web allows the user to use a variety of Internet services. Using the Web on the phone allows you to:

Send and receive Internet e-mail.

- Browse and search the World Wide Web via web pages especially designed for wireless phone customers.
- Set bookmarks to directly access your favorite sites.
- Retrieve information, such as stock quotes and flight schedules from the Internet.

Quality of Browser

Browsing the web via the phone is not like using your home computer. Site providers have selected only the critical aspects of their site to present to wireless phone users and have removed most graphics.

Call History

Ending the Web Session

You can end a Web session by pressing .

Navigating through the Browser

While using the Web, you will find the following:

- Numbered options (some options may not be numbered);
- Links (embedded in content);
- Text or numeric input;
- Simple text.



You can act on the options or the links by using the Soft Keys.

Call History

The Call History Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.







Access and Options



1. Press  **Menu**.
2. Press  **Call History**.
3. Select a sub-menu.
 1. **Missed Calls**
 2. **Incoming Calls**
 3. **Outgoing Calls**
 4. **Recent Calls**
 5. **Delete History**

1. Missed Calls

Allows you to view the list of missed calls; up to 50 entries.

1. Press , , .
2. Use  to highlight an entry, then
 - Press  to view the entry.
 - Press  to place a call to the number.
 - You can select from the following options:
**Call/ Save(Phone Book Info)/ Send Message/
Prepend/ Delete/ Next/ Previous**

2. Incoming Calls

Allows you to view the list of incoming calls; up to 50 entries.

1. Press , , .
2. Use  to highlight an entry.

3. Outgoing Calls

Allows you to view the list of outgoing calls; up to 50 entries.

1. Press , , .
2. Use  to highlight an entry.

4. Recent Calls

Allows you to view the list of recent calls; up to 50 entries.

1. Press , , .
2. Use  to highlight an entry.

Media Player

5. Delete History

Allows you to erase selected call list(s).

1. Press **MENU** **OK** , **2** **ABC** , **5** **JKL** .
2. Use **UP** **DOWN** to highlight the list of calls to erase, then press **MENU** **OK** .

**Missed Calls/ Incoming Calls/ Outgoing Calls/
Recent Calls/ All Calls**

3. Press **1** **YES** **Yes**.

Media Player

Your phone's built-in media player gives you the ability to listen to audio clips and view video clips right from your phone's display.

Shortcut

LEFT is a quick access to Media Player.

Access and Options

1. Press **MENU** **OK** **Menu**.
2. Press **≡** **DEF** **Media Player**.
3. Select a sub-menu.
 1. **Channel Listing**
 2. **Memory Card**



1. Channel Listing

It's easy to access and view the multimedia Channel Listings on your LG 550 by LG from the phone's main menu.

1. Press , , .

Your Channel Listings will display, divided into the following two sections:

- **My Channels:** These include the complimentary Previews channel that Bell provides, as well as any available individual channels for which you have purchased access.
- **Available Channels:** These are channels that have not yet been purchased but are available to access for a monthly subscription fee. Use your navigation key to scroll through and select a channel, and follow the onscreen instructions to purchase access to it. Upon purchasing access to one of these channels, the channel will be listed, along with its corresponding channel number, in the My Channels section of your media player's Channel Listings. You will see it displayed in

this section the next time you access your phone's media player.

2. Memory Card

1. Press , , .

Bluetooth

Bluetooth



The LG 550 is compatible with devices that support the Bluetooth® headset and hands-free profile(s). You may create and store 20 pairings within the LG 550 and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

Notes

- Read user guide of each Bluetooth accessory that you are trying to pair with your phone because the instructions may be different.
- The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.
- Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology.

Access and Options










1. Press  **Menu**.
2. Press  **Bluetooth**.
3. Select a sub-menu.
 1. **Add Device**
 2. **Trusted Devices**
 3. **Exchange Folder**
 4. **Supported Services**
 5. **Settings**



1. Add Device

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

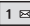1. Press , , .

For pairing new Bluetooth® device

1. Press , , .
2. Follow the *Bluetooth* accessory instructions to set the device to pairing mode.
3. Scroll to **<Search>** and press .
4. If *Bluetooth* device is set to off, you will be prompted to turn power on. Select  **Yes**.
5. The device will appear in the Trusted Devices menu once it has been located. Highlight the device and press .
6. The handset will prompt you for the passkey. Consult the *Bluetooth* accessory instructions for the appropriate passkey (typically “0000”). Enter the passkey and press .

7. Once pairing is successful, select  **Yes** to connect with the device.
8. Once connected, you will see the device listed in the Trusted Devices menu and the *Bluetooth* icon  will show at the top of the LCD screen.

2. Trusted Devices




Displays the list of devices that have been successfully paired with your phone.

1. Press , , .

3. Exchange Folder




When your phone has a FTP connection, you can upload, download or delete files in the handset from your PC. However, you may not access files in your PC from your handset.

For the setting of this menu, go to **Settings** -> **Bluetooth** -> **Exchange Folders**.

1. Press  ,  ,  .
2. Select one of the following options:
 - **General** (In Phone/Memory Card) : Upload any type of file.
 - **Pictures** (In Phone / Memory Card): Allows you to upload picture and video files. (You can also check this in **Menu>Pic/Video>My Pics/Videos>In phone/Memory Card.**)
 - **Media** (Memory Card only): Upload music files. (You can also select this option from **Menu>Media Player>Memory Card.**)

4. Supported Services

Displays the services supported by your phone for *Bluetooth* wireless connections.

1. Press  ,  ,  .
 - **Audio** to use *Bluetooth* audio devices, such as headsets or hands-free kits. The menu for "Connect/Disconnect" can be found under "Tools-Bluetooth-Trusted Device".
 - **Stereo Headset** to use Bluetooth headsets. Build a connection first using Connect/Disconnect option under Trusted Device menu.
 - **Dial-up Networking** to use your phone as a modem to connect to the Internet. While your phone is connected to a PC or PDA, you can dial up the phone to connect to the Internet.
 - **Sending Contact/Calendar** to send a Contact or a Calendar in your phone to other Bluetooth-enabled devices. The menu for "Sending Contact" can be found under "Contacts-Find/Add Entry." The menu for "Sending Calendar" can be found under "Tools-Scheduler".

- **Printing(BPP)** to print pictures in your phone without copying the pictures to other PC's. This service is available with BPP profile enabled printers. The menu for "Printing via Bluetooth" is under "Pictures".
- **File Transfer (FTP):** Allows the capability to receive nonprotected data files to a compatible Bluetooth device.

Note





The LG 550 offers integrated Bluetooth wireless support for headset and hands-free accessories. However, the software used in the LG 550 available in Canada from LG Electronics Inc. does not support the transfer of data files.

5. Settings

You can control the settings to use the *Bluetooth* wireless technology via your phone. Your proper setting is a prerequisite for the maximization of the functionality.

5.1 On/Off







Allows you to set the *Bluetooth* power On/Off.

1. Press , , , .
2. Use  to select a setting, then press .

On/ Off

5.2 Visibility

Allows you to manage your phone's availability to other *Bluetooth* devices.

1. Press , , , .
2. Use  to select a setting, then press .

Hidden/ Visible for 3 min/ Always Visible

5.3 Exchange Folders








Allows you to exchange folders during the *Bluetooth* connection and the sorts of the folders are **General/Pictures/Media**.

1. Press , , , .

Missed Alerts

5.4 Bluetooth Info

Allows you to select a *Bluetooth* name for your phone. Your phone's *Bluetooth* name will appear to other in-range *Bluetooth* devices, depending on your visibility settings.

1. Press , , , .
2. Press Left Soft Key  **Rename**.
3. Press  to clear the current name.
4. Use your keypad to enter a new name and press  to save and exit.

Missed Alerts

Displays the list of your missed alerts.

Access and Options


1. Press  **Menu**.
2. Press  **Missed Alerts**.



Music

Lets you use your phone as a portable personal jukebox. From the Music Store to a variety of streaming music options, you're bound to find the music you want, when you want it.

Shortcut

 is a quick access to Music.



Access and Options



1. Press  **Menu**.
2. Press  **Music**.

Accessing the Music Store

You can access the Music Store right from your phone's main menu, anywhere on the Nationwide PCS Network. When you enter the store for the first time, you will be prompted to set up your user identification and password.

1. Press  ,  .
2. Follow the on-screen instructions to establish your User ID and password.

Tip

Your User ID for the Music Store is your 10-digit wireless phone number. The password may be any 4-digit number. The recommended password is the last four digits of your Social Security number.

3. Use your keypad and navigation key to explore the store.

Downloads

Downloads

You have access to a dynamic variety of Premium Service content such as downloadable Games, Ringers, Screen Savers, and other applications. The basic steps required to access and download Premium Service content are outlined below.

Shortcut



is a quick access to Downloads.

Access and Options



1. Press **Menu**.
2. Press **Downloads**.
3. Select a sub-menu.

Games

Ringers

Screen Savers

Applications

< Options >

Games

1. Press , .
2. Scroll to **Games** and press .
3. Highlight **Get New** and press (The browser will launch and take you to the Games download menu).





Ringers

To download an available ringer to your phone:

1. Press , .
2. Scroll to **Ringers** and press .
3. Highlight **Get New** and press (The browser will launch and take you to the Ringers download menu).





Screen Savers

To download an available Screen Saver to your phone:

1. Press , .
2. Scroll to **Screen Savers** and press .
3. Highlight **Get New** and press  (The browser will launch and take you to the Screen Savers download menu).

Applications

To download an available Application to your phone:

1. Press , .
2. Scroll to **Applications** and press .
3. Highlight **Get New** and press  (The browser will launch and take you to the Applications download menu).

< Options >

1. Press , .
2. Scroll to < **Options** > and press .

Messaging

Messaging

Shortcut

 is a quick access to Messaging.

Access and Options





1. Press  **Menu**.
2. Press  **Messaging**.
3. Select a sub-menu.

1. **Send Message**
2. **Text Messages**
3. **Pic/Video Msg**
4. **WebAlerts**
5. **Voicemail**
6. **Settings**



Text messages, pages, and the voicemail box become available as soon as the phone is powered on.


- Check types of messages by pressing the message key .

- Make a call to the callback number by pressing  during an Inbox message check.
- Read and edit messages saved in the outbox after transmission and resend them.

The phone can store up to 260 messages (For example, 100 inbox text messages, 100 sent text message, 50 outbox text messages, 10 draft text messages). The LG 550 supports up to 140 characters per message including header information. The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

New Message Alert

There are three ways your phone alerts you to new messages.

1. The phone displays a message on the screen.
2. One of ring types is heard, if selected.
3. The message icon () is displayed on the screen. In case of an urgent message, the icon will flash and Urgent message is displayed.





Note


If you receive the same message twice, your phone deletes the older one and the new one is stored as a Duplicate.




1. Send Message

Allows you to send text messages, picture messages, pages, and e-mail transmissions. Each message has a destination (up to 25 recipients per message) and information (Message). These are dependent upon the type of message you want to send.


Sending a Text Message





1. Press , , .
2. With the highlight on To field, press .


Search an entry you want to send a message in Contacts and press .

Or enter the destination. Select **From Contacts/ Mobile/ Email/ Recent List** and press Left Soft Key  **OK**.
3. Press Left Soft Key  **Next** and type your message (text or e-mail), then press .

Using Text Input Modes

Right Soft Key () To choose Abc/T9Word/123/Symbols/Smileys/Quick Messages/Preset Suffix.

| | | |
|------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------|
| SHIFT Key |  | To change cases. |
| SPACE Key |  | To insert a space. |
| BACK Key |  | To backspace and hold it to delete words. |
| Punctuation Key |  | To insert punctuation in a word or to complete a sentence in T9Word Mode. |

4. Press Left Soft Key  **Send**.
A confirmation message is displayed.
5. Set a priority of your message.
6. Set your callback number.

Priority:Normal/ Priority:Urgent












None/ My Phone Number/ Other

Sending a Pic/Video Msg

Register your Pic/Video Msg account.

Messaging

Message Icon Reference


| | |
|-----------------------------------------------------------------------------------|------------------------------------------------------|
|  | Indicates a text message is saved as draft. |
|  | Indicates the text message is duplicated. |
|  | Indicates the text message is duplicated and locked. |
|  | Indicates a text message is failed in transmission. |
|  | Indicates the text message is locked. |
|  | Indicates the text message is pending. |
|  | Indicates a text message is read. |
|  | Indicates a text message is sent. |
|  | Indicates the text message is not read. |
|  | Indicates the text message is cancelled. |
|  | Indicates the read text message is urgent. |

2. Text Messages

1. Press  ,  ,  .

2.1 Inbox

The phone alerts you in 3 ways when you receive a new message by:

- Displaying a message notification on the screen.
- Sounding a beep, vibrating or sound, if set.
- Displaying the message icon  .

Received text messages, page messages, and e-mail lists may be searched and the contents viewed. Received messages are displayed from the newest to the oldest.

Out of Memory Warning

If the memory is full, no more messages can be received until enough memory space becomes available. A disclaimer is displayed and new messages are not accepted.

Viewing Your Inbox

Up to 100 received messages can be stored in the Inbox.

1. Press **Left Soft Key** **Options**.
2. Use **Left Soft Key** to highlight an Inbox message.
 - Left Soft Key **Reply**.
 - Right Soft Key **Options**.
Lock(Unlock)/ Delete/ Delete Read Msgs/ Delete All
3. Use **Left Soft Key** to highlight an Inbox message, then press **Left Soft Key**.
4. While viewing the selected message, press Left Soft Key **Reply** or Right Soft Key **Options**.

Options from here:

Call(Go to List)/ Forward/ Lock(Unlock)/ Save Number/ Delete/ Delete All

2.2 Sent

Up to 100 sent messages can be stored in the Sent. View lists and contents of sent messages and verify whether the transmission was successful or not.

1. Press **Left Soft Key** **Options**.
2. Use **Left Soft Key** to highlight an Outbox message.
 - Press Left Soft Key **Resend**.
 - Press Right Soft Key **Options**.

2.3 Outbox

Up to 50 sent messages can be stored in the Outbox. View lists and contents of sent messages and verify whether the transmission was successful or not.

1. Press **Left Soft Key** **Options**.
2. Use **Left Soft Key** to highlight an Outbox message.
 - Press Left Soft Key **Send**.
 - Press Right Soft Key **Options**.

Edit

Lock/Unlock Locks a message so that it is not

Messaging

Delete

erased if the Erase Outbox or Erase All feature is used.

Deletes the selected message from the Outbox.

Delete all

3. Press .

Options from here:



Call(Go to List)/ Edit/ Lock(Unlock)/ Save Quick Msg/ Compose new/ Delete/ Delete All

2.4 Draft

Displays draft messages.

1. Press , , , .

2. Use  to highlight a message.

- Press Left Soft Key  **Edit**.
- Press Right Soft Key  **Options**.

Send/ Compose New/ Delete/ Delete All/

2.5 Edit Folder


Allows you to create or delete folders for your messages.

1. Press , , , .

Creating a Folder

Enter a Folder Name, Sort By fields and alert tones that you want and press Left Soft Key  **Save**.

Deleting a Folder

Select  **Delete Folder** and choose a folder to delete. There should be saved folders if you want to delete one.

2.6 Send Message

Allows you to create and send your messages.

1. Press , , , .

Note

For more detailed information, see page 35.

3. Pic/Video Msg

Allows you to store the received picture messages in a separate folder.

1. Press , , .

4. WebAlerts


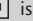
Allows you to store the received web messages in a separate folder.

1. Press , , .




5. Voicemail

Allows you to view new voice messages recorded in the voicemail box. Your phone will alert you when you receive a new voice message.

Shortcut

  is a quick access to Voicemail.

Checking Your Voicemail Box

1. Press , , .
2. Options from here:
 - Press   to listen to the message(s) and the possible choices are as follow while checking your voicemails.

Mute/ Speaker On/ 3-Way Call/ Contacts/ Recent Calls/ Send Message/ Record Voice Memo/ Notepad/ Menu







Messaging

6. Settings

Allows you to configure 9 settings for messages.

6.1 Notification

When you receive a text message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a larger pop-up message on your display screen.

1. Press , , , .
3. Use  to select a setting, then press .

Message & Icon/ Icon Only

6.2 Message Reminder







When new messages arrive, you can choose to have your phone notify you by playing an audible alert.

1. Press , , , .
2. Use  to select a setting, then press .

On/ Off







6.3 Callback Number

You can set a callback number in your messages so that the recipient of the message can contact you.

1. Press , , , .
2. Select **None**, **My Phone Number**, or **Other** and press .
(If you select **Other**, enter a number and press .)

6.4 Auto-Delete







You can delete text messages that you have already read whenever you like, or you can have your phone delete them automatically for you.

1. Press , , , .
2. Use  to select a setting, then press .

On/ Off

6.5 Signature

Each message you send can have a customized signature to reflect your personality.

1. Press , , , .
2. Select **Custom** and press .
(If you do not wish to attach a signature to your outgoing messages, select **None**.)
3. Enter your signature and press .

6.6 Quick Messages






Your phone is loaded with 20 quick messages to help make sending text messages faster and easier. Also you can add your own quick messages up to 20.

1. Press , , , .
- The list of quick messages is displayed.

Note

The 20 quick messages are preloaded. You cannot edit nor delete them. You can add your own quick messages up to 20, which are able to be edited and deleted.

To add a new preset message:

1. Press , , , .
2. To add a new preset message, select **<Add New>**.
3. Enter your message and press . Your new message will be added to the beginning of the list.

Tools

6.7 Edit Voicemail

You can edit your voicemail # and there are following options as well.

1. Press **MEMO OK**, **8 TUV**, **6 MNO**, **7 PQRS**.
2. Use **DOWN** to select a setting, then press **MEMO OK**.

Save/ Hard Pause/ 2-sec Pause/ Cancel

6.8 WebAlerts

Automatically connects you to WebAlerts when available.

1. Press **MEMO OK**, **8 TUV**, **6 MNO**, **8 TUV**.
2. Use **DOWN** to select a setting, then press **MEMO OK**.

Yes/ No

Tools

Allows you to make use of various tools and applications.

Access and Options



1. Press **MEMO OK** **Menu**.
2. Press **9 WXYZ** **Tools**.
3. Select a sub-menu.
 1. **Memory Card**
 2. **Music Transmitter**
 3. **Alarm Clock**
 4. **Calculator**
 5. **Voice Control**
 6. **Scheduler**
 7. **Voice Memo**
 8. **Notepad**
 9. **World Clock**
 0. **Mass Storage**

1. Memory Card

Your phone is equipped with a 64MB microSD (Secure Digital) memory card and its adapter to expand the phone's available memory space. It allows you to easily store images, videos, music, and voice data in your phone.

Inserting the microSD Card

1. Open the microSD access panel located on the left side of the phone.
2. Position the microSD card perpendicular to the opening and gently slide it into place until it is fully inserted and locked.

Note

Be sure to use only recommended microSD cards (8MB–2GB). Using non-recommended microSD cards could cause data loss and damage your phone.


Removing the microSD Card

1. Open the microSD access panel located on the left side of the phone.
2. Push in and then release the microSD card to eject.
3. Pull the microSD memory card out of the phone.

Notes





- The microSD card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing, or handling them.
- Do not remove a microSD card while files are being accessed or transferred. It will result in loss or damage of data.

Creating Folders in the microSD Card






1. Press , , .
2. Press Right Soft Key  **Options** and select **Create New Folder** (The phone will create the microSD's default folders: MEDIA and DCIM).

Tools






Viewing Memory in the microSD Card

 
1. Press , , .
2. Press Right Soft Key  **Options** and select **Memory Info** (The used and available memory space will be displayed).

Formatting the microSD Card

1. Press , , .
2. Press Right Soft Key  **Options** and select **Format Memory Card**.
3. If you are sure you wish to remove all the files from your microSD card, select **Delete** and press .

Displaying Your microSD Folders






1. Press , , .
2. Select your desired folder (dcim, media & my_music) and press .
3. To view or play a preview of a file, highlight it with your navigation key, and then press  or the appropriate soft key.



2. Music Transmitter











The FM transmitter lets you broadcast your Music Store or audio media player files to a car stereo or other FM receiver. A distance of five feet or less is recommended to minimize interference and provide the strongest signal.

FM frequency range: 88.1 MHz - 107.9 MHz.

1. Press  ,  ,  .
2. Select one of the 12 channels to which you can save a favorite frequency and press  .
The default frequency is 88.1 MHz.
3. Scroll left or right to select a frequency from 88.1 MHz to 107.9 MHz and press  .

3. Alarm Clock






Allows you to set one of four alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, Alarm 1 (or 2, 3 or Quick Alarm) will be displayed on the LCD screen and the alarm will sound.

1. Press  ,  ,  .
2. Select the alarm you want to edit.
Alarm 1 / Alarm 2 / Alarm 3 / Quick Alarm
3. Use  to highlight the alarm time then press  .
4. Set the time for alarm and press  .
5. Use  to highlight **Once** (recurring setting) and press  .
6. Press  to select one of the following and press  .

Once / Daily / Mon - Fri / Weekends

For **Quick Alarm** option,
set **Off / 1 min later / 10 min later / 30 min later /
1 hour later**









Tools



7. Use  to highlight a tone or an alert and press .
8. Use  to select one of the available alarm ring types and press .
9. Press Left Soft Key  **Save**.

4. Calculator

4.1 Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to the fifth decimal place.

1. Press , , , .
2. Enter data.
 - Use  to enter plus, minus, slash and multiple calculations.
 - Press  to enter period and  to enter plus or minus.
 - Press  to delete digits or symbols.

- Press Left Soft Key  **Clear** to Clear the calculation.
- Press Right Soft Key  **Operator** to add parenthesis or power.




4.2 Ez Tip Calculator

Allows you to quickly and easily calculate the amounts for a bill with the amount of the bill, the amount of the tip, and the number of people as variables.

1. Press , , , .
2. Press Left Soft Key  **Reset** if necessary.
3. Press Right Soft Key  **Close** to exit this menu.












5. Voice Control

Voice Control is a convenient feature that allows you to make phone calls quickly and easily by saying a voice command that you have recorded in your Contacts.

1. Press , , .
2. After hearing the message “Call: please say a command,” simply say, in a natural voice, “Call” and the name of the person or the number you’d like to call. (For example, you can say, “Call Jane Smith,” “Call John Baker mobile.”)
3. Your request will be repeated and you will be asked to verify. Say “Yes” to call the number or person. (The number will automatically be dialed.) Say “No” if you wish to cancel.

6. Scheduler

Allows you to conveniently keep and access your agenda(s). Simply store your appointments and your phone will alert you with a reminder of your appointment.

1. Press , , .
2. Use  to highlight the scheduled day.
 -  Moves cursor to the left.
 -  Moves cursor to the right.
 -  Moves to the previous week.
 -  Moves to the next week.
3. Press Left Soft Key  **Add**.
4. Enter your schedule information including:
 - **Date**
 - **Time** Press  to set specific time or press Right Soft Key  **All day**.
 - **Content**
 - **Recurring event**
None/ Daily/ Mon-Fri/ Weekly/ Monthly/ Yearly

Tools

- When to ring the alarm reminder
**On time/ 5 minutes/ 10 minutes/ 1 hour/
1 day/ 2 days/ None**
- Which ring alarm to sound
**Single Tones (Alert 1~Alert 5, Tone 1~Tone 9,
Farewell)/ Ring Tones/ Melodies/ Downloads/
Get New**

5. Press Left Soft Key **Save**.

When you exit without saving, you are asked to select **Return to Edit/ Save and Exit/ Exit** in a pop up message.

7. Voice Memo

Allows you to add, listen to, and erase short verbal reminders. In the entry of Voice Memo, the recorded Voice Memos are listed. You can select <Record New>, <Delete All>, <Memory Info>.

1. Press **MEMO OK**.
2. Select **MEMO OK** **<Record New>**.
3. Talk into the microphone after the tone, then press **MEMO OK** **Stop**. The default memo title is the date and time of recording.

To Playback a Voice Memo

1. Access Voice Memo, highlight the Voice Memo you want to hear, then press **MEMO OK**.




In the selected Voice Memo, the following options are available:


- **Play** Play the selected Voice Memo.
Speaker On/ Pause/ Stop
- **View Details** **Title/ Recorded On/
Play Time**

- **Edit Title** Edit the title of the selected Voice Memo. **Save/ Edit Mode: [Abc]/ Cancel**
- **Delete** **Yes/ No**

8. Notepad

Allows you to add, read, edit, and erase notes to yourself.

1. Press , , .
2. Press  on **<Add New>**. to write a new note then press  to save.

In entering a note, use text input mode with Right Soft Key  **Mode**. Also, note that word choices/ suggestions are listed and adding an word to database is asked while entering characters.

9. World Clock




Allows you to determine the current time in another time zone or country.

1. Press , , .
2. Press Right Soft Key  **Cities** to move the time bar across the world map and display the date/time in that location.
3. Press Left Soft Key  **Set DST** to display Daylight Savings Time in the selected location.

0. Mass Storage

Enabling the Mass Storage allows you to connect your phone to your computer to view and transfer files to and from the microSD memory card.

To enable the Mass Storage Mode:

1. Insert a microSD memory card into your phone.
2. Attach the USB cable to your phone and your computer.
3. Press , , .
4. Select **Yes** to verify that calls will be disabled when the Mass Storage is enabled. Your phone will then connect to your computer.
5. To exit and disable the Mass Storage, disconnect the USB cable from your phone.

To view the contents of the memory card from your computer:

1. After enabling the Mass Storage, click the My Computer icon on your computer's desktop.
2. Your phone will appear as a device with removable storage. Click the icon representing your phone to view your files.

Pic/Video

Your phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends.

Note

While recording a video, do not eject your microSD card. This may damage your phone.

Access and Options



1. Press **Menu**.
2. Press **Pic/Video**.
3. Select a sub-menu.
 1. **Camera**
 2. **Camcorder**
 3. **Pic/Video Msg**
 4. **My Pics/Videos**
 5. **PictBridge Print**
 6. **Settings & Info**

1. Camera

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.

1. Press , , .

Shortcut

Press the side camera key to access the camera. To return to camera mode, select Options and then Take New Picture.

2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press Left Soft Key **Capture**, , , or the side camera key until the shutter sounds. (The picture will automatically be saved to the In Phone Folder if you do not have a microSD card inserted. If you have a microSD card in the phone then the pictures will be automatically saved to your memory card instead.)
- To return to camera mode to take another picture, press .

Pic/Video

4. Press Right Soft Key  **Options** for more options:

- **Send** to send the picture to up to 25 contacts at one time.
- **Upload** to upload the picture you just took to the Picture Mail Web site. Depending on your settings, you may be prompted to accept a PCS Vision connection.
- **Assign** to assign the picture to a phone task. Select an option:
 - **Picture ID** to assign the picture to a Contacts entry.
 - **Screen Saver** to use the picture as a screen saver.
 - **Incoming Calls** to display the picture for all incoming calls.
- **Delete** to delete the picture you just took.
- **Print** to print an image by mail or at a retail outlet.
- **Post to Service** to send the image to a number of popular third-party Web image services.
- **Review/Send Media** to review the picture and to send it to media.

- **Take New Picture** to return to Camera mode to take another picture.

To take a picture with the phone closed:

1. Press and hold the side camera key to activate camera mode.
2. Point the camera lens at your subject (You can check the picture framing through the external display screen).









Note

When taking a picture with the phone closed, the subject image appears in reverse on the external display. The captured image will not be saved in reverse.

3. Press the side camera key to take the picture.

2. Camcorder

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your phone's built-in video camera.

1. Press , , .
2. **Video Mail** or **Long Video** to activate video mode.
3. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
4. Press Left Soft Key  **Record**, , , or the side camera key to begin recording (The maximum recording time is 30 seconds).
5. Press Left Soft Key  **Done** or the side camera key to stop recording. (The video will be automatically saved to the In Phone Folder if you do not have a microSD card inserted. If you have a microSD card in the phone then the video will be automatically saved to your memory card instead. To change this option go to the Pictures menu, select **Settings & Info**, and then select the **Auto Save to** option. Select **Memory Card** or **In Phone**.)
6. Press Right Soft Key  **Options** for more options:
 - **Play** to play the video that was just captured.
 - **Send** to send the video.
 - **Upload** to upload videos from the In Phone Folder to the PCS Picture Mail Web site. Depending on your settings, you may be prompted to accept a PCS Vision connection. Choose from the following options:
 - **Assign** to assign the video as an animated screen saver or ringer.
 - **Screen Saver** to display the currently highlighted picture as a screen saver.
 - **Delete** to delete videos in the In Phone folder.
 - **Post to Service** to send the image to a number of popular third-party Web image services.
 - **Review/Send Media**
 - **Take New Video** to return to camcorder mode.

Pic/Video

3. Pic/Video Msg

Allows you to store your picture/video messages.

1. Press , , .

Note

While copying or moving the Pic/Video messages, do not eject your microSD card. This may damage your phone.

4. My Pics/Videos

Your phone's picture storage area is called My Pics/Videos. There are three types of folders that can be used separately according to your needs: In Phone / Memory Card / Online Albums

1. Press , , .

In Phone Folder

Allows you to see received messages. You can save media files such as picture and video to In Phone or microSD card.

To review your stored pictures in the In Phone folder :

1. Select **Menu > Pic/Video > My Pics/Videos > In Phone.**
2. Use your navigation key to view and scroll through the pictures.
3. Use the following options:

Play*/ Send/ Upload/ Assign/ Delete/ Post to Service/ Copy/ Move/ Detail/ Edit/ Media Filter/ Album List/ Camcorder Mode

* Files dependent

Memory Card Options

When viewing the pictures in your memory card, press Right Soft Key **Options** to display picture options. (The Memory Card options are identical to the In Phone Folder options)

Online Albums

To save your pictures to online albums:

1. Select **Yes** when prompted to save to an online album. (The PCS Picture Mail Web site will start.)
2. Select **Upload** and then select Uploads or an album title to save your picture(s) to your online albums.





5. PictBridge Print

Pictures in your phone and memory card can be printed via the connection between your phone and a printer. While the transfer, you cannot receive incoming calls and you need printer setting to use this menu.

1. Press , , .

6. Settings & Info

The Settings & Info menu allows you to configure where pictures or videos are saved, view your account information, or switch the format between portrait or landscape mode.

1. Press , , .
2. Select one of the following options and press .
 - **Auto save to** to select where to save pictures and videos. The available options are **Memory Card** and **In Phone**.
 - **Account Info** to display your current account settings via an online connection.

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 500).

Access and Options

1. Press **Menu**.
2. Press **Contacts**.
3. Select a sub-menu.
 1. **Find/Add Entry**
 2. **Groups**
 3. **Speed Dials**
 4. **My Name Card**
 5. **Services**

1. Find/Add Entry

Your phone can store up to 500 Contacts entries. Contacts entries can store up to a total of five phone numbers, and each entry's name can contain 32 characters.

1. Press **Find/Add Entry**.
2. Scroll to **<New Entry>** and press **Enter**.
3. Enter a name for the new entry and press **Enter**.
4. Scroll to **[Add Number]**, enter the phone number, and then press **Enter**.
5. Select a label field (Mobile, Home, Office, Pager, Fax, or None) and press **Enter**.
6. Scroll down to additional fields and enter or edit information as desired.
7. Press Left Soft Key **Done**.

To Find Contacts Entries by Name:

1. Press **[Left]**, **[Right]**, **[Enter]**.
2. Scroll through all the entries using your navigation key.
Or enter the full letter of a name.
3. To display an entry, highlight it and press **[Enter]**.
4. To dial the entry's default phone number, press **[Call]**.
Or to display additional Contacts entries, press **[Left]**.

2. Groups









Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a part of group except No Group.

1. Press **[Left]**, **[Right]**, **[Enter]**.
2. Options from here:
 - Use **[Left]** to highlight a group to view, then press **[Enter]**.
 - Select **<Add Group>** to add a new group to the list.
 - Use **[Up]** to highlight a group, then press **[Menu]** to change the name of the group or delete the group.
<Add Members>/ <Edit Group>/ <Delete Group>

Contacts

3. Speed Dials

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

1. Press , , .
 2. Use  to highlight the Speed Dial position (or enter the Speed Dial digit), then press .
 3. Highlight **Set Speed Dial** and press .
 4. Use  to highlight the entry, then press . A confirmation message is displayed.
- Options to choose one:

**Set Speed Dial/ Next Empty/ Delete Speed Dial/
Delete all**

Note

Speed Dial #1 is predetermined for Voicemail.

4. My Name Card

You can view your phone number, edit entry and send a Contact via *Bluetooth*.

1. Press , , .

5. Services

Your Contacts list is preprogrammed with contact numbers for various PCS Services.

1. Press , , .
2. Select **Customer Service**, **Dir Assistance**, or **Tcare**.

Settings

The Settings Menu has options to customize your phone.

Access and Options



1. Press **Menu**.
2. Press **Settings**.
3. Select a sub-menu.



1. **Display**
2. **Sounds**
3. **Roaming**
4. **Location**
5. **Messaging**
6. **Bluetooth**
7. **Security**
8. **Setup/Others**
9. **Phone Info**

1. Display

Provides you with options to customize the phone's display screen.

1.1 Greeting

Allows you to enter a string of greeting up to 16 characters displayed on the LCD screen.


1. Press , , , .
2. Select a setting.
Custom/ Off
3. If set to **Custom**, enter your greeting words.

1.2 Incoming Calls

Allows you to set a specific screen for incoming calls.







1. Press , , , .
2. Select **Caller ID/ No Caller ID/ Roaming**.
3. For each selection, choose a setting.
Preloaded/ My Pics/Videos/ Assigned Media/ Downloads/ Get New/ Take New Picture

Settings

4. Among the choices, select your favorite and press .




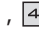


1.3 Screen Saver

Allows you to choose the kind of screen savers to be displayed on your phone while not in use.

1. Press , , , .
2. Select **Main Display** or **Sub Display**.
3. Select **Preloaded/ My Pics/Videos/ Assigned Media/ Downloads/ Get New/ Take New Picture/ Take New Video**.
4. Use the navigation key to select an image and press  to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)
5. Press  to assign the desired image.

1.4 Clock & Calendar

Allows you to choose the kind of clock to be displayed on the LCD screen.

1. Press , , , .
2. Select **Normal Clock, Analog Clock, Digital Clock, Dual Clock, or Calendar** and press .
3. Press  to apply the clock display setting.

1.5 Slide Show






You can create a slide show screen saver of up to nine images that will change continuously on your standby screen.

1. Press , , , .
2. Select a slide from 1 to 9 and press .
3. Select **Preloaded, My Pics/Videos, Assigned Media, or Downloads**.
4. Select an image, press , and then press Left Soft Key  **Add** to add the image to the slide show.
5. When you have finished adding images, press Right Soft Key  **Options** to preview your slide show, or Left Soft Key  **Save** to save your slide show.

1.6 Skins

Changing the Skin Color

You can customize your phone's display theme.

1. Press , , , .
2. Choose a setting, then press .

Silver/ Blue/ Green/ Pink





1.7 Menu Styles

Allows you to view the main menus as Grid or List.

1. Press , , , .
2. Select **Grid** or **List**.

1.8 Font Size

Allows you to set the size of the font for Message, Browser and Notepad.

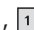1. Press , , , .
2. Select the menu to set the font size.

Message/ Browser/ Notepad

3. Select a font size.

Small/ Medium/ Large








1.9 Backlight

Allows you to set the duration for illuminating the backlight. Main LCD and Keypad are set separately.







Note

If an amount of time is set for the timer option, the time starts after the last key was pressed.

1.9.1 Display

1. Press , , , , .
2. Choose a sub-menu, then press .
- Dim Only/ 8 seconds/ 15 seconds/ Flip Open**
3. Choose a setting, then press .

1.9.2 Keypad

1. Press , , , , .
2. Choose a setting, then press .

Always Off/ 8 seconds/ 15 seconds/ 30 seconds

Settings

1.0 Power Save Mode







Display is lit for a designated length of time, allowing your convenience to use your phone in the dark.

1. Press , , , .
2. Use  to select **Off / 30 seconds / 60 seconds / 90 seconds**, then press .

(If you select **Off**, a prompt will be displayed.
Select **Yes** and press  to save your setting.)

1.* Status Light

Shows the status on your phone by blinking the light.







1. Press , , , .
2. Use  to set to **On** or **Off**, then press .

2. Sounds

Provides options to customize the phone's sounds.

2.1 Ringers

Allows you to assign ringers for incoming calls.

1. Press , , , .
2. Select **Caller ID / No Caller ID / Roaming**.
3. Use  to select a ringer, then press .

2.2 Key Tones

Allows you to select the Key Tone type.

1. Press , , , .
2. Select a tone style, then press .

Short Tones/ Long Tones

2.3 Volume

Allows you to set various volume settings.

1. Press **Volume Up**, **Volume Down**, **Volume Up**, **Volume Down**.
2. Select **Ringer/ Earpiece/ Key Beep/ Application/ Power On/Off**.
3. Use **Volume Up** to adjust the volume of the ringer, then press **Menu**.

2.4 Alerts

Allows you to select the alert type just in cases of new Voicemail, Message, Service Change, Pic/Video Msg., Minute Beep, Call Connect, Signal Fade.

1. Press **Menu**, **Space**, **ABC**, **GHI**.
2. Select **Voicemail Alerts/ Message Alerts/ Pic/Video Msg Alerts/ Service Change/ Minute Beep/ Call Connect/ Signal Fade**.
3. Use **Up** to select a setting, then press **Menu**.
Silent/ Vib once/ Vib & Sound/ Custom/ 1 Low beep/ Low beeps/ 1 Loud beep/ Loud beeps
Setting for **Service Change/ Minute Beep/ Call Connect/ Signal Fade: On/Off**

3. Roaming

3.1 Set Mode

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press **Menu**, **Space**, **DEF**, **1**.
2. Use **Up** to select **Automatic/ 1X Only/ EV-DO Only/ Home Only** then press **Menu**.

3.2 Call Guard

Your phone has two ways of alerting you when you are roaming off the Nationwide PCS Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming charges by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Nationwide PCS Network.)

1. Press **Menu**, **Space**, **DEF**, **ABC**.
2. Highlight **On** or **Off** and press **Menu**.

Settings







3.3 Data Roam Guard

You will be asked if you want to continue using your browser or other online applications when you are in a data roaming area. When Data Roam Guard is turned off, your phone will establish or maintain a data connection in a data roaming area without asking you for permission.

1. Press , , , .
2. Highlight **Always Ask** or **Never Ask Again** and press .

4. Location

Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Press , , .
- The Location disclaimer is displayed.
2. Read the disclaimer and press .
3. Use  to select a setting, then press .

On/Off

Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.

5. Messaging

See “Settings” on page 40.

1. Press , , .

6. Bluetooth

See “Settings” on page 29.

1. Press , , .

7. Security

The Security Menu allows you to secure the phone electronically.



7.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls.

You can modify the lock code using the New Lock code within the Security menu.

1. Press , , .
2. Enter the four-digit lock code.

The default lock code is commonly the last 4 digits of your phone number.

3. Press  **Lock Phone**.
4. Use  to select an option, then press .

Unlock The phone is never locked (Lock mode can be used).







Lock Now The phone is always locked.

When locked, you can receive incoming calls and make only emergency calls.

On Power Up The phone is locked when it is turned on.

7.2 Pic/Video Msg

7.2.1 Lock Pics/Videos

1. Press , , .
 2. Enter the four-digit lock code.
- The default lock code is commonly the last 4 digits of your phone number.
3. Press ,  **Lock Pics/Videos**.
 4. Highlight **Lock** and press .

Settings

7.2.2 Reset Pics Account

You can quickly and easily update your PCS Picture Mail profile from your phone.

1. Press , , .

2. Enter the four-digit lock code.

The default lock code is commonly the last 4 digits of your phone number.

3. Press ,  **Reset Pics Account**.
(A disclaimer appears.)

4. Read the disclaimer and press .

5. Press the navigation key up and select **Yes**.

6. Press .

7.3 Change Lock Code

Allows you to change your lock code. To enter this menu, you are asked to enter a new lock code and once again to confirm it.

1. Press , , .

2. Enter the four-digit lock code.

3. Press  **Change Lock Code**.

4. Enter a new lock code.

5. Enter the new lock code once more to confirm it.

7.4 Special Numbers

Allows you to set special phone numbers.

1. Press , , .

2. Enter the four-digit lock code.

3. Press  **Special Numbers**.

4. Select a location for your entry.

5. Enter a phone number then press .

7.5 Delete Contacts

Allows you to erase all of your Contacts at once.

1. Press , , .







2. Enter the four-digit lock code.

3. Press  **Delete Contacts**.

4. In a pop up message, select **Yes/No**.

7.6 Limit Calls

Allows you to restrict outgoing calls. If you set this feature to On, you can only place calls to emergency numbers and phone numbers stored in your Contacts. You can still receive calls in restrict mode.

1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Limit Calls**.
4. Use  to select a setting, then press .

**Unlock/ Contacts Only/ Special #'s Only/
911 Emergency Services Only/**

7.7 Selective Call Block

Allows you to block calls selectively.

1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Selective Call Block**.

4. Highlight **Empty** and enter a phone number you want to block.

5. Press .

7.8 Reset Phone

Allows you to reset your phone to the factory default settings.








1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Reset Phone**.
4. Press .
5. Press  **Yes**.

Settings

8. Setup/Others

The Setup/Others Menu allows you to designate how the phone handles both incoming and outgoing calls.







8.1 Auto Keyguard


1. Press , , , .
2. Press .
3. Use  to select a setting, then press .

On/ Off

8.2 Shortcuts







Your phone offers you the option of assigning a shortcut key to a favorite or often-used function. Pressing the navigation key to the left in standby mode will launch your personally designated shortcut.

1. Press , , , .
2. Read the information and press .
3. Select Left Navigation, Right Navigation, Up Navigation, or Down Navigation and press .

4. Using the navigation key or your keypad, select the desired shortcut and press .

8.3 Answer Call

Allows you to determine how to handle an answered call.

1. Press , , , .
2. Use  to select a setting, then press .

Flip Open/Any Key / TALK Only

8.4 Auto-Answer








This feature is only intended for use with hands free devices or headsets, but is an independent feature of the phone and must be manually turned on/off when connected or disconnected from the device.

1. Press , , , .
2. Use  to select a setting, then press .

- **Off**
- **Car-Kit/Headset** When your phone is connected to a Car-Kit or a Headset, the phone automatically responds a call.







8.5 Dialing Match

Your dialing match options allow you to enable or disable Abbreviated Dialing and Speed Dialing.

1. Press , , , .
2. Select **Abbreviated Dialing**, **Contacts Match**, or **Speed Dial** and press .
3. Select **Enable** or **Disable** and press .
4. (Abbreviated Dialing only.) If you enable Abbreviated Dialing, enter a five- or six-digit number (for example, area code and prefix) and press .

8.6 Text Entry

Allows you to configure 5 settings for editing messages.

1. Press , , , .
2. Use  to highlight one of the settings and press  to select it.

8.6.1 Auto-Capital (Enable/ Disable)

Allows you to automatically capitalize letters when necessary.

8.6.2 Word Choice List (Enable/ Disable)

Allows you to view the list of recommended word choices in writing a message.

8.6.3 Word Prediction (Enable/ Disable)

Allows you to set your phone to predicting words when you enter a word in writing a message.

8.6.4 Word Completion (Enable/ Disable)

Allows you to set your phone to enable word completion in advance in writing a message.







8.6.5 Help

Shows you the usefulness of modifying Word Options for your convenience.

Settings



8.7 Language

Allows you to set the bilingual feature according to your preference. Choose between English and French.

1. Press , , , .
2. Use  to select **English** or **French**, then press .

8.8 TTY Mode

Allows you to attach a TTY (Teletype Writer) device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.








1. Press , , , .
2. Press .
3. Use  to select a setting, then press .

Enable TTY/ Disable TTY

| Menu | User | Transmission/Receiving Mode | When making communications with a normal terminal |
|-------------|--------------------------------|---------------------------------------------------|---------------------------------------------------|
| Enable TTY | For hearing-/verbally-impaired | text message transmission, text message receiving | operator required |
| Disable TTY | For regular users | voice transmission, voice receiving | |

8.9 Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

1. , , , .
 2. Press .
 3. Use  to select a setting, then press .
- On/ Off**

9. Phone Info

The Phone Info Menu provides you with specific information pertaining to your phone model.

9.1 My Phone Number

Allows you to view your phone number.

1. Press , , ,  .

9.2 Version

Allows you to view the versions of S/W, H/W, PRL , Browser and MCL.

1. Press , , ,  .

9.3 Icon Glossary

Allows you to view all the icons and their meanings.

1. Press , , ,  .

9.4 Advanced

Allows you to show the information of SID, Channel, Frequency and Technology.

1. Press , , ,  .

Safety

TIA (Telecommunications Industry Association) Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out Radio Frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- ANSI C95.1 (1992) *
- NCRP Report 86 (1986)
- ICNIRP (1996)
- Health Canada, Safety Code 6, 1999.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines, IC Regulations (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with Pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) Optional for each phone manufacturer.

Safety

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC and Transport Canada regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- Do not dispose of your battery by fire or with hazardous or flammable materials.
- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.

- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user's guide in an accessible place at all the times after reading it.

Explosion, Shock, and Fire Hazards

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of this causing a fire.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Never place your phone in a microwave oven as it will cause the battery to explode.

General Warnings and Cautions

- Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- Store the battery in a place out of reach of children.
- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Do not hold or let the antenna come in contact with your body during a call.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.

Safety

- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sounds for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that call volumes are set to a reasonable level.

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the Main Menu Screen. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure.

The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user’s head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the

source. The so called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones,

such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that

is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs

Safety

Safety



8. What has the FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, “Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,” sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000. The FDA

continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)
(<http://www.nrpb.org.uk/>)

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg*. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at

Safety

its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 1.340 W/kg and when worn on the body, as described in this user guide, is 0.317 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC/IC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the

government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJLX550. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

Battery Charger

The battery charger allows you to charge the battery of your phone.



Battery

Standard battery is available.



microSD™ Card (64Mbyte)

Insert the microSD Card properly to the port on the left of your phone. The metal grooves should face up. To eject it, remove the cap of the port and tick the end of the card with your finger.



USB Cable

Connects your phone to your PC.



* Manufacturers may vary.
Use only LG-approved microSD card.

Face Plates

Changeable face plates are available.

Refer to the instruction on how to use face plates on pages 16-17.

* Colors may vary.



microSD™ Card Adapter

Allows you to convert the microSD Card to SD Card when necessary to connect it to your PC.



Warranty Information

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product by the original end user.
- (2) The limited warranty extends only to the original end user of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original end user of the product during the warranty period as long as it is in Canada.
- (4) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (5) During the applicable warranty period, LG will repair or replace at LG's sole option, without charge to the original end user, any defective component part of the phone or accessory.
- (6) LG may, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by spills of food or liquids.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) If the carrier's or manufacturer's Customer Service Centre was not notified by the end user of the alleged defect or malfunction of the product, during the warranty period.

- (5) Products which have had their serial numbers removed or made illegible.
- (6) Damage resulting from use of non-LG approved accessories.
- (7) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (8) Products serviced by non-authorized persons or companies.

Notes:

- (1) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose.
- (2) Shipping damage is the sole responsibility of the shipping company.

3. EXCLUSION OF LIABILITY:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS CANADA, INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in Canada:

LG Electronics Canada, Inc.

Tel. 1-888-542-2623

Index

A

| | |
|------------------------------|----|
| Accessories | 87 |
| Add Device | 27 |
| Alarm Clock | 45 |
| Applications | 33 |
| Avoid damage to your hearing | 78 |

B

| | |
|------------------------------|----|
| Battery | 15 |
| Battery Information and Care | 75 |
| Bluetooth | 26 |

C

| | |
|--------------|----|
| Calculator | 46 |
| Call History | 22 |
| Call Waiting | 19 |
| Caller ID | 19 |
| Camcorder | 53 |

| | |
|-----------------------------|----|
| Camera | 51 |
| Channel Listing | 25 |
| Charger and Adapter Safety | 75 |
| Consumer Information on SAR | 85 |
| Contacts | 56 |

D

| | |
|----------------|----|
| Delete History | 24 |
| Display | 59 |
| Downloads | 32 |

E

| | |
|-----------------|----|
| Exchange Folder | 28 |
|-----------------|----|

F

| | |
|---------------------|----|
| Faceplate | 16 |
| FDA Consumer Update | 78 |
| Find/Add Entry | 56 |

G

| | |
|--------|----|
| Games | 32 |
| Groups | 57 |

I

| | |
|------------------------------|----|
| Important Safety Precautions | 1 |
| Incoming Calls | 23 |

L

| | |
|-----------|----|
| Location | 64 |
| Lock Mode | 19 |

M

| | |
|----------------|--------|
| Making Calls | 18 |
| Mass Storage | 50 |
| Media Player | 24 |
| Memory Card | 25, 43 |
| Menus Overview | 13 |
| Messaging | 34 |

| | |
|-------------------|----|
| Missed Alerts | 30 |
| Missed Calls | 23 |
| Music | 31 |
| Music Transmitter | 45 |
| Mute Function | 19 |
| My Name Card | 58 |
| My Pics/Videos | 54 |

N

| | |
|---------|----|
| Notepad | 49 |
|---------|----|

O

| | |
|----------------|----|
| Outgoing Calls | 23 |
|----------------|----|

P

| | |
|------------------|----|
| Phone Info | 71 |
| Phone Overview | 11 |
| Pic/Video | 51 |
| Pic/Video Msg | 39 |
| PictBridge Print | 55 |

R

| | |
|-----------------|----|
| Receiving Calls | 18 |
| Recent Calls | 23 |
| Redialing Calls | 18 |
| Ringers | 32 |
| Roaming | 63 |

S

| | |
|--------------------|------------|
| Safety Information | 76 |
| Scheduler | 47 |
| Screen Icons | 17 |
| Screen Savers | 33 |
| Security | 65 |
| Send Message | 35 |
| Services | 58 |
| Settings | 29, 40, 59 |
| Settings & Info | 55 |
| Setup/Others | 68 |
| Signal Strength | 17 |
| Sounds | 62 |

| | |
|--------------------|----|
| Speed Dialing | 20 |
| Speed Dials | 58 |
| Supported Services | 28 |

T

| | |
|-----------------------------------------------------------------|----|
| Text Messages | 36 |
| TIA(Telecommunications Industry Association) Safety Information | 72 |
| Tools | 42 |
| Trusted Devices | 27 |

V

| | |
|-------------------------|--------|
| Voice Control | 20, 47 |
| Voice Memo | 48 |
| Voicemail | 39 |
| Volume Quick Adjustment | 19 |

W

| | |
|----------------------|----|
| Warranty Information | 88 |
| Web | 21 |
| WebAlerts | 39 |
| World Clock | 49 |