



DIGIEVER

DIGIMobile V2

User Manual

Information in this document is subject to change without notice.
2014 © Copyright, DIGIEVER Corporation. All rights reserve

Table of Contents

CHAPTER1. OVERVIEW	1
CHAPTER2. DOWNLOAD AND INSTALLATION	2
CHAPTER3. USAGE.....	3
3.1 NVR CONFIGURATION	3
3.1.1 Add NVR Manually	3
3.1.2 EZ Search in LAN	5
3.2 NVR LIST.....	7
3.2.1 Layout Introduction	7
3.2.2 Liveview Monitoring	8
3.2.3 PTZ Control	10
3.2.4 Playback	12
3.3 EVENT LOG	16
3.3.1 Search Event Log	16
3.3.2 Event Notification	17
3.4 REMOTE CONTROL.....	18
3.5 SETTINGS.....	21
APPENDIX: COMPARISON TABLE BETWEEN DIGIMOBILE AND DIGIMOBILE V2.....	22



Chapter1. Overview

DIGIMobile V2 is a mobile video surveillance application designed to remotely monitor the videos from DIGIEVER NVR and to view live footage through mobile devices. No matter where you are, you can use it to monitor videos in real-time quality and to quickly find our recorded videos. In addition, this application allows you to do quick trouble shooting through NVR event log list.

DIGIMobile V2 is the second version of DIGIMobile with more useful features and intuitive interface. It is highly recommend to using the application with NVR **firmware 2.1.x.52** or above.


Features

- **Live view**
 - *View videos from multiple phones at the same time
 - *Support H.264 and up to 30 FPS in single view
 - *Display mode: 1/4/6 and sequential mode
 - *Support PTZ control
 - *Support pitch to zoom
- **Playback**
 - *Quick playback methods: Event playback and continuous playback
 - *Playback speed control: Fast forward and slow motion
 - *Frame by frame playback and rewind
 - *Time bar
- **Others**
 - *Quickly add NVR in LAN via EZ Search
 - *Directly control NVR liveview on local display
 - *Quick event sorting method
 - *Instant event notification


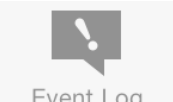
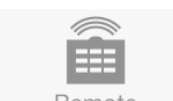

Chapter2. Download and Installation

Please follow the steps to use the application on your mobile device. Please enable mobile Internet connection first.

1. Download the application from Google Play or App Store.
2. After installation is complete, the application shortcut will display on the screen.
3. Launch the application on your device

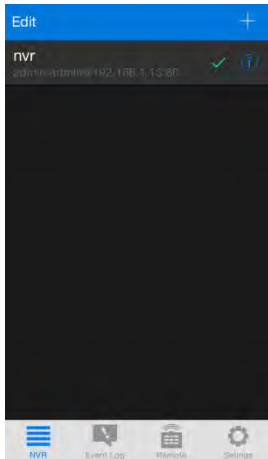

At the bottom column, there are four icons for users' usage.

Icon	Description
	NVR list: To add and edit NVR and to do remote monitoring and playback
	Event Log: To check camera's event information from NVR
	Remote Control: To control NVR liveview interface of local display with no need of mouse
	Settings: To view application version, NVR recommended firmware version and to set up sequential interval.

 **Note.** Icon in blue background indicates the page where you are.

Chapter3. Usage

After installing the application on your mobile device, please connect to NVR server by **adding NVR Manually** or **using EZ Search in LAN**.


3.1 NVR Configuration

3.1.1 Add NVR Manually


Users can add NVR to remotely monitor and view playback video anytime and anywhere.

To connect NVR device,


please tap  and 

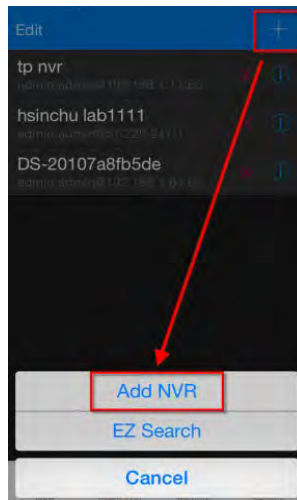

Please fill in NVR information: **Title, IP Address, Port, NVR account and password**. Then, tap **“Save.”**

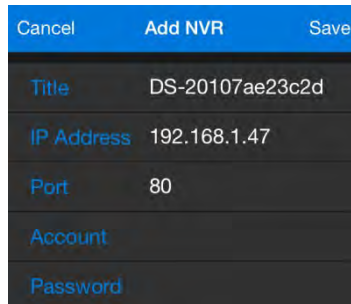



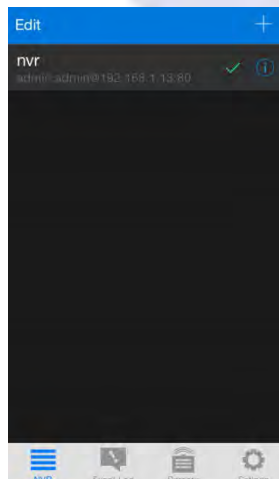

After saving NVR information, the application will bring you to **NVR page**.



Connecting Status

The status icon can inform users of **NVR connecting status** in NVR page.

Status icon	Description
	Connecting: The application is connecting to the NVR server.
	Successfully Connected: The application is ready to start remote monitoring.
	No Connection: The application is unable to connect to NVR server.
	Wrong account or Password: NVR account or password is error.

NVR Information



NVR information allows users to check and modify NVR information.


Cancel	Edit NVR	Save
Title	DS-bc5ff4ad921c	
IP Address	192.168.1.101	
Port	80	
Account	admi	
Password	●●●●	

3.1.2 EZ Search in LAN


Users can use EZ Search to easily find NVRs in the LAN and can add it to your mobile device directly.

To add NVR in LAN,


please tap  and 

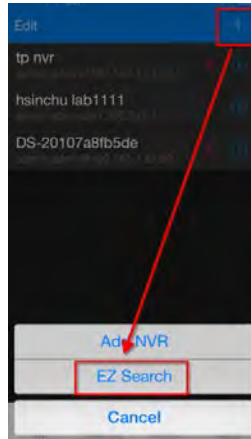


Tap “**Search**” to search NVRs in the same LAN

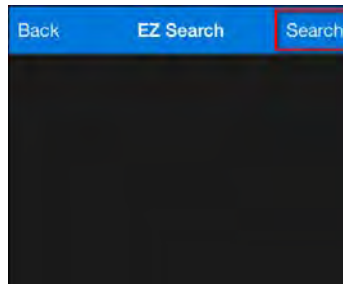


The application will display all NVRs in the same LAN. Please tap one NVR to add.

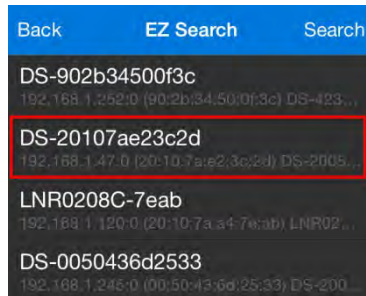


The application will automatically add NVR with **NVR Title, IP address and Port.**

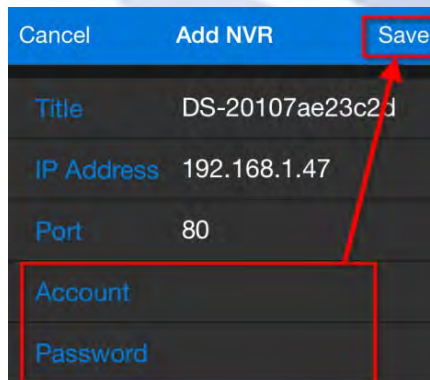



Please enter **NVR Account** and **Password**. Then, tap “**Save**” to add NVR information.

 **Note:** User can edit the desired title based on requirements.

After saving NVR information, the application will bring you to **NVR page**.


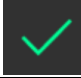


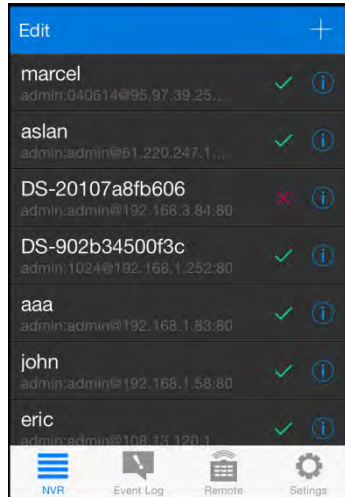Please check NVR status icon!
The application is ready to start remote monitoring with  icon



 **Note:** The default **title** of each connected NVR is from “**Mac Address**” of each NVR.


Connecting Status

The status icon can inform users of **NVR connecting status** in NVR page.

Status icon	Description
	Connecting: The application is connecting to the NVR server.
	Successfully Connected: The application is ready to start remote monitoring.
	No Connection: The application is unable to connect to NVR server.
	Wrong account or Password: NVR account or password is error.

NVR Information

NVR information allows users to check and modify NVR information.

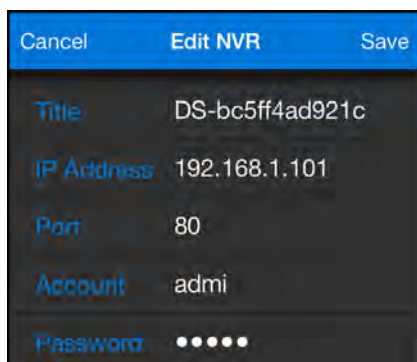

3.2 NVR List

3.2.1 Layout Introduction

After successfully connecting to NVR, NVR list will display NVR information as below.



1. **Title:** to display NVR name
2. **NVR information:** to display NVR's information.
The naming rule is **[account]:[password]@[NVR IP Address]**
3. **Connecting status:** to display NVR connecting status

Status icon	Description
	Connecting: The application is connecting to the NVR server.
	Successfully Connected: The application is ready to start remote monitoring.
	No Connection: The application is unable to connect to NVR server.
	Wrong account or Password: NVR account or password is error.

4. **NVR information:** to display NVR information. Users can edit NVR information in this page.

Cancel	Edit NVR	Save
Title	DS-bc5ff4ad921c	
IP Address	192.168.1.101	
Port	80	
Account	admi	
Password	•••••	




5. **Add NVR:** To add NVR manually or via EZ Search in LAN
6. **Delete NVR:** To delete NVR on the application

3.2.2 Liveview Monitoring

By tapping NVR title or IP address, users will be directed to remote monitoring.



At the bottom column, there are three icons for users' usage.

Icon	Description
	Event Playback: Playback a five- minute recorded video in various channel and types
	Continuous Playback Continuously playback normal videos in one camera channel
	Sequential mode: Enable or disable sequential mode

1. View other pages



1) **Manual:** To manually view other pages, users can **swipe the screen**.

Swipe Screen



2) Sequential mode:


The application will automatically switch liveview page in user-defined interval period.


Icon	Description
	Disable Sequential Mode
	Enable Sequential Mode

2. Display modes

Users can view 1/4/6-split screen on the application.


1) 4/6 display modes

Please tap  at the upper right corner to change display mode.

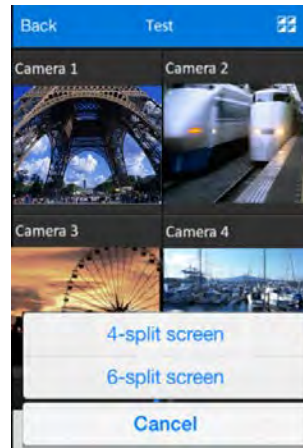


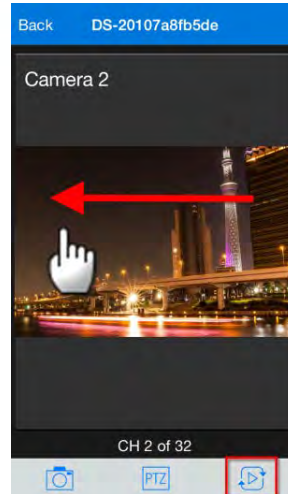
2) Single display mode

Tap a video to view full screen.

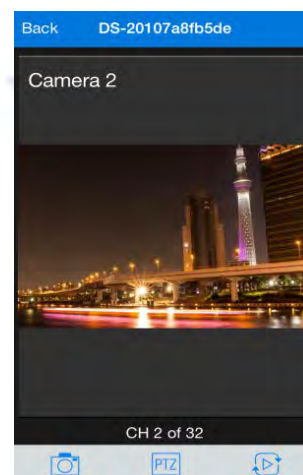

A. View other pages

- a. **Manual:** To manually view other pages, users can **swipe the screen**.
- b. **Sequential:** User may **enable sequential mode**  in the bottom right corner. The application will automatically switch liveview page in user-defined interval period.



B. Digital zoom in/out

Users can use pinch to zoom in/ out liveview image.


C. Snapshot


In the single mode, user can take the snapshot image by clicking the snapshot icon. The image will be stored in the cell phone directly.

D. PTZ Control


If the IP camera supports PTZ function, user can use the control panel to adjust the viewing angle as below. For detailed information, please refer to 3.2.3 PTZ Control




3.2.3 PTZ Control

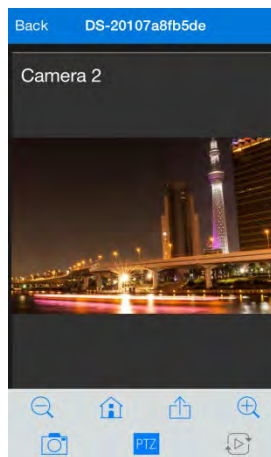If the IP camera supports PTZ function, PTZ icon will turn into blue . User can use the control panel to adjust the viewing angle as below.




Function Description

Icon	Description
	Optical zoom out: To adjust PTZ camera to zoom out

	Home: To back to original monitoring position
	Preset position: To go to preset position
	Optical zoom in: To adjust PTZ camera to zoom in.

Action note

Action note allows user to know the function that users executed as below picture.

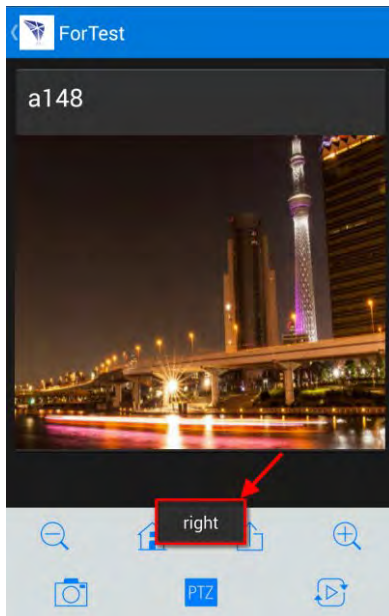


3.2.4 Playback


The application offers two playback methods for users to playback recorded videos.


1. Event Playback


Event playback is a useful method to quick playback a specific video if users would like to playback video in a specific time. Event playback allows users to **playback a five- minute recorded video** in various channel and types.

Please tap  icon to enter playback page.

Step1. Search

Select **Start time**, **End time**, **Channel** and **Event type** to search recorded video file. Then, click **“Search”** button  to search files.

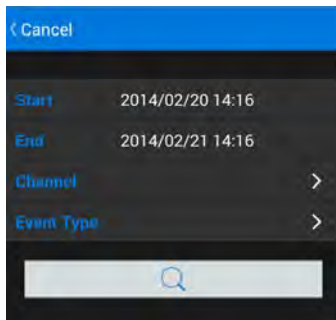

 **Note:** Users can search files more than one day.

Users can select many channels and event types to playback recorded videos.


Channel:

Select desired channels and tap **“ Back”** to playback page



Event Type:

Select desired event types and tap **“ Back”** to playback page

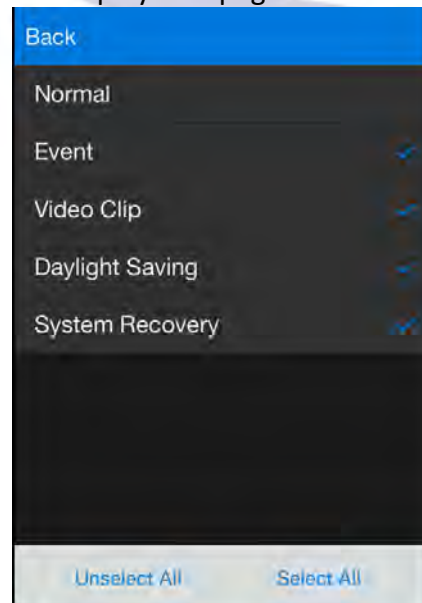


Step2. Select a video

Tap a recorded video to start playback




- **Introduction of Playback List:**


1. Camera title
2. Video Start Time:
3. Event Type

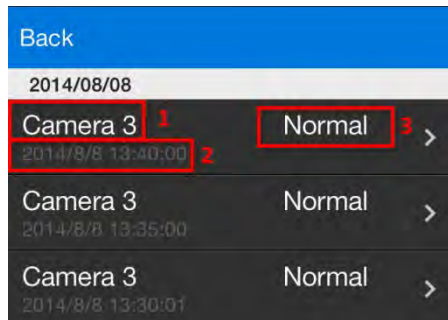

Step3. Start Playback

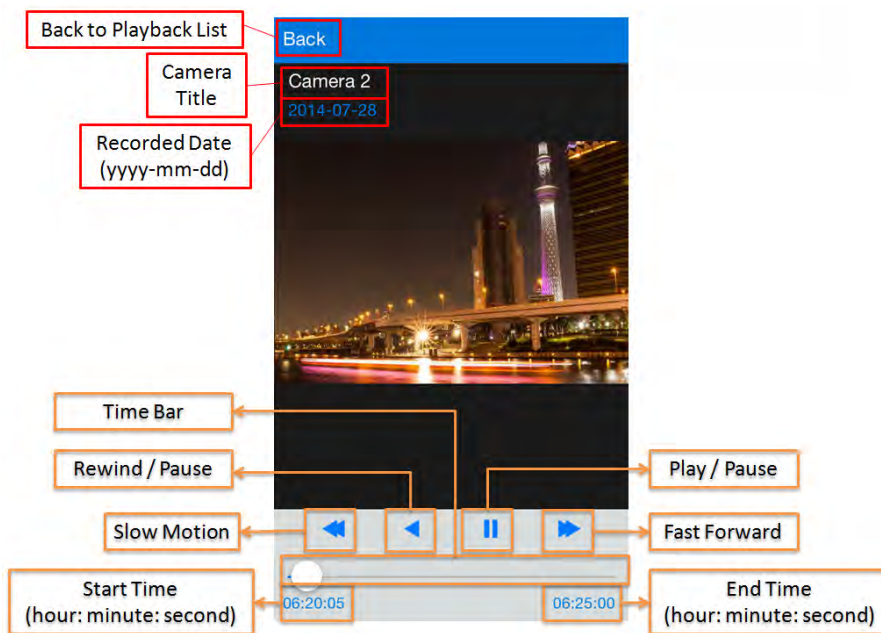


- **Frame by frame playback**
Step1: **Pause** the video
Step2: Tap “**Next Frame**” or “**Previous Frame**”

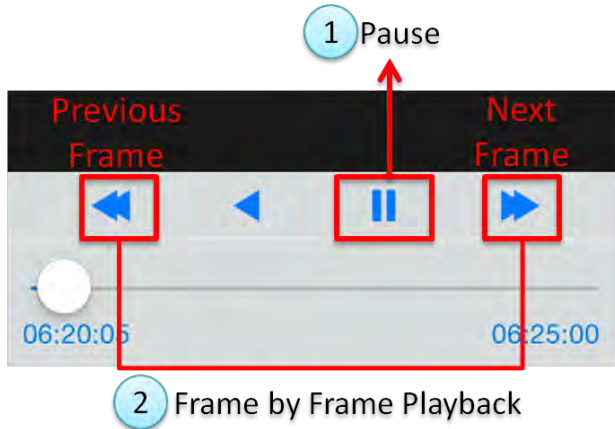

2. Continuous Playback

Continuous playback allows users to continuously playback videos in normal recording type in one camera channel.


⚠ Note: Continuous Playback can playback one recording type, **normal recording.**

Please tap  icon to start channel playback

Step1. Setup

Select **Date**, **Start time**, **End time** and **Channel** to search recorded video file.


The default start time is from 00:00 and default end time is the time when users entering channel playback page.

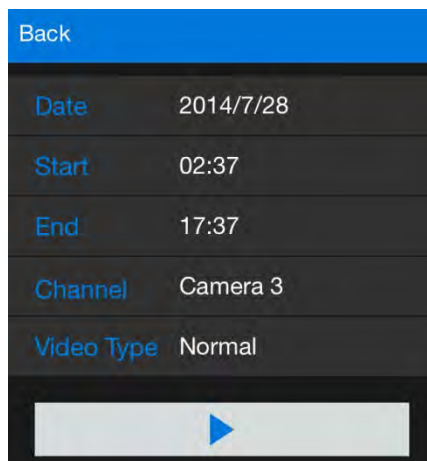


Step2. Play

Tap “**Play**” button  to play videos.

Users may move the time bar to the desired time.

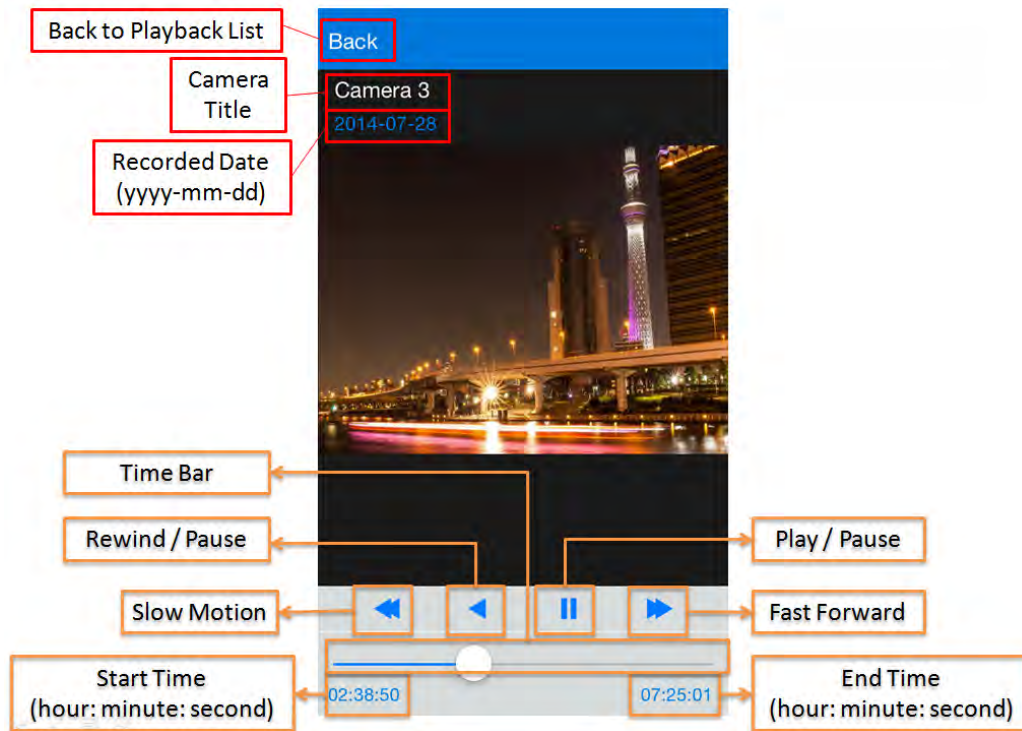


- **Frame by frame playback**
Step1: **Pause** the video
Step2: Tap **“Next Frame”** or **“Previous Frame”**

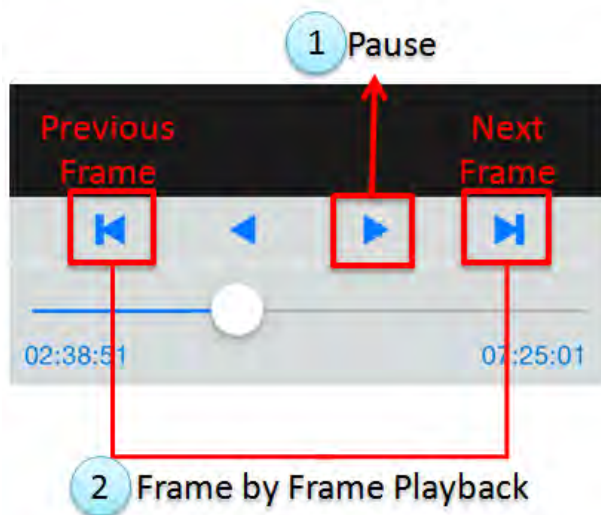





3.3 Event Log

Event Log is designed to let users check NVR's event log information (the latest 100 event list) such as motion detected, connection and disconnection. In event log page, the application will smartly pop-out event notification when an event is triggered.


3.3.1 Search Event Log

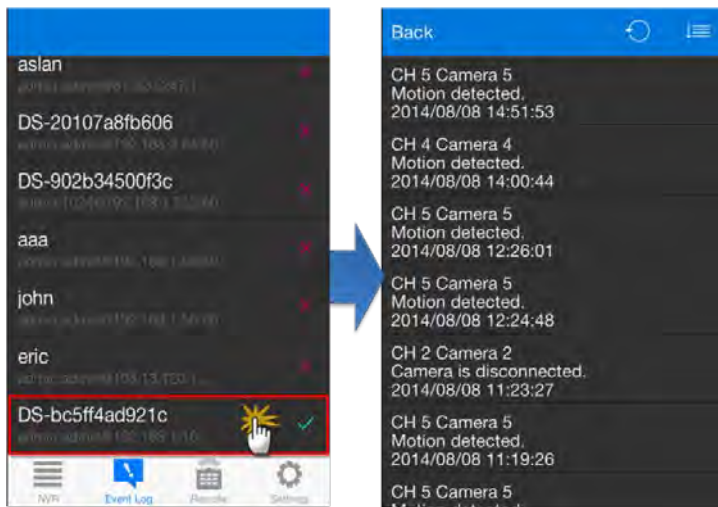Please tap a connecting NVR to check log information. The connected NVR will display with a  status icon.



- **Back** : to back to NVR list
- **Refresh** : to update the latest event log list
- **Quick Sorting** : to set up list arrangement. The application offers four types of sorting methods: **Time**, **Channel number**, **Channel name** and **Event type**. Users can quickly and easily discover desired event information.


 **Note:** Default sorting is by time.

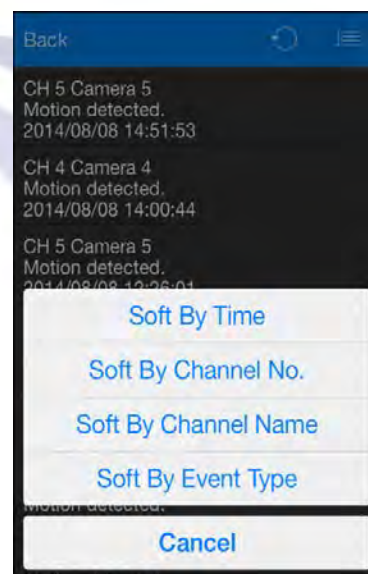

3.3.2 Event Notification

When user is in event log page, the application will smartly pop-out event notification when an event is triggered. With this feature, users can immediately notice event information from different NVRs.

Note: To enable event notification, it is necessary to stay in event log page.

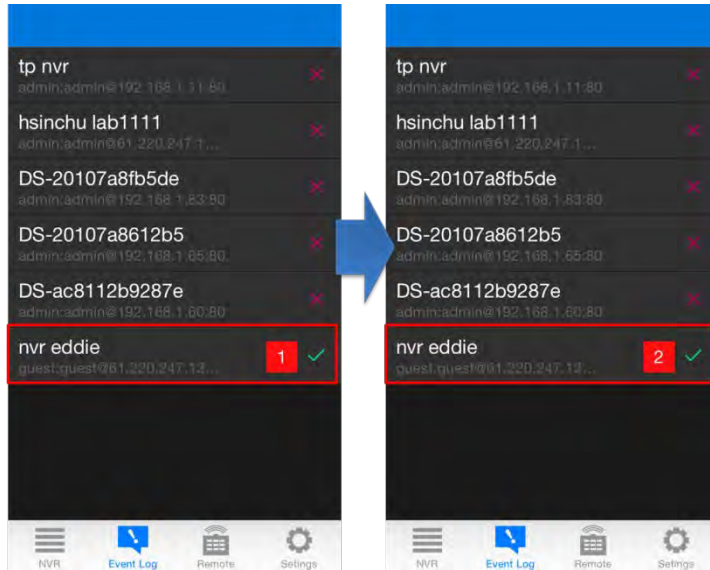


3.4 Remote Control


In the same LAN environment, user can use your mobile device to directly and intuitively operate local liveview interface without using the mouse.

⚠ Note: This feature is available when NVR and your mobile device are in the same LAN.

Please tap “Search” and one NVR that you would like to control.

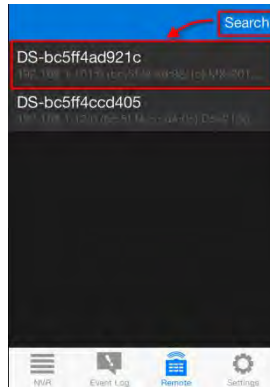


Enter **NVR Account** and **Password**.

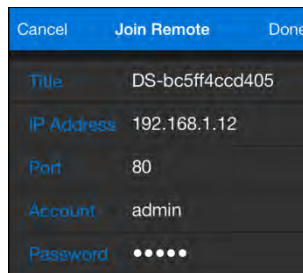

- **Controller Introduction:**

- 1. **Display mode:**

- To change liveview display mode

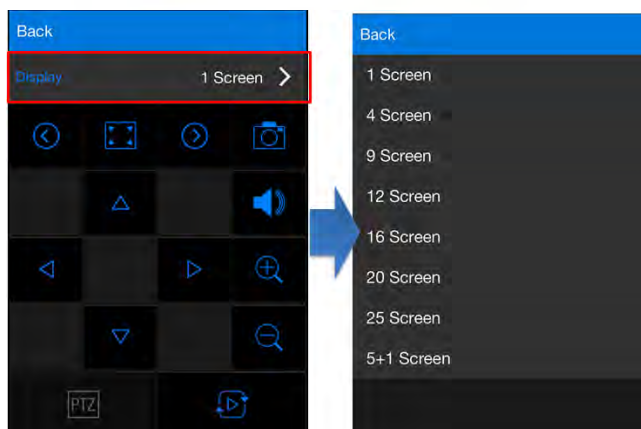


2. Change liveview window

Please use arrow keys to change liveview window in blue grid.





3. Control buttons:

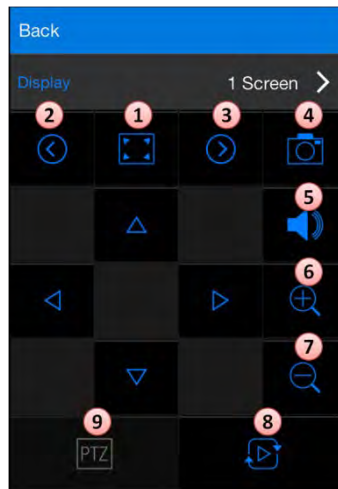


- ① Full Screen
- ② Previous Page
- ③ Next Page
- ④ Snapshot
- ⑤ Mute/ Sound
- ⑥ Digital Zoon in
- ⑦ Digital Zoom out
- ⑧ Sequential Mode
- ⑨ Enable PTZ Control



4. PTZ Control


PTZ icon will turn into blue  if the IP cameras supports PTZ function. User can tap PTZ icon to control PTZ function, which PTZ icon will turn into blue ground .

PTZ Status:

Icon	Description
	Camera with no PTZ Function
	Camera with PTZ Function
	Enable Camera's PTZ Function


PTZ Control Page:

- ① Home: Back to original monitoring position
- ② Optical Zoom in
- ③ Optical Zoom out

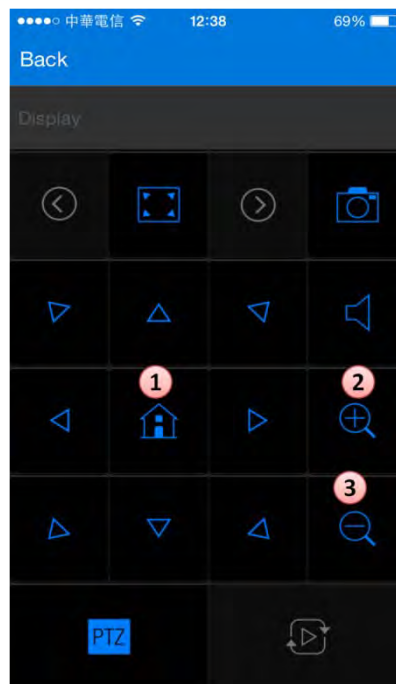

3.5 Settings

Setup section is designed to display application version and to set up sequential interval. You can also check the suitable NVR firmware version in this page.

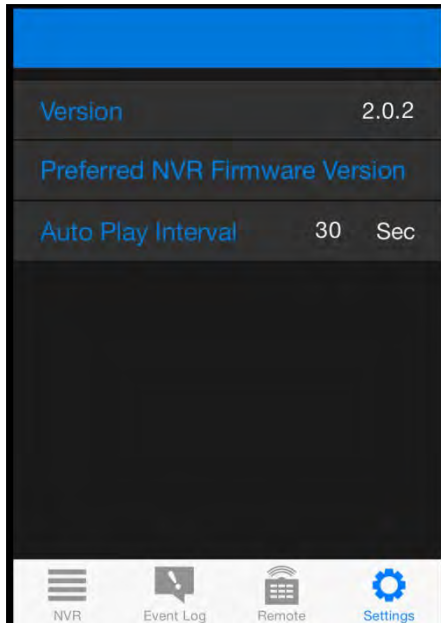

- **Version:** to check recent version of the application
- **Preferred NVR Firmware Version:** to enjoy the best performance of the application, please use appropriate NVR firmware version 2.1.x.52 or above.
- **Sequential Interval:** to set up sequential interval in sequential mode.

Appendix: Comparison Table between DIGIMobile and DIGIMobile V2

		Older APP	New APP
Liveview	Channel	1、6	1、4、6
	Sequential Mode	○	○
	Sequential interval setting	-	○
	Landscape	○	○
	PTZ Control	○	○
	Digital Zoom	○	○
	Snapshot	○	○
	Single in H264	-	○
	Pitch to zoom	-	○
Playback	Playback Control	○	○
	Continuous Play	○	○
	Quick playback	○	○
	Event search	-	○
	Time bar	○	○
	Landscape	○	○
	Digital Zoom	○	○
Event	Instant Event Notification	-	○
	Quick Sorting Method	-	○
Others	EZ search	-	○
	DDNS	○	○