



user manual

Washing Machine

EWF 12270W

# Electrolux. Thinking of you.

Share more of our thinking at [www.electrolux.com](http://www.electrolux.com)

## Contents

Safety information	2	Care and cleaning	14
Product description	4	What to do if...	17
Control panel	5	Technical data	19
First use	7	Consumption values	20
Daily use	7	Installation	20
Helpful hints and tips	10	Electrical connection	23
Washing programmes	12	Environment concerns	24



Subject to change without notice



## Safety information

**Important!** Read carefully & keep for future reference.

- The safety of Your appliance complies with the industry standards and with legal requirements on the safety of appliances. However, as manufacturers, we feel it is our duty to provide the following safety notes.
- It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.
- You **MUST** read them carefully before installing or using the appliance.
- Before first starting up, check the appliance for any damage incurred during transport. Never connect up a damaged appliance. If parts are damaged, contact your supplier.
- If the appliance is delivered in the winter months when there are minus temperatures. Store it at room temperature for 24 hours before using for the first time.
- During high temperature wash programmes the door glass may get hot. Do not touch it!
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.
- Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum.
- Do not use your washing machine to wash articles with whalebones, material without hems or torn material.
- Always unplug the appliance and turn off the water supply after use, cleaning and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced people may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

## General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.

## Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable against the wall.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- Always be sure, that there is no water leakage from hoses and their connections after the installation.
- If the appliance is installed in a location subject to frost, please read the “dangers of freezing” chapter.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.


## Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label.
- Do not overload the appliance. See the Washing Programme Table.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.

- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the appliance if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible.

## Child safety


- This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum. To prevent children and pets becoming trapped inside the drum the machine incorporates a special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin.

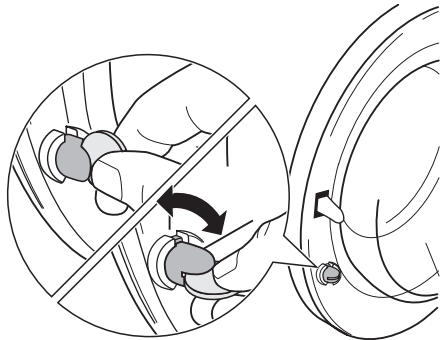

To disable this device and restore the possibility of closing the door, rotate the button counterclockwise until the groove is vertical.

## Product description

- i** Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. Its new washing system allows total use of detergent and reduces water consumption so saving energy.

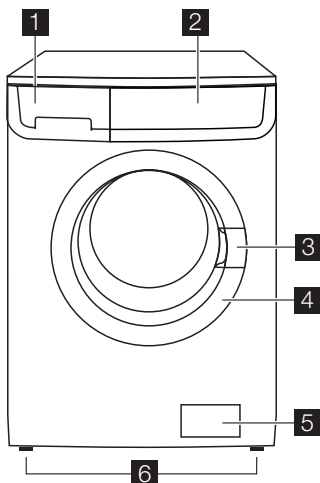

**1** Detergent dispenser drawer

**2** Control panel


**3** Door opening handle


**4** Rating Plate


**5** Drain pump

**6** Adjustable feet


### Detergent dispenser drawer

 Compartment for detergent used for pre-wash and soak phase or for stain remover used during the stain action phase (if available). The prewash and soak detergent is added at the beginning of the wash programme. The stain remover is added during the stain action phase.

 Compartment for powder or liquid detergent used for main wash. If using liquid detergent pour it **just before** starting the programme.

 Compartment for liquid additives (fabric softener, starch).

Follow the product manufacturer's recommendations on quantities to use and do not exceed the «**MAX**» mark in the detergent dispenser drawer. Any fabric softener or starching additives must be poured into the compartment before starting the wash programme.

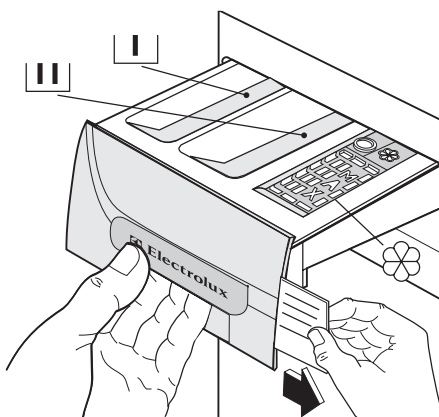


## Programme Chart

Various programme charts in different languages are supplied with the appliance. One is on the front side of the detergent dispenser drawer and the others are attached into the

user manual assy. The chart in the drawer can be replaced easily: remove the chart from the drawer by pulling it towards the right and insert the chart with the language required.

## Control panel

**i** Henceforth the programme selector dial, the buttons and the display will be indicated with the numbers given in this table.

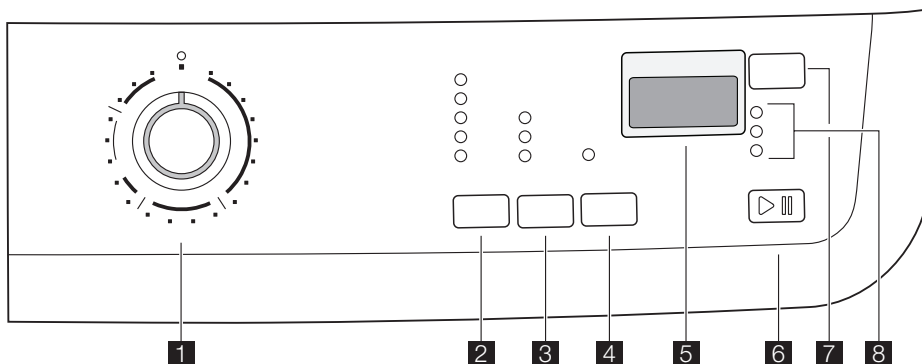

**1** Programme selector dial

**2** SPIN button

**3** OPTIONS button

**4** EXTRA RINSE button

**5** Display

**6** START/PAUSE button

**7** DELAY START button

**8** Indicator pilot light

## Table of symbols

	Cotton
	Economy
	Prewash
	Synthetic
	Delicate
	Wool
	Handwash
	Handwash Cold
	Rinses
	Drain
	Spin/ Spin reduction

	Night Cycle
	Rinse Hold
	Options
	Daily
	Light
	Quick
	Extra Rinse
	Washing
	Door locked
	End
	Delay Start

## Programme Selector Dial

It allows you to switch the appliance on/off and/or to select a programme.

## Spin Reduction

By pressing this button you can change the spin speed of the selected programme.

## Night Cycle

By selecting this function the machine will not drain the water of the last rinse and all spinning phases will be suppressed, so as not to wrinkle the laundry. This washing cycle is very quiet and it can be selected at night or in times with a more economical power rate. On some programmes the rinses will be performed with more water. Before opening the door it will be necessary to empty out the water. To empty out the water, please read the paragraph «At the end of the programme».

## Rinse hold

By selecting this function the water of the last rinse is not emptied out to prevent the fabrics from creasing. Before opening the door it will be necessary to empty out the water. To empty out the water, please read the paragraph «At the end of the programme».

## Daily - Light - Quick options

By pressing this buttons it is possible to modify the washing time, automatically proposed by the machine in order to obtain good performances in a short time.

- Daily: to be used for normally soiled cotton, synthetic or delicate items.
- Light: to be used for lightly soiled cotton, synthetic or delicate items.
- Quick: a very short cycle for slightly soiled items that have been worn for a short time.

## Extra Rinse

This appliance is designed to save energy. If it necessary to rinse the laundry using an extra quantity of water (extra rinse), select this option. Some additional rinses will be performed. This option is recommended for

people who are allergic to detergents, and in areas where the water is very soft.


## Start Pause

This button allows you to start or to interrupt the selected programme.

## Delay Start

The programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours by means of this button.

## Indicator pilot lights

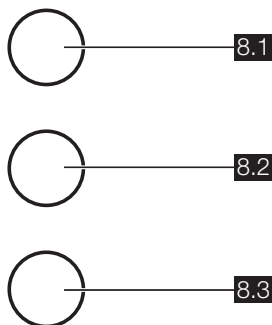


After having pressed the button **6**, the WASHING pilot light (8.1) illuminates. When the pilot light 8.1 illuminates this means that the machine is operating.

The DOOR pilot light (8.2) illuminates when the programme starts and indicates if the door can be opened:

- light on: the door cannot be opened. The machine is working or has stopped with water left in the tub.
- light off: the door can be opened. The programme is finished or the water has been emptied out.
- light flashing: the door is opening in a few minutes.

When the programme has finished the END CYCLE pilot light (8.3) comes on.

## Display

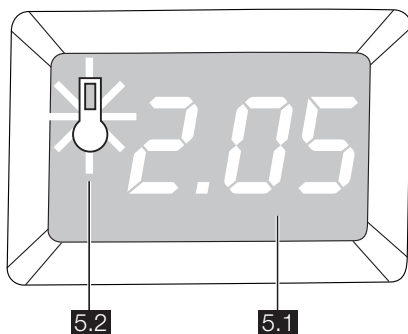

The display shows the following information:

### 5.1:

- **Duration of selected programme**

After selecting a programme, the duration is displayed in hours and minutes (for example **2.05**). The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric. After the programme has started, the time remaining is updated every minute.

- **Alarm codes**

In the event of operating problems, some alarm codes can be displayed, for example **E20** (see chapter «What to do if...»).

- **End of programme**

When the programme has finished three blinking zeros (**0.00**) are displayed, the Door pilot light (**8.2**), the Washing pilot light (**8.1**) and the pilot light of button **6** go out and the door can be opened.

- **Incorrect option selection**

If an option which is not compatible with the set wash programme is selected, the message **Err** is displayed for a few seconds and the red pilot light of button **6** light starts blinking.

- **Delay Start**

The selected delay set by means of the relevant button appears on the display for a few seconds. The delay time value decreases by one unit every hour. When only 1 hour remains, the time decreases every minute.

### 5.2:

- **Heating Phase**

During the washing cycle the display shows a temperature icon (**5.2**) to indicate that the appliance has started the heating phase of the water in the tub.

## First use

- **i** Ensure that the electrical and water connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Pour 2 liters of water into the main wash compartment (III) of the detergent drawer in order to activate the


**ECO** valve. Then run a cotton cycle at the highest temperature without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the main wash compartment and start the machine.

## Daily use


### Load the laundry


Open the door by carefully pulling the door handle outwards. Place the laundry in the


drum, one item at a time, shaking them out as much as possible. Close the door.

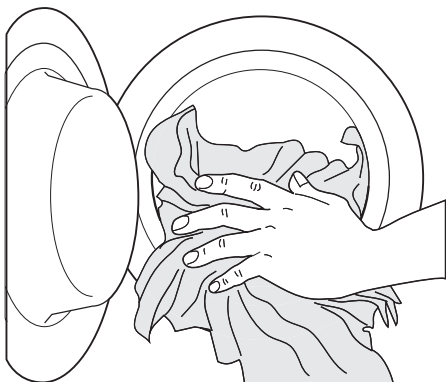


### Measure out the detergent and the fabric softener

 
Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment  or in the appropriate compartment if the selected programme/option it requires (see more details in «Detergent dispenser drawer»).

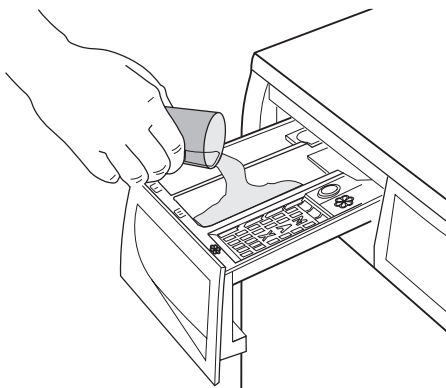

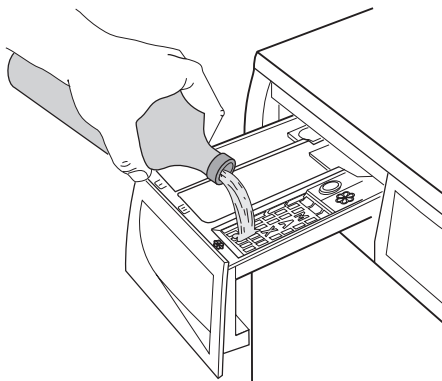

If required, pour fabric softener into the compartment marked  (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently.




### Select the required programme by turning the programme selector dial (1)

You can choose the right programme for any type of laundry following the descriptions on the washing programme tables (see «Washing Programmes»). Turn the programme selector dial to the required programme. The programme selector determines the type of washing cycle (e.g. water level, drum movement, number of rinses) and the washing temperature according to the type of laundry. The pilot light of button **6** starts blinking and the display shows the duration of the selected programme. The selector dial can be turned either clockwise or counterclockwise. Position  to Reset programme/Switching OFF the machine.

 For the description of each washing programmes of the selector dial, consult the chapter «Washing programmes».

**At the end of the programme the selector dial must be turned to position , to switch the machine off.**

 **Caution!** If you turn the programme selector dial to another programme when the machine is working, the red pilot light of button **6** will blink 3 times and the message **Error** is displayed on the display to indicate a wrong selection. The machine will not perform the new selected programme.

### Reduce the spin speed by pressing button 2

When the required programme has been selected, your appliance automatically propo-



ses the maximum spin speed provided for that programme.

Press button **2** repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine. The relevant light will light up.

### Select the available options by pressing buttons 2, 3 and 4

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before starting the programme. When these buttons are pressed, the corresponding pilot lights illuminate. When they are pressed again, the pilot lights go out. If an incorrect option is selected, the integrated **red** pilot light of the button **6** flashes for 3 times.

**i** For the compatibility among the washing programmes and the options see chapter «Washing Programmes».

### Select the Delay Start by pressing button 7

Before you start the programme, if you wish to delay the start, press the button **7** repeatedly, to select the desired delay. The selected delay time value (up to 20 hours) will appear on the display a few seconds, then the duration of the programme will appear again. You must select this option after you have set the programme and before you press button **6**.

You can cancel or modify the delay time at any moment, before you press button **6**.  
Selecting the delayed start:

1. Select the programme and the required options.
2. Select the delay start by pressing the button **7**.
3. Press button **6**:
  - the machine starts its hourly countdown.
  - The programme will start after the selected delay has expired.

Cancelling the delayed start after having pressed button **6**:

1. Set the washing machine to PAUSE by pressing button **6**.
2. Press button **7** once until the value **0** is displayed

3. Press button **6** again to start the programme.

**Important!** The selected delay can be changed only after selecting the washing programme again.

The Delay Start **can not** be selected with the **DRAIN** programme.

### Start the programme by pressing button 6

To start the selected programme, press the button **6**, the corresponding green pilot light stops blinking. The pilot lights **8.1** and **8.2** illuminate to indicate that the appliance starts operating and the door is locked.

To interrupt a programme which is running, press the button **6**: the corresponding green pilot light starts blinking.

To restart the programme from the point at which it was interrupted, press the button **6 again**. If you have chosen a delayed start, the machine will begin the countdown.

If an incorrect option is selected, the **red** pilot light of the button **6** blinks for 3 times the message **Error** is displayed for a few seconds.

### Altering an option or a running programme

It is possible to change some options before the programme carries them out.

Before you make any change, you must PAUSE the appliance by pressing the button **6**.

Changing a running programme is possible only by resetting it. Turn the programme selector dial to **0** and then to the new programme position. Start the new programme by pressing the button **6** again. The washing water in the tub will be not emptied out.

### Interrupting a programme

Press the button **6** to interrupt a programme which is running, the corresponding green pilot light starts blinking.

Press the button again to **restart** the programme.

### Cancelling a programme


Turn the selector dial to **0** to cancel a programme which is running.

You can select now a new programme.

## Opening the door

After the programme has started (or during the delay time) the door is locked, if you need to open it, set first the machine to PAUSE by pressing the button **6**. After a few minutes the light **8.2** goes out and it is possible to open the door.

If this light remains lit and the door is locked, this means that the machine is already heating or that the water level is too high. In any case, do not try to force the door!

If you cannot open the door but you need to open it you have to switch the machine off by turning the selector dial to . After a few minutes the door can be opened (**pay attention to the water level and temperature!**).


After closing the door, it is necessary to select the programme and options again and to press button **6**.


## At the end of the programme

The machine stops automatically. The pilot light of button **6**, the pilot lights **8.1** goes off and after some minutes the pilot light **8.2** goes off. The light **8.3** illuminates.

**Stand by** : once the programme has finished after a few minutes the energy saving system will be enabled. The brightness of the display

If a programme or an option that ends with water left in the tub has been selected, the pilot light **8.2** remains on and the door is locked to indicate that the water must be emptied out before opening the door. Follow the below instructions to empty out the water:

1. Turn the programme selector dial to .
2. Select the draining or spinning programme.
3. Reduce the spin speed if needed, by pressing the relevant button.
4. Press button **6**.

At the end of the programme, the light **8.2** goes off to indicate that the door can be now opened. Turn the programme selector dial to  to switch the machine off.

Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells.

is reduced. By pressing any button the appliance will come out of the energy saving status.

## Helpful hints and tips

### Sorting out the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

### Before loading the laundry

Never wash whites and coloureds together. Whites may lose their «whiteness» in the wash.

New coloured items may run in the first wash; they should therefore be washed separately the first time.

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

Remove persistent stains before washing. Rub particularly soiled areas with a special detergent or detergent paste.

Treat curtains with special care. Remove hooks or tie them up in a bag or net.

### Removing stains

Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing.

**Blood:** treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.

**Oil based paint:** moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times.

**Dried grease stains:** moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.

**Rust:** oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.

**Mould stains:** treat with bleach, rinse well (whites and fast coloureds only).

**Grass:** soap lightly and treat with bleach (whites and fast coloureds only).

**Ball point pen and glue:** moisten with acetone<sup>1)</sup>, lay the garment on a soft cloth and dab the stain.

**Lipstick:** moisten with acetone as above, then treat stains with methylated spirits. Treat any residual marks with bleach.

**Red wine:** soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach.

**Ink:** depending on the type of ink, moisten the fabric first with acetone<sup>1)</sup>, then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.

**Tar stains:** first treat with stain remover, methylated spirits or benzine, then rub with detergent paste.

### Detergents and additives

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment.

Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.

The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.

All commonly available washing machine detergents may be used in this appliance:

- powder detergents for all types of fabric
- powder detergents for delicate fabrics (60°C max) and woollens
- liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme.

If using liquid detergents, a programme **without** prewash must be selected.

Your appliance incorporates a recirculation system which allows an optimal use of the concentrated detergent.

Follow the product manufacturer's recommendations on quantities to use and do **not exceed the «MAX» mark in the detergent dispenser drawer**.

### Quantity of detergent to be used

The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used. Follow the product manufacturers' instructions on quantities to use.

Use less detergent if:





















 



- you are washing a small load
- the laundry is lightly soiled
- large amounts of foam form during washing.











### Degrees of water hardness

Water hardness is classified in so-called "degrees" of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority. If the water hardness degree is medium or high we suggest you to add a water softener following always the manufacturer's instructions. When the degree of hardness is soft, readjust the quantity of the detergent.

1) do not use acetone on artificial silk

## Washing programmes

Programme Maximum and Minimum Temperature Cycle Description Maximum Spin Speed Maximum Fabrics Load Type of Laundry	Options	Detergent Compartment
<b>COTTON</b>  95°-30° Main wash - Rinses Maximum spin speed 1200 rpm Max. load 6 kg - Red. load 3 kg <sup>1)</sup> <b>For white and coloured cotton</b> (normally soiled items).	SPIN, RINSE HOLD, NIGHT CYCLE, DAILY, LIGHT, QUICK, EXTRA RINSE	 
<b>COTTON ECONOMY</b>   60° Main wash - Rinses Maximum spin speed 1200 rpm Max. load 6 kg <b>White and fast coloured cottons</b> . This programme can be selected for slightly or normally soiled cotton items. The temperature will decrease and the washing time will be extended. This allows to obtain a good washing efficiency so saving energy.	SPIN, RINSE HOLD, NIGHT CYCLE, EXTRA RINSE	 
<b>COTTON ECONOMY</b>   40° Main wash - Rinses Maximum spin speed 1200 rpm Max. load 6 kg <b>White and coloured cottons</b> . This programme can be selected for slightly soiled cotton items. The temperature will decrease and the washing time will be extended. This allows to obtain a good washing efficiency so saving energy.	SPIN, RINSE HOLD, NIGHT CYCLE, EXTRA RINSE	 
<b>COTTON WITH PREWASH</b>  +  95° Prewash - Main wash - Rinses Maximum spin speed 1200 rpm Max. load 6 kg - Red. load 3 kg <sup>1)</sup> <b>For white cottons</b> with prewash phase.	SPIN, RINSE HOLD, NIGHT CYCLE, DAILY, LIGHT, QUICK, EXTRA RINSE	 <sup>2)</sup>  
<b>COTTON WITH PREWASH</b>  +  60° Prewash - Main wash - Rinses Maximum spin speed 1200 rpm Max. load 6 kg - Red. load 3 kg <sup>1)</sup> <b>For white or coloured cottons</b> with prewash phase (heavily soiled items).	SPIN, RINSE HOLD, NIGHT CYCLE, DAILY, LIGHT, QUICK, EXTRA RINSE	 <sup>2)</sup>  
<b>SYNTHETIC</b>  60°-30° Main wash - Rinses Maximum spin speed 900 rpm Max. load 3 kg - Red. load 1,5 kg <sup>1)</sup> <b>Synthetic or mixed fabrics:</b> underwear, coloured garments, non-shrink shirts, blouses.	SPIN, RINSE HOLD, NIGHT CYCLE, DAILY, LIGHT, QUICK, EXTRA RINSE	 

<b>Programme</b> <b>Maximum and Minimum Temperature</b> <b>Cycle Description</b> <b>Maximum Spin Speed</b> <b>Maximum Fabrics Load</b> <b>Type of Laundry</b>	Options	Detergent Compartment
<b>DELICATE</b>  40°-30° Main wash - Rinses Maximum spin speed 700 rpm Max. load kg 3 - Red. load kg 1,5 <sup>1)</sup> <b>Delicate fabrics:</b> acrylics, viscose, polyester.	RINSE HOLD, NIGHT CYCLE, DAILY, LIGHT, QUICK, EXTRA RINSE	
<b>WOOL</b>  40° Main wash - Rinses Maximum spin speed 900 rpm Max. load 1 kg Washing programme for machine washable wool as well as for hand washable woollens and delicate fabrics. <b>Note</b> : A single or bulky item may cause imbalance. If the appliance doesn't perform the final spin phase, add more items, redistribute the load manually and then select the spinning programme.	SPIN, RINSE HOLD, NIGHT CYCLE	
<b>HANDWASH</b>  30° - Cold Main wash - Rinses Maximum spin speed 900 rpm Max. load 1 kg Special programme for delicate fabrics with «hand washing» care symbol.	SPIN, RINSE HOLD, NIGHT CYCLE	
<b>RINSES</b>  Rinses Maximum spin speed 1200 rpm Max. load 6 kg With this programme it is possible to rinse and spin cotton garments which have been washed by hand. The machine performs 3 rinses, followed by a final long spin. The spin speed can be reduced by pressing the relevant button.	SPIN, RINSE HOLD, NIGHT CYCLE, EXTRA RINSE	
<b>DRAIN</b>  Draining of water Max. load 6 kg For emptying out the water of the last rinse in programmes with the Rinse Hold and Night Cycle option selected.		
<b>SPIN</b>  Drain and long spin Maximum spin speed 1200 rpm Max. load 6 kg Separate spin for hand washed garments and after programmes with the Rinse Hold and Night Cycle option selected. You can choose the spin speed by pressing the relevant button to adapt it to the fabrics to be spun.	SPIN	

<b>Programme</b> <b>Maximum and Minimum Temperature</b> <b>Cycle Description</b> <b>Maximum Spin Speed</b> <b>Maximum Fabrics Load</b> <b>Type of Laundry</b>	<b>Options</b>	<b>Detergent Compartment</b>
<input type="radio"/> <b>(=OFF)</b> For cancelling the programme which is running or to switch the machine off .		

- 1) If you select the Quick option by pressing button **3** , we recommend that you reduce the maximum load as indicated. (Red. load = reduced load). Full loading is possible however with somewhat reduced cleaning results.
- 2) If using liquid detergents, a programme without PREWASH must be selected.

## Care and cleaning

**Warning!** You must disconnect the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

### Descaling

The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

### After each wash

Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal.

### Maintenance wash

With the use of low temperature washes it is possible to get a build up of residues inside the drum.

We recommend that a maintenance wash be performed on a regular basis.

To run a maintenance wash:

- The drum should be empty of laundry.
- Select the hottest cotton wash programme.
- Use a normal measure of detergent, must be a powder with biological properties.

### External cleaning


Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.

**Important!** Do not use methylated spirits, solvents or similar products to clean the cabinet.


### Cleaning the dispenser drawer

The detergent dispenser drawer should be cleaned regularly.


1. Remove the detergent dispenser drawer by pulling it firmly. Remove any traces of accumulated powder. To aid cleaning, the top part of the additive compartment should be removed.

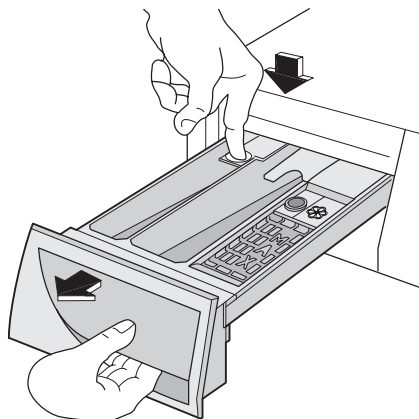

2. Remove the conditioner insert from the appropriate compartment.

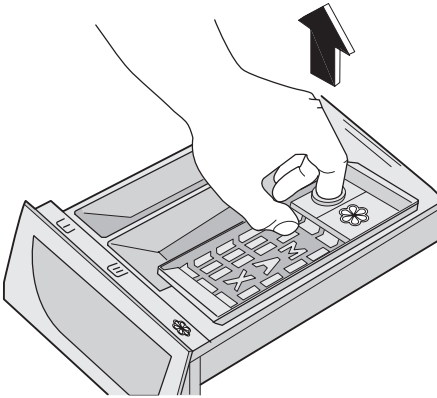

3. Clean all parts with water.
4. Put the conditioner insert in as far as it will go, so that it is firmly in place
5. Clean all parts of the machine, especially the nozzles in the top of the washing-in chamber, with a brush.

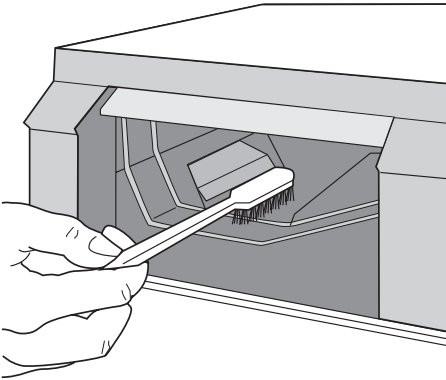

6. Insert the detergent dispenser drawer in the guide rails and push it in.

### Washing drum

Rust deposits in the drum may occur due to rusting foreign bodies in the washing or tap water containing iron.


**Important!** Do not clean the drum with acidic descaling agents, scouring agents containing chlorine or iron or steel wool.

1. Remove any rust deposits on the drum with a cleaning agent for stainless steel.
2. Run a washing cycle without any washing to clean off any cleaning agent residues.

Programme: Short Cotton Programme at maximum temperature and add approx. 1/4 measuring cup of detergent.

### Door seal

Check from time to time the door seal and eliminate eventual possible objects that could be trapped in the fold.

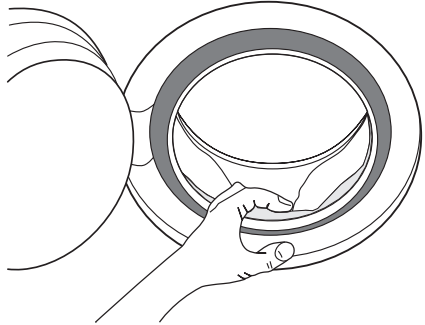


### Drain pump

The pump should be inspected regularly and particularly if:

- the machine does not empty and/or spin
- the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump.


Proceed as follows:

1. Disconnect the appliance.
2. If necessary wait until the water has cooled down.
3. Open the pump door.

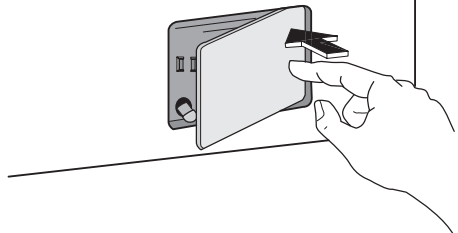


4. Place a container close to the pump to collect any spillage.


5. Release the emergency emptying hose, place it in the container and remove its cap cover.

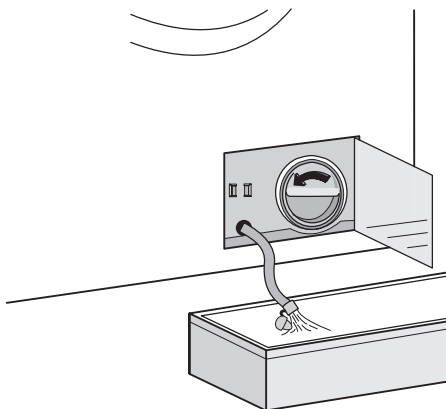

6. When no more water comes out, unscrew the pump and remove it. Always keep a rag nearby to dry up spillage of water when removing the pump.
7. Remove any objects from the pump impeller by rotating it.

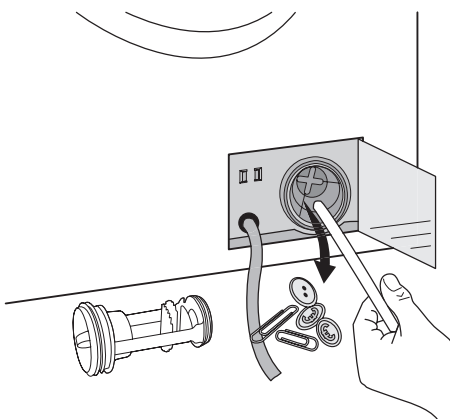

8. Refit the cap on the emergency emptying hose and place the latter back in its seat.
9. Screw the pump fully in.
10. Close the pump door.

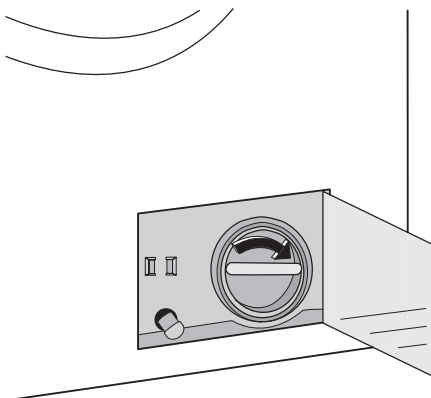


### **Warning!**

When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it.

### **Cleaning the water inlet filters**

If you notice that the machine is taking longer to fill, check that the filter in the water inlet hose is not blocked.


1. Turn off the water tap.
2. Unscrew the water inlet hose.
3. Clean the filter in the hose using a hard bristle brush.

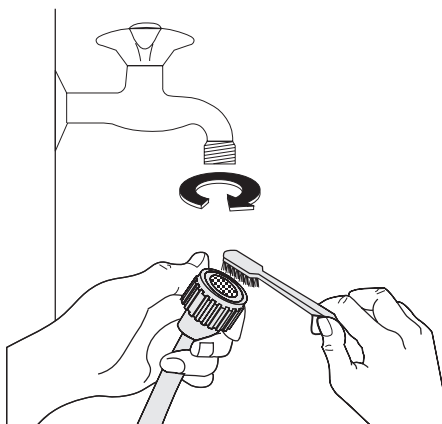

4. Screw the hose back onto the tap.



5. Unscrew the hose from the machine.  
Keep a rug nearby because some water may flow.
6. Clean the filter in the valve with a stiff brush or with the piece of cloth.

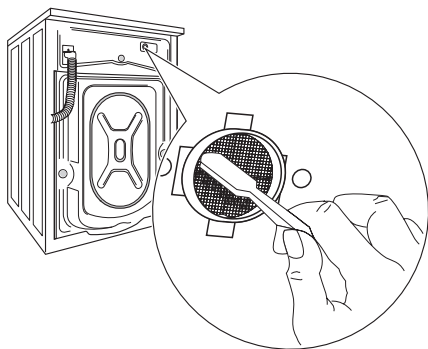

7. Screw the hose back to the machine and make sure the connection is tight.
8. Turn on the water tap.

### Emergency emptying out

If the water is not discharged, proceed as follows to empty out the machine:

1. pull out the plug from the power socket;
2. close the water tap;
3. if necessary, wait until the water has cooled down;
4. open the pump door;
5. place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl.  
When the bowl is full, put the cap back

- on the hose. Empty the bowl. Repeat the procedure until water stops flowing out;
6. clean the pump if necessary as previously described;
7. replace the emergency emptying hose in its seat after having plugged it;
8. screw the pump again and close the door.

### Frost precautions

If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows:

1. close the water tap and unscrew the water inlet hose from the tap;
2. place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out;
3. screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again.

By doing this, any water remaining in the machine is removed, avoiding ice forming and consequently damage to the appliance.

When you use the machine again, make sure that the ambient temperature is above 0°C.

**Important!** Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the **ECO Valve** device avoiding that part of the detergent remains unused at next washing.

### What to do if...

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the **red** pilot light of button **6** blinks, one of the following alarm codes appears on the display to indicate that the machine is not working:


- **E10** : problem with the water supply.
- **E20** : problem with the water draining.
- **E40** : door open.

Once the problem has been eliminated, press the button **6** to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Problem	Possible cause/Solution
<b>The washing machine does not start:</b>	<p>The door has not been closed. <i>E40</i></p> <ul style="list-style-type: none"> <li>• Close firmly the door.</li> </ul> <p>The plug is not properly inserted in the power socket.</p> <ul style="list-style-type: none"> <li>• Insert the plug into the power socket.</li> </ul> <p>There is no power at the socket.</p> <ul style="list-style-type: none"> <li>• Please check your domestic electrical installation.</li> </ul> <p>The main fuse has blown.</p> <ul style="list-style-type: none"> <li>• Replace the fuse.</li> </ul> <p>The selector dial is not correctly positioned and the button <b>6</b> has not been depressed.</p> <ul style="list-style-type: none"> <li>• Please turn the selector dial and press the button <b>6</b> again.</li> </ul> <p>The delay start has been selected.</p> <ul style="list-style-type: none"> <li>• If the laundry are to be washed immediately, cancel the delay start.</li> </ul>
<b>The machine does not fill:</b>	<p>The water tap is closed. <i>E10</i></p> <ul style="list-style-type: none"> <li>• Open the water tap.</li> </ul> <p>The inlet hose is squashed or kinked. <i>E10</i></p> <ul style="list-style-type: none"> <li>• Check the inlet hose connection.</li> </ul> <p>The filter in the inlet hose or the inlet valve filter are blocked. <i>E10</i></p> <ul style="list-style-type: none"> <li>• Clean the water inlet filters (See "Cleaning the water inlet filters" for more details).</li> </ul> <p>The door is not properly closed. <i>E40</i></p> <ul style="list-style-type: none"> <li>• Close firmly the door.</li> </ul>
<b>The machine does not empty and/or does not spin:</b>	<p>The drain hose is squashed or kinked. <i>E20</i></p> <ul style="list-style-type: none"> <li>• Check the drain hose connection.</li> </ul> <p>The drain filter is clogged. <i>E20</i></p> <ul style="list-style-type: none"> <li>• Clean the drain filter.</li> </ul> <p>An option or a programme that ends with the water still in the tub or a that eliminates all the spinning phases has been selected.</p> <ul style="list-style-type: none"> <li>• Disable the option.</li> <li>• Select the draining or spinning programme.</li> </ul> <p>The laundry is not evenly distributed in the drum.</p> <ul style="list-style-type: none"> <li>• Redistribute the laundry.</li> </ul>
<b>There is water on the floor:</b>	<p>Too much detergent or unsuitable detergent (creates too much foam) has been used.</p> <ul style="list-style-type: none"> <li>• Reduce the detergent quantity or use another one.</li> </ul> <p>Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp.</p> <ul style="list-style-type: none"> <li>• Check the water inlet hose connection.</li> </ul> <p>The drain hose is damaged.</p> <ul style="list-style-type: none"> <li>• Change it with a new one.</li> </ul> <p>The cap on the emergency emptying hose has not been replaced or the filter has not been properly screwed in after cleaning action.</p> <ul style="list-style-type: none"> <li>• Refit the cap on the emergency emptying hose or screw the filter fully in.</li> </ul>
<b>Unsatisfactory washing results:</b>	<p>Too little detergent or unsuitable detergent has been used.</p> <ul style="list-style-type: none"> <li>• Increase the detergent quantity or use another one.</li> </ul> <p>Stubborn stains have not been treated prior to washing.</p> <ul style="list-style-type: none"> <li>• Use commercial products to treat the stubborn stains.</li> </ul> <p>The correct temperature was not selected.</p> <ul style="list-style-type: none"> <li>• Check if you have selected the correct temperature.</li> </ul> <p>Excessive laundry load.</p> <ul style="list-style-type: none"> <li>• Reduce the laundry load.</li> </ul>

Problem	Possible cause/Solution
The door will not open:	The programme is still running. <ul style="list-style-type: none"><li>• Wait the end of washing cycle.</li></ul> The door lock has not been released. <ul style="list-style-type: none"><li>• Wait until the pilot light <b>8.2</b> has gone out.</li></ul> There is water in the drum. <ul style="list-style-type: none"><li>• Select drain or spin programme to empty out the water.</li></ul>
The machine vibrates is noisy:	The transit bolts and packing have not been removed. <ul style="list-style-type: none"><li>• Check the correct installation of the appliance.</li></ul> The support feet have not been adjusted <ul style="list-style-type: none"><li>• Check the correct levelling of the appliance.</li></ul> The laundry is not evenly distributed in the drum. <ul style="list-style-type: none"><li>• Redistribute the laundry.</li></ul> Maybe there is very little laundry in the drum. <ul style="list-style-type: none"><li>• Load more laundry.</li></ul>
The machine makes an unusual noise:	The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.
No water is visible in the drum:	Machines based on modern technology operate very economically using very little water without affecting performance.

If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

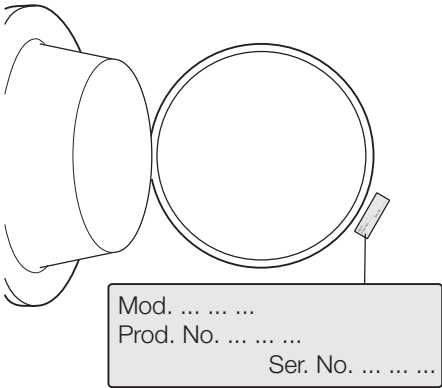

Technical data

Dimensions	Width Height Depth	60 cm 85 cm 63 cm
Electrical connection Voltage - Overall power - Fuse	Information on the electrical connection is given on the rating plate, on the inner edge of the appliance door.	
Water supply pressure	Minimum Maximum	0,05 MPa 0,8 MPa
Maximum Load	Cotton	6 kg
Spin Speed	Maximum	1200 rpm

## Consumption values

Programme	Energy consumption (KWh)	Water consumption (litres)	Programme duration (Minutes)
White Cottons 95°	2.0	61	<b>For the duration of the programmes, please refer to the display on the control panel.</b>
Cottons 60°	1.3	58	
Cotton <b>ECO</b> 60° <sup>1)</sup>	1.02	54	
Cottons 40°	0.7	58	
Synthetics 40°	0.5	50	
Delicates 40°	0.55	60	
Handwash 30°	0.25	53	

1) «Cotton ECO» at 60°C with a load of 6 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards.

**i** The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the


quantity and type of laundry, on the inlet water temperature and on the ambient temperature.

## Installation


### Unpacking

All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.


1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom.

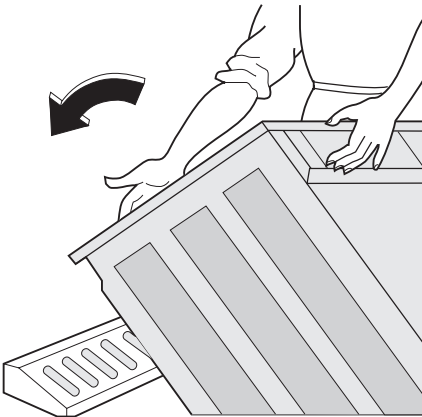


2. Remove the power supply cable and the draining and inlet hose from the hose holders on the rear of the appliance.

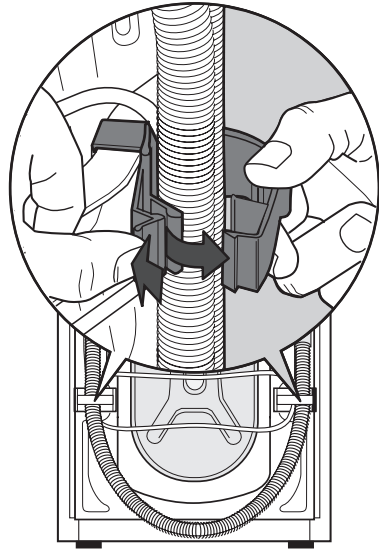


3. Unscrew the three bolts.

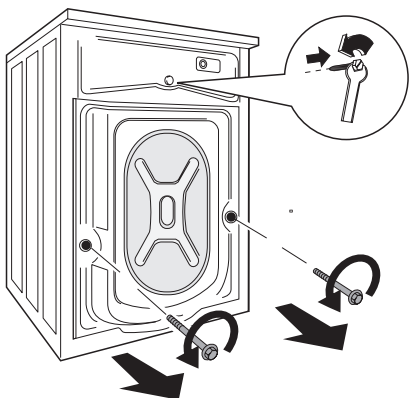


4. Slide out the relevant plastic spacers.

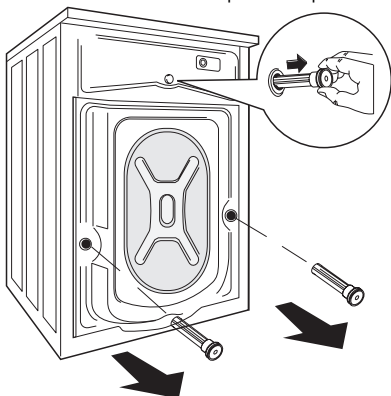

5. Open the porthole and remove the polystyrene block fitted on the door seal.

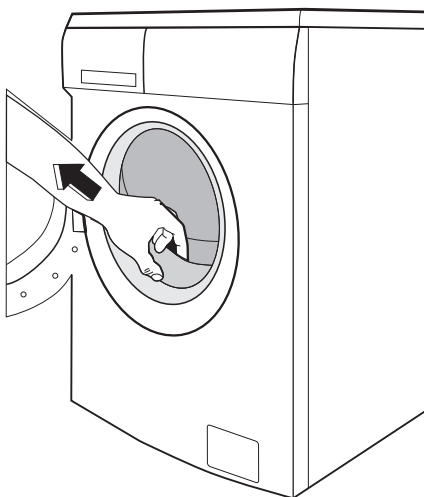

6. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet.

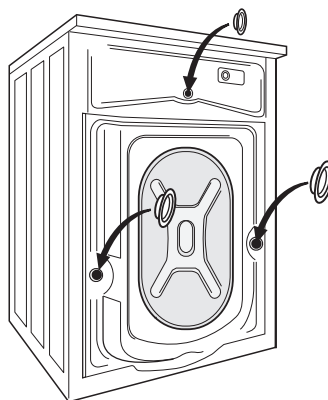


### Positioning

Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine **MUST** be level and stable. If necessary, check the setting with a spirit level. Any necessary adjustment can be made with a spanner. Accurate

levelling prevents vibration, noise and displacement of the machine during operation.


**Caution!** Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor.

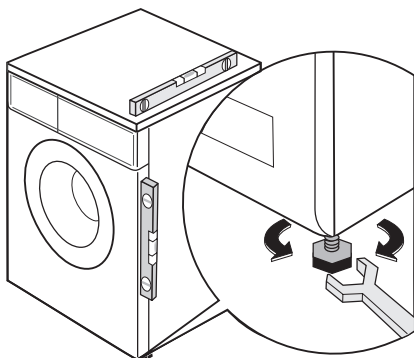

## Water inlet

**Warning!** This appliance must be connected to a cold water supply.


1. Connect the water inlet hose supplied with the machine to a tap with a 3/4" thread. Always use the hose supplied with the appliance.

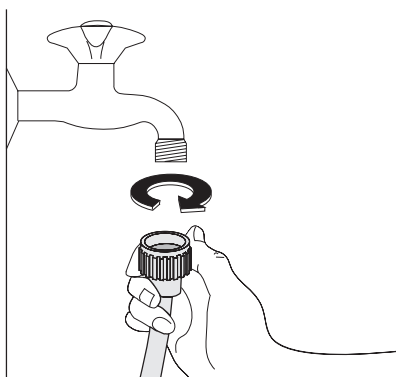

**Important!** Do not use the hose from your previous machine to connect to the water supply.

2. The other end of the inlet hose which connects to the machine can be turned as showed in the picture. Do not place the inlet hose downwards.

Angle the hose to the left or right depending on the position of your water tap.

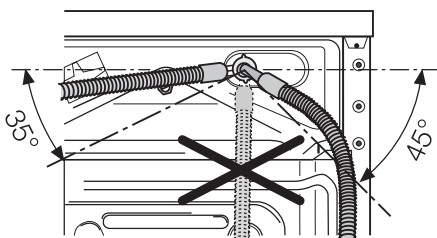

3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.


The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.

**Important!** Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes.


## Water drainage

The end of the drain hose can be positioned in three ways.

- **Hooked over the edge of a sink** using the plastic hose guide supplied with the machine. In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall.

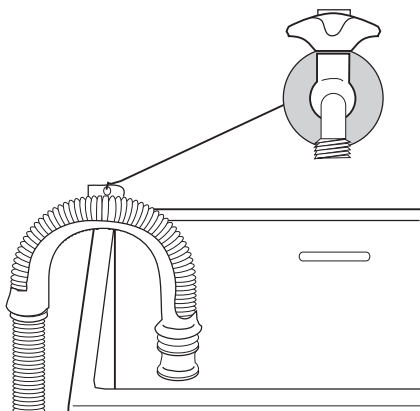

- **In a sink drain pipe branch.** This branch must be above the trap so that the bend is at least 60 cm above the ground.
- **Directly into a drain pipe** at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. The drain hose must not be kinked.

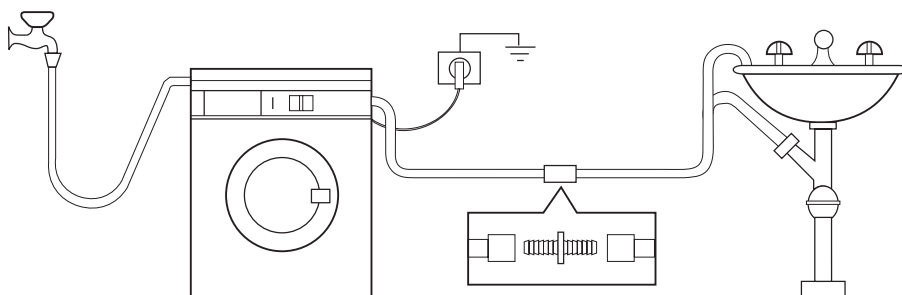

The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Centre.

## Electrical connection

Information on the electrical connection is given on the rating plate on the inner edge of the appliance door.

Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances in use.

**⚠ Connect the machine to an earthed socket.**


**⚠ The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution.**

**⚠ The power supply cable must be easily accessible after installing the machine.**




**Should the appliance power supply cable need to be replaced, this must be carried out by a Service Centre.**

## Environment concerns

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

### Packaging materials

The materials marked with the symbol  are recyclable.

>PE<=polyethylene

>PS<=polystyrene

>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

### Ecological hints

To save water, energy and to help protect the environment, we recommend that you follow these tips:

- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- The machine works more economically if it is fully loaded.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.









[www.electrolux.com](http://www.electrolux.com)