

No one builds a better fire

Model: **Cyclone-Cust** 



**Installation and Operation** 

 








### DO NOT DISCARD THIS MANUAL



- Read, understand and follow these instructions for safe installation and operation.
- · Leave this manual with party responsible for use and operation.



**A** WARNING: If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury, or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- What to do if you smell gas
  - Do not try to light any appliance
  - Do not touch any electrical switch. Do not use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

This appliance may be installed as an OEM installation in manufactured home (USA only) or mobile home and must be installed in accordance with the manufacturer's instructions and the manufactured home construction and safety standard, Title 24 CFR, Part 3280 or Standard for Installation in Mobile Homes. CAN/CSA Z240MH.

This appliance is only for use with the type(s) of gas indicated on the rating plate.

### WARNING

### **HOT SURFACES!**

Glass and other surfaces are hot during operation AND cool down.

### Hot glass will cause burns.

- Do not touch glass until it is cooled
- NEVER allow children to touch glass
- · Keep children away
- CAREFULLY SUPERVISE children in same room as
- Alert children and adults to hazards of high temperatures.

High temperatures may ignite clothing or other flammable materials.

· Keep clothing, furniture, draperies and other flammable materials away.

This appliance has been supplied with an integral barrier to prevent direct contact with the fixed glass panel. DO NOT operate the appliance with the barrier removed.

Contact your dealer or Hearth & Home Technologies if the barrier is not present or help is needed to properly install one.

In the Commonwealth of Massachusetts:

• installation must be performed by a licensed plumber or gas fitter;

See Table of Contents for location of additional Commonwealth of Massachusetts requirements.



Installation and service of this appliance should be performed by qualified personnel. Hearth & Home Technologies suggests NFI certified or factory trained professionals, or technicians supervised by an NFI certified professional.

Read this manual before installing or operating this appliance.

Please retain this owner's manual for future reference.

### **Congratulations**

Congratulations on selecting a Heat & Glo gas appliance—an elegant and clean alternative to wood burning appliances. The Heat & Glo gas appliance you have selected is designed to provide the utmost in safety, reliability, and efficiency.

As the owner of a new appliance, you'll want to read and carefully follow all of the instructions contained in this *Owner's Manual*. Pay special attention to all Cautions and Warnings.

This *Owner's Manual* should be retained for future reference. We suggest that you keep it with your other important documents and product manuals.


The information contained in this *Owner's Manual*, unless noted otherwise, applies to all models and gas control systems.

Your new Heat & Glo gas appliance will give you years of durable use and trouble-free enjoyment. Welcome to the Heat & Glo family of appliance products!

| Homeowner Reference Information | We recommend that you record the following pertinent information about your appliance. |
|---------------------------------|--|
| Model Name:                     | Date purchased/installed:  |
| Serial Number:                  | Location on appliance:   |
| Dealership purchased from:      | Dealer Phone:  |
| Notes:                          |  |
|                                 |  |
|                                 |  |

### **Listing Label Information/Location**

The model information regarding your specific appliance can be found on the rating plate usually located in the control area of the appliance.

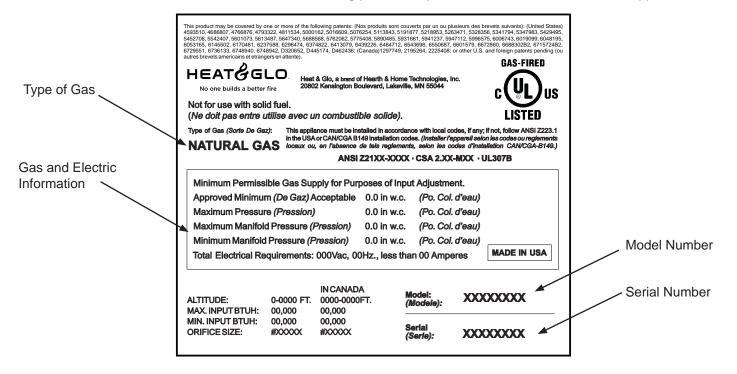

### **Table of Contents**

| 1 Listing and Code Approvals  | 9 Gas Information  |
|---|--|
| A. Appliance Certification  | A. Fuel Conversions       26         B. Gas Pressures       26         C. Gas Connection       26              |
| E. Non-Combustible Materials Specification 4  | 10 Electrical Information  |
| F. Combustible Materials Specification  | A. Recommendation for Wire   |
| 2 Getting Started   | 11 Finishing   |
| A. Design and Installation Considerations   | A. Mantel Projections  |
| 3 Framing and Clearances  | 12 Appliance Setup   |
| A. Selecting Appliance Location       7         B. Constructing the Appliance Chase       8         C. Clearances       8         D. Mantel Projections       9 | A. Remove Shipping Materials   |
| 4 Termination Locations   | 13 Operating Instructions  |
| A. Vent Termination Minimum Clearances  | A. Before Lighting Appliance   |
| 5 Vent Information and Diagrams   | D. Frequently Asked Questions  |
| A. Vent Table Key       12         B. Use of Elbows       12         C. Measuring Standards       12         D. Vent Diagrams       13                          | 14 Maintaining and Servicing ApplianceA. Fan Motor Service35B. Maintenance Tasks37                             |
| 6 Vent Clearances and Framing   | 15 Reference Materials   |
| A. Pipe Clearances to Combustibles  | A. Appliance Dimension Diagram.38B. Vent Components Diagrams39C. Service Parts42D. Limited Lifetime Warranty44 |
| 7 Appliance Preparation   | E. Contact Information   |
| A. Securing and Leveling the Appliance  |  |
| 8 Installing Vent Pipe  |  |
| A. Assembly of Vent Sections  |  |

→ = Contains updated information.

### **Listing and Code Approvals**

### A. Appliance Certification

MODELS: Cyclone-Cust

LABORATORY: Underwriters Laboratories, Inc. (UL)

TYPE: Direct Vent Gas Fireplace

STANDARD: ANSI Z21.50-2000 • CSA2.33-2000 • UL307B

This product is listed to ANSI standards for "Vented Gas Fireplaces" and applicable sections of "Gas Burning Heating Appliances for Manufactured Homes and Recreational Vehicles", and "Gas Fired Appliances for Use at High Altitudes".

#### NOT INTENDED FOR USE AS A PRIMARY HEAT SOURCE.

This appliance is tested and approved as either supplemental room heat or as a decorative appliance. It should not be factored as primary heat in residential heating calculations.

### **B. Glass Specifications**

Hearth & Home Technologies appliances manufactured with tempered glass may be installed in hazardous locations such as bathtub enclosures as defined by the Consumer Product Safety Commission (CPSC)

This statement is in compliance with CPSC 16 CFR Section 1201.5 "Certification and labeling requirements" which refers to 15 U.S. Code (USC) 2063 stating "...Such certificate shall accompany the product or shall otherwise be furnished to any distributor or retailer to whom the product is delivered."

Some local building codes require the use of tempered glass with permanent marking in such locations. Glass meeting this requirement is available from the factory. Please contact your dealer or distributor to order.

**Note:** This installation must conform with local codes. In the absence of local codes you must comply with the National Fuel Gas Code, ANSI Z223.1-latest edition in the U.S.A. and the CAN/CGA B149 Installation Codes in Canada.

### C. BTU Specifications

| <b>Models</b><br>(U.S. or Cana | Maximum<br>Input<br>BTU/h | Minimum<br>Input<br>BTU/h | Orifice<br>Size<br>(DMS) |    |
|--------------------------------|---------------------------|---------------------------|--------------------------|----|
| Cyclono Cust                   | US<br>(0-2000 FT)         | 13,500                    | -                        | 50 |
| Cyclone-Cust                   | CANADA<br>(2000-4500 FT)  | 12,150                    | -                        | 51 |

### D. High Altitude Installations

U.L. Listed gas appliances are tested and approved without requiring changes for elevations from 0 to 2000 feet in the U.S.A. and Canada.

When installing this appliance at an elevation above 2000 feet, it may be necessary to decrease the input rating by changing the existing burner orifice to a smaller size. Input rate should be reduced by 4% for each 1000 feet above a 2000 foot elevation in the U.S.A., or 10% for elevations between 2000 and 4500 feet in Canada. If the heating value of the gas has been reduced, these rules do not apply. To identify the proper orifice size, check with the local gas utility.

If installing this appliance at an elevation above 4500 feet (in Canada), check with local authorities.

### **A** WARNING

Do NOT use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

### E. Non-Combustible Materials Specification

Material which will not ignite and burn. Such materials are those consisting entirely of steel, iron, brick, tile, concrete, slate, glass or plasters, or any combination thereof.

Materials that are reported as passing ASTM E 136, Standard Test Method for Behavior of Materials in a Vertical Tube Furnace at 750°C, shall be considered non-combustible materials.

### F. Combustible Materials Specification

Materials made of or surfaced with wood, compressed paper, plant fibers, plastics, or other material that can ignite and burn, whether flame proofed or not, or whether plastered or unplastered shall be considered combustible materials.

### G. Electrical Codes

**NOTICE:** This appliance must be electrically wired and grounded in accordance with local codes or, in the absence of local codes, with National Electric Code ANSI/NFPA 70-latest edition or the Canadian Electric Code CSA C22.1.

 A 110-120 VAC circuit for this product must be protected with ground-fault circuit-interrupter protection, in compliance with the applicable electrical codes, when it is installed in locations such as in bathrooms or near sinks. **Note:** The following requirements reference various Massachusetts and national codes not contained in this document.

### H. Requirements for the Commonwealth of Massachusetts

For all side wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:

### **Installation of Carbon Monoxide Detectors**

At the time of installation of the side wall horizontal vented gas fueled equipment, the installing plumber or gas fitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gas fitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors.

In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.

In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.

### **Approved Carbon Monoxide Detectors**

Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.

### Signage

A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, "GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".

### Inspection

The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a)1 through 4.

### **Exemptions**

The following equipment is exempt from 248 CMR 5.08(2)(a)1 through 4:

- The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and
- Product Approved side wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.

#### MANUFACTURER REQUIREMENTS

### **Gas Equipment Venting System Provided**

When the manufacturer of Product Approved side wall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions provided by the manufacturer for installation of the equipment and the venting system shall include:

- Detailed instructions for the installation of the venting system design or the venting system components; and
- A complete parts list for the venting system design or venting system.

### Gas Equipment Venting System NOT Provided

When the manufacturer of a Product Approved side wall horizontally vented gas fueled equipment does not provide the parts for venting the flue gases, but identifies "special venting systems", the following requirements shall be satisfied by the manufacturer:

- The referenced "special venting system" instructions shall be included with the appliance or equipment installation instructions; and
- The "special venting systems" shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed installation instructions.

A copy of all installation instructions for all Product Approved side wall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.

See Gas Connection section for additional Commonwealth of Massachusetts requirements.

### **2** Getting Started

### A. Design and Installation Considerations

Heat & Glo direct vent gas appliances are designed to operate with all combustion air siphoned from outside of the building and all exhaust gases expelled to the outside. No additional outside air source is required.

### **CAUTION**

Check building codes prior to installation.

- Installation MUST comply with local, regional, state and national codes and regulations.
- Consult local building, fire officials or authorities having jurisdiction about restrictions, installation inspection, and permits.

When planning an appliance installation, it's necessary to determine the following information <u>before</u> installing:

- · Where the appliance is to be installed.
- The vent system configuration to be used.
- · Gas supply piping.
- · Electrical wiring.
- · Framing and finishing details.
- Whether optional accessories—devices such as a wall switch, or remote control—are desired.



### **A** WARNING

Keep appliance dry.







### **B.** Tools and Supplies Needed

Before beginning the installation be sure that the following tools and building supplies are available.

Reciprocating saw Framing material

Pliers Hi temp caulking material

Hammer Gloves

Phillips screwdriver Framing square

Flat blade screwdriver Electric drill and bits (1/4 in.)

Plumb line Safety glasses

Level 1/2 - 3/4 inch length, #6 or #8 Self-drilling screws

Manometer Voltmeter

Tape measure Noncorrosive leak check solution

One 1/4 inch female connection (for optional fan).

### C. Inspect Appliance and Components



### **A** WARNING

Inspect appliance and components for damage. Damaged parts may impair safe operation.

- · Do NOT install damaged components.
- Do NOT install incomplete components.
- Do NOT install substitute components.

Report damaged parts to dealer.

- Carefully remove the appliance and components from the packaging.
- The vent system components and trim doors are shipped in separate packages.
- Report to your dealer any parts damaged in shipment, particularly the condition of the glass.
- Read all of the instructions before starting the installation. Follow these instructions carefully during the installation to ensure maximum safety and benefit.



### **A** WARNING

Hearth & Home Technologies disclaims any responsibility for, and the warranty will be voided by, the following actions:

- Installation and use of any damaged appliance or vent system component.
- · Modification of the appliance or vent system.
- Installation other than as instructed by Hearth & Home Technologies.
- · Improper positioning of the glass door.
- Installation and/or use of any component part not approved by Hearth & Home Technologies.

Any such action may cause a fire hazard.

### **Framing and Clearances**

#### Note:

- Illustrations reflect typical installations and are <u>FOR</u> <u>DESIGN PURPOSES ONLY.</u>
- Illustrations/diagrams are not drawn to scale.
- Actual installation may vary due to individual design preference.

### A. Selecting Appliance Location

When selecting a location for your appliance it is important to consider the required clearances to walls (see figure 3.1).

### **A** WARNING




Fire Risk

Provide adequate clearance:

- · Around air openings
- To combustibles
- · For service access

Locate appliance away from traffic areas.

Note: For actual appliance dimensions refer to Section 16.

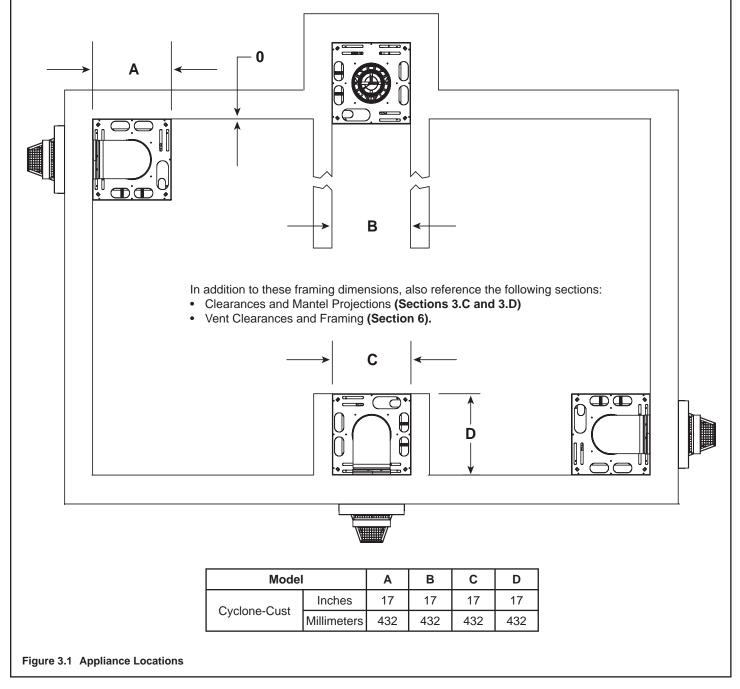

### **B.** Constructing the Appliance Chase

A chase is a vertical boxlike structure built to enclose the gas appliance and/or its vent system. Vertical vents that run on the outside of a building may be, but are not required to be, installed inside a chase.

Construction of the chase may vary with the type of building. These instructions are not substitutes for the requirements of local building codes. Local building codes MUST be checked.

Chases should be constructed in the manner of all outside walls of the home to prevent cold air drafting problems. The chase should not break the outside building envelope in any manner.

Walls, ceiling, base plate and cantilever floor of the chase should be insulated. Vapor and air infiltration barriers should be installed in the chase as per regional codes for the rest of the home. Additionally, in regions where cold air infiltration may be an issue, the inside surfaces may be sheetrocked and taped for maximum air tightness.

To further prevent drafts, the wall shield and ceiling firestops should be caulked with high temperature caulk to seal gaps. Gas line holes and other openings should be caulked with high temp caulk or stuffed with unfaced insulation. If the appliance is being installed on a cement slab, a layer of plywood may be placed underneath to prevent conducting cold up into the room.

### C. Clearances

### **A** WARNING




Fire Risk.

- Odor Risk.
- Install appliance on hard metal or wood surfaces extending full width and depth of appliance.
- Do NOT install appliance directly on carpeting, vinyl, tile or any combustible material other than wood.

### **A** WARNING



- Construct chase to all clearance specifications in manual.
- Locate and install appliance to all clearance specifications in manual.

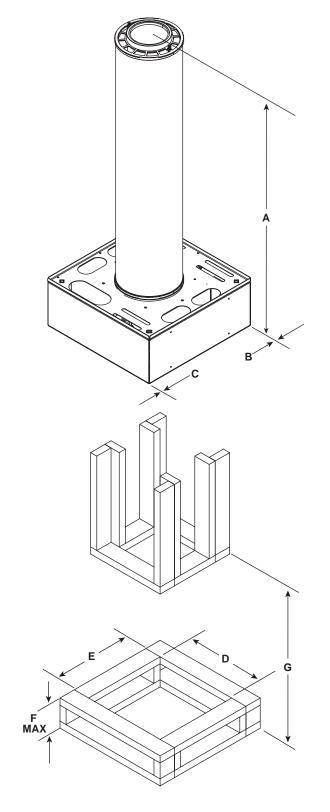


| Clearances to Combustibles |               |   |   |        |        |       |         |
|----------------------------|---------------|---|---|--------|--------|-------|---------|
|                            | A B C D E F G |   |   |        |        |       | G       |
| Inches                     | 42-1/2        | 0 | 0 | 17-1/2 | 17-1/2 | 6-3/8 | 41-3/8* |
| mm                         | 1080          | 0 | 0 | 445    | 445    | 162   | 1051    |

<sup>\*</sup> This dimension must be held to +0 inch to -1/2 inch to assure the firestop conceals the connection of the glass tube to the slip section.

Figure 3.2 Clearances to Combustibles

### **D. Mantel Projections**

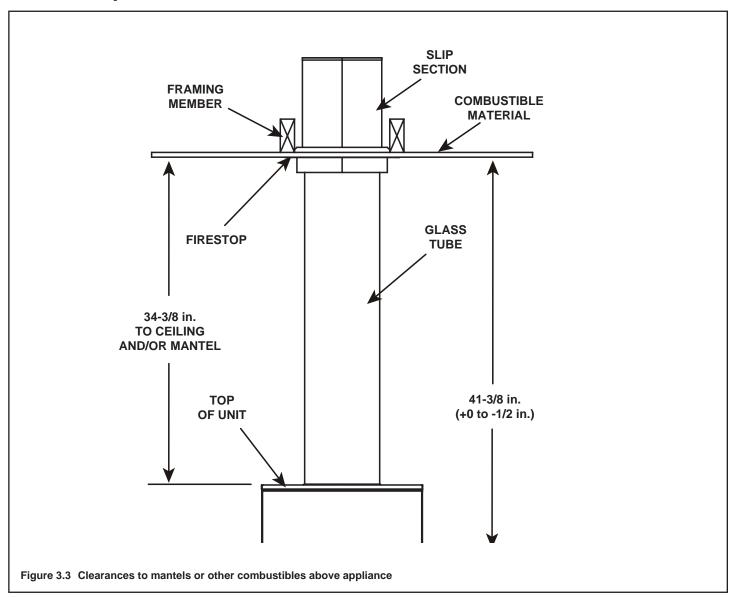

### **Termination Locations**

### A. Vent Termination Minimum Clearances



### **A** WARNING

Fire Risk.

Explosion Risk.

Inspect external vent cap regularly.



- Ensure no debris blocks cap.
- Combustible materials blocking cap may ignite.
- Restricted air flow affects burner operation.



### **A** WARNING

Fire Risk.

Explosion Risk.


Maintain vent clearance to combustibles as specified.



 Do not pack air space with insulation or other materials.

Failure to keep insulation or other materials away from vent pipe may cause fire.


Measure vertical clearances from this surface.

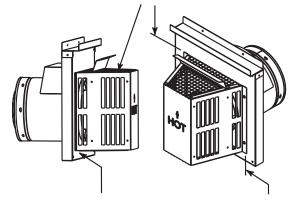

Measure horizontal clearances from this surface.

(See Figure 4.4 for specific clearances)

Figure 4.1

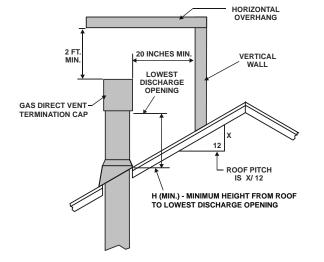


| Roof Pitch          | H (Min.) Ft. |
|---------------------|--------------|
| Flat to 6/12        | 1.0*         |
| Over 6/12 to 7/12   | 1.25*        |
| Over 7/12 to 8/12   | 1.5*         |
| Over 8/12 to 9/12   | 2.0*         |
| Over 9/12 to 10/12  | 2.5          |
| Over 10/12 to 11/12 | 3.25         |
| Over 11/12 to 12/12 | 4.0          |
| Over 12/12 to 14/12 | 5.0          |
| Over 14/12 to 16/12 | 6.0          |
| Over 16/12 to 18/12 | 7.0          |
| Over 18/12 to 20/12 | 7.5          |
| Over 20/12 to 21/12 | 8.0          |

\* 3 foot minimum in snow regions


Figure 4.2 Minimum height from roof to lowest discharge opening

Figure 4.2 specifies minimum vent heights for various pitched roofs.

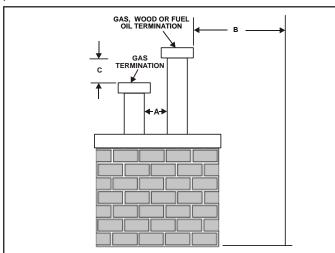

|   | Gas<br>Termination | Wood & Fuel Oil<br>Termination | Comments                                 |  |
|---|--------------------|--------------------------------|--|--|
| Α | 6 in.              | 20 in. min.                    | Horizontal distance between terminations |  |
| В | 20 in.             | 24 in. min.                    | Distance to perpendicular wall           |  |
| С | 18 in.             | 18 in.                         | Vertical distance between terminations   |  |

Figure 4.3 Multiple Vertical Termination

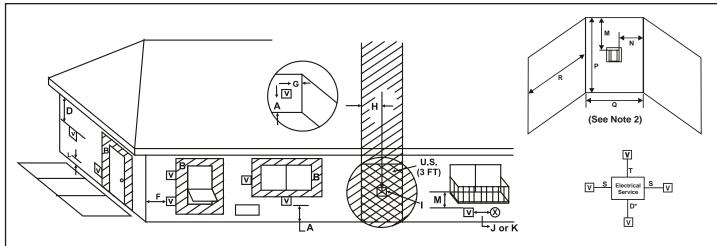

### V = VENT TERMINAL

### X = AIR SUPPLY INLET

### = AREA WHERE TERMINAL IS NOT PERMITTED

| = | 12 inchesclearances above grade, veranda, (See Note 1) porch, deck or balcony   |
|---|---|
| = | 12 inchesclearances to window or door that may be opened, or to permanently closed window. (Glass)  |
| = | 18 inchesvertical clearance to unventilated soffit or to ventilated soffit located above the terminal   |
|   | *30 inchesfor vinyl clad soffits and below electrical service   |
| = | 9 inchesclearance to outside corner   |
| = | 6 inchesclearance to inside corner  |
| = | 3 ft. (Canada)not to be installed above a gas meter/regulator assembly within 3 feet (90 cm) horizontally from the center-line of the regulator |
| = | 3 ftclearance to gas service regulator vent outlet  |
| = | 9 inches (U.S.A.) 12 inches (Canada) clearance to non-mechanical air supply inlet to building or the  |
| = | combustion air inlet to any other appliance 3 ft. (U.S.A.) 6 ft. (Canada)clearance to a mechanical (powered) air supply inlet                   |
|   | = = = = =   |

| L** | =   | 7 ft(See Note 1) | clearance above paved sidewalk or a paved driveway located on <b>public</b> property |
|-----|-----|------------------|--|
| M** | * = | 18 inches        | clearance under veranda, porch, deck, balcony or overhang                            |
|     |     | 42 inches        | vinyl  |
| S   | =   | (O N . ( )       | clearance from sides of electrical service   |
| Т   | =   |                  | clearance above electrical service   |

### Alcove Applications -

N = 6 inches ......non-vinyl sidewalls 12 inches .....vinyl sidewalls

P = 8 ft.

|   | Q <sub>MIN</sub> | R <sub>MAX</sub>          |  |
|---|------------------|---------------------------|--|
| 1 cap   | 3 feet           | 2 x Q <sub>ACTUAL</sub>   |  |
| 2 caps  | 6 feet           | 1 x Q <sub>ACTUAL</sub>   |  |
| 3 caps  | 9 feet           | 2/3 x Q <sub>ACTUAL</sub> |  |
| 4 caps  | 12 feet          | 1/2 x Q <sub>ACTUAL</sub> |  |
| Q <sub>MIN</sub> = # termination caps x 3 R <sub>MAX</sub> = (2 / # termination caps) x Q <sub>ACTUAL</sub> |                  |                           |  |

**Note 1**: On private property where termination is less than 7 feet above a sidewalk, driveway, deck, porch, veranda or balcony, use of a listed cap shield is suggested. (See vents components page)

**Note 2**: Termination in an alcove space (spaces open only on one side and with an overhang) are permitted with the dimensions specified for vinyl or non-vinyl siding and soffits. **1**. There must be 3 feet minimum between termination caps. **2**. All mechanical air intakes within 10 feet of a termination cap must be a minimum of 3 feet below the termination cap. **3**. All gravity air intakes within 3 feet of a termination cap must be a minimum of 1 foot below the termination cap.

Figure 4.4 Minimum Clearances for Termination

Note 5: Location of the vent termination must not interfere with access to the electrical service.

**WARNING:** In the U.S: Vent system termination is **NOT** permitted in screened porches. You must follow side wall, overhang and ground clearances as stated in the instructions.

In Canada: Vent system termination is **NOT** permitted in screened porches. Vent system termination is permitted in porch areas with two or more sides open. You must follow all side walls, overhang and ground clearances as stated in the instructions.

Heat & Glo assumes no responsibility for the improper performance of the appliance when the venting system does not meet these requirements.

<sup>\*\*</sup> a vent shall not terminate directly above a sidewalk or paved driveway which is located between two single family dwellings and serves both dwellings.

<sup>\*\*\*</sup> only permitted if veranda, porch, deck or balcony is fully open on a minimum of 2 sides beneath the floor, or meets Note 2.

Note 3: Local codes or regulations may require different clearances.

**Note 4:** Termination caps may be hot. Consider their proximity to doors or other traffic areas.



### **Vent Information and Diagrams**

### A. Vent Table Key

The abbreviations listed in this vent table key are used in the vent diagrams.

| Symbol                | Description   |
|-----------------------|---|
| <b>V</b> <sub>1</sub> | First section (closest to appliance) of vertical length   |
| V <sub>2</sub>        | Second section of vertical length                         |
| H <sub>1</sub>        | First section (closest to appliance) of horizontal length |
| H <sub>2</sub>        | Second section of horizontal length                       |

### **A** WARNING



Fire Hazard.

Explosion Risk.

Asphyxiation Risk.

Do NOT connect this gas appliance to a chimney flue serving a separate solid-fuel or gas burning appliance.



- Vent this appliance directly outside.
- Use separate vent system for this appliance.
   May impair safe operation of this appliance or other appliances connected to the flue.

### B. Use of Elbows


### CAUTION

ALL vent configuration specifications MUST be followed.

- This product is tested and listed to these specifications.
- Appliance performance will suffer if specifications are not followed.

Diagonal runs have both vertical and horizontal vent aspects when calculating the effects. Use the rise for the vertical aspect and the run for the horizontal aspect (see Figure 5.1).


Two 45° elbows may be used in place of one 90° elbow. On 45° runs, one foot of diagonal is equal to 8.5 inches horizontal run and 8.5 inches vertical run. A length of straight pipe is allowed between two 45° elbows (see Figure 5.1).

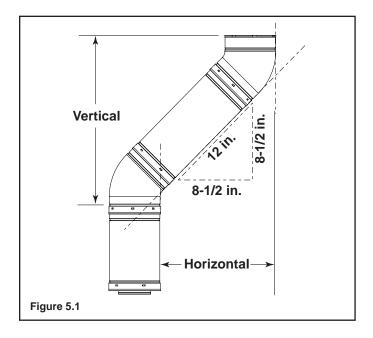

### C. Measuring Standards

Vertical and horizontal measurements listed in the vent diagrams were made using the following standards.

- 1. Pipe measurements are shown using the effective length of pipe (see Figure 5.2).
- 2. Measurements are made from the appliance outer wrap, not from the standoffs.
- Horizontal terminations are measured to the outside mounting surface (flange of termination cap) (see Figure 4.1).
- 4. Vertical terminations are measured to bottom of termination cap.
- 5. Horizontal pipe installed level with no rise.

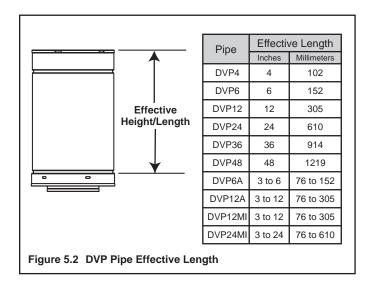

### D. Vent Diagrams

### **A** WARNING



Fire Risk. Explosion Risk.

Do NOT pack insulation or other combustibles between ceiling firestops.

- ALWAYS maintain specified clearances around venting and firestop systems.
- · Install wall shield and ceiling firestops as specified.


Failure to keep insulation or other material away from vent pipe may cause fire.



### 1. Top Vent - Horizontal Termination

### One Elbow


**NOTE:** A minimum of 2 feet before the first 90° elbow can be achieved by using a 12 inch section of DVP and the (cyclone-12slip) slip section.

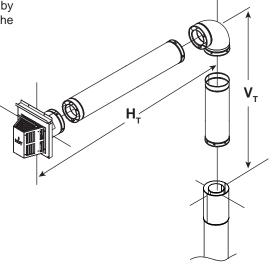

| V <sub>T</sub> Min.                  | H <sub>⊤</sub> Max. |  |
|--------------------------------------|---------------------|--|
| 2 ft.                                | 2 ft.               |  |
| 3 ft.                                | 6 ft.               |  |
| 4 ft.                                | 10 ft.              |  |
| 5 ft.                                | 15 ft.              |  |
| $V_{T} + H_{T} = 40 \text{ ft. Max}$ |                     |  |

Figure 5.3

### **Two Elbows**

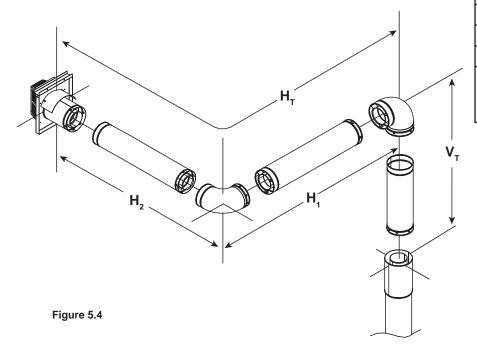

| H <sub>1</sub> | H <sub>2</sub> | V <sub>τ</sub> Min. | H <sub>T</sub> Max. |
|----------------|----------------|---------------------|---------------------|
| *              | *              | 2 ft.               | 2 ft.               |
| *              | *              | 3 ft.               | 6 ft.               |
| *              | *              | 4 ft.               | 10 ft.              |
| *              | *              | 5 ft.               | 15 ft.              |

 $V_{T} + H_{T} = 40 \text{ ft. Max.}$ 

\*No specific restrictions on this value EXCEPT  $V_T$  + HT cannot exceed 40 ft. Max.

### 1. Top Vent - Horizontal Termination - (continued)

### **Three Elbows**

| V <sub>1</sub> | H <sub>1</sub> | V <sub>2</sub> | H <sub>2</sub> | V <sub>T</sub> Min. | H <sub>T</sub> Max. |
|----------------|----------------|----------------|----------------|---------------------|---------------------|
| *              | *              | *              | *              | 2 ft.               | 2 ft.               |
| *              | *              | *              | *              | 3 ft.               | 6 ft.               |
| *              | *              | *              | *              | 4 ft.               | 10 ft.              |
| *              | *              | *              | *              | 5 ft.               | 15 ft.              |

 $V_{T} + H_{T} = 40 \text{ ft. Max.}$ 

\*No specific restrictions on this value EXCEPT  ${\rm V_T + H_T \ cannot \ exceed \ 40 \ ft. \ Max}.$ 


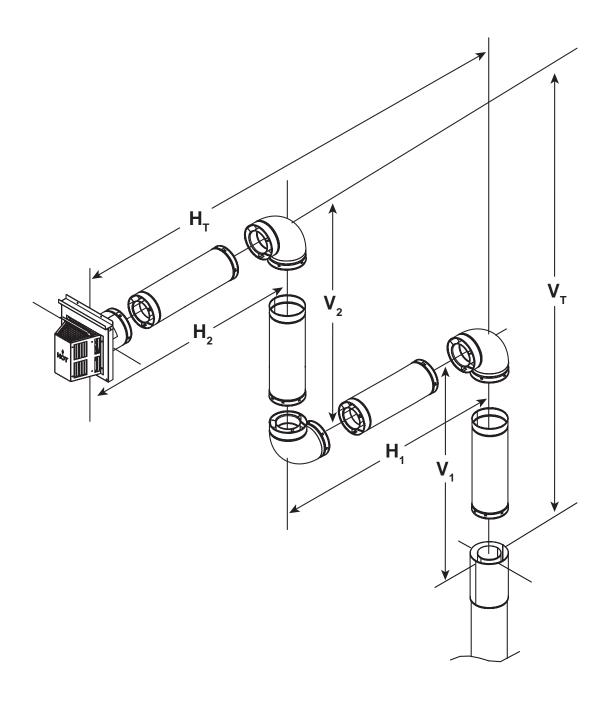



Figure 5.5

### 2. Top Vent - Vertical Termination

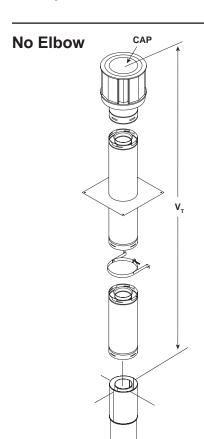

**V**<sub>τ</sub> **MAX.**40 ft.


| Flue Restrictor          |           |                                 |  |
|--------------------------|-----------|---------------------------------|--|
| Part No. Inside Diameter |           | Max. Vertical (V <sub>⊤</sub> ) |  |
| 2061-204                 | 2-3/4 in. | 15-30 ft.                       |  |
| 2061-203                 | 2-1/2 in. | 30 ft. or more                  |  |

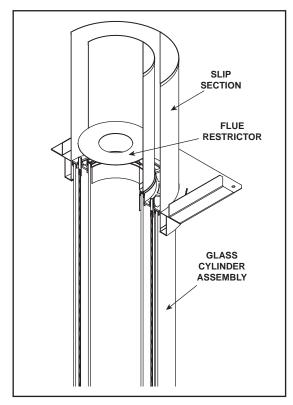

Drop the flue restrictor into the slip section as shown.

### **Two Elbows**

Figure 5.6

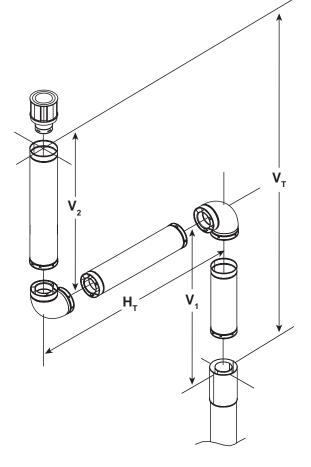

| <b>V</b> <sub>1</sub> | V <sub>2</sub> | V <sub>T</sub> Min. | H <sub>T</sub> Max. |
|-----------------------|----------------|---------------------|---------------------|
| *                     | *              | 2 ft.               | 2 ft.               |
| *                     | *              | 3 ft.               | 6 ft.               |
| *                     | *              | 4 ft.               | 10 ft.              |
| *                     | *              | 5 ft.               | 15 ft.              |

 $V_{T} + H_{T} = 40 \text{ ft. Max.}$ 

\*No specific restrictions on this value EXCEPT  $V_{_{\rm T}}$  +  $H_{_{\rm T}}$  cannot exceed 40 ft. Max.

Figure 5.7

### 2. Top Vent - Vertical Termination - (continued)

### **Three Elbows**

| <b>V</b> <sub>1</sub> | H <sub>1</sub> | H <sub>2</sub> | V <sub>2</sub> | V <sub>⊤</sub> Min. | H <sub>T</sub> Max. |
|-----------------------|----------------|----------------|----------------|---------------------|---------------------|
| *                     | *              | *              | *              | 2 ft.               | 2 ft.               |
| *                     | *              | *              | *              | 3 ft.               | 6 ft.               |
| *                     | *              | *              | *              | 4 ft.               | 10 ft.              |
| *                     | *              | *              | *              | 5 ft.               | 15 ft.              |

 $V_{T} + H_{T} = 40 \text{ ft. Max.}$ 

\*No specific restrictions on this value EXCEPT  $V_{_{T}} + H_{_{T}} \ cannot \ exceed \ 40 \ ft. \ Max.$ 

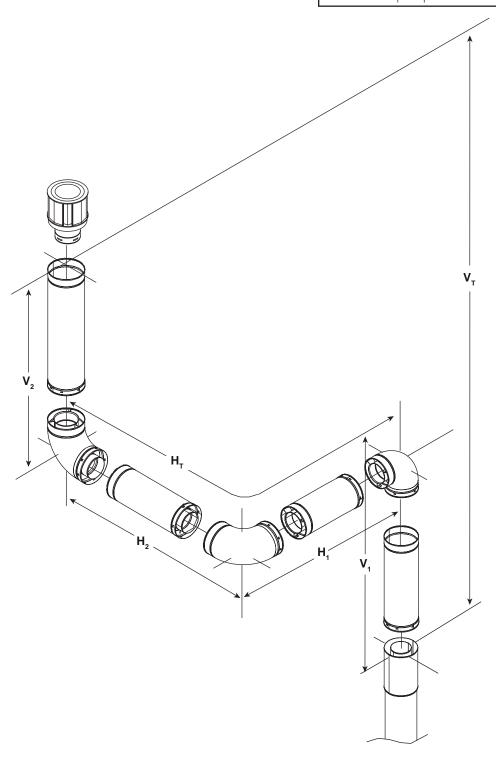


Figure 5.8



### **Vent Clearances and Framing**

### A. Pipe Clearances to Combustibles

### **A** WARNING

Fire Risk.


Explosion Risk.

Maintain vent clearance to combustibles as specified.



 Do not pack air space with insulation or other materials.

Failure to keep insulation or other materials away from vent pipe may cause fire.

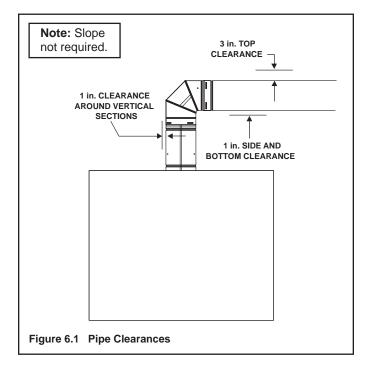

### **B. Wall Penetration Framing**

### **Combustible Wall Penetration**


Frame a hole in a combustible wall for an interior wall shield firestop, (Figure 6.2) whenever a wall is penetrated. Use same size framing materials as those used in the wall construction. The wall shield firestop maintains minimum clearances and prevents cold air infiltration.

#### **Non-Combustible Wall Penetration**

If the hole being penetrated is surrounded by noncombustible materials such as concrete, a hole with diameter one inch greater than the pipe is acceptable.

Whenever a non-combustible wall is penetrated, the wall shield firestop is only required on one side and no heat shield is necessary.

If your local inspector requires the wall shield firestop on both sides, then both wall shield firestops must have a heat shield attached to them.

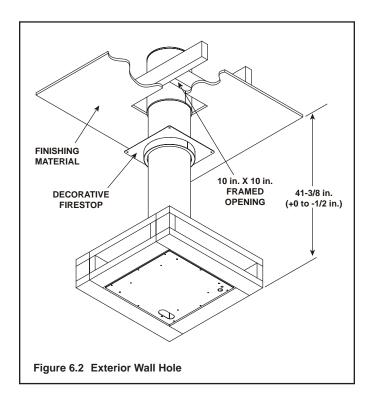

### C. Vertical Penetration Framing

### **WARNING**



Fire Hazard

Keep loose materials or blown insulation from touching the vent pipe.

- National building codes recommend using attic shield to keep loose materials/ blown insulation from contacting vent.
- Hearth & Home Technologies requires the use of an attic shield.


### **Installing the Ceiling Firestop**


- Frame an opening 10 inches by 10 inches whenever the vent system penetrates a ceiling/floor (see Figure 6.3).
- Frame the area with the same sized lumber as used in ceiling/floor joist.
- When installing a top vent vertical termination appliance the hole should be directly above the appliance, unless the flue is offset.
- Do not pack insulation around the vent. Insulation must be kept away from the pipe.

### **Installing Attic Shield**

**Note:** An additional ceiling firestop is not required if attic shield is used.

- · Frame opening for attic shield.
- Attic shield may be installed above or below ceiling (see Figure 6.4).
- Secure with three fasteners on each side.
- Fold tabs at top of attic shield in toward vent pipe. Tabs must keep vent pipe centered within shield.
- Field construct additional shield height if insulation is deeper than height of attic shield.

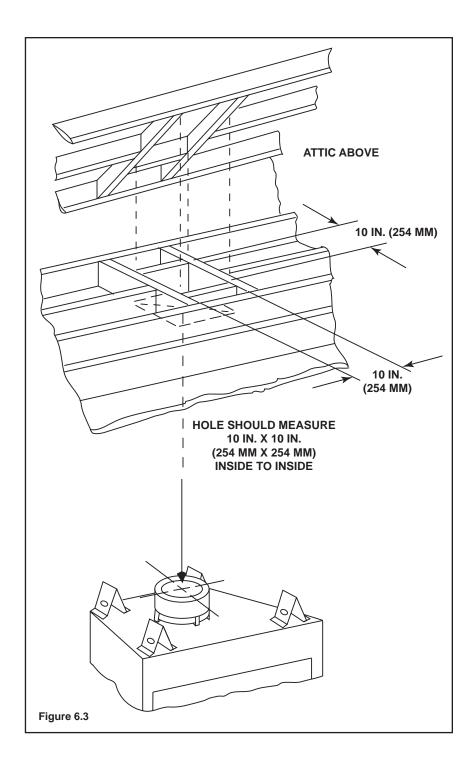

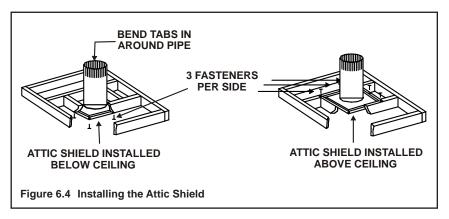

### **Appliance Preparation**

### A. Securing and Leveling the Appliance

### **A** WARNING



Fire Risk

- Prevent contact with sagging, loose insulation.
- Do NOT install against combustible materials such as exposed insulation, plastic and insulation backer.

The diagram shows how to properly position, level, and secure the appliance (see Figure 7.1). Holes are provided to secure the appliance to the framing members with screws.

- Horizontal venting refer to Vent Clearances and Framing (Section 6) for hole location.
- Place the appliance into position.
- Level the appliance from side to side and front to back.
- Shim the appliance as necessary. It is acceptable to use wood shims.
- Secure the appliance to the framing by using nails or screws through the holes in the base plate of the appliance.

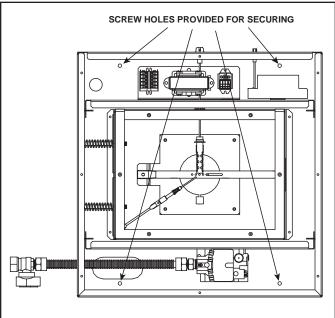


Figure 7.1 Proper positioning, leveling and securing of an appliance

### **A** WARNING





- ALWAYS maintain specified clearances around the appliance.
- Do NOT notch into the framing around the appliance spacers. Failure to keep insulation, framing or other material away from the appliance may cause fire.

### 8

### **Installing Vent Pipe**

### A. Assembly of Vent Sections



### **A** WARNING

Do not mix pipe, fittings or joining methods from different manufacturers.



### WARNING

Fire Risk
Exhaust Fumes Risk
Impaired Performance of Appliance

Overlap pipe slip sections at least 1-1/2 inches.




- Use pilot holes for screws.
- · Screws must not exceed one inch long.
- · Pipe may separate if not properly joined.

### **DVP Series Venting Only**

Attach the first vent components to the starting collar. Attach the slip section (cyclone-12 slip) onto the glass cylinder (see Figure 8.1).

The next section of pipe slips into the slip section and must have an overlap of 1-1/2 inch but no more than 6 inches, to allow the slip section room to slide up for glass removal.

The first section of pipe must be secured to the framing to make it rigid and allow it to support the remaining pipe sections.

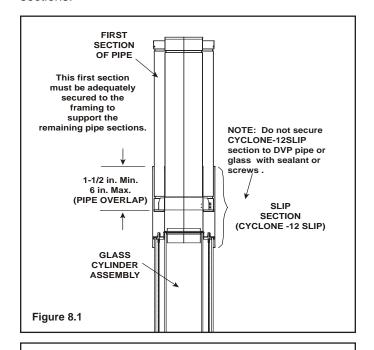

**Note:** It is critical that the relationship of the DVP pipe, Cyclone-12SLIP and glass asembly is installed per specification shown in Figure 8.1. The Cyclone-12SLIP section MUST be able to be manipulated up and down to ensure routine maintenance to the fireplace can be performed.

### Commercial, Multi-family (Multi-level exceeding two stories), & High-Rise Applications

For Installation into Commercial, multi-family (multi-level exceeding two stories) or high-rise applications: All pipe joints must be sealed with high temperature silicone, including the slip section that connects directly to the horizontal termination cap, but not including the CYCLONE-12SLIP.

- Apply a bead of silicone sealant inside the female outer pipe joint prior to joining sections. See Figure 8.2
- Only outer pipes are sealed. Do not seal the inner flue.
   All unit collar, pipe, slip section, elbow and cap outer flues shall be sealed in this manner, unless otherwise stated.

**Note:** The end of the pipe sections with the lances/tabs on it will face toward the appliance.



### **A** WARNING



Fire Risk

Explosion Risk

If slip section seals are broken during the removal of the termination cap, gas will leak and a fire or explosion may occur.

Do not break silicone seals on slip sections.

### **Assembling Pipe Sections**

Insert the inner flue of section A into the flared inner flue of section B.

Start the outer flue of section A over the outer flue of section B (see Figure 8.3). **Note:** The end of the pipe sections with the lances/tabs on it will face towards the appliance.

Once both inner and outer flues are started, press section A onto section B firmly until all lances have snapped into place. Check to make sure they have snapped together (see Figure 8.4) and the seams are not aligned (see Figure 8.5). Tug slightly on section A to confirm it has completely locked into place.

For 90° and 45° elbows that are changing the vent direction from horizontal to vertical, one screw minimum should be put in the outer flue at the horizontal elbow joint to prevent the elbow from rotating.

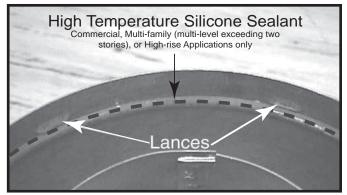


Figure 8.2 Lances


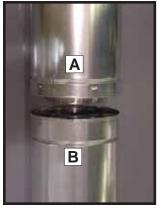




Figure 8.3

Figure 8.4

**Note:** Make sure that the seams are not aligned to prevent unintentional disconnection.

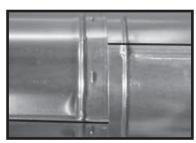

CORRECT

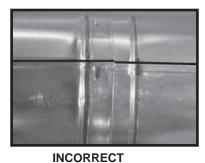


Figure 8.5 Seams

### **Assembling Minimum Installations (MI) Sections**

MI sections are non-unitized so that they can be cut to a certain length. Cut these sections to length from the non-expanded end (see Figure 8.6). For installations into commercial, multi-family (multilevel exceeding two stories) or high-rise applications, it is required to seal MI (non-unitized) pipe with a bead of silicone sealant. Apply to the overlap of outer pipe sections only.

They can then be attached by first connecting the expanded end of the MI inner flue with the inner pipe from the adjacent pipe section and securing with three screws. The expanded portion of the MI inner flue must overlap completely with the unexpanded end of the adjacent pipe section.

The outer flue can then be inserted into the adjacent outer flue expanded end and attached to the next pipe section with three screws. The other end of the MI pipe section can then be attached by fitting another pipe section to it and snapping it together, as normal.

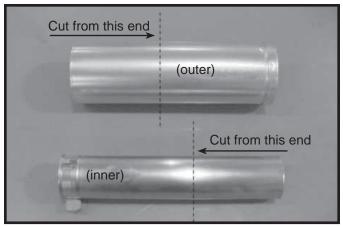


Figure 8.6

### **Assembling DVP-12A Slip Sections**

The outer flue of the slip section should slide over the outer flue of the pipe section and into (inner flue) the last pipe section (see Figure 8.7).

Slide together to the desired length, making sure that a 1-1/2 inch outer flue overlap is maintained between the pipe section and slip section.

The pipe and slip section need to be secured by driving two screws through the overlapping portions of the outer flues using the pilot holes (see Figure 8.8).

This will secure the slip section to the desired length and prevent it from separating. The slip section can then be attached to the next pipe section.

If the slip section is too long, the inner and outer flues of the slip section can be cut to the desired length.

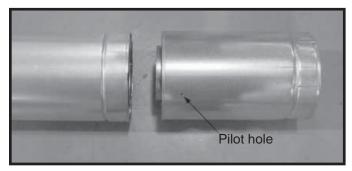


Figure 8.7 Slip Section Pilot Holes

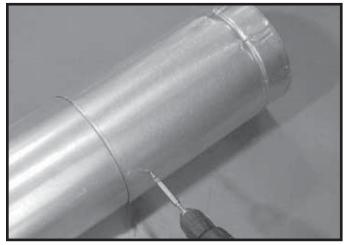


Figure 8.8 Screws into Slip Section

### Securing the Vent Sections

### **Vertical Sections**

Vertical sections of pipe must be supported every 8 feet above the fireplace base. For the Cyclone, there must be an additional vent support (wall bracket) placed around the first section of pipe (see Figure 8.9). The vent support or plumber's strap (spaced 120° apart) may be used.

### **Horizontal Sections**

Horizontal sections of vent must be supported every 5 feet with a vent support or plumber's strap.


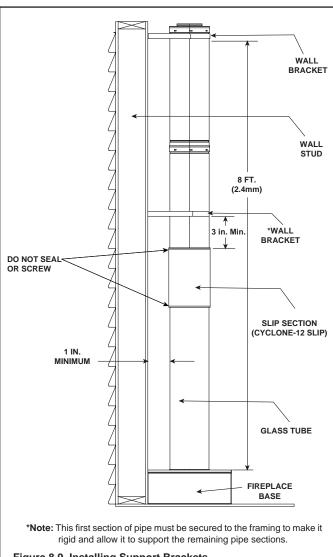


Figure 8.9 Installing Support Brackets

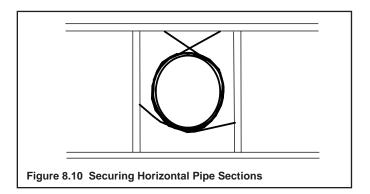

### **B.** Disassembly of Vent Sections

To disassemble any two pieces of pipe, rotate either section (see Figure 8.11), so that the seams on both pipe sections are aligned (see Figure 8.12). They can then be carefully pulled apart.

### **A WARNING**



Fire Risk. Explosion Risk.

Combustion Fume Risk.

Use vent run supports per installation instructions.



Connect vent sections per installation instructions.

- Maintain all clearances to combustibles.
- Do NOT allow vent to sag below connection point to appliance.

Improper support may allow vent to sag or separate.

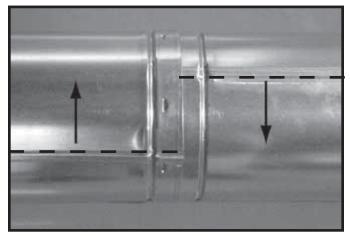


Figure 8.11 Rotate Seams for Disassembly

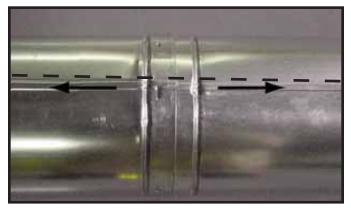


Figure 8.12 Align and Disassemble Vent Sections

### C. Installing Heat Shield and Horizontal Termination Cap

### **A** WARNING



Fire Hazard

Impaired performance of appliance

- Telescoping flue section of termination cap MUST be used when connecting pipe section to termination cap.
- Maintain a 1-1/2 inch minimum overlap on telescoping flue section of termination cap.

\*

### WARNING

Fire Risk

Exhaust Fumes Risk

Impaired Performance of Appliance

- Overlap pipe slip sections at least 1-1/2 inches.
- Use pilot holes for screws.
  - Screws must not exceed 1 inch long.
- · Pipe may separate if not properly joined.

### **Heat Shield Requirements for Horizontal Termination**

For all horizontally vented appliances, a heat shield MUST be placed one inch above the top of the vent between the wall shield firestop and the base of the termination cap.

There are two sections of the heat shield. One section is factory-attached to the wall shield firestop. The other section is factory-attached to the cap. See Figure 8.12.

If the wall thickness does not allow the required 1-1/2 inch (38 mm) heat shield overlap when installed, an extended heat shield (DVP-HSM-B) must be used.

**Important Notice:** Heat shields may <u>not</u> be field constructed.

The extended heat shield (DVP-HSM-B) may need to be cut to length. You will attach the cut heat shield to the existing cap heat shield or wall shield firestop heat shield (refer to Figure 8.12) using the supplied screws. You MUST maintain a 1-1/2 in. (38 mm) overlap of the extended heat shield and the existing shields (both ends of the heat shield). The small leg on the extended heat shield should rest on the top of the vent (pipe section) to properly space it from the pipe section.

### **Installing the Horizontal Termination Cap**

Vent termination must not be recessed in the wall. Siding may be brought to the edge of the cap base.

Flash and seal as appropriate for siding material at outside edges of cap.

When installing a horizontal termination cap, follow the cap location guidelines as prescribed by current **ANSI Z223.1** and **CAN/CGA-B149** installation codes.

### **A** WARNING




Burn Risk

 Local codes may require installation of a cap shield to prevent anything or anyone from touching the hot cap.

NOTE: Where required, an exterior wall flashing is available.

When penetrating a brick wall, a brick extension kit is available for framing the brick.

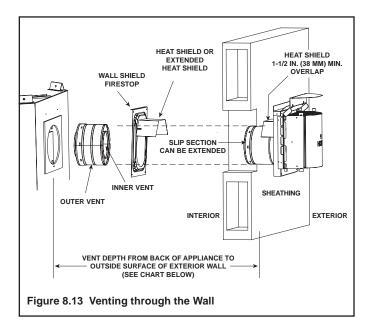

### Cap Specification Chart (depth without using additional pipe sections)


|                  | DVP-TRAPK1<br>Top Vent    | DVP-TRAP1<br>Rear Vent | DVP-TRAPK2<br>Top Vent     | DVP-TRAP2<br>Rear Vent |
|------------------|---------------------------|------------------------|----------------------------|------------------------|
|                  | <u>Depth</u>              | <u>Depth</u>           | <u>Depth</u>               | <u>Depth</u>           |
|                  | 3-1/2 in. to<br>5-3/8 in. | N/A                    | 6 in. to<br>10 in.         | N/A                    |
| Cyclone-<br>Cust |                           |                        |                            |                        |
| Cust             | DVP-HPC1                  | DVP-HPC1               | DVP-HPC2                   | DVP-HPC2               |
|                  | Top Vent                  | Rear Vent              | Top Vent                   | Rear Vent              |
|                  | <u>Depth</u>              | <u>Depth</u>           | <u>Depth</u>               | <u>Depth</u>           |
|                  | 6-1/4 in. to<br>8-3/8 in. | N/A                    | 8-3/8 in. to<br>12-1/2 in. | N/A                    |

DVP-TRAP1 can adjust 1-1/2 in. (3-1/8 to 4-5/8) DVP-TRAP2 can adjust 4 in. (6-9/16 to 10-9/16) DVP-HPC1 can adjust 2-1/8 in. (4-1/4 to 6-3/8) DVP-HPC2 can adjust 4-1/8 in. (6-3/8 to 10-1/2)

### D. Installing Roof Flashing and Vertical Termination Cap

To install roof flashing see Figure 8.14.

For installation of vertical termination cap see minimum vent heights for various pitched roofs (see Figure 8.14).

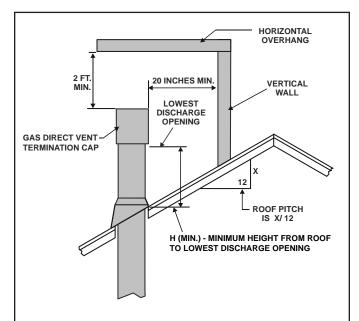

| Roof Pitch          | H (Min.) Ft. |
|---------------------|--------------|
| Flat to 6/12        | 1.0*         |
| Over 6/12 to 7/12   | 1.25*        |
| Over 7/12 to 8/12   | 1.5*         |
| Over 8/12 to 9/12   | 2.0*         |
| Over 9/12 to 10/12  | 2.5          |
| Over 10/12 to 11/12 | 3.25         |
| Over 11/12 to 12/12 | 4.0          |
| Over 12/12 to 14/12 | 5.0          |
| Over 14/12 to 16/12 | 6.0          |
| Over 16/12 to 18/12 | 7.0          |
| Over 18/12 to 20/12 | 7.5          |
| Over 20/12 to 21/12 | 8.0          |

Figure 8.14 Minimum height from roof to lowest discharge opening

\* 3 foot minimum in snow regions

# \*\*\*

### **A** WARNING

Fire Risk.

Explosion Risk.

Inspect external vent cap regularly.

- Ensure no debris blocks cap.
- Combustible materials blocking cap may ignite.
- · Restricted air flow affects burner operation.

Caulk the gap between the roof flashing and the outside diameter of the pipe. Also caulk the perimeter of flashing that contacts roof surface as shown in Figure 8.16.

To attach the vertical termination cap, slide the inner collar of the cap into the inner flue of the pipe section and place the outer collar of the cap over the outer flue of the pipe section.

Secure with three screws into the outer flue. Secure the cap by driving the three self-tapping screws (supplied) through the pilot holes in the outer collar of the cap into the outer flue of the pipe (see Figure 8.15).



Figure 8.14



Figure 8.15

### **Assembling and Installing Storm Collar**



Connect both halves of the storm collar with two screws (see Figure 8.17).

Wrap the storm collar around the exposed pipe section and align brackets. Insert a bolt (provided) through the brackets and tighten nut to complete storm collar assembly (see Figure 8.18).

Slide the assembled storm collar down the pipe section until it rests on the roof flashing.

Caulk around the top of the storm collar (see Figure 8.15).

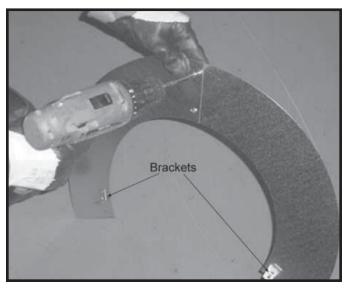


Figure 8.17 Assembling the Storm Collar



Figure 8.18 Assembling the Storm Collar Around the Pipe

# Gas Information

### A. Fuel Conversions

No fuel conversions allowed.

### **B.** Gas Pressures

Proper input pressures are required for optimum appliance performance. Gas line sizing requirements need to be made following NFPA54.

### **A** WARNING



Fire Risk.

Explosion Hazard.

High pressure will damage valve.



- Disconnect gas supply piping BEFORE pressure testing gas line at test pressures above 1/2 psig.
- Close the manual shutoff valve BEFORE pressure testing gas line at test pressures equal to or less than 1/2 psig.

### **A** WARNING



Verify inlet pressures.

- High pressure may cause overfire condition.
- · Low pressure may cause explosion.



 Verify minimum pressures when other household gas appliances are operating.

Install regulator upstream of valve if line pressure is greater than 1/2 psig.

Pressure requirements for appliance are shown in the table below. Minimum pressures must be met when other household gas appliances are operating.

| Pressure                   | Natural Gas      |
|----------------------------|------------------|
| Minimum inlet pressure     | 5.0 inches w.c.  |
| Maximum inlet gas pressure | 14.0 inches w.c. |
| Manifold pressure          | 3.5 inches w.c.  |

### C. Gas Connection

**Note:** Have the gas supply line installed in accordance with local building codes, if any. If not, follow ANSI 223.1. Installation should be done by a qualified installer approved and/or licensed as required by the locality. (In the Commonwealth of Massachusetts installation must be performed by a licensed plumber or gas fitter).

**Note:** A listed (and Commonwealth of Massachusetts approved) 1/2 inch (13 mm) T-handle manual shut-off valve and flexible gas connector are connected to the 1/2 inch (13 mm) control valve inlet.

 If substituting for these components, please consult local codes for compliance.

Refer to **Reference Section 16** for location of gas line access in appliance.

Note: Gas line may be run from either side of the appliance provided the hole in the outer wrap does NOT exceed 2-1/2 inches in diameter and does not penetrate the firebox.



### **A** WARNING

Gas Leak Risk

 Support control when attaching pipe to prevent bending gas line.

**Note:** The gap between supply piping and gas access hole may be caulked with high temperature caulk or stuffed with non-combustible, unfaced insulation to prevent cold air infiltration.

- Ensure that gas line does not come in contact with outer wrap of appliance. Follow local codes.
- Incoming gas line should be piped into the valve compartment and connected to the 1/2 inch connection on the manual shutoff valve.



### **A** WARNING

Fire or Explosion Hazard

- Gas buildup during line purge may ignite.
- Purge should be performed by qualified technician.
- Ensure adequate ventilation.
- Ensure there are no ignition sources such as sparks or open flames.
- A small amount of air will be in the gas supply lines.
   When first lighting appliance it will take a short time for air to purge from lines. When purging is complete the appliance will light and operate normally.

### **A** WARNING



CHECK FOR GAS LEAKS

**Explosion Risk** 

Fire Risk

Asphyxiation Risk

- · Check all fittings and connections.
- · Do not use open flame.



 After the gas line installation is complete, all connections must be tightened and checked for leaks with a commercially-available, non-corrosive leak check solution. Be sure to rinse off all leak check solution following testing.

Fittings and connections may have loosened during shipping and handling.



### **A** WARNING

Fire hazard.

Do NOT change the valve settings.

- This valve has been preset at the factory.
- Changing valve settings may result in fire hazard or bodily injury.

#### HIGH ALTITUDE INSTALLATIONS

U.L. Listed gas appliances are tested and approved without requiring changes for elevations from 0 to 2000 feet in the U.S.A. and Canada.

When installing this appliance at an elevation above 2000 feet, it may be necessary to decrease the input rating by changing the existing burner orifice to a smaller size. Input rate should be reduced by 4% for each 1000 feet above a 2000 foot elevation in the U.S.A., or 10% for elevations between 2000 and 4500 feet in Canada. If the heating value of the gas has been reduced, these rules do not apply. To identify the proper orifice size, check with the local gas utility.

If installing this appliance at an elevation above 4500 feet (in Canada), check with local authorities.

### **10** Electrical Information

### A. Recommendation for Wire

This appliance requires 110-120 VAC be wired directly to the transformer. See Figure 10.1.

 Ensure that the electrical service being installed to the appliance is turned "OFF" by verifying with a volt meter



### **A** WARNING

Shock hazard.

Wire 110V to transformer.

Do NOT wire 110V to valve.

DO NOT WITCH THOU TO VAIVE.

- Do NOT wire 110V to wall switch.

   Incorrect wiring will damage millivolt valves.
- Incorrect wiring will override HSI safety lockout and may cause explosion.
- Bring the electrical service wire through the wire restraint located on the right side of the appliance. Leave about 10 inches of electric service wire inside the appliance to permit for future service maintenance.
- 3. Locate the (2) female insulated connectors installed on the transformer and the (1) ground connector screwed to the right side of the transformer bracket.

**Note:** The factory installed yellow female insulated connectors (2) and yellow ground connector (1) are designed for use with 10/12 AWG wire. If another gauge wire is being used, these connectors should be replaced with the appropriate gauge insulated connectors to ensure a proper connection. See Figure 10.2.

- 4. Route electrical service wires through plastic grommet as show in Figure 10.1. This plastic grommet is located on the right side of the Transformer bracket.
- Connect the L1 (Black) service wire to the supplied yellow female insulated connector located on transformer terminal (23) using a wire crimping tool. See Figure 10.2.

- Connect the neutral (White) service wire to the yellow female insulated connector located on transformer terminal (1) using a wire crimping tool. See Figure 10.2.
- 7. Connect the ground (Green) wire to the 1/4 in. ground screw located on the front right of the transformer bracket. See Figure 10.2.

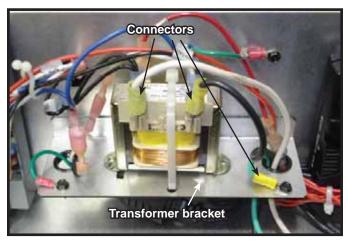


Figure 10.2

**Note:** The system is polarity sensitive. Polarity must be correct for this fireplace to operate correctly.

**Note:** This appliance must be electrically wired and grounded in accordance with local codes or, in the absence of local codes, with **National Electric Code ANSI/NFPA 70-latest edition** or the **Canadian Electric Code, CSA C221.1**.

A 110-120 VAC circuit for this product must be protected
with ground-fault circuit-interrupter protection, in
compliance with the applicable electrical codes, when
it is installed in locations such as in bathrooms or near
sinks.

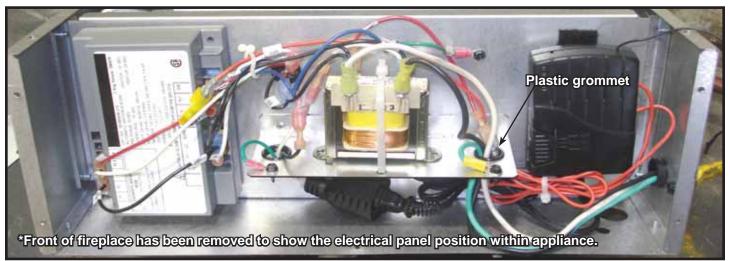


Figure 10.1 Electrical Panel position inside Appliance with Front removed.

### B. Connecting to the Appliance



### **A WARNING**

Wire 110V to terminal block.

Do NOT wire 110V to valve.

Do NOT wire 110V to wall switch.

- W
- · Incorrect wiring will damage this valve.
- Incorrect wiring will override HSI safety lockout and may cause explosion.
- This appliance comes factory wired with a remote control for operation. The remote can be removed and the appliance can be wired to run off of a standard wall switch. Refer to the wiring diagram for more information.
- Keep wire lengths short as possible by removing any excess wire length.
- Low voltage and 110 VAC voltage cannot be shared within the same wall box.

### C. Hot Surface Ignition Wiring

This appliance requires a 110 VAC supply to the appliance terminal block for operation. A wiring diagram is shown in Figure 10.9. This appliance is equipped with a 24V valve.

### **Optional Accessories Requirements**

Wiring for optional accessories should be done now to avoid reconstruction.

### **CAUTION**


Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.



### **A** WARNING

Shock hazard.


- Replace damaged wire with type 105° C rated wire.
- Wire must have high temperature insulation.

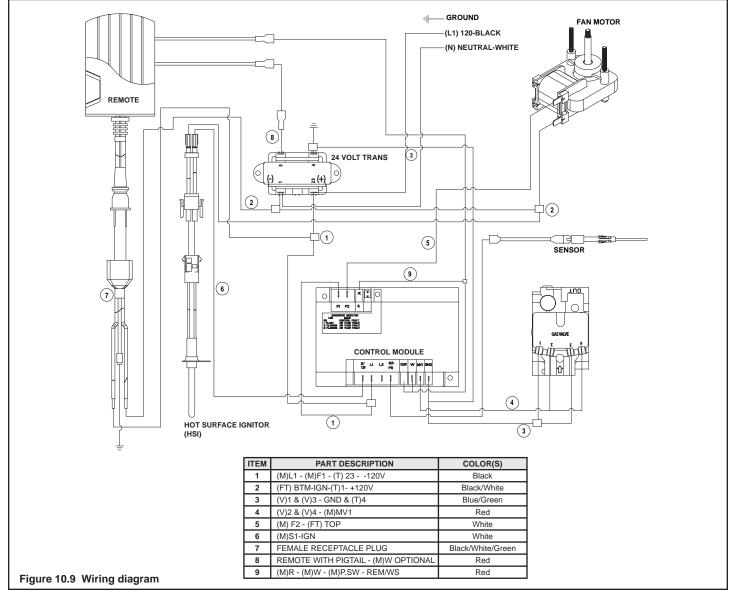

### **Finishing**

### A. Mantel Projections

This appliance is approved to be installed with a clearance to the ceiling and/or other projections of 34-3/8 inch minimum from the top of the fireplace (see Figure 11.1).

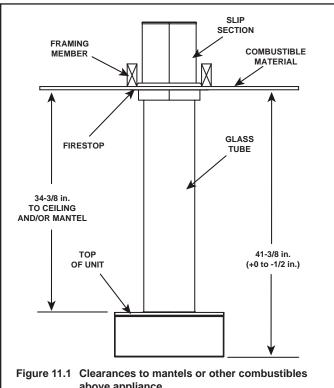

above appliance

### **B.** Facing Material



### **A WARNING**

Fire Risk.

Do NOT obstruct air inlet or outlet grilles. Do NOT modify grilles.

· Modifying or covering grilles could cause temperature rise and fire hazard.

Finishing materials must not interfere with:

- · Air flow through grilles or louvers.
- · Operation of louvers or doors.
- · Access for service.




### **A** WARNING

Fire Risk.


Finish all edges and fronts to clearances and specifications listed in manual.

- Install combustible materials only up to specified clearances on top, front and side.
- Seal joints between the finished wall and appliance top and sides using only a 300° F minimum sealant.

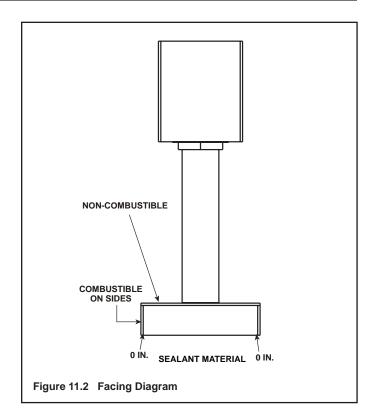

Sheetrock or other finishing materials can be brought to within 0 inches on the sides and bottom.

Finishing materials for the top of the fireplace base must be noncombustible and removable for access to controls. All clearances must be maintained (see Figure 11.3).

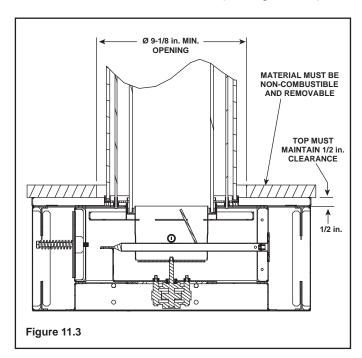

### **12** Appliance Setup

### A. Remove Shipping Materials

Remove shipping materials from inside or underneath the firebox.

### B. Clean the Appliance

Clean/vacuum any sawdust that may have accumulated inside the firebox or underneath in the control cavity.

### C. Accessories

Install approved accessories per instructions included with accessories. See Service Parts List for appropriate accessories. Refer to **Section 15.** 



### **A** WARNING

Shock or fire risk.

Use ONLY optional accessories approved for this appliance.



- · Using non-listed accessories voids warranty.
- Using non-listed accessories may result in a safety hazard.
- Only Hearth & Home Technologies approved accessories may be used safely.

### D. Glass Assembly Installation



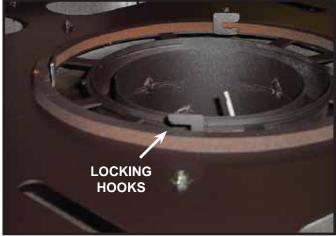


Figure 12.1

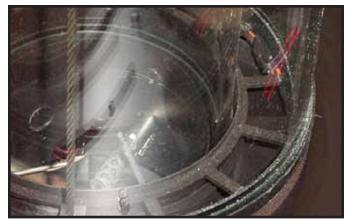

**Figure 12.2** Position the bottom of the glass assembly by centering it on the platform as shown.

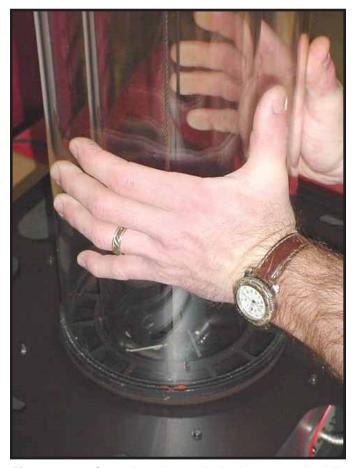

**Figure 12.3** Once the glass cylinder is centered, while pushing down, twist the glass cylinder clockwise to engage the locking hooks. Turn the glass cylinder counterclockwise while pushing down to remove.

# 13 Operating Instructions

### A. Before Lighting Appliance

Before operating this appliance have a qualified technician:

- Remove all shipping materials from inside and/or underneath the firebox.
- · Check the wiring.
- · Ensure that there are no gas leaks.
- Ensure that the glass is sealed and in the proper position.
- Ensure that the flow of combustion and ventilation air is not obstructed (front grilles and vent caps).



### **A** WARNING

Glass cylinder must be in place when appliance is operating.



#### Risk of:

- · Combustion Fumes
- Fire

Do NOT operate appliance with glass cylinder removed.

- · Remove glass cylinder for servicing only.
- Glass replacement should be done by qualified technician, qualified technician.

### **A** WARNING



#### **HOT SURFACES!**

Glass and other surfaces are hot during operation AND cool down.

### Hot glass will cause burns.

- Do not touch glass until it is cooled
- NEVER allow children to touch glass
- Keep children away
- CAREFULLY SUPERVISE children in same room as fireplace.
- Alert children and adults to hazards of high temperatures.

### High temperatures may ignite clothing or other flammable materials.

 Keep clothing, furniture, draperies and other flammable materials away.

This appliance has been supplied with an integral barrier to prevent direct contact with the fixed glass panel. Do NOT operate the appliance with the barrier removed.

Contact your dealer or Hearth & Home Technologies if the barrier is not present or help is needed to properly install one.

### **A** WARNING

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to the owner's information manual provided with this appliance. For assistance or additional information consult a qualified installer, service agency or the gas supplier.

### **A** WARNING

Do NOT use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

### **HSI** Ignition

## J FOR YOUR SAFETY L READ BEFORE LIGHTING

**WARNING:** If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- **A.** This appliance is equipped with an hot surface ignition device which automatically lights the burner. Do not try to light the burner by hand.
- B. BEFORE LIGHTING, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

#### WHAT TO DO IF YOU SMELL GAS

- · Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- · Immediately call your gas supplier

**WARNING:** 

### **CAUTION:**

from a neighbor's phone. Follow

the gas supplier's instructions.

• If you cannot reach your gas su-

C. Do not use this appliance if any

part has been under water. Imme-

diately call a qualified service tech-

nician to inspect the appliance and

to replace any part of the control

system and any gas control which

has been under water.

pplier, call the fire department.

### DO NOT CONNECT 110 VAC TO THE CONTROL VALVE.

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to the owner's information manual provided with this appliance.

This appliance needs fresh air for safe operation and must be installed so there are provisions for adequate combustion and ventilation air.

If not installed, operated, and maintained in accordance with the manufacturer's instructions, this product could expose you to substances in fuel or fuel combustion which are known to the State of California to cause cancer, birth defects, or other reproductive harm.

Keep burner and control compartment clean. See installation and operating instructions accompanying appliance.

Final inspection by \_\_\_\_\_

Hot while in operation. Do not touch. Keep children, clothing, furniture, gasoline and other liquids having flammable vapors away.

Do not operate the appliance with panel(s) removed, cracked or broken. Replacement of the panel(s) should be done by a licensed or qualified service person.

### NOT FOR USE WITH SOLID FUEL

This appliance is only for use with the type(s) of gas indicated on the rating plate. This appliance is not convertible to other gases.

### Also Certified for Installation in a Bedroom or a Bedsitting Room.

For assistance or additional information, consult a qualified installer, service agency or the gas supplier.

For additional information on operating your Hearth & Home Technologies fireplace, please refer to www.fireplaces.com.

### 

- 1. Turn off all electric power to the appliance.
- This appliance is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
- 3. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in the Safety Information located on the left side of this label. If you don't smell gas, go to next step.
- **4.** Turn on all electric power to the appliance.
- **5.** To light the burner, flip the ON/OFF switch to the "ON" position. (The ON/OFF switch may include a wall switch if so equipped).
- It will take 15 to 30 seconds for the hot surface ignitor to warm-up before an ignition attempt is made.
- 7. If the appliance will not operate, follow the instructions "To Turn Off Gas to Appliance" and call your service technician or gas supplier.

# GAS TO APPLIANCE

- Turn off all electric power to the appliance if service is to be performed.
- 2. Flip ON/OFF switch to the "OFF" position.
- 3. Turn gas off to this unit.

2073-913C

### C. After Appliance is Lit

#### Initial Break-in Procedure

When you light the appliance, you may notice that it produces heat which does have an associated odor or smell. If you feel this odor is excessive it may require the initial three to four hour continuous burn on high followed by a second burn up to 12 hours to fully drive off any odor from paint and lubricants used in the manufacturing process. Condensation of the glass is normal.

**Note:** The appliance should be run three to four hours on the initial start-up. Turn it off and let it cool completely. Remove and clean the glass. Replace the glass and run the appliance for an additional 12 hours. This will help to cure the products used in the paint and logs.

During this break-in period it is recommended that some windows in the house be opened for air circulation. This will help avoid setting off smoke detectors, and help eliminate any odors associated with the appliance's initial burning.

### **A** WARNING



Fire Risk.

High Temperatures.

Keep combustible household items away from appliance.

Do NOT obstruct combustion and ventilation air.

- Do NOT place combustible items on top of or in front of appliance.
- Keep furniture, draperies away from appliance.

### **CAUTION**

- Prevent accidental appliance operation when not attended.
- Unplug or remove batteries from remote control if absent or if appliance will not be used for an extended period of time
- Property damage possible from elevated temperatures.

### CAUTION

Smoke and odors released during initial operation.

- Open windows for air circulation.
- · Leave room during initial operation.
- Smoke may set off smoke detectors.

Smoke and odors may be irritating to sensitive individuals.

### **A WARNING**





Keep combustible materials, gasoline and other flammable vapors and liquids clear of appliance.

- Do NOT store flammable materials in the appliance's vicinity.
- Do NOT use gasoline, lantern fuel, kerosene, charcoal lighter fluid or similar liquids in this appliance.
- · Combustible materials may ignite.

### D. Frequently Asked Questions

| ISSUE                     | SOLUTIONS  |
|---------------------------|--|
| Condensation on the glass | This is a result of gas combustion and temperature variations. As the appliance warms, this condensation will disappear.   |
| Blue flames               | This is a result of normal operation and the flames will begin to yellow as the appliance is allowed to burn for 8 to 5 minutes.   |
| Odor from appliance       | When first operated, this appliance may release an odor for the first several hours. This is caused by the curing of the paint and the burning off of any oils remaining from manufacturing. Odor may also be released from finishing materials and adhesives used around the appliance. |
| Film on the glass         | The glass cylinder can be cleaned with standard household glass cleaner. See glass assembly installation section for removal information.  |
| Metallic noise            | Noise is caused by metal expanding and contracting as it heats up and cools down, similar to the sound produced by a furnace or heating duct. This noise does not affect the operation or longevity of the fireplace.  |

### **Maintaining and Servicing Appliance**

Although the frequency of appliance servicing and maintenance will depend on use and the type of installation, a qualified service technician should perform an appliance checkup at the beginning of each heating season.

### **A** WARNING

Risk of injury or property damage.

### Before servicing:

- · Turn off gas.
- Turn off electricity to appliance.
- Disable remote control, if one is present.
- · Ensure appliance is completely cooled.

#### After servicing:

- · Replace any screen or barrier that was removed.
- · Reseal and reinstall any venting removed for servicing.

### **A** WARNING

Annual inspection by qualified technician recommended.

#### Check:

- · Condition of doors, surrounds and fronts.
- · Condition of glass, glass assembly and glass seal.
- · Obstructions of combustion and ventilation air.
- · Condition of firebox.
- Burner ignition and operation.
- · Gas connections and fittings.
- Obstructions of termination cap.

#### Clean:

- Glass
- Air passageways, grilles, control compartment
- · Burner, burner ports

### Risk of:

- Fire
- · Delayed ignition or explosion
- Exposure to combustion fumes
- Odors

 




# \*

### **A** WARNING

Inspect external vent cap regularly.



- Combustible materials blocking cap may ignite.
- Restricted air flow affects burner operation.



### **CAUTION**

Handle glass assembly with care.

Note: Clean glass after initial 3-4 hours operation. Longer operation without cleaning glass may cause a permanent white film on glass.

### When cleaning glass assembly:

- · Avoid striking, scratching or slamming glass.
- · Do NOT use abrasive cleaners.
- Use a hard water deposit glass cleaner on white film.
- Do NOT clean glass when hot.
- Turn off appliance after 3-4 hours of operation and ALLOW TO COOL.
- · Remove and clean glass assembly.
- Replace glass assembly and operate appliance for additional 12 hours.


Refer to maintenance instructions.

### A. Fan Motor Service


To service the fan motor, remove the glass assembly (see Glass Assembly Removal Instructions) and remove all screws from the top.




Figure 14.1

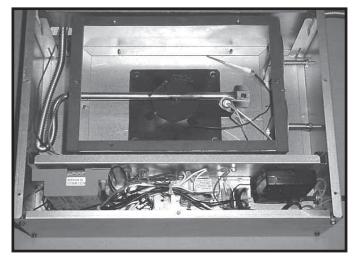

**Figure 14.2** The glass platform plate can now be removed by removing the 13 screws on the outer edge of this platform. Lift the platform. The HSI (Hot Surface Ignitor) and the sensor wire can be unplugged. Set platform aside.

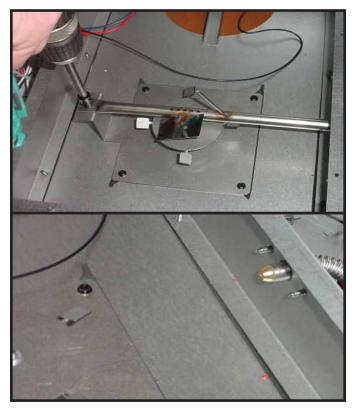

**Figure 14.3** Remove the tube burner. It is held in place with one screw. Pull the burner tube away from orifice holder, rotating burner tube slightly, and remove it from the orifice.

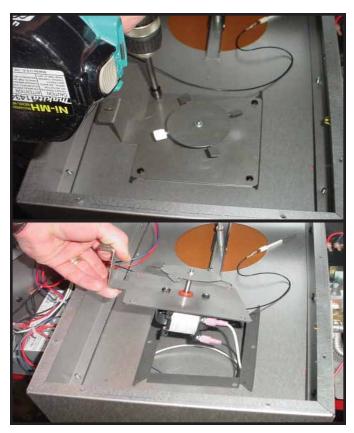

**Figure 14.4** The fan plate can now be accessed. Remove the four screws. Lift the fan plate, being careful to not cut or scar wiring while disconnecting them from the fan motor.


### **B.** Maintenance Tasks

| Inspect                           | Maintenance Tasks  |
|-----------------------------------|--|
|                                   | Inspect for scratches, dents or other damage and repair as necessary.  |
| Doors, Surrounds and Fronts       | 2. Verify no obstructions to airflow through the louvers.  |
|                                   | 3. Verify maintenance of proper clearance to combustible household objects.  |
|                                   | 1. Inspect gasket seal and its condition.  |
| Gasket Seal, Glass                | 2. Inspect glass cylinder for scratches and nicks that can lead to breakage when exposed to heat.  |
| Assembly and Glass                | 3. Confirm there is no damage to glass or glass frame. Replace as necessary.   |
|                                   | 4. Clean glass. Replace glass assembly if severely coated with silicate deposits that cannot be removed.   |
|                                   | <ol> <li>Vacuum and wipe out dust, cobwebs, debris or pet hair. Use caution when cleaning these areas. Screw<br/>tips that have penetrated the sheet metal are sharp and should be avoided.</li> </ol> |
| Valve Compartment and Firebox Top | 2. Remove any foreign objects.   |
|                                   | 3. Verify unobstructed air circulation.  |
|                                   | 1. Verify burner is properly secured and aligned with pilot or igniter.  |
|                                   | 2. Clean off burner top, inspect for plugged ports, corrosion or deterioration. Replace burner if necessary.   |
|                                   | 3. Check for smooth lighting and ignition carryover to all ports. Verify there is no ignition delay.   |
| Burner Ignition and Operation     | 4. Inspect for lifting or other flame problems.  |
|                                   | 5. Verify air shutter is clear of dust and debris.   |
|                                   | 6. Inspect orifice for soot, dirt or corrosion.  |
|                                   | 7. Verify manifold and inlet pressures. Adjust regulator as required.  |
|                                   | 1. Inspect venting for blockage or obstruction such as bird nests, leaves, etc.  |
|                                   | 2. Confirm that termination cap remains clear and unobstructed by plants, etc.   |
| Venting                           | <ol><li>Verify that termination cap clearance to subsequent construction (building additions, decks, fences or<br/>sheds) has been maintained.</li></ol>   |
|                                   | 4. Inspect for corrosion or separation.  |
|                                   | 5. Verify weather stripping, sealing and flashing remains intact.  |
| Remote controls                   | 1. Verify operation of remote.   |

## 15 Reference Materials

### A. Appliance Dimension Diagram

Dimensions are actual appliance dimensions. Use for reference only. For framing dimensions and clearances refer to Section 3.

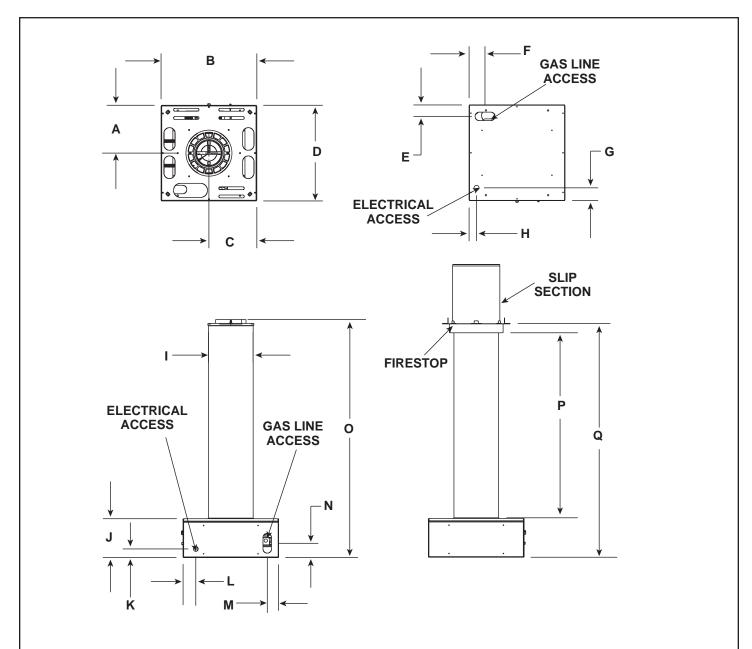


| Location | Inches | Millimeter |
|----------|--------|------------|
| А        | 8/12   | 215        |
| В        | 17     | 430        |
| С        | 8-1/2  | 215        |
| D        | 17     | 430        |
| Е        | 2      | 51         |
| F        | 2-3/4  | 71         |

| Location | Inches | Millimeter |
|----------|--------|------------|
| G        | 2-1/4  | 58         |
| Н        | 1-1/4  | 33         |
| Ī        | 7-7/8  | 200        |
| J        | 6-7/8  | 174        |
| K        | 1-1/2  | 39         |
| L        | 2-1/4  | 57         |

| Location | Inches | Millimeter |
|----------|--------|------------|
| М        | 2      | 51         |
| N        | 2-1/2  | 64         |
| 0        | 42-1/8 | 1069       |
| Р        | 32-3/4 | 831        |
| Q        | 41-3/8 | 1050       |
|          |        |            |


Figure 15.1 Appliance Dimensions


### **B. Vent Components Diagrams**

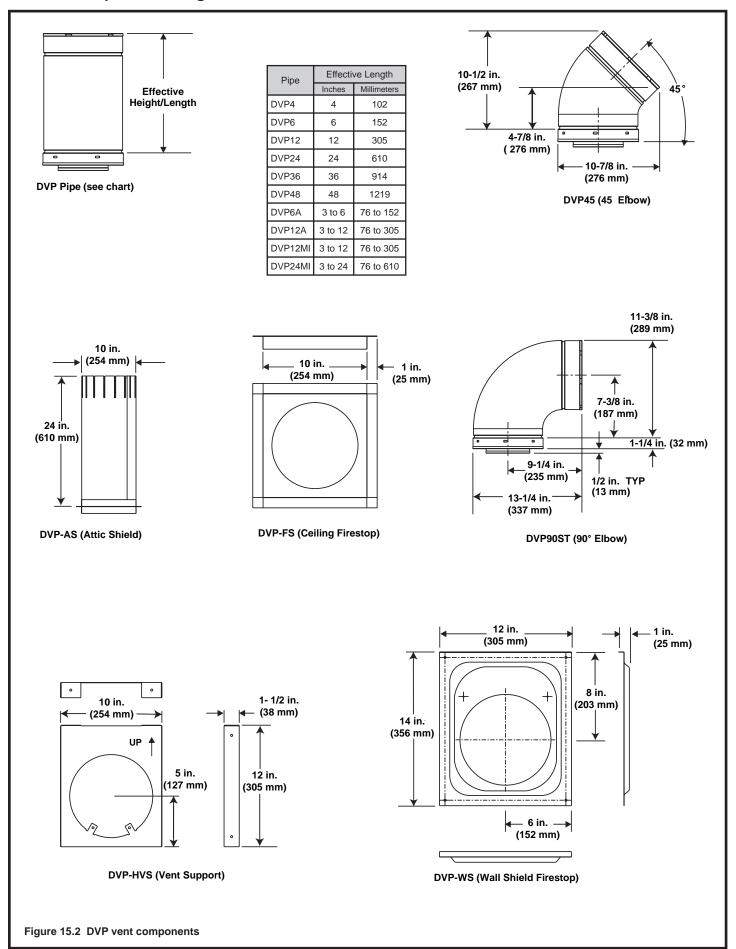


### **B. Vent Components Diagrams (continued)**

Note: Heat shields MUST overlap by a minimum of 1-1/2 in. (38 mm). The heat shield is designed to be used on a wall 4 in. to 7-1/4 in. (102 mm to 184 mm) thick. If wall thickness is less than 4 in. (102 mm) the existing heat shields must be field trimmed. If wall thickness is greater than 7-1/4 in. (184 mm) a DVP-HSM-B will be required.

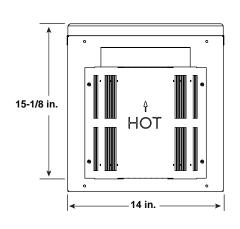


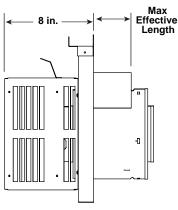


**DVP-TRAP SERIES Horizontal Termination Cap** 

 


| Term Cap | Minimum<br>Effective Length | Maximum<br>Effective Length |  |
|----------|-----------------------------|-----------------------------|--|
| Trap1    | 3-1/8 in.                   | 4-5/8 in.                   |  |
|          | 79 mm                       | 117 mm                      |  |
| Tron2    | 5-3/8 in.                   | 9-3/8 in.                   |  |
| Trap2    | 137 mm                      | 238 mm                      |  |

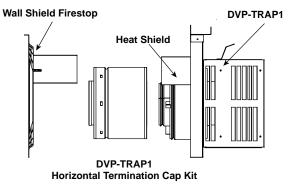


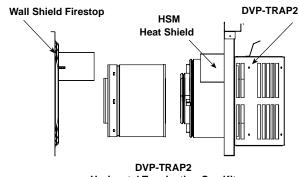

**Horizontal Termination Cap Kit** (Shown with optional extended heat shield)

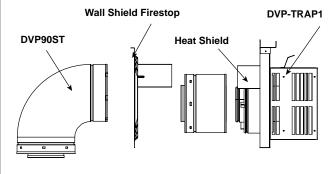


**DVP-TRAPK1 Horizontal Termination Cap Kit** 

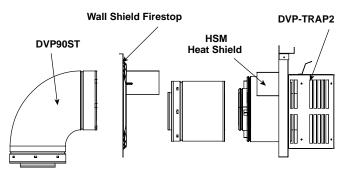

DVP-TRAPK2 **Horizontal Termination Cap Kit** 

Figure 15.3 DVP vent components


### **B. Vent Components Diagrams (continued)**

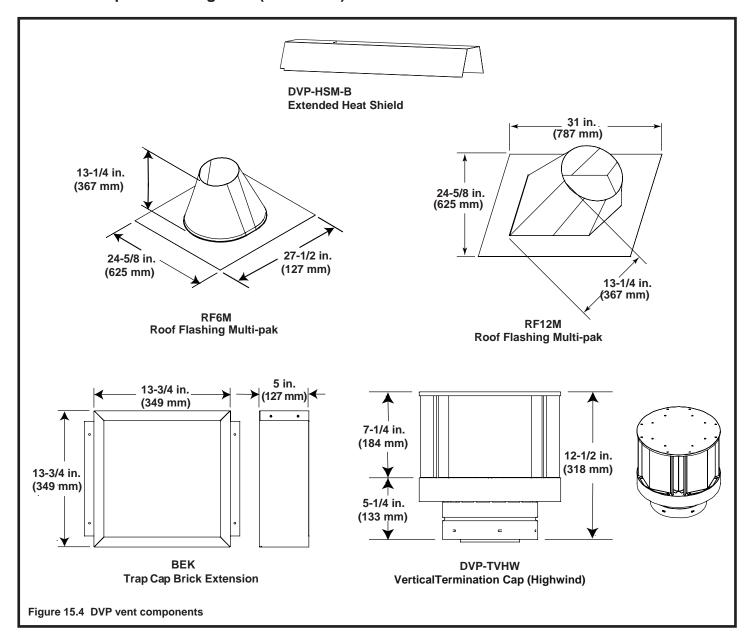

No one builds a better fire

**Service Parts Diagram** 

Beginning Manufacturing Date: May 2004 Ending Manufacturing Date: \_\_\_\_\_

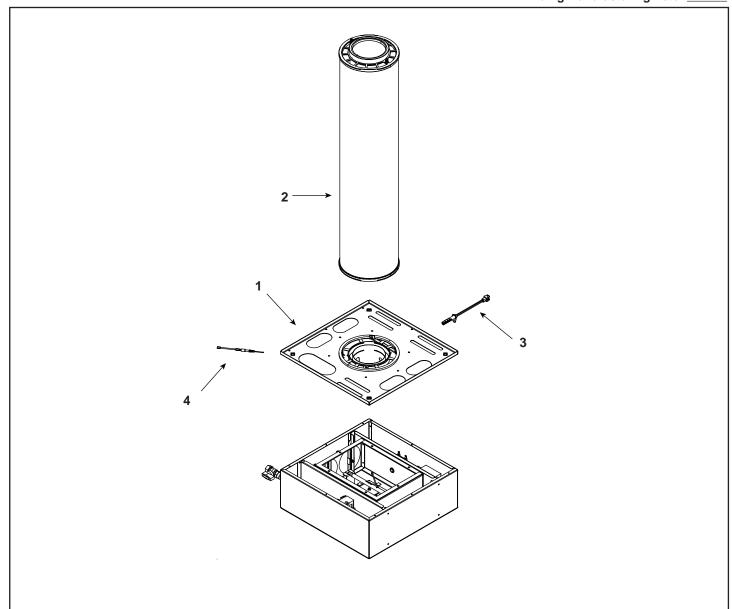

IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

|--|

Stocked at Depot


| ITEM | DESCRIPTION        | COMMENTS      | PART NUMBER |   |
|------|--------------------|---------------|-------------|---|
| 1    | Top Cover Assembly |               | 2061-005    |   |
| 2    | Tube Assembly      |               | 2061-015    |   |
| 3    | lanitor            | Pre Aug 2007  | SRV2061-165 | Υ |
|      | Ignitor            | Post Aug 2007 | 2061-165    | Υ |
| 4    | Flame Sensor       |               | 2061-142    | Υ |
|      | Fan Blade          |               | 2061-108    |   |
|      | Flue Restrictor    | 2.5" Hole     | 2061-203    |   |
|      | Flue Restrictor    | 2.75" Hole    | 2061-204    |   |

Additional service part numbers appear on following page.

No one builds a better fire

**Valve Assembly Parts List** 

Beginning Manufacturing Date: May 2004
Ending Manufacturing Date: \_\_\_\_\_

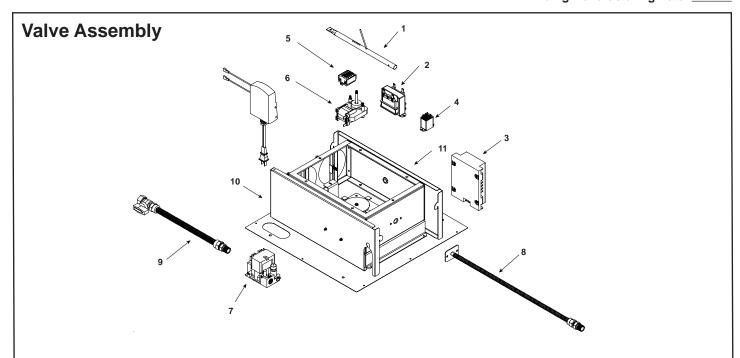

IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

| in this manual may be ordered from an authorized dealer. |                             |               |             |          |  |
|--|-----------------------------|---------------|-------------|----------|--|
| ITEM   | DESCRIPTION                 | COMMENTS      | PART NUMBER | at Depot |  |
| 1  | Burner Tube                 |               | 2073-025    | Υ        |  |
| 2  | Transformer                 |               | 060-599     | Υ        |  |
| 3  | Control Module              | Pre Feb 2005  | 2061-138    | Υ        |  |
|  | Control Module              | Post Feb 2005 | SRV2061-592 | Υ        |  |
| 4  | Dolov Colder / Diverte      | Pre Feb 2005  | 2073-158    | Υ        |  |
|  | Relay Solder / Plug In      | Post Feb 2005 | N/A         |          |  |
| 5  | Targetta al Diagle          | Pre Aug 2007  | 2073-157    | Y        |  |
|  | Terminal Block              | Post Aug 2007 | N/A         |          |  |
| 6  | Fan Motor, 120 V, 60H2, 71A |               | 2061-308    | Υ        |  |
| 7  | Floatiis Valva              | Pre Nov 2005  | 31828       | Υ        |  |
|  | Electric Valve              | Post Nov 2005 | 2061-023    | Y        |  |
| 8  | Flex Tube                   |               | 2005-009    | Υ        |  |
| 9  | Flex Ball Valve Assembly    |               | 302-320A    | Υ        |  |
| 10   | Llact Chiald                | Pre Feb 2006  | 2061-180    |          |  |
|  | Heat Shield                 | Post Feb 2006 | 2061-209    |          |  |
| 11   | Heat Shield                 |               | 2061-177    |          |  |
|  | Orifice (#50C)              |               | 582-850     | Υ        |  |
|  | Wire Bundle Assembly        | Pre Aug 2007  | 2073-009    | Υ        |  |
|  | Wire Bundle Assembly        | Post Aug 2007 | 2073-050    | Υ        |  |

### → D. Limited Lifetime Warranty

### **Hearth & Home Technologies LIMITED WARRANTY**

Hearth & Home Technologies ("HHT") and its respective brands extends the following warranty for HHT gas, wood, pellet and electric appliances purchased from an authorized HHT dealer and installed in the United States of America or Canada. Warranty starts with date of purchase by the original owner (End User) except as noted for replacement parts.

| Warranty Period     |  | HHT Manufactured Appliances and Venting |      |        |             |          |         |   |
|---------------------|--|---|------|--------|-------------|----------|---------|---|
| Parts               | Labor  | Gas                                     | Wood | Pellet | EPA<br>Wood | Electric | Venting | Components Covered  |
|                     |  |   |      |        |             |          |         |   |
| 1 Y                 | ear ear  | Х                                       | ×    | Х      | Х           | ×        | Х       | All Parts and Material Except as covered by Conditions, Exclusion, and Limitations listed |
|                     |  |   |      |        |             |          |         |   |
| 2.4                 |  |   |      | Х      | Х           |          |         | Igniters, Electronic Components, and Glass  |
| 2 y€                | ears   | Х                                       | Х    | Х      | Х           |          |         | Blowers   |
|                     |  |   | Х    |        |             |          |         | Molded Refractory Panels  |
|                     |  |   |      |        |             |          |         |   |
| 3 у                 | ears   |   |      | Х      |             |          |         | Firepots  |
| _                   |  |   |      |        |             |          |         | I 0 " 0 D "   |
| 5 years             | 3 years  |   |      | X      | X           |          |         | Castings & Baffles  |
|                     | Ι  |   | Ι    |        | I           |          | Ι       | Firebox, HHT Chimney,   |
| 7 years             | 3 years  |   | X    | Х      | X           |          |         | Termination & Heat Exchanger  |
|                     |  |   |      |        |             |          |         |   |
| 10 years            | 1 year   | Х                                       |      |        |             |          |         | Burners, Logs & Refractory  |
|                     |  |   |      |        |             |          |         |   |
| Limited<br>Lifetime | 1 year   | Х                                       |      |        |             |          |         | Firebox & Heat Exchanger  |
|                     |  |   |      |        |             |          |         |   |
| 90 Days             |  | Х                                       | X    | Х      | X           | X        | X       | All Replacement Parts   |
|                     |  |   |      |        |             |          |         |   |
|                     | See Conditions, Exclusions, and limitations. 9-01-08 |   |      |        |             |          |         |   |

### **CONDITIONS, EXCLUSIONS & LIMITATION OF LIABILITY**

- This warranty applies to the original owner and is transferable up to two years from date of purchase to the new homeowner, provided the purchase was made through an authorized dealer or distributor of HHT, and the appliance remains in its original place of installation.
- The maximum amount recoverable under this warranty is limited to the purchase price of the product.
- In no event shall HHT be liable for any incidental or consequential damages caused by defects in the product.
- Adjustments, regular maintenance, cleaning and temporary repairs, or the failure to duplicate the problem in the home is not covered under this warranty.

### D. Limited Lifetime Warranty (continued)

- This limited warranty does not extend to or include surface finish on the appliance or terminations, door gasketing, glass
  gasketing, glass discoloration, firebrick, pellet logs, kaowool or other ceramic insulating materials. Rust and/or corrosion
  on any of the metal surfaces, cast iron components, baffles, firepots, doors, or firebox area are not covered by this
  warranty.
- Noise resulting from minor expansion, contraction, or movement of certain parts is normal and complaints related to this
  noise are not covered by this warranty.
- HHT's obligation under this warranty does not extend to damages resulting from: (1) installation, operation or maintenance of the appliance not in accordance with the installation instructions; operating instructions and the listing agent identification label furnished with the appliance; (2) installation which does not comply with local building codes; (3) shipping, improper handling, improper operation, abuse, misuse, accident or unworkmanlike repairs; (4) environmental conditions, inadequate ventilation or drafting caused by tight sealing construction of the structure or handling devices such as exhaust fans or forced air furnaces or other such causes; (5) use of fuels other than those specified in the operating instructions; (6) installation or use of components not supplied with the appliance or any other components not expressly authorized and approved by HHT; and/or (7) modification of the appliance not expressly authorized and approved by HHT in writing.
- This warranty does not apply to non-HHT venting components, hearth components or other accessories used in conjunction with the installation of this product.
- This warranty is void if the appliance has been over-fired or operated in atmospheres contaminated by chlorine, fluorine, or other damaging chemicals the appliance is subject to prolonged periods of dampness or condensation, or there is any damage to the appliance or other components due to water or weather damage which is the result of, but not limited to, improper chimney or venting installation.
- HHT's liability under this warranty is limited to the replacement and repair of defective components or workmanship during
  the applicable period. HHT may fully discharge all of its obligations under such warranties by repairing the defective
  component(s) at HHT's discretion. Shipping costs are not covered under this warranty.
- Some states do not allow exclusions or limitation of incidental or consequential damages, so those limitations may not apply to you. This warranty gives you specific rights; you may also have other rights, which vary from state to state.
- EXCEPT TO THE EXTENT PROVIDED BY LAW, HHT MAKES NO EXPRESS WARRANTIES OTHER THAN THE WARRANTY SPECIFIED HEREIN. THE DURATION OF ANY IMPLIED WARRANTY IS LIMITED TO DURATION OF THE WARRANTY SPECIFIED ABOVE.

This Limited Warranty is effective on all HHT appliances sold after September 01, 2008 and supersedes any and all warranties currently in existence.

If warranty service is needed, you should contact your installing dealer. If the installing dealer is unable to provide necessary parts or components, contact the nearest authorized HHT dealer or supplier.

### E. Contact Information



No one builds a better fire

Heat & Glo, a brand of Hearth & Home Technologies Inc. 20802 Kensington Boulevard, Lakeville, MN 55044 www.heatnglo.com

Please contact your Heat & Glo dealer with any questions or concerns.

For the location of your nearest Heat & Glo dealer,

please visit www.heatnglo.com.

- NOTES -

### **CAUTION**

### DO NOT DISCARD THIS MANUAL

- Important operating and maintenance instructions included.
- Read, understand and follow these instructions for safe installation and operation.
- Leave this manual with party responsible for use and operation.



This product may be covered by one or more of the following patents: (United States) 4593510, 4686807, 4766876, 4793322, 4811534, 5000162, 5016609, 5076254, 5113843, 5191877, 5218953, 52634711, 5328356, 5341794, 5347983, 5429495, 5452708, 5542407, 5601073, 5613487, 5647340, 5688568, 5762062, 5775408, 5890485, 5931661, 5941237, 5947112, 5996575, 6006743, 6019099, 6048195, 6053165, 6145502, 6170481, 6237588, 6296474, 6374822, 6413079, 6439226, 6484712, 6543698, 6550687, 6601579, 6672860, 6688302B2, 6715724B2, 6729551, 6736133, 6748940, 6748942, 6769426, 6774802, 6796302, 6840261, 6848441, 6863064, 6866205, 6869278, 6875012, 6880275, 6908039, 6919884, D320652, D445174, D462436; (Canada) 1297749, 2195264, 2225408, 2313972; (Australia) 780250, 780403, 1418504 or other U.S. and foreign patents pending.

Printed in U.S.A. - Copyright 2008