


Galanz

USER'S MANUAL ELECTRIC KETTLE INTRODUCTION

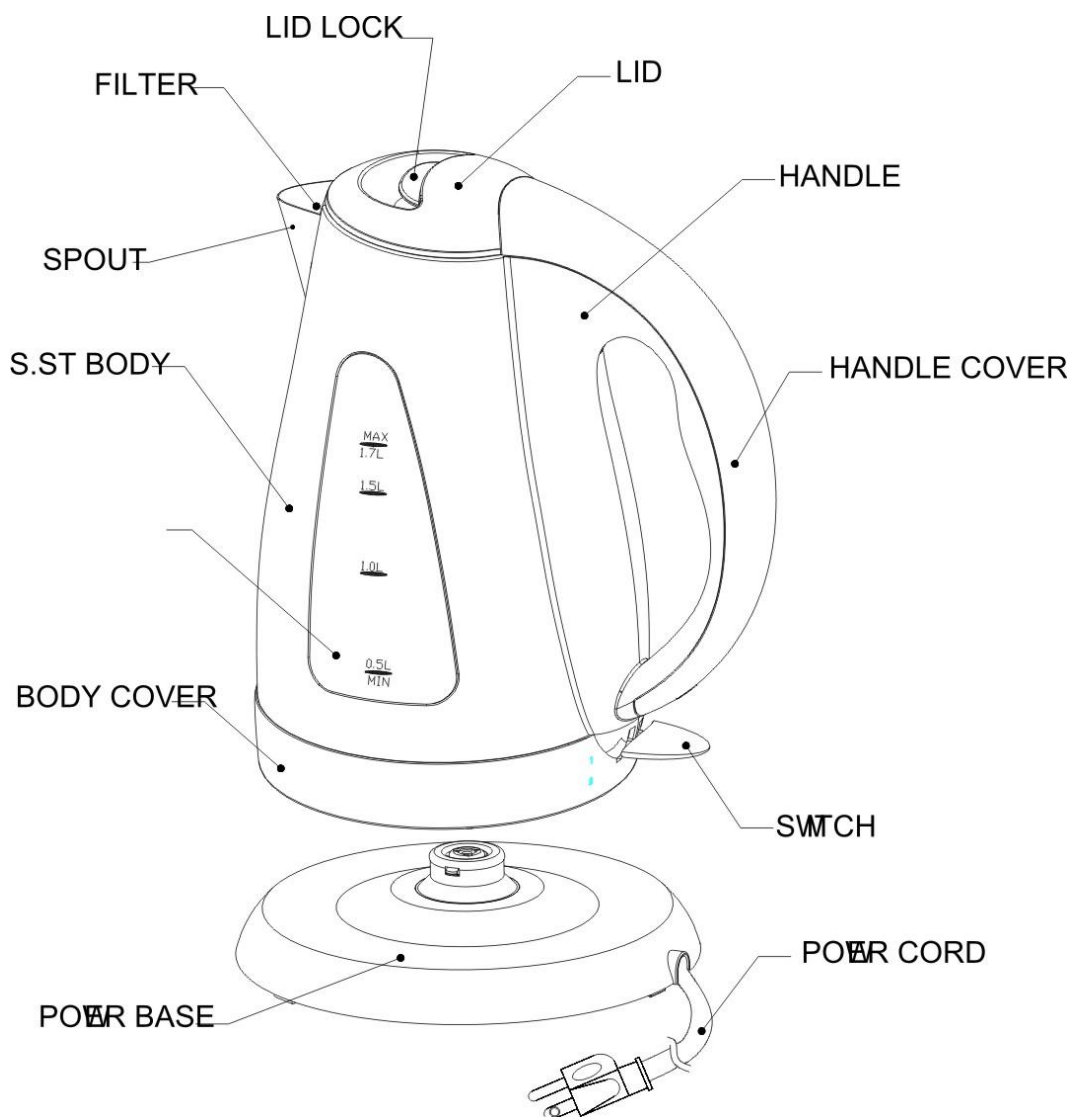

Model: DH1015-17010LA Electric Kettle

Features of this appliance:

- . Rating: 120Vac, 60Hz, 1500W
- . Capacity: 1.7L (Max level)
- . 360 ° Cordless Power Base .
- . Stainless Steel body and transparent water gauge .
- . There is an auto cutout device in the kettle. It will shut off the power supply after the water is boiling; and the light will be gone off.
- . There is an overheating protector in the kettle. In the event of overheating, such as operating without water in the kettle or the water being boil-dry, the kettle will be automatically shut down to prevent further damage.
- . The filter can wash after taking down.
- . Cord storage with anti-pull feature, when pull the power cord, be care on it to avoid damage it.

IMPORTANT SAFEGUARDS

When using electrical appliance, the following basic safety precautions should always be followed:

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, contact your dealer and DO NOT use the kettle.
3. Unplug from outlet when not in use or pouring water in the vessel. When not in use please cleaning, Allow cool completely before cleaning the appliance.
4. Do not let cord hang over edge of that table or counter or touch hot surface.
5. Place the appliance on the flat surface. Do not place on the heated surface or near a hot gas or electric burner or in a heated oven.
6. To protect against electric shock, do not immerse cord、 plug、 power base and kettle in water or other liquid.
7. Ensure that the kettle is used on a firm and flat surface where the children can't touch.
8. Do not touch hot surface. Use handle or knobs only.

9. Do not operate any appliance with a damaged cord or plug **or** after the appliance malfunctions. Return the appliance to the nearest authorized service center for examination, repair or adjustment.
10. Do not let children play this product, when using, please look after children to prevent hurting happen.
11. Be careful when opening the lid for refilling when the kettle is hot
12. This can prevent from overturning the kettle to damage the person or the kettle.
13. The kettle is for household use only, not for outdoor.
14. Do not use the appliance when lack of water.
15. Avoid contact with steam from the spout when the water is boiling or just after it has switch off. **DO NOT** be anxious to uncover the lid.
16. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
17. Do not use the appliance for other than intended use.
18. The kettle can only use with the stand provided.
19. If the kettle is overfilled, boiling water may be ejected.
20. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
21. This kettle just can use with the attach power base.
22. The use of accessory attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
23. Unplug from the outlet when not in use.
24. If operating with too less water in the kettle or the water being boil-dry, please remove the power plug in time; allow 15 minutes to cool the water before putting in cool water.
25. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
26. Children should be supervised to ensure that they do not play with appliance.
27. The appliance must not be immersed.

Save this user's manual.

How to use your kettle

It is recommended that operate the kettle several times following the below instruction and discard off the water before first use. This will remove the material or dust remained in the appliance, which is caused by the manufacturing process.

1. Open the lid and fill water into the kettle. Then replace the lid otherwise the kettle could not be cut off power automatically after water being boiled.

Caution: The filled water level must be between the “Max” and “Min” level as indicated on the housing. Too less water will do damage to the heat element and if the water is overfilled, boiling water may be ejected.

2. Replace the kettle on the Power Base and connect to power supply. Position the kettle so that the spout of kettle is facing away from you.
3. Press the switch to “I” position and the lamp will be illuminated. And water begins to be heated up. **DO NOT** open the lid while the water is boiling.

Caution: Ensure that switch is clear of obstructions and the lid is firmly closed, The kettle will not turn off if the switch is constrained or if the lid is left open.

4. Power will be cut off automatically and Switch will be back to “0” position once water has been boiled. And the lamp will be off.
5. Lift the kettle from the power base and then pour the water.

NOTE: operate carefully when pouring the water from your kettle, as boiling water will scald.

6. The boiling process can be terminated at any time by lifting the kettle off the Power Base or pressing the Switch to “0” position.

Caution:

- Never operate the appliance empty. In the event of this case occurred, the thermal cut-off inside the kettle would operate to cut off power automatically. Unplug the appliance and let it completely cool down.
- The filter must be in place during operation otherwise water spillage may occur.

NOTE: Ensure the power is turned off while the kettle is not in use.

Cleaning & Maintenance

1. Remove the plug from wall outlet and let the appliance completely cool down before cleaning.
2. Do not immerse power cord, kettle and Power Base in water.
3. In order to maintain the polish of the outer surface, do not use abrasive cleaner to wipe the stainless steel housing.
4. Periodical decaling is needed. The interval of descaling depends on the hardness of water in your living area and the frequency your using the kettle.
5. The Filter can be detached for easier cleaning simply by pulling it out. To attach, insert the Filter into the support dent.
6. The power cord can be rounded around the bottom of power base for storage.
7. Do not attempt to dismantle the kettle or power base. No user serviceable parts inside it. For any problem, contact the authorized service facility for help.
8. The kettle can only be used to boil water; **do not** use it to cook coffee , tea, or chemicals such as alcohol.

SAVE THE USER'S MANUAL!