



Summit

by MEDIABUG

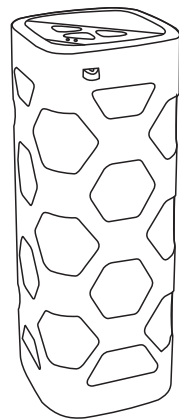

English Manual

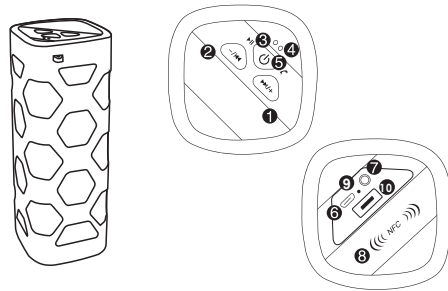

- ① **Volume + / Next**
- ② **Volume - / Previous**
- ③ **Play / Pause / Speakerphone / Pair**
- ④ **Pairing Indicator Lights**
- ⑤ **Power ON / OFF**
- ⑥ **Charging Port (micro-USB)**
- ⑦ **AUX in (3.5mm audio cable)**
- ⑧ **NFC Area**
- ⑨ **Charging Indicator Light**
- ⑩ **USB Charging Port**

Features:

- Industry-Leading Bluetooth 4.0 (LE) for wireless music streaming
- NFC quick-pair technology
- Up to 14 hours of continuous playback
- IPX-5 marine-grade water-resistant
- Built-in 4000mAH power bank for portable USB charging

Technical Data:

Model Number: SBT-02

Bluetooth Version: CSR 4.0 (low-energy)

Frequency Response: 20Hz-20kHz

Battery Type: Lithium-ion Battery, 4000mAH

Speaker Unit: 4Ohm , 5W*2

Dimensions: 66mm*66mm*170mm

Weight: 450g

Bluetooth Indicator Lights: Blue/Red

Power Indicator Light: Red

Playback Time: Up to 14 hours

Charging Time: 3 Hours

Wireless Range: up to 10m (33 feet)

What's Inside?

- | | |
|---------------|-----------------|
| 1 * Speaker | 1 * Audio Cable |
| 1 * USB Cable | 1 * User Manual |

Using Your Summit Speaker:

Pairing with NFC:

1. Turn on the speaker with a long press of the ON/OFF button. Wait for two beeps and the Bluetooth Indicator Lights (red & blue) to flash.
2. Unlock device. Turn on NFC & Bluetooth.
3. Touch the NFC Logo area with the device that you want to pair.
4. Keep touching the speaker with the device until the smartphone vibrates or rings indicating successful pairing.

Note: for first time NFC pairing, do not shake your smartphone.

Hold your smartphone NFC area near the speaker NFC Logo for at least 2-3 seconds.

When the red Bluetooth Indicator turns off and the blue light remains lit, the speaker is connected to the device.

To disconnect the speaker using NFC, touch it with the smartphone again.

To turn off the device, hold the ON/OFF button.

Using the power bank:

The power bank can be used for charging smartphones and other electronic devices. Simply connect your device to Summit's USB Charging Port using your USB-compatible charging cable.

Connecting with Bluetooth:

1. Turn on the speaker with a long press of the ON/OFF button. Wait for two beeps and the Bluetooth Indicator Lights (red & blue) to flash.
2. Perform the pairing procedure on the Bluetooth device to detect the speaker.
3. When the list of detected devices appears on the display of the Bluetooth device, select:

"SUMMIT BY MEDIABUG"

Once the device has been paired once, use automatic pairing mode by turning on Summit by holding the ON/OFF button until you hear 1 beep and only blue Bluetooth Indicator Lights flash.

Note: To disconnect from the speaker, use the Bluetooth settings of your device.

How to Play Music:

Power on and connect with your Bluetooth device. Summit will now be able to play music. You can control the volume (long press) and track (short press) with the speaker control buttons or use your Bluetooth device.

Safety:



WARNING: Risk of Electrical Shock!
Do not submerge this product in water or any other liquid. Always use cover for the charging ports when using the device is near water or other liquids.

Visit www.mediabugelectronics.com for warranty information

How to Answer Phone:

When an incoming call arrives, the indicator lights will flash in blue color. Short press the ON/OFF or PLAY/PAUSE button to answer the call.

Summit has a built-in microphone for hands-free calling.

Troubleshooting:

If you are experiencing signal loss or dropouts, please make sure you are within range. If dropouts persist, make sure your Summit is charged up.

If you are hearing distortion, lower the volume on your Summit speaker, or make sure it's charged.

If Summit isn't loud enough, turn up the volume using your phone/device or Summit. Make sure the battery is charged.



CE This product is in compliance with the CE Directive.

The Bluetooth® word mark and logos are owned by Bluetooth® SIG, Inc. and any use of such marks is under license. Other trade names are registered mark of their respective owners.

2014 MEDIABUG. ALL RIGHTS RESERVED. 71-001-00 REV A