

USER'S MANUAL



RF
Touch|||



WIRELESS TOUCH
CONTROL UNIT

We want to thank you for your purchase of the RF Touch control unit, which is an element of wireless RF Control system.

RF Touch allows:

- *you to control many devices trough touch screen*
 - *heating control*
 - *dimming lights*
 - *switching of electrical appliances and equipment*
 - *blinds*
 - *a combination of detectors*
 - *function timers*
 - *Group control of electrical equipment*
- *everything with clear visualization*
- *wireless communication without the need for cabling*



Contents:

■ Before you start	3	■ Settings		■ Control	
■ Overview of wireless devices ...	4	- Default setting	12	- Heating	23
■ Characteristics of RF Touch	6	- Menu(creating and naming) ...	13	- Switching	26
■ Technical specifications	7	- Programming	15	- Dimming	28
■ Installation of RF-Touch W	8	- Assign a new receivers	16	- Blinds	29
■ RF Touch Installation-B	9	- Assigned receiver	17	- Detectors	31
■ Description of Control icons	10	- Detectors	18	■ What to do if	32
■ Basic Steps	11	- Quick Control	20	■ Installation Form	34
		- Display	21		
		- Other	21		

Before you start

The instruction manual is intended for installation and use of the equipment. Instructions are always included in the product packaging. Installation and connection can only make personnel with appropriate qualifications, in compliance with all applicable laws, who are perfectly familiar with this instructions and functions. Trouble free function is also dependent on transportation, storage and handling. In case of any signs of damage, deformation, malfunction or missing parts, do not install this product and return it to the seller. Product and its parts must be at the end of its lifetime handled as electronic waste. Before installation, make sure that all wires, connected parts or terminals are not live. During the installation and maintenance is necessary to follow safety regulations, standards, guidelines and special provisions for working with electrical equipment.

Overview of wireless RF Control devices

RF Control system

All actuators of the RF Control System can be controlled by wireless central unit and all transmitters of the system simultaneously.

CENTRAL WIRELESS UNIT



RF Touch-W
for surface mounting
100 - 230V AC or
adapter (external)
12 V DC



RF Touch-B
for mounting
in the installation
box
100 - 230V AC

CONTROLLER



RF Pilot
remote controller,
colours: white,
anthracite

TRANSMITTERS



RF KEY
4-channel remote
controller - key pendant



RFWB-20/G
2-channel wireless
switch in the design
LOGUS[®]



RFWB-40/G
4-channel Wireless
switch in the design
LOGUS[®]



RFIM-20B
universal transmitter module
under the switch or button
wall box installation



RFIM-40B
universal transmitter module
under the switch or button
wall box installation



RFSG-1M
Transmitting module
1-module
230 V AC

BLIND ACTUATORS



RFJA-12B/230V
blind actuator
2 x 8A switching
relay protection
230V AC



RFJA-12B/24V DC
blind actuator
contactless switching
12-24V DC

TEMPERATURE ACTUATOR



RFSTI-11B
wireless switching actuator
with temperature sensor
in design to installation box,
230V AC



RFSTI-11/G
wireless switching actuator
with temperature sensor
with manual
control buttons directly
on the unit, 230V AC



RFTI-10B
wireless temperature sensor
1 x CR 2477 3V battery



RFTC-10/G
digital temperature
controller
2 x 1.5V AAA batteries

Overview of wireless RF Control devices

SWITCHING ACTUATORS



RFSA-11B
single channel
single function
switching actuator
1 x switching
contact 16 A
230V AC



RFSA-61B
single channel
multifunction
switching actuator
1 x switching
contact 16A
230V AC



RFSA-62B
2 channel
multifunction
switching actuator
2 x 8A switching
contact
6 functions
230V AC



RFSA-61M
single channel
Multifunction
switching actuator
1x changeover
contact 16 A
6 functions
230V AC



RFSA-66M
six-channel
Multifunction
switching actuator
3 x 8 AND NO
3 x changeover
contact 8A
6 functions 230V AC

DIMMING ACTUATORS



RFDA-11B
single function
dimming actuator
1 light scene,
function OFF, 230V AC



RFDA-71B
multifunctional dimming actuator
7 functions,
AC 230V / 250V



Angle antenna
for plastic
switchboards
supplied as standard
for RFSA-61M,
FSA-66M, RFSG-1M



Angle Antenna
for metal
switchboard
can be ordered for
RFSA-61M,
RFSA-66M, RFSG-1M

ANALOGUE ACTUATOR



RFDAC-71B
actuator with analog
output 0 (1) - 10 V
1 x switch contact 16 A
7 functions, 230V AC



Dimmable ballast
for dimming of fluorescent
lamps
supplied on request
with the product RFDAC-71B



Thermo-control
of heating valves
supplied on request
with the product RFDAC-71B

DETECTORS



JA-80P
JA-81M
JA-82M

Characteristics of RF Touch

Control Unit of the wireless system RF Control - RF Touch provides intelligent control of the RF units.

It can be used for:

- Central control of all units from one place
- Complete overview (visualization) of the current status of units (appliances / equipment)

Features:

- sends command to temperature, switching, dimming and shutter actuators
- accepts commands from the transmitters, actuators, temperature sensors and detectors
- processing programs for heating and regulation

Design:

- RF Touch-B fits in the round installation box with a supply voltage of 100 - 230 V AC
- RF Touch-W for surface mounting with power supply from the back side: 100 - 230 V AC or from the side (via jack): 12 V DC
- 3.5 inch color touch screen - no mechanical buttons
- RF Touch frames in the base plastic (white, black) or luxurious design Logus⁹⁰ (glass, metal)
- Color of the interframes - white, ivory, ice, mother of pearl, aluminum, silver
- Colors of the boxes (only for RF touch-W) - white, ivory, dark gray, light gray
- Backup time in case of power failure is 48 hours
- 40 actuators and 30 OASIS detectors can be assigned to each RF Touch unit
- RF Touch can be combined with units of RF Control marked as Oasis & Touch Compatible




Technical specifications

Technical parameters	RF Touch-B	RF Touch-W
Display		
Type:	color TFT LCD	
Resolution:	320 x 240 pixels / 262,144 colors	
Aspect ratio:	3 : 4	
Visible area:	52.5 x 70 mm	
Backlight:	active (white LED)	
Touch screen:	resistive 4-wire	
Display:	3.5"	
Control:	Touch sensitive	
Power supply		
Voltage / specific current:	100 - 230 V AC	from the back side 100 - 230 V AC from the side 12 DC *
Power consumption:	max. 5 W	
Power supply connector:	A1 - A2	
Control		
Range up to:	100 m	
Minimal range RF Touch – actuator:	1 m	
Frequency:	868 MHz	


Technical parameters	RF Touch-B	RF Touch-W
Connection	push-in	screwless terminal push-in or jack ø 2.1 mm
Max. cross section of wires:	max. 2.5 mm ² / 1.5 mm ² with socket	
Operating conditions		
Operating temperature:	0 ... +50°C	
Storage temperature:	- 20 ... +70°C	
Protection:	IP 20	
Overvoltage category:	III.	
Pollution degree:	2	
Operating position:	arbitrary	
Installation:	installatin a box	wall box installation
Dimensions:	94 x 94 x 12 mm	94 x 94 x 24 mm
Weight **:	127 g	175 g
Standards:	EN 60730-1	
* adapter is included for RF Touch-W		

**** weight with plastic frame**


POWER SUPPLY OVER TERMINALS

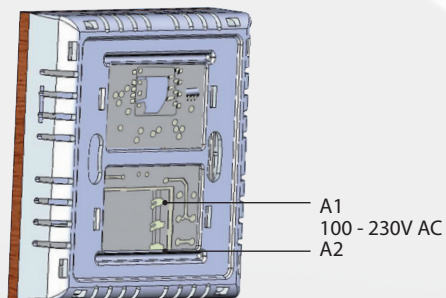

FITTING ON THE SURFACE

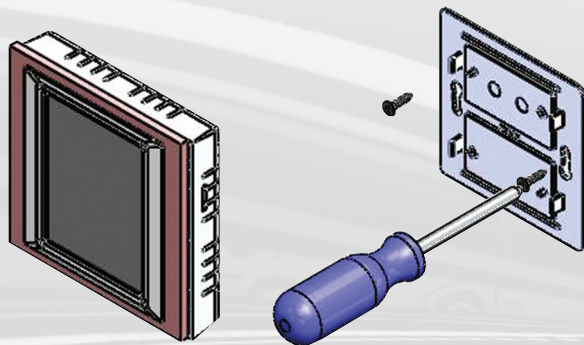


POWER SUPPLY OVER ADAPTER

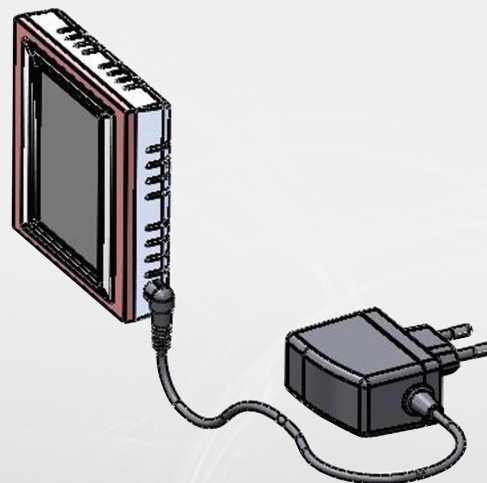


■ *adapter included with RFTouch-W*

POWER SUPPLY OVER TERMINALS

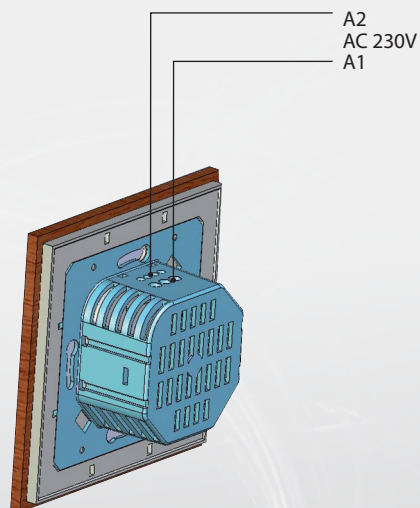



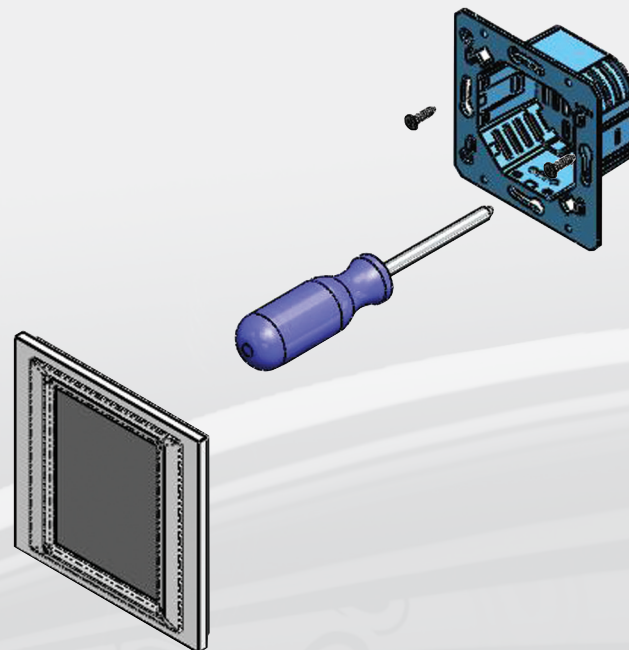

FITTING TO THE INSTALLATION BOX












Description of Control Icons







Basic

-  RF Touch version Information and number of assigned units
-  settings
-  back to the home screen
-  step back








Setup Menu

-  scroll up
-  scroll down
-  confirm
-  yes/selected
-  no/not selected
-  add
-  edit/remove
-  name/adressof the actor(s)
-  delete


Main menu

-  Heating
-  Switching
-  Dimming
-  Blinds
-  Detectors
-  Quick kontrol







Keyboard

-  dot
-  letters
-  small/capital letters
-  space
-  switch - the letters / numbers
-  confirm
-  erase previous


Heating

-  temperature

Switching

-  switch ON
-  switch OFF
-  impuls
-  button
-  time function
- delayed switch on
- delayed switch off
-  0-10V regulation

Dimming

-  switch ON
-  switch OFF
-  dimming
-  light inclination
-  light declination
-  OK confirm

Blinds







-  rise blinds
-  lower blinds

Basic Steps for Successful Programming

1st Step – Placing of the RF Touch and RF units

Keep in mind that the radio signal range of RF installation depends ON building construction, materials and placing of all units.

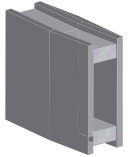Transmission of radio-frequency signals through various materials.

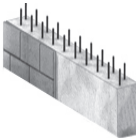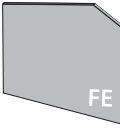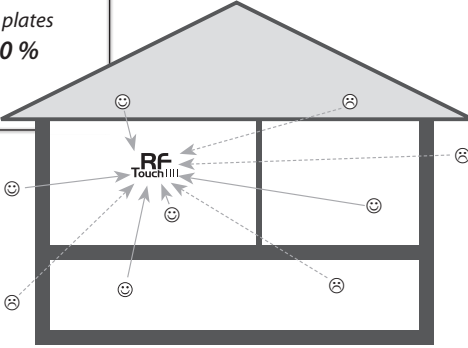	Wooden structures with plasterboard plates 80-95 %		standard glass 80-90 %
	brick wall 60-90 %		reinforced concrete 20-60 %
	metal plates 0-10 %		

2nd Step - Fill Installation Form

- device name that you want to manage (to create a menu)
 - the names of units (for the correct classification of the group, for example: RFSA-61B)- addresses of units (to identify the actuator, for example: 577515)
- Installation form can be found at the end of this manual.*

Name
E.g. RFSA-61B



Address
E.g. 577515

3rd Step - Set menus (create names)

Create a list of names of the controlled device in the **Settings / Menu (create name)**.

4rd Step – Programming

Programming of the RF units with RF Touch is carried out in the **Settings / Programming** menu.


Initial setup

When the RF Touch is switched on for the first time, you will be automatically redirected to the display calibration screen. Touch screen can be controlled by the light touch (of about 0.5-1s) in the desired location. On the screen (Fig. 1) then appears cross in each corner of the screen, which need to be pressed twice. This will calibrate the device. The display then shows the RF logo icon and then touch icon signaling scanning of the actuators.



Content of the main screen

- date
- time (touch in the upper right corner of the display will switch between analog - digital clocks (Figure 2 - Figure 3))
- display at the bottom of the screen is customizable, eg: heating mode, a often used device ... Touch the clock area to enter the Main menu. If you want to get to the main menu from sleep mode, you need to touch the screen anywhere.

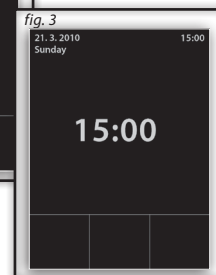

Main Menu / Settings

The settings menu can be opened by touch in the upper right corner screen on the symbol (fig.4-5).



Language

Selection of required Language - Figure 6. Save setting by pressing **OK**.



Date and time

Settings (Fig.7-8):
☐ Date and Time
☐ automatic transition between winter / summer time (for time Zone GTM +01:00)
☐ Format settings hours (12h / 24h mode)
 To save Settings press **OK**.



Menu (create name)



Menu (create name) is used to add, edit or remove the names of the controlled device. In this menu (Figure 1) you need to first create your own device names for the sections you want to control.

Creating names is important for successful programming of the RF Touch. For each actuator, which is involved in the installation you have to create unique name.

The content of this menu is not set at the factory.

Menu (create name) / Add





Press the **+** Add icon (Fig. 2) to show a selection of sections (Fig. 3):

☐ Heating ☐ Dimming ☐ Blinds ☐ Switching ☐ Control ☐ Speed ☐ Detectors

Choose the section where you want to add the device name and type your own text (max. 20 characters).

Example 1: If you want to control the blinds - Place the name to the section of the blinds (Fig.3-5).

Example 2: If you want to control a group of blinds together, first create all the blinds names in the blinds section and then create new name for group control in Quick control section.

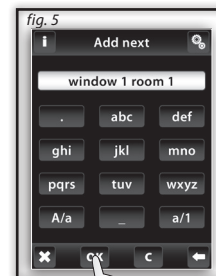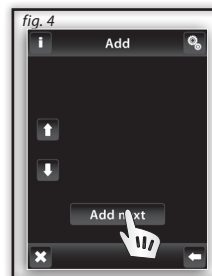


Note: Actuator RFTI-10B can be connected with two temperature sensors. For each sensor, you can create your own name.

Menu (create name) / Edit



Edit button is used to change or modify the name in the created menu.

Press the **Edit** icon  (Fig.1), a menu appears, select the section in which you want to edit created name (Fig. 2). Mark selected name by touching it (Fig. 3) and then edit with display keyboard.



Press **OK** to confirm (Fig. 4). The modified name is stored.



Menu (create name) / Remove



Remove button can delete unit name.

Press the **Remove** icon  (Fig. 5) following menu appears, select the section from which you want to remove the name (Fig. 6). Pick the device you want to delete by touching it.(Fig. 7) . Press  to confirm the selection (Fig. 8). Selected name will be deleted from menu.



Programming




Programming is used to assign or remove the actuators / detectors to menu you created.

The **Programming** Menu can be entered by entering a password (default - 1111).

Actuators are divided into sections for which they are intended. According to the actuator's type you have to select appropriate section - see table (eg programming actuator RFSTI-11B - find it in the Heating section).

RF Control actuators divisions				
Heating	Switching	Dimming	Blinds	Detectors
RFSTI-11B/G	RFSA-11B	RFDA-11B	RFJA-12B/230V	JA-81M / 82M
RFTI-10B IN*	RFSA-6x*	RFDA-71B	RFJA-12B/24V DC	JA-80P
RFTI-10B OUT**	RFDAC-71B	RFDAC-71B		
RFTC-10/G				

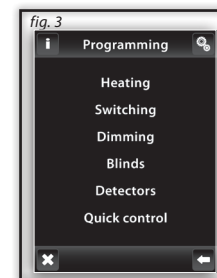

* internal sensor

** external sensor

* RFSA-61B, RFSA-62B, RFSA-61M and RFSA-66M

Programming / Assign new

It is used to assign a name to the actuator in the menu. In the required section (heating, dimming ...) select Assign new (Fig. 1). A list of selected sections actuators will be shown. (Fig. 2). Select the name of the actuator which you want to associate with the RF Touch. Enter the address of actuator you want to assign (Figure 3) as indicated on the actuator. Confirm with **OK**. From the menu you created, select the name to which the actuator will be assigned (Fig. 4).




- Only one name can be assigned for each actuator.

- When programming, actuator must be connected with the installation.

Communication test (Fig. 6) is used to detect and display the current status of the RF signal between the RF Touch and programmed actuator.

- Press **Start** (Fig. 7) to initiate the test, the current status of the signal is displayed in percentage.

- Press **Return** to Programming to get back to **main menu** of programming.

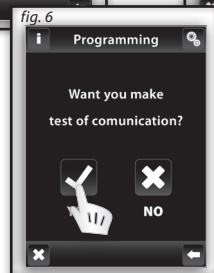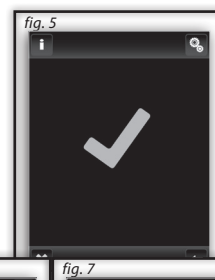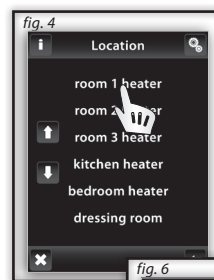

Programming / Heating / Assign New / RFTI-10B and RFTC-10/G

These two units are temperature sensors, communication test is not executed during programming.


Note: The actuator RFTI-10B is able to be connected with two temperature sensors, each sensor may have its own name. Address of the actuator is the same for both sensors.

Programming / Associated Receivers





It serves to control or remove the actuator from the name of the menu you created.

In the selected section (Figure 1 - Heating, dimming ...) select **Assigned receivers** (Fig. 2) a list of names specified in this section will be shown (Fig. 3). Touching on the name you will assign it to the actuator (Fig. 4).

By pressing  arrows you can check the name and address assigned to the actuator (Fig. 4, 5).

By touching the name or address of the actuator you can **remove** the actuator (Fig. 7) or carry out **communication test** (Fig. 8).

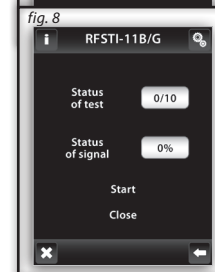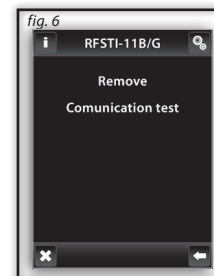

Programming / Heating / Assigned receivers / RFTI-10B and RFTC-10/G



Function Assigned receivers in Heating - RFTI-10B and RFTC-10/G are used to pair or remove temperature units from the actuator. In the Heating section, press the screen to select Assigned receivers; the list of names assigned in this section will be displayed. Press the name to display the assigned actuator. Select the name to which the RFTI-10B or RFTI-10/G is assigned (Fig. 1-3).

Use arrows  to check the name and address of the assigned actuator (Fig. 4-5).

Touch the name or address of the actuator to display the menu (Fig. 6):

☐ Remove



☐ Pair with...

☐ Paired with...

Programming / Heating / Assigned receivers / RFTI-10B and RFTC-10/G / Remove



Serves to cancel the link between the temperature unit and the name from the menu Heating.

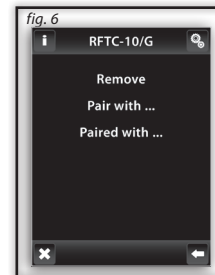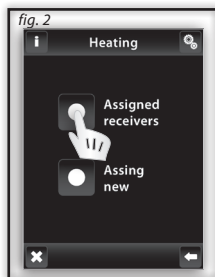

Programming / Heating / Assigned receivers / RFTI-10B and RFTC-10/G / Pair with...



Serves to combine the RFTI-10B or RFTC-10/G temperature unit with the RFSA-61M or RFSA-61B or RFDAC-71B multifunction actuator, where the temperature unit measures the current temperature and the multifunction actuator switches on the heating based on the measured temperature. The multifunction actuator switches based on the set temperatures in the RF Touch.

Note: the attached actuator RFTI-10B can be used in two ways:

- ☐ For temperature measurement (without pairing with a switching actuator)
- ☐ When paired with the multifunction switching actuator it can switch heating equipment on the basis of the measured temperature.

Programming / Heating / Assigned receivers / RFTI-10B and RFTC-10/G / Paired with...



*Shows multifunction switching actuator, which is paired with a temperature actuator. By touching the name of the actuator you can **remove** a paired actuator.*

Note: Battery indication on the display (Fig. 1) informs of low battery in one of the temperature units. Press the battery to display the unit name. Use arrows to switch between the name and the address of the unit (Fig. 2-3).



Programming / Detectors



Section detectors (Fig. 1) is intended for assign or remove OASIS detectors to menu.

Select Assign detector (Fig. 2). The list of detectors will be shown. Select the detector you want assign to the RF Touch unit (Fig. 3).

RF Unit Touch will enable search (Fig. 4) searching icon ⌚ is shown (the shortest distance to assign a detector is 1.5m). RF Touch

will recognize new detector when batteries are inserted into the detector. Confirm the assignment by pressing ✓ (Fig. 5).

Choose a name to which the detector will be assigned (Fig. 6). Each detector may be assigned only to one name.

Pressing arrows ⬅ ➡ can display the name or address associated with the detector (Fig. 7, 8).

When you touch on the name or address of the detector following options appear (Fig. 9):

- ☐ Remove...
- ☐ Pair with ...
- ☐ Paired with ...



Programming / Detectors / Remove

Used for deleting link between the detector and the name given in the **detector** menu (Fig. 1).

Note: Two state JA-81M and JA-82M can be used in two ways:

- ☐ information about the status (open / close) - eg window is open (without pairing with a switching actuator)
- ☐ pairing with the multifunction switching actuator, which responds to the detector status (open / close) - eg light is switched on when you open the door.

Single state detectors (JA-80P) must always be paired with multi-function actuator.

Programming / Detectors / Pair with ...

Paired detector can be paired with the multifunction switching actuator from switching menu, (eg, motion detector with entrance light, Fig. 2-3).

One detector can be paired with up to 30 multifunction switching actuators.






If the detector is paired with a switching actuator function of **delayed off** feature is automatically activated. When detector switch on, actuator switches connected device for preset time (2s - 60min). Time delay can be set in the main **Menu / Control** of the paired actuators (see page 26).

The above method can be used to assign additional detectors. The RF Touch can be programmed with up to 30 detectors.

Note: The minimum distance between the detector and RF Touch is 1.5 meters.

Programming / Detectors / Paired with ...

This menu will lists switching actuators, which are paired with the detectors. By touching the name you can **remove** paired actuator (Fig. 4-5).

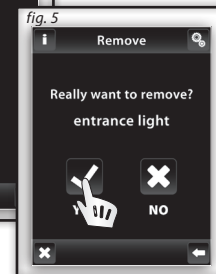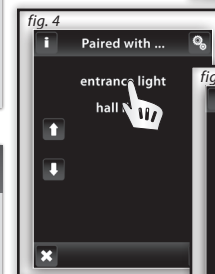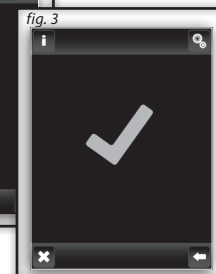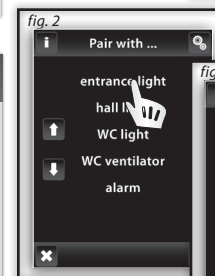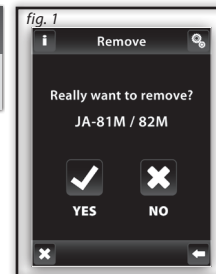

Programming / Quick Control



Quick control is used for creating a group command, where one-touch control multiple actuators.

For each name of group command you can assign a combination of up to 20 different actors.


Note: Quick control can be set only when all actuators are programmed in different sections of switching, dimming and blind control.

In the **Quick Menu** control (Fig. 1) choose name from list for the group command (Fig. 2).

Select **Assign new** (Fig. 3) it will show group of units (switching, dimming and blind control). Select the section you want to assign for desired command name (Fig. 4). You can create a menu for your device names created in the desired section.

Select the name (Fig. 5) and further define the function (Fig. 6).


The unit will returns to display groups of units (switching, dimming and blind - fig. 7), where you can continue with programming. When you select assigned receiver (Fig. 8) you can go to the menu to remove (Fig. 10) or change the device name

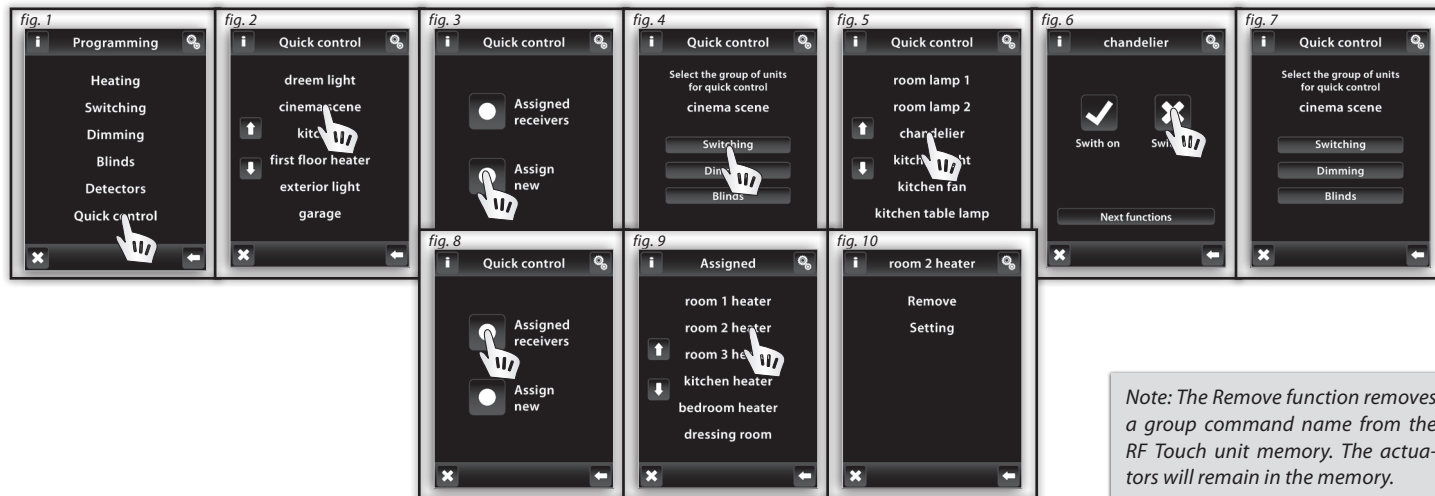

Note: The Remove function removes a group command name from the RF Touch unit memory. The actuators will remain in the memory.


Setup / Display (fig. 1-2)

- **Background:** select the type of screen background color (black, blue, green, purple).
- **Screensaver:** the desired brightness (25%, 50%, 75%, 100%) will be activated after preset time since the last touch (15s, 30s, 1min, 3min).
- **Sleep mode:** set the time after which RF Touch screen unit goes to sleep - the screen goes dark (0min, 10min, 15min, 20min).
- **Calibrating the display:** cross appear in every corner of the screen, which need to be pressed twice. Calibration will be performed. Display calibration can also be started by resetting the unit or disconnecting the supply voltage from the unit; after connecting again, the RF Touch logo will appear on the display - hold the logo for more than 3s to activate calibration – touch logo longer than 3 seconds and calibration will be activated. After calibration, the display shows Home screen.

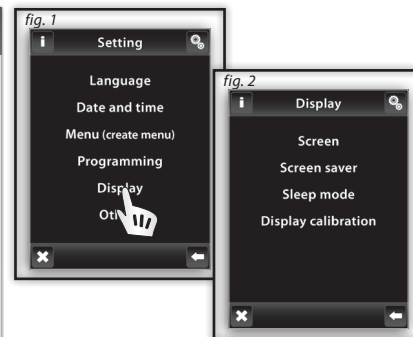


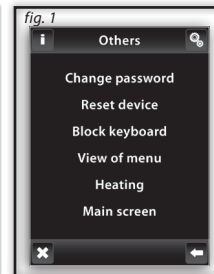
Setup / Others (fig. 3-4)

- **Change Password (prog.):** Changes the password for system programming. Enter password - Figure 5 (default password 1111) will start the screen to select a **new password** - where you type and confirm new password. Touch **OK** to save the new password (Fig. 6).
- **Reset the device:** To reset the password use 1234 (Fig. 7). This password cannot be changed. Password, and confirmation YES (Fig. 8) to return the RF Touch unit to the factory settings.

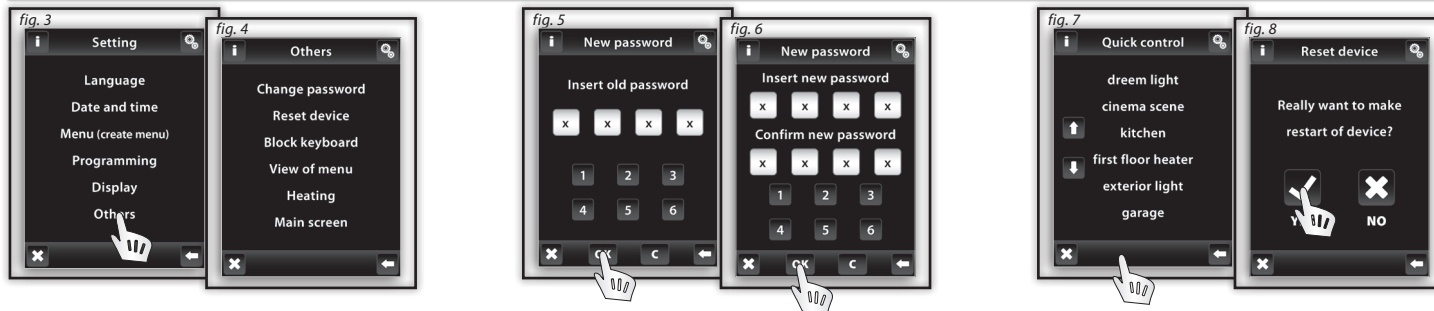



Setup / Others (fig. 1)

- **Keyboard lock:** activation serves to prevent accidental or unwanted control of RF Touch (Fig. 2). For unlocking locked Home screen press the lock icon twice (Figure 3).
- **View menu:** you can set to display only those sections that you want to see in the main menu. (eg: only Dimming, Switching and Detectors - fig.4-5).
If you select all the default sections , you will only see menu that you created without division into sections - Figure 6, this view is useful if you programmed max. 7 actuators).
- **Heating:** (Fig. 7) displayed units ($^{\circ}\text{C}$ / $^{\circ}\text{F}$). Setting the hysteresis heating in the range 0.5 - 5 $^{\circ}\text{C}$, set **Offset** (fix inaccuracies in temperature measurements) in the range of 0-10 $^{\circ}\text{C}$, Selection of **function** for temperature control: Heating / Cooling
- **Main screen:** possibility to personalize Home screen (Figure 8-9). Left (1st choice), middle (2nd choice) and right field (3rd choice) is used to set the most common controlled devices directly from the Home screen.



Note: Offset is set directly on the RFTC-10/G unit.

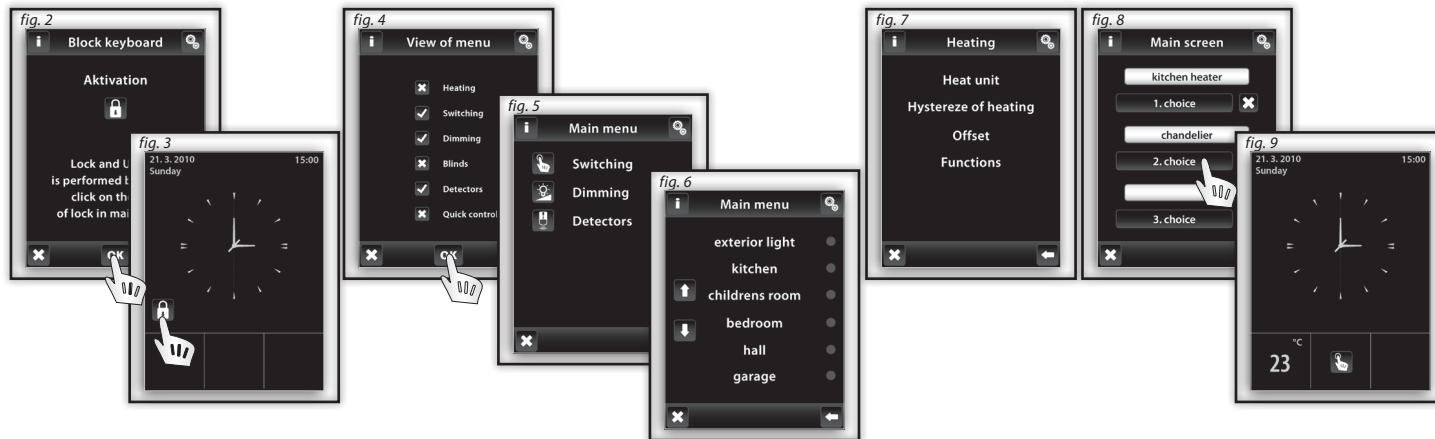

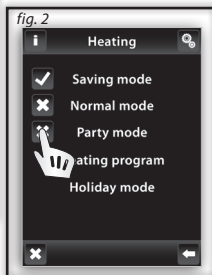

Control / Heating

Heating Menu (Figure 1-2) is designed to control the heating devices.



Touch the **heating** icon to enter the menu.

- ☐ **Economy mode** ☐ **Normal mode** ☐ **Party mode** current These schemes offer a preset temperature, which can be set individually for each room according to your requirements. By selecting Economy / Normal / Party mode it will automatically adjust the heating temperature. Press the ☒ / ☐ icon to activate the selected mode for all assigned rooms.
- ☐ **Heating program** can be used to set the heating regime for the whole week.
- ☐ **Holiday mode** is used for temporary interruption of the heating program or other heating mode.

Note: Setting Units °C / °F and hysteresis for heating is done in the Settings / Other / Heating

Heating / Changing heating modes to Economy, Normal and Party modes

The current temperature and the set temperature for Switching on the selected mode is displayed at the icon. Touch Settings icon (Figure 5) for adjusting the temperature. Arrows / can set the desired temperature (longer pressed arrow will accelerate changing of numbers) Touch **OK** to save the set temperature (Fig. 6).

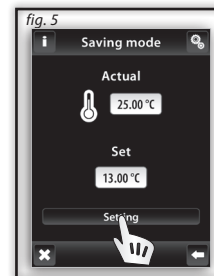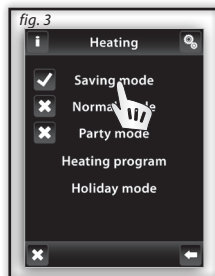





Note - Heating control:



Mode can be activated by pressing icons ☒ / ☐ (fig. 2). Setting menu can be activate by pressing each mode name (fig.3)


Heating / Heating program





Touching the icon of **heating program**  (Fig. 1) shows a selection of room names. Select the room name where you want to set a timetable and temperature (Fig. 2). Touch-hour time interval (or minutes) to  indicate the information you want to change (Fig. 3). Arrows  /  set time for switching - **On** and **Off**. Arrows can adjust desired temperature.

Note: longer push of arrows will accelerate changing of figures.

Touch of Sun-Sat activate the **heating program** for desired day of the week.  - active for the day,  - disabled for the day.

Confirmation of the selected program - . If you want to set additional **heating program** to continue with programming.

Note: For one day you can create up to 5 heating programs. Programs must not overlap (Fig. 5). Setting of program until midnight and over midnight - see page 37.

Daily overview (Fig. 4) – arrows  will choose between selected time program or temperature (Figure 5-6). To remove single time schedule mark time / temperature bar and (Fig. 6) then press basket symbol - bin icon . If you not choose any heating program bar you will delete all programmed schedules for given day.

Weekly overview (Figure 7-8) - touch the basket symbol  to erase all programmed heating programs.



Heating / holiday mode










Holiday mode is used for temporary interruption of the heating program.

Touch **holiday mode** (Fig. 1) to open **Switch ON** screen where you set the date, month and year when your holiday mode should start. Confirm with **OK** (Fig. 2). **Switch Off** screen appears where you set the day month and year for the end of holiday mode. Confirm with **OK**.

If you touch Overview icon(Fig. 3) you can check list of holiday programs.

Note: Up to 5 Holiday modes can be assigned up to 5 time intervals. Programs must not overlap. During the holiday Economy mode is active.

Individual deletion of **Holiday Mode** is selected by touching bar belonging to the program(Fig. 4), then touch the bin icon  and program will be erased. If you do not mark any bar you can touch the bin icon  to remove all **holiday** arrangements.

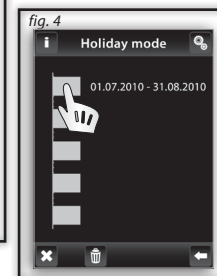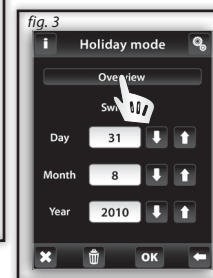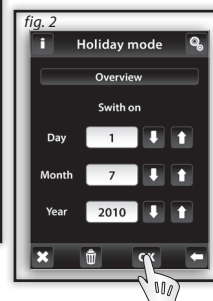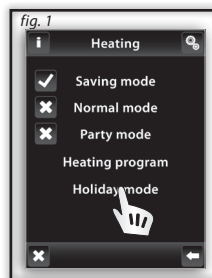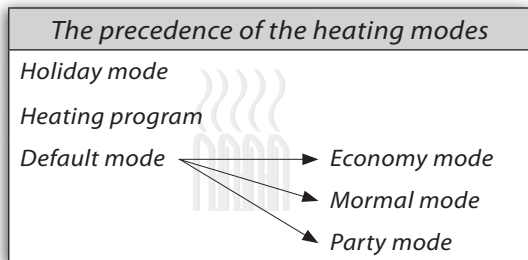





Note: The required temperature can be set manually on the RF Touch unit. The adjustment after activation is valid until the first subsequent change of the Heating programme or the Vacation mode. The required temperature may be set manually on the RFTC-10/G unit. This adjustment is valid until the subsequent change of the heating programme in RF Touch.

Main menu / Switching




Switching menu is for all the devices you want to switch. Touch **Switching** (Fig. 1) displays the names of your choice created in menu. Red / Green LED indicates contact status: ☐ green -ON, ☐ red switched - off. Touch the desired name (Fig. 2) to show basic functions: ☐ **switch on** ☐ **switch off**.

Switching / Function

Press the **Next functions** button (Fig. 3) will show a selection of switching functions (Fig. 4). Other functions can be used only in combination with multifunction switch actuators - RFSA-61B, RFSA-62B, RFSA-61M and RFSA-66M.

- ☐ **Impulse** –first touch  switch on, second one to switch off.
- ☐ **Button** – It is on as long as long you are holding button .
- ☐ **Delayed switch on** - touch  will begin to count preset time, after which the actuator switch on.
- ☐ **Delayed switch off** -touch  will start to count preset time after which the actuator will switch off.

In the section **Time settings** all times for **Delay on** and **Delay off** can be set.

Time delay can be set in the range from 2 to 60 minutes. Touch-hour time interval (or minutes) to  indicate the information you want then change it (Fig. 5) with Arrows  / .

Note: longer press of arrows will accelerate shifting of figures. Confirm time setting by pressing **OK**.




Main menu / Switch on / RFDAC-71B



Upon selecting the Switching on menu to which the RFDAC-71B actuator is assigned, the basic function are displayed:

- ☐ Switch on
- ☐ Switch off.

Press shortly the arrows / at the Regulation icon to set the desired value (Fig. 3). Touch to perform the command.

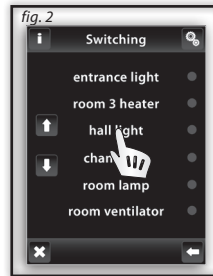

Note: For efficient regulation of heating, it is recommended to pair the RFDAC-71B actor with the RFTC-10/G or RFTI-10B temperature unit.

Switching / Weekly Program



Weekly program provides weekly settings for the automatic mode switching.

Touch **Weekly program** icon (Fig. 1), setup menu will appear. Touch-hour time interval (or minutes) to mark information you want to change. Arrows / will set the time of **switch On** and **switch Off**.

Note: longer press of arrow is accelerate shift of figures.


Touch the Sun-Sat icon will activate the program on a given day of the week (Fig. 2). - active for the day, - disabled for the day. To confirm of selected programs touch . If you want to configure other Switching program continue programming.

Note: For one day you can create up to 5 switching programs. Programs must not overlap. Setting of program until midnight and over midnight - see page 37.

Daily / Weekly Overview shows the daily / weekly overview of **switching programs**.

To delete a program in the **Daily overview** (Fig. 3) indicate bar you want to delete (Fig. 4) at then press the bin icon to delete it. If you not select any of programed bars and press bin icon , you will remove all schedules in the day.

Weekly overview (Figure 5-6) touch the bin icon to clear all programs.

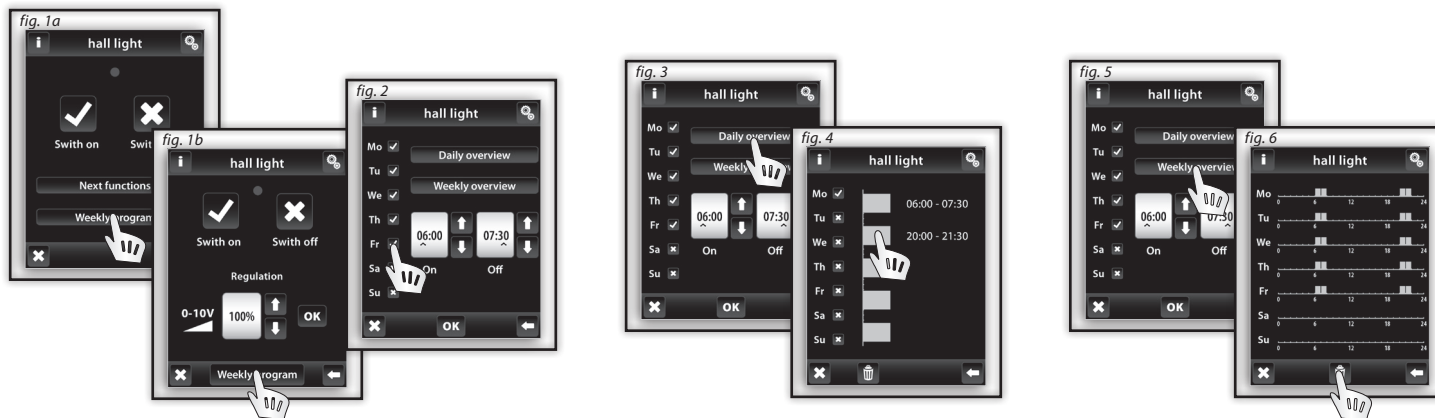

Main menu / Dimming



Dimming Menu is for all the lights where you want to control the brightness (load R L, C - 250V). **Touch-Dimming** (Fig. 1) to display a selection of names you created in menu (Fig. 2).

Red / Green LED indicates contact status: ☐ **green- On** ☐ **red -Off**.

Dimming/Functions




Touch the desired name to displays basic functions: ☐ **switch on** ☐ **switch off**. A short touch on the arrows / beside icon **Dimming** will set the desired brightness (Fig. 3). Touch **OK** to confirm. In the case displayed icon - level has been set by other controller (Fig. 4).

Further functions (Fig. 5) can be used only in combination with multifunctional dimming actuators - RFDA-71B and analog actuator RFDAC-71B.




- ☐ **Smooth start** - touch will start smooth start-up for preset time.
- ☐ **Smooth stop** - touch will start smooth run down for preset time.

In the **Setting** you can set time for **smooth start** and **smooth stop**. Time can be set from **2s to 30 minutes**. Touch the time interval hours (or minutes) to indicate the information you want to change (Fig. 6). Arrows / will set time. Confirm setting by pressing **OK**.

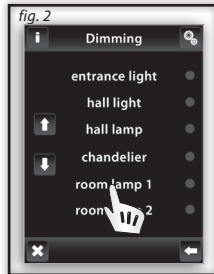Note: longer press of arrows will accelerate shifting of figures.





Main Menu / Blinds




Blinds Menu is designed to control all shutters, blinds, awnings, gates and garage doors that have a built-end switch. Touch the **Louvre**  (Fig. 1) to display selection of names you created in menu (Fig. 2). Red / Green LED indicates device status:  green- closed blinds  red – open blinds.

Blinds / Functions



Touch the desired description / name of the device to display features:  **Open**  **Close**


First you need to measure time "**t**" which your device needs to fully open / close.

Touch **open** icon  for more than 3 seconds to put (Fig. 3) device into the end position. Then touch **close** icon  longer than 3 seconds to retract indicate the device while in motion, measure time "**t**" - a period during which the equipment is in motion.

Under **Settings** you touch on a time interval of hours (minutes) mark  information you want to change. Arrows  /  set measured by time "**t**" + 2s Pulling into the field and the same time and in the field of load (Fig. 4). Confirm the time by pressing **OK**.

Note: longer pressing the arrow is accelerated shift to the figures.

A short touch on  **Up** /  **Down** can control the devices in the desired direction. Touch longer than 3 devices place the desired end position.

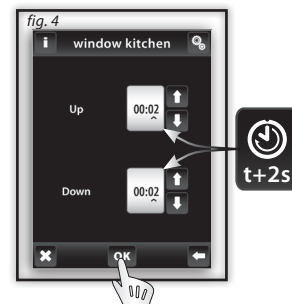

Blinds / Weekly program



Weekly program can adjust automatic weekly mode.

Touch **Weekly program** icon (Fig. 1), setup menu will appear. Touch-hour time interval (or minutes) to mark information you want to change. Arrows / will set the time of switch On and switch Off .

Note: longer press of arrow is accelerate shift of figures.

Touch the Sun-Sat icon will activate the program on a given day of the week (Fig. 2). - active for the day, - disabled for the day.


Confirmation of the selected program - . If you want to set additional blinds program to continue with programming.

Note: For one day you can create up to 5 blinds programs. Programs must not overlap (Fig. 5). Setting of program until midnight and over midnight - see page 37.

Daily / Weekly Overview shows the daily / weekly overview of switching programs.

To delete a program in the Daily overview (Fig. 3) indicate bar you want to delete (Fig. 4) at then press the bin icon to delete it. If you not select any of programed bars and press bin icon, you will remove all schedules in the day.

Weekly overview (Figure 5-6) touch the bin icon to clear all programs.

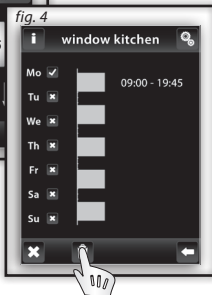

Note: Setting the Inversion function: touch / in the Weekly programme to set the initial movement of the roll-up blinds (Fig. 7).

Main Menu / Detectors

The menu **Detectors** is used for the visualisation and switching of devices using detectors. By touching the option **Detectors** (Fig. 1) you will display the list of names on the detector menu that you have created (Fig. 2).

Double State Detectors

Double state detectors (JA-81M - doors; JA-82M - windows) feature state visualisation:

- ☐ Green – Off state
- ☐ Red – On state.

JA-81M and JA-82M detectors may be used in two ways:

- ☐ Information regarding the state (On/Off) - e.g. open window (without pairing with the switching actuator)
- ☐ Pairing with the multifunctional switching actuator (On/ Off) - e.g. light switched on when door opened. By touching the name of the detector you will display the name of the switching devices with which the detector is paired. By pressing the name of the switching device you will display the selection (Fig. 4):

On state (neutral):


- ☐ Switch off - switched off without delay.
- ☐ Delayed run out – switches off after the time period set in the switching settings.

Off state (alarm):

- ☐ Switch on - switches on without delay.
- ☐ Delayed onset – switches on after the time period set in the switching settings.

Confirm by pressing **OK** (Fig. 4).

Note: The time delay is set for the paired actuator.

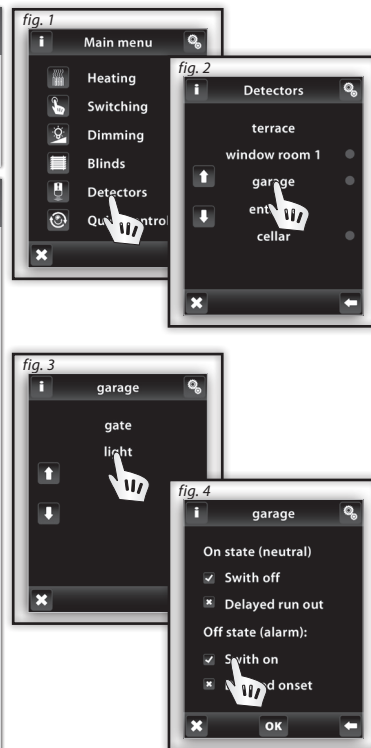


Single State Detectors

Single state motion detectors JA-80P do not feature state visualization and they are designed for pairing with the multifunctional switching actuator. By touching the name of the detector you will display the name of the switching actuator with which the detector is paired. Note: The function of Delayed Switch Off is automatically allocated to the detector. The time delay is set for the paired actuator.


Main Menu / Quick control



Quick control menu serves to the group control of devices.

Touch **Quick control**  to display the name selection of your custom menu (Fig. 2). Touch the name to display the following options (Fig. 3):

- **Activate** - displays set scenes.
- **Deactivate** - the OFF function will be executed on all active actuators.

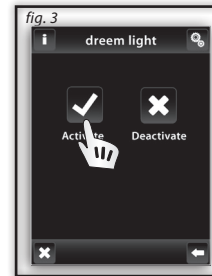

What to do when ...

RF Touch Unit Warnings

Warning is displayed in case of incorrect or incomplete entry.

<i>Warning</i>	<i>Procedure</i>
<i>Up to 40 rooms may be defined.</i>	<i>no more than 40 device names may be entered</i>
<i>Saving failed.</i>	<i>repeat entry</i>
<i>Delete failed.</i>	<i>repeat entry</i>
<i>No unit allocated.</i>	<i>allocate the requested actuator</i>
<i>Two time programmes overlap within a single day.</i>	<i>enter new settings</i>
<i>No time programme available within a single day.</i>	<i>no other programme can be entered</i>
<i>No day selected.</i>	<i>enter new settings</i>
<i>Switch on time may not exceed the switch off time.</i>	<i>enter new settings</i>
<i>Unit already allocated to the room. Select another room.</i>	<i>only one actuator can be allocated to one name of device (outside Quick Control)</i>
<i>This room has already been defined in the group.</i>	<i>enter a new name</i>
<i>The address has already been selected in the unit list. Choose another address.</i>	<i>enter correct information</i>
<i>The address information must be complete.</i>	<i>enter correct information</i>
<i>xxx displayed instead of temperature.</i>	<i>actuator not programmed, actuator/sensor defect, communication failure</i>
<i>Up to 40 units may be defined.</i>	<i>no more than 40 units may be entered</i>
<i>The switch on date must be different from the switch off date.</i>	<i>enter new settings</i>
<i>The switch on date must not exceed the switch off date.</i>	<i>enter new settings</i>
<i>All 5 programmes are engaged.</i>	<i>no other programme can be entered</i>

RF Touch Unit Warnings

Warning	Procedure
No unit allocated to the room.	allocate actuator
This group has already been allocated.	enter new settings
Display incomplete - control impossible.	calibrate the device (disconnect the power supply, after reconnecting hold the logo RF Touch, finish the calibration by touching twice the cross signs that appear in each corner of the screen)
EPROM memory error!	contact the manufacturer
RTC circuit error!	contact the manufacturer
AT45 circuit error!	contact the manufacturer
Setting of program until midnight and over midnight - at the time of 00:00 there isn't any action on the actuator.	- setting of time over midnight : set the required "switch ON" time and set the required "switch OFF" time on 00:00, next day set the switch ON" time on 00:00 and set the required "switch OFF" time.
	- setting of time until midnight: set the required "switch ON" time and set the required "switch OFF" time on 23:59
Have you lost the password?	please ask the manufacturer for information about further steps

General Information

With consideration to the transmission of the RF signal ensure that RF components are suitably located in the building where the device is to be installed. The RF Control system must only be installed in indoor areas. The device has not been designed for outdoor use or use in moist environment, it must not be installed in metal distribution boxes and plastic distribution boxes with metal doors as this would prevent the transmission of the radio frequency signal. RF Control is not recommended for the control of devices providing for vital life functions or for the control of risk devices such as pumps, electrical heaters without heat regulators, lifts, pulleys etc. - radio frequency transmission could be hampered with an obstacle, interfered with, the transmitter battery may become depleted etc. thus disabling the remote control. Not suitable for use in industrial environment.
Do not expose to extreme temperature changes. In case of extreme temperature changes allow approx. 2 hours prior to installation for the RF Touch to adjust to the temperature of the installation location. This will prevent condensation of moisture in the device and the occurrence of a potential short circuit.
Keep flammable materials away from the device.

The graphic indication of the contact / device status (red/green LED) is only for information and may be influenced by the amount of processed information or the combination of more RF Touch and RF Pilot control units.

Safety functions in RFSTI-11B and RFSTI-11G actuators: the actuators disconnect the output in case of an accidental communication failure exceeding 25 minutes.

Installation Form

<i>Serial no.:</i>	<i>Description / Name of the controlled device</i>	<i>Actuator name</i>	<i>Actuator address</i>
1.			
2.			
3.			
4.			
5.			
6.			
7.			
8.			
9.			
10.			
11.			
12.			
13.			
14.			
15.			
16.			
17.			
18.			
19.			
20.			

Installation Form

<i>Serial no.:</i>	<i>Description / Name of the controlled device</i>	<i>Actuator name</i>	<i>Actuator address</i>
21.			
22.			
23.			
24.			
25.			
26.			
27.			
28.			
29.			
30.			
31.			
32.			
33.			
34.			
35.			
36.			
37.			
38.			
39.			
40			



ELKO EP, s.r.o.

Palackého 493 | 769 01 Holešov | Všetuly, CZ, tel.: +420 573 514 211 | fax: +420 573 514 227

elko@elkoep.com | www.elkoep.com

rev.0