

Type text message

qwertyu i o p

asdfghjkl

Tap and hold the text field to open a menu and to cut/copy/paste

Tap and hold the 🔳 key to view the list of recent applications. You can

easily remove items from the list to free some memory and make your

sentence casing — 🗘 z x c v b n m 🚾

After typing, tap

key to close the keyboard.


Recent Applications

Tap to change the

numerical

keyboard with

punctuation

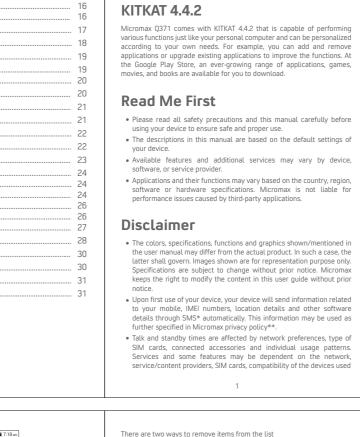


QWERTY touch


Tan once for

recognition and long

tap for input options.

and the content formats supported. Micromax Q371 comes with KITKAT 4.4.2 that is capable of performing arious functions just like your personal computer and can be personalized according to your own needs. For example, you can add and remove applications or upgrade existing applications to improve the functions. the Google Play Store, an ever-growing range of applications, games, movies, and books are available for you to download. • Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use. • The descriptions in this manual are based on the default settings of Available features and additional services may vary by device, software, or service provider. Applications and their functions may vary based on the country, requ software or hardware specifications. Micromax is not liable for performance issues caused by third-party applications.

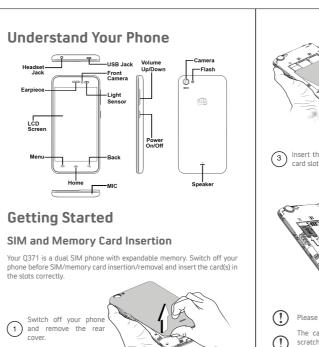

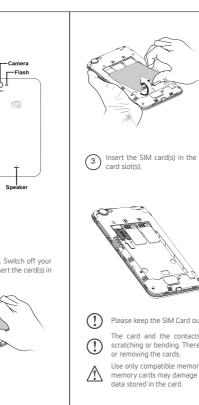

Remove the battery (if 「」 inserted). Insert the SIM card(s) in the Insert the memory card in the memory card slot. Please keep the SIM Card out of the reach of children. The card and the contacts are vulnerable to damage due to scratching or bending. Therefore, be careful when using, inserting Use only compatible memory cards with this device. Incompatible nemory cards may damage the card or the device and corrupt the

Tap on the menu screen or the home screen to go to the

messaging section and then tap 📇 to compose a message.

select the desired type of multimedia file.

Tap > to send the multimedia message.

Panorama capture

2. Tap the 🛟 icon to view the types of files that can be attached and

. Enter the contact name (if it exists) or enter the phone number. You can

Normal mode HDR mode _____ camera

e 🖟 🖈

also tap the 💂 icon to view and select contact(s) from the contact list.


camera Swap between


flashlight front and back


Tap to select the composition text box and enter your message body in

Handset Keys Power Key turn off the screen. Volume Keys Adjust the in-call, media, and ringtone volume from the volume keys available on the right side of the

Handset Keys Navigation Keys • Turn On : Press the Power key for 3-4 • Wake up the Screen : Firmly press the Power key to wake up the screen or to • Turn Off: Wake up the screen first. Now long press the Power key then tap "Pow off" to turn off the phone. Ouick Options: Wake up the screen fire Now, press the Power key for 2 second to view quick options to turn off the phone, reboot, switch to aeroplane mode, Menu Key

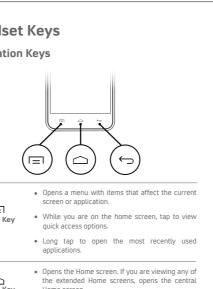

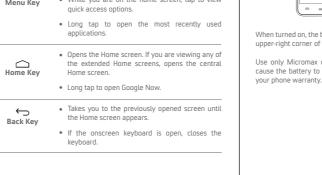

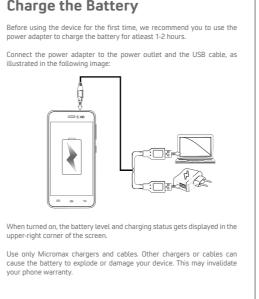



Home Screen

remove them with ease.

Know More About Widgets...

You can personalize your home screen with shortcuts, widgets, and

wallpapers. To view quick options to change wallpaper, add widgets, or

open settings section, tap the 🗐 key. You can add extensions to the

home screen by dragging an item to the right edge of the screen until a new

screen appears. Your Q371 will show only those extended home screens

that have some shortcut/widget placed on them. Swipe left or right on the

In the bottom pane, there will be five launcher icons for you to open

different sections in the phone. Except the application launcher in the

and hold to select a launcher icon and then you can rearrange, change, or

middle of the pane, you can rearrange and manage the other four icons. Tag


Widgets allow placing application shortcuts on your home screen. You can

place analog clock, your recent call logs, and other such sections of you

widgets by tapping the 🖃 key and then tapping Widgets.

phone on the home page and access them directly! View all available

home screen to view the next extended home screen.

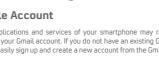

messages, charging on/off, and various other notifications and events as Some applications and services of your smartphone may require you to and when they appear in the device. sign in to your Gmail account. If you do not have an existing Gmail account you can easily sign up and create a new account from the Gmail app in yo Notification Panel

will also enable you to sync your phone calendar and contacts with your Gmail account. Changing your handset and taking contact list backup advantage of applications and services offered by Google on your Android phone. Configure your Google account on this handset to get an ease-of-access and sync your preferences and data on some applications rendered by

Network connection is required for a successful Gmail account

Account Configuration

n addition to Gmail, you can configure other email accounts from:

Other Accounts

configuration.

Add account

Also, you can download desired email application from the Play Store and access emails from the respective application.

Pair With Bluetooth Devices

1. Connect your phone with your PC/Laptop Go to ☐ → PBT

3. Select your phone network as the network connection in your PC/laptop and get

Bluetooth Tethering 1. Pair your phone with the Bluetooth

choose to connect to the Internet.

enabled PC/lanton via Bluetooth pairing

USB Tethering

via USB cable.

access to the Internet.

To configure Internet go to □□ → ■ → Dual SIM Setting → Data

Select the BT tethering option in your You may also need to configure the access point name for the data 3. On the paired PC/laptop, select the Bluetooth device (your phone) and

o configure the access point name, go to \rightarrow $\stackrel{\blacksquare}{\longrightarrow}$ \rightarrow More \rightarrow Mobile networks - Access Point Names and select the SIM for which access

access point names are not listed by default, please contact your network provider for the same.

Tethering & Portability

Your mobile operator will charge you based on your data usage.

2. Select the USB tethering option.

To pair your 0371 with some other Bluetooth device: . If Bluetooth is off, turn it on and then tap BT. Your phone scans and

confirm the passkey and pair the devices. On successful pairing, you

coverable and then search. If your phone stops scanning be

Micromax does not guarantee the accuracy of any directional displays the list of Bluetooth devices in range. . Tap the ID of the other device in the list to pair with it. 3. You will be prompted to confirm passkey on both devices. Tap Pair to

Manage Applications phone connects to the device. more convenient. The Android phones offer users access to unlimited If the device you want to pair with is not in the list, make it

you make the other device discoverable, tap SEARCH FOR DEVICES Tap Micromax Q371 at the top of the scanned device list to ma your Q371 visible on other devices.

map-related services. You can view your location on a map, search for photos from around the world. The built-in navigation works with GPS to give step-by-step route guidance while driving or walking. You can

Google Maps is an app from Google that gives you access to various

and from your phone.

(1) country or region.

Notifications

Wi-Fi networks available
 Open Wi-Fi networks available

C 1 : Q 0

Your phone has a notification LED which notifies you with missed calls, tex

Toolkit Quick Access Panel

Notification Panel

C 1 :: C

♥ 1 # **@** 0

and download items, as desired. Not all items are free of cost in the Google Play Store.

For the best experience with Google Maps, configure the following

Go to ├├ → ൂ to start using Google Maps.

Enable location access from \bigcirc \rightarrow $\stackrel{\blacksquare}{\longrightarrow}$ Location.

Your phone comes with a host of applications to make your life easier and

Internet connection is required for using Google Maps. When you

use the map, you use your Internet connection to transfer data to

The Google Maps application may not be available in every street

entertainment sources. You can download applications, games, movies, and books from the ever-increasing Google Play Store. New items get added almost daily to the Play Store to give users a never-ending fun To view and manage the list of all inbuilt, downloaded, and running

applications, go to → Apps. To download applications, games, movies, and books from the Google Play

Store, go to 🛶 🕟 to access the Google Play Store. View the details

You need to have an Internet connection and be signed in to you Google Account to use the Google Play Store.

Safety Precautions

All Notifications

When you receive a notification, its icon appears in the status bar, along

with a brief summary. You may clear each notification separately by

Toolkit provides you shortcuts to manage basic phone features, such as

Your phone has gravity sensor to detect gravity and display correct

Switch off your device in any area with potential explosive

fire or explosion. Therefore switch off your device at refueling

ations, fuel denots, chemical plants or places where blasting

he medical device to know whether they are adequately

vays keep the phone and accessories out of reach of small

and swallowed by small children.

n as credit/Debit cards. Information stored on them could

Do not place the phone near electromagnetic data carriers

from external Radio Frequency. Switch off your device

Small parts such as the SIM card or microSD card can

atmosphere. Sparks arising out of radio frequency may cause

operation is in progress. Remember to comply with legal

Your Phone's radio waves may interfere with inadequately

requirements and local restrictions when using the phone.

when regulations require you to do so.

 
Airplane Mode, Wi-Fi, Display Brightness, and many more.

swiping it towards left or right.

Gravity Sensor

rientation based on the motion.

Place your finger on the lock icon and drag towards the unlock icon.



Face Unlock

era directly.

0 0 0

password. The front facing camera

recognizes your face and unlocks the device. Face unlock feature may recognize photographs and thus may be less secure as Voice Unlock

Using the Touch Screen Set voice commands to unlock the phone Also, you can set wake up commands to

unlock and launch dialpad/messaging/cam-

Tap and hold an item to view the list of actions based on the selected item home screen using this method

Google Search

useful sections on your handset.

You can type your search keywords or can even speak it up as your search

supports voice recognition also. Use voice commands to access various

Google Search is available on the home screen and in the application menu

à ■ **!!!**\'

Tap and hold an item and move your finger on the screen until you reach

and condition. Also, you can move an item from the Apps screen to the

Set a PIN of atleast four digits as the password to unlock.

Pattern

 Connect the dots to form a pattern and use the same to unlock.

Set and use an alphanumeric password of

atleast 4 characters to unlock the phone.

◎ ◎ □ ® III III ®

the target position. The item follows your finger.

Recycle your Phone

, The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the

me of disposal will allow us to help preserve the environment. Recycling

of the electronic waste equipment will ensure safety of human health and

environment. For more information on best practices for disposal of

electronic and electrical waste, please visit to our web site: www.micro-

Do not store the device in high or cold temperature. Extreme temperatures can shorten the life of electronic devices and damage Do not use or store the device in dusty, dirty areas. Its moving parts and

Your device is a product of superior design and craftsmanship and should

be handled with care. The following suggestions will help you protect your

Keep the device dry. Precipitation, humidity, and all types of liquids or

moisture can rust the electronic circuits. If your device gets wet, remove

the battery, wipe it with a dry cloth and take it to an authorized service

electronic components can get damaged. Do not attempt to open the device other than as instructed in this guide · Do not drop, knock, or shake the device. Rough handling can break

Taking Care of Your Device

internal circuit hoards and fine mechanics Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of

Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations

Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature

unapproved accessories or supplies.

at an end. Replace the battery with a new battery of the same make and

authorized service agents/centers goes against the warranty

Micromax will not be held responsible for user's safety when using Do not discard the battery with household trash. Please dispose of used

battery according to your local environmental laws and guidelines.

 Batteries have life cycles. After a full charge, if the power reserve of the battery tend to deplete inordinately faster than usual, the battery life is

specification.

Note: Micromax will not bear any responsibility for any incompliance with the above mentioned quidelines or improper usage of the mobile phor

All rights reserved. Reproduction, transfer, distribution or storage of part

maxinfo.com/weee.php.

all of the contents in this document in any form without the prior written

permission of Micromax is strictly prohibited.

Using the Pinch Zoom

You can open any image or web page and then use your thumb and index

finger to zoom the display through the pinch gesture.

*Operator tariff shall be applicable for SMS.

**Micromax privacy policy is available at www.micromaxinfo.com

Your handset supports video calling using which you can talk face-to-face

Open the contact details of the call recipient from the contacts list

video call recipient also needs to have a 3G connection.

Store, use, and synchronize contact details in your contact list. You can nov

create contact groups or mark contacts as favorites in your phonebook. Use

tabs or swipe through to view the list of contact groups, contacts, and

Favorite Contacts List Contact Groups

Dial a number on the dialer, tap the icon and then select Video Call.

To make a video call, you need to enable 3G on your SIM card.

Please contact your service provider for 3G data pack details. The

with your friends via real-time video streaming.

then tap 🔼 to make a video call

To make a video call:

favorite contacts list.

- . The colors, specifications, functions and graphics shown/mentioned the user manual may differ from the actual product. In such a case, the latter shall govern. Images shown are for representation purpose only
- further specified in Micromax privacy policy**. Talk and standby times are affected by network preferences, type of SIM cards, connected accessories and individual usage patterns. Services and some features may be dependent on the network,

on the menu screen or the home screen to open the dial pad for

By default, the dialer will display a list of contacts on which calls have been

You can show the dialer by tapping 🏭 or view the call history by tapping

made very often and the contacts which have been marked as favorites

select Remove from list

or right

Make a Call

Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

Headset Front Camera

Add a new contact to the contacts list by tapping + icon and then

entering the contact name, number and details in the respective

You can synchronize your contacts list with any of your accounts

Tap the key on the contacts screen and then tap Accounts.

Select the account(s) with which contact list is to be synchronized.

You can auto-sync contacts by selecting the Auto-sync app data option

To synchronize contacts, you need to have Internet connectivity via

your SIM or Wi-Fi. If your Sync does not proceed as expected, check

Some locations may require you to disable all the network-related

functions of your mobile. The Airplane Mode enables you to disable all

Press and hold the Power button and then select Airplane mode.

Drag down the notification panel, tap and then select AIRPLANE

incoming and outgoing calls. Wi-Fi, and Bluetooth connections.

our contacts synchronization will be complete in a few seconds.

Synchronize Your Contact List

synchronize your contact list:

network connectivity.

Airplane Mode

- or adjust the sound profiles.

You can use the Gallery to view pictures and play videos and share files. Tap

Q — Open Music Library

Play next song in the

Adjust volume

Press the phone's volume up/down keys on the right side of the

You can use an SD card to enhance the storage capacity for you

D multimedia files such as music, photos, emails, and so on.

Open the playlist

Turn on/off sonas

Turn on/off repeat

Play/Pause song

an album to open and view its contents.

2131624095

phone to adjust the volume.

Music Plaver

You can listen to your favorite FM channels using the inbuilt FM receiver

your phone. Before starting the FM, you need to plug-in the headset as i

works as antenna for the FM radio. Use the intuitive buttons and icons on

ress the phone's volume up/down keys on the right side of the

phone to adjust the volume.

the phone in the radio interface to enjoy the features of your inbuilt FM

Settings, Networks, & Applications our phone can connect to networks and devices, including Internet, Wi-Fi GPRS, Bluetooth, and devices, such as headsets. You can also transfer files



to/from your PC through the data cable.





You can use your Q371 as a modem and connect your PC or laptop to the Internet, when required. Start using your SIM data pack on your PC or

Go to
→ More → Tethering & portable hotsport

Wi-Fi Hotspot

1. Turn on the Wi-Fi hotspot option in your

2 On the other Wi-Fi enabled

Wi-Fi network to connect with it.

PC/laptop/handset, choose your phone as a

3. View and configure Wi-Fi hotspot settings

by tapping the Wi-Fi hotspot option.

Permanent damage to hearing may occur if you use earphones at high volume for prolonged periods. Set your volume to a safe If you experience discomfort in your ears, reduce the VI I volume or discontinue the use of your earphones. Manufacturers of medical devices recommend a minimum distance of 15.3 cm (6 inches) between a wireless device and an implanted medical device such as pacemaker or cardiverter

defibrillator to avoid issues arising out of radio frequency

interference.

nhone, please use the earniece.

You can enable/disable the auto-rotate feature by dragging down the

notification panel, tapping , and then selecting AUTO ROTATION.

You can enable/disable the auto-rotate feature from:

By default. Slide Unlock is your unlocking technique

Wake up the screen by firmly pressing the Power key.

Place your finger on the lock icon and drag it towards the unlock icon

Protect your phone from unauthorized access. Once locked, the phone car

be unlocked by providing the unlocking password set while choosing the

It is important to remember the passwords and commands, which you se

Slide Unlock

The mains voltage (V) specified on the power supply unit must

You may only open the phone to replace the battery (if not

nbuilt), SIM card and micro SD card. You must not open the

ery under any circumstances. All other changes to thi

phone may cause interference in the vicinity of TV sets.

Only use Micromax specified batteries and charging devices.

material closes the circuit of the terminals. Exercise care

Do not use the phone while driving. When you have to use th

Please put the phone safely in the phone stand. Do not put it

Flight is influenced by interference caused by the phone. It

onto any passenger seat or any place from which it may fall

llegal to use a phone on the airplane. Please turn off your

The phone must be repaired by Micromax authorized

nside your pocket, purse or other container with metal object

handling any charged battery, particularly when placing i

Do not dispose of batteries in fire as they may explode

down during collision or emergency braking.

The battery may cause damage, injury or burns if a conductive

strictly prohibited and will invalidate the warranty

er supply must be plugged into an easily accessible A

Phone Security

Unlock the Screen

to unlock the screen.

Phone Unlocking Methods

Choose and set a screen unlocking technique from

→ Security → Screen lock

for your phone. A forgotten password cannot be retrieved.

power socket when charging the battery.

unlocking technique.

→ Display → Auto-rotate screen