USER'S MANUAL

Section 1 Structure Description



Add.: 18th Floor, On Hong Commercial Building, 145 Hennessy Road, Wanchai, Hong Kong Tel: + 86 – 799 – 6767972 Fax: + 86 – 799 – 6767973 Mobile: + 86 – 13907994349 Website: <u>www.ridge.hk</u> E-mail: <u>info@ridge.hk</u> <u>tiger@tigerceramics.com</u>

Front

- 1) Left IR light
- 2) Lens
- 3) Interphone Mic
- 4) Interphone speak key
- 5) Screen shut down key [
- 6) Playback key []
- 7) Power key [⁽¹⁾]
- 8) State indicator light
- 9) Right IR light
- 10) Audio record key
- 11) Audio record Mic
- 12) Speaker
- 13) Video record key (🚔)

Back

- 14) USB interface
- 15) Video/Audio signal input interface
- 16) Earphone interface
- 17) Photograph key [0]
- 18) Mounting hole
- 19) Reset key
- 20) LCD screen
- 21) Base interface/ interphone interface/ 3G transmission terminal interface
- 22) Base charge touch point
- 23) Clip

Section 2 Basic Operation

2.1 Power on Unit

Press Power key ⁽⁰⁾ to power on the unit with beep sound, it enters preview mode; the Mode indicator light illumines green.

- Note: 1. At the top of the screen, it shows left space, total file number, left video record time, battery power from left to right.
 - 2. At the bottom of the screen, it shows the system current time.

2.2 Take Video

In preview mode, press Video record key ["], unit starts to take video with audio after beep sound. Press Video record key [] again, it stop taking video after beep sound twice. All the videos will be saved automatically as MP4 format.

Add.: 18th Floor, On Hong Commercial Building, 145 Hennessy Road, Wanchai, Hong Kong Tel: + 86 – 799 – 6767972 Fax: + 86 – 799 – 6767973 Mobile: + 86 – 13907994349 Website: <u>www.ridge.hk</u> E-mail: <u>info@ridge.hk</u> <u>tiger@tigerceramics.com</u>

Note: 1. During taking video, the State indicator light will flash in red.

- 2. At the top of the screen, it shows taking video indicator, total file number, recording time, and battery power from left to right.
- 3. At the bottom of the screen, it shows user's information, system current time, and time stamp from left to right

2.3 Photograph

In preview mode, press Photograph key ^(D) to take photo with small crash sound. The photo will be saved automatically in JPG format.

2.4 Take audio

In preview mode, press Audio record key (, unit start to take audio with beep sound. Press Audio

record key (again, unit stops taking audio with beep sound. The audio will be saved automatically in WAV format.

Alle

Note: In taking audio state, state indicator light is flashing in yellow, and a red dot is flashing on the left top of the LCD screen.

2.5 IR night Vision

In preview mode or taking video state, long press Screen shut down key [2], unit enters IR mode. Long press Screen shut down key [2] again, shut down the IR mode. Note: In IR mode, when unit switches to playback or taking audio mode, the IR lights will shut down automatically. Suggest open the IR mode when in low light condition.

2.6 Playback

2.6.1 Select the Playback File

In preview mode, press Playback key [] to enter thumbnail playback mode, press Audio record key 1 to select the next left file, press Photograph key [] to select right next file, hold pressing Audio record key [] or Photograph key [] to move left or move right fast.

2.6.2 Video and Audio File Playback

In thumbnail playback mode, after selecting the video or audio file, press Playback key [] to enter full screen playback mode, press Playback key [] again to start playing the file. During playing the file, press Playback key [] to pause playing, press Playback key [] again to continue to play. During playing file, press Video record key [] to get back to thumbnail mode. After playing file over, unit will get back to thumbnail playback mode automatically.

Note: During playing video file, press Audio record key () to rewind, press Photograph key () to fast-forward.

2.6.3 Photo File Playback

In thumbnail playback mode, after selecting photo file, press Playback key [], unit enters full screen display, press Audio record key []) or Photograph key []) to switch to last or next file. Press Video record key []) to get back to thumbnail playback mode.

2.6.4 File Search

In thumbnail playback mode, long press Screen shut down key $[\square]$ to enter screen of date set search(as pic 1 shows). Press Audio record key $[\square]$ and Photograph key $[\square]$ to select date search item, press Screen shut down key $[\square]$ and Playback key $[\square]$ to set the data search range, press Video record key $[\square]$ to confirm search. The search result will show mark \square with the files matching the range (as pic 2 shows). Press Video record key $[\square]$ to exit the search mode.

2.6.5 Exit the Playback Mode

In full screen playback mode, press Video record key ("") to get back to thumbnail playback mode, press Video record key ("") again to get back to preview mode.

2.7 Shut Down Screen

Press screen shut down key $[\square]$ or after no operation for 3 mins, LCD will shut down, system go into power-save mode. At this time, press any key except Power key $[\square]$ to open the LCD, system exit power-save mode.

2.8 Interphone Mic function

Connect interphone cable's one end to the unit's interphone interface, the other end to interphone. Adjust the interphone, use the unit as the Mic through controlling the Interphone speak key.

Note: 1. When connecting the cable, connect the unit's end first, interphone's end second.

2. Choose the correct interphone cable according to different interphone.

2.9 Using External Video/Audio Input Device

Connect our compatible external video/audio input device, the unit will power off after detecting the correct connecting. After reopening the unit, it enter the external device video/audio input state, we can take video in special situation.

2.10 Using External 3G Transmitting Device

Connect our compatible external 3G transmitting device to realize 3G video/audio communication, and GPS locating, send/receive SMS, etc.

2.11 Reset

If need resetting, operate as the picture below. Press reset key for about 3 seconds.

Note: This operation will not cause the file data losing.

Section 3 File Management System (Basic Version) Installation and Use

3.1 Software Overview

The File management system (FMS)'s confidentiality is high, and can proof tampering the files, etc. It can realize modifying the password, set resolution, time synchronization, log management, important file upload, user information set, etc.

3.2 Operation System

The software support: Windows 2000 SP4/ Windows XP SP2/ Windows Vista/ Windows 7.

3.3 Install Driver

Before installing FMS, we need install driver first, the method is as following:

3.3.1 Run diver Program

Put the disc accessory into computer's CD-ROM, in the auto-run interface, click "32 bit system driver" or "64 bit system driver" button.

- Note: 1. Windows XP is 32 bit system. About Windows Vista or Windows 7, check the system type in the attribute of the "computer icon".
 - 2. If the disc has not auto-run, open the disc, then open the "autorun.exe" in the root folder.

3.3.2 License Agreement

Read License agreement, click "I accept".

3.3.3 Install Pack

Select the pack, click "next".

3.3.4 Install Path

Select install path, then click "install"

3.3.5 Install Finish

After install finishes, click "close", end the installation.

3.4 Install FMS

3.4.1 Install

In the interface of disc auto-run, click "32 bit File management system" or "64 bit File management system" button.

3.4.2 Install Guide Read install guide, click "next"

3.4.3 Install Path Select install path, then click "next"

3.4.4 FMS Name Input FMS name, click "next".

3.4.5 Shortcut Tick or not tick "create shortcut on desktop", click "next".

3.4.6 Prepare Install

Click "install".

3.4.7 In Installing

3.4.8 Install finish

Click "finish", end install.

3.5 FMS user manual

Connect unit to computer via USB cable, run FMS. Connecting way is as pictures following.

3.5.1 Verify Password

Input unit's password (initial one is: 123456), click "verify password", after computer showing "set system time successfully", the unit's time synchronize with the computer's.

lp(H)								
<u>∧</u> 3a								
password: *****	**	verify password	Reset passwor	d Movable Disk	Delete all files	Host name:		
						Port:	anonymous	
Police No:	•		Police No. s	etting	Log		21	
						user name.	21	
esolution:	FHD	но	Di		VGA	password:	****	
esolution:	FHD	HD	Di		VGA	password:	****	
esolution:	FHD	HD	D1		VGA	password:	****	
esolution:	FHD	HD	D1		VGA	password:	*****	
solution:	FHD	HD	DI		VGA	password:	******	
solution:	FHD	<u>но</u>			VGA	password:	******	
solution:	FHD Date	HD No. of byte	D1	ile Name	VGA Date	password: No. of byte	5	
solution:	FHD	HD No. of byte		ile Name	VGA Date	password: No. of byte	5	
C:\ eName VINDOWS Frogram Files	FHD Date 05/23/12 05/25/12 05/25/12	HD No. of byte ODEA ODEA		ile Name	VGA Date	password: No. of byte	5	
c:\ Le Nume WINDOWS Program Files Driver	PHD Date 05/28/12 05/25/12 05/07/12	HD No. of byte (DIR) (DIR) (DIR) (DIR) (DIR)		ile Name	VGA Date	password: No. of byte	5	

3.5.2 Modify password

Click "Reset password" button, input right old password, input new password twice, click "OK", computer shows "reset password successfully".

Land Land Land	+++++	85
Input old password		OK
Input new password	*****	
Confirm now possiverd	*****	Cancel

Note: The password should be 6 number or character.

Add.: 18th Floor, On Hong Commercial Building, 145 Hennessy Road, Wanchai, Hong Kong Tel: + 86 – 799 – 6767972 Fax: + 86 – 799 – 6767973 Mobile: + 86 – 13907994349 Website: www.ridge.hk E-mail: info@ridge.hk tiger@tigerceramics.com

3.5.3 Movable Disk

In movable disk mode, we can view the data file in the unit.

Click "Movable disk" button, in "My Computer" we can see the new movable disk, unit enters movable disk mode.

DOCUMENT.	MANAGEMENT S	YSTEM						_ 🗆 🔀
Help(H)								
<u>×</u> 5=								
password: *****		verify password	Reset password Mo	vable Disk Dele	te all files	Host name:		
8				1.2	100	Port:	anonymous	
Police No:	•		Police No. setting	Log		user name:	21	
Resolution:	FHD	Ю	Di	VGA		password:	****	
Connection failed!								^
8								3
⇒ C:\			-					▼ 1
File Name	Date	No. of bytes	File Na	me	Date	No. of byte	25	
C WINDOWS	05/28/12	<dir></dir>						
CProgram Files	05/25/12	<dir></dir>	=					
Driver	05/07/12	(DIR>						
🛅 Documents and	03/26/11	(DIR>						
AUTOEXEC. BAT	03/26/11	0	×					
Ready								Number

Note: After entering movable disk mode, FMS can't set the unit, if need, disconnect the USB cable, reconnect it.

3.5.4 Delete All the Files

Click "Delete all files", computer shows delete all files confirmation table, click "yes" to continue the operation. Click "yes" again to continue the operation, click "no" to cancel the operation.

Information table shows delete the files successfully, finish the operation. Note: Finish the operation, the files CAN NOT be restored.

3.5.5 Set Resolution

Select and click one from "FHD", "HD", "D1" and "VGA", set resolution.

Resolution:	FHD	Ю	D1	VGA
	5 J			

3.5.6 Police Information Set

The user information will show on the video or photo taken.

Input unit's password, click "Police No. setting", input information, click "OK", computer shows "police information set successfully".

3.5.7 Log Management

Unit make log notes when in running state and operation, the log can be viewed and removed. Click "log" button, the log can be viewed or removed according to the following message.

Note: Click "view the log" button, the information table present "please view in the movable disk", computer enters movable disk mode, double click "log.txt" file to view the log information.

DOCUMENT	MANAGEMENT SY	STEM						🛛 🔀
Help(H)								
X 3:								
password: *****	ok	verify password Res	et passwor	d Movable Disk 1)elete all files	Host name:		
						Port: anon	nymous	
Police No:	• [Pol	Lice No. s	Log		user name: 21		
Resolution:	FHD	Ю	D1	VGA		password: ****	*****	
re-connection re-connection re-connection re-connection re-connection connection								
G:\ → C:\		1				[<u> </u>
file Name	Jate OF (00 (10	No. of bytes		11e Name	Date	No. of bytes		
	05/26/12	ATTE>	=					
Driver	05/07/12	(DTR)						
Documents and	03/26/11	(DIR)						
TAUTOEXEC. BAT	03/26/11	0	~					
Ready								Number

3.5.8 The Use of FTP Function

You can upload the files in unit to the defined FTP, or download files from FTP to unit. Note: Before using this function, you should first turn into the mode of movable disk, and reboot FMS, then input the unit's password.

1) Connections with FTP

Click the FTP connection icon icon icon icon icon icon the top left corner, you'll find the "quick connect" button, input the mainframe and user's name, then the port and password, and click the "quick connect" button.

2) Downloading files from FTP

After successful connection, there will be a list of server files on the lower right corner, right click it, you'll have it downloaded to the certain catalog on the left, if you want to download it to unit, choose the movable disk of the unit, you can also click "delete" or " rename" button Note: the downloaded files can be read only by supporting the format of unit.

3) Unit's files uploading to FTP

After successful connection, enter into the movable disk of unit, click the files needed to be uploaded on the list, you will find the prompt of "files send ending" on the information basket after successfully uploading. or operate this step by clicking "delete", "rename" or "open."

Section 4 Charge Management

4.1 Charge battery

Unit builds in the rechargeable battery.

4.1.1 Multi-Function Base Charge

Connect the power adaptor to the base via power cable, after being switched on the base's red power indicator lights up, Put the unit in to the base (as picture below), the unit's indicator light illuminates in red, it enter charging state. When it is full charged, the light turn into green, recharge time is about 5 hours.

Note: first time charge the unit 5 hours.

4.1.2 USB cable charge

Connect the base to power adaptor, computer or car adaptor via USB cable; the battery can also be recharged.

- Note: 1. Charge directly to the unit WITHOUT the base is also ACCEPTED (suggest charge the unit in its power-off state, and use the base via power cable, it will save the charge time).
 - 2. When charging the unit in its power-on state, take video or audio will not change the indicator light's state.
 - 3. If not use the unit for long time, please recharge the battery once every 3 months, in case of the battery losing effectiveness.

Add.: 18th Floor, On Hong Commercial Building, 145 Hennessy Road, Wanchai, Hong Kong Tel: + 86 – 799 – 6767972 Fax: + 86 – 799 – 6767973 Mobile: + 86 – 13907994349 Website: www.ridge.hk E-mail: info@ridge.hk tiger@tigerceramics.com

Section 5 The way of put on shoulder strap

1. Expand the strap, and put it into the epaulette from its bottom.

2. Turn back the top of the strap.

3. Insert the turn back part of the strap into the middle layer of the epaulette, and fix the bayonet to the button position.

4. Press fastener to fix the strap

Add.: 18th Floor, On Hong Commercial Building, 145 Hennessy Road, Wanchai, Hong Kong Tel: + 86 – 799 – 6767972 Fax: + 86 – 799 – 6767973 Mobile: + 86 – 13907994349 Website: <u>www.ridge.hk</u> E-mail: <u>info@ridge.hk</u> <u>tiger@tigerceramics.com</u>

5. Put the unit into the strap, and clamp the clip to the adjuster of the strap.

6. Rotate the adjuster to get proper position.

Section 6 Solve Faults

Fault	Reason	Solution
Can't boot up	Battery is low-power	Full charge the battery with power source adapter
Showing incorrect time/date	Incorrect time of computer	Reset time after enter into the FMS
Indicator lights on but screen doesn't boot up	Device is in power-save mode	Press other function key except the Power key
Image is fuzzy when photographing or shooting	Camera lens not clean	Clean the lens with clean flannelette
Computer can't be recognized when connecting	 USB wire is not inserted well Wrong input of password 	 Insert the USB wire again Check the password
Multi-function base can't be charged	 Unit is not well connected to the multi-function base. Power plug is loose 	 Connect unit to the multi-function base well Check the power plug and insert it well
Long time charging	Charging unit in its power-on state and via USB wire	Turn off the unit and open it after it is full-charged

Annex Composition table of RoHS

Poisonous and harmful substance or Element's names and content of this product:

Name of parts	Poisonous and Harmful Substance or Elements								
Name of parts	Pb	Hg	Cd	Cr	PBB	PBDE			
Body case	0	/	/	/	/	/			
Button coating	0	/	/	/	/	/			
LCD screen	0	/	/	/	/	/			
Accessory cable	×	/	0	/	/	/			
Lens device	×	/	0	/	/	/			
Resistance	×	/	/	/	/	/			
Circuit board	/	0	0	0	0	0			
Battery	0	/	0	/	/	/			

o: It means that the content of poisonous and harmful substance in all average material is under the requirements prescribed limits of SJ/T11363-2006.

×: It means that the content of poisonous and harmful substance at least in a certain average material is beyond the limited requirements with SJ/T11363-2006 states.

/: It shows that we did not find any poisonous and harmful substance out in these parts.

Note: 90% of parts is made of in harmful and un-poisonous environmental material, according to the limit of the global technology development level, the part with poisonous and harmful substance cannot achieve the replacement of toxic substance or elements .