



**Vacuum Cleaner**

**Model CE2190VC**



Dear Valued Customer

Thank you for purchasing a *CASCADE* vacuum cleaner.

We understand the importance of your purchasing decision, and appreciate your final choice to introduce this *CASCADE* product into your home.

Your *CASCADE* vacuum cleaner is recognized as a quality product at an affordable price, and is proudly supported by our after sales service team. We encourage you and your friends to choose from the range of *CASCADE* products available exclusively to The Warehouse.

#### **TECHNICAL INFORMATION**

Please make sure that your house installation voltage corresponds to the voltage marked on the unit.

Mains supply: 220-240V ~ 50 Hz – AC only  
Rated Power: 1600 Watts

#### **SERVICE**

In the unlikely event of failure or for product information please contact the below help lines.

New Zealand call 0800 898 580  
Email: [service@orientalpacific.com](mailto:service@orientalpacific.com)  
Australia call Toll Free 1-800-858011

### **INSTRUCTION MANUAL**

PLEASE SAVE THESE INSTRUCTIONS





## BEFORE FIRST USE

- Your *CASCADÉ* vacuum cleaner has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, immediately contact your retailer for replacement or repair.
- Carefully unpack your *CASCADÉ* vacuum cleaner. Make sure you do not discard any packaging material until all parts of the vacuum cleaner have been found.
- Carefully wipe the exterior of the cleaner to remove any dust that may have accumulated. Dry with a dry towel. Do not use harsh abrasive cleaners. Remove any label or sticker.

WARNING! Do not immerse in water or any other liquids.

## OPERATION

- Carry the vacuum cleaner to the area to be vacuumed.
- Fit the hose, extending tubes and floor tool to the vacuum cleaner. Ensure that the vacuum dust bag is correctly fitted. **WARNING!** Never use without the dust bag and main cloth filter fitted. Note. The dust compartment door will not close without a dust bag correctly fitted.
- Extend or retract the brush on the main floor tool as required for the type of floor to be vacuumed. Extend brush for hard floors such as tiles or wood and retract for rugs and carpet.
- Pull out the required amount of power cord from the vacuum cleaner. **WARNING!** Do not uncoil past the yellow marker on the power cord, as this is a warning that the power cord is close to its full length. If the red indicator on the power cord is visible, retract back to the yellow indicator. Damage to the recoiling mechanism can result if this warning is ignored and will void warranty.



- Insert the power plug into a mains outlet corresponding with the vacuum cleaner requirements of 220 – 240V ~ 50 Hz - AC only.
- Switch on power at the mains outlet.
- Set the suction control to the desired power level of the vacuum cleaner.
- Depress the on/off switch to start or stop the vacuum cleaner. The cleaner will now start to suction.
- The vacuum cleaner has a manual air flow regulator attached to the hose handle. This is used to briefly lower the suction level during operation; the further open the regulator the weaker the suction power.
- Regularly change the dust bag and ensure the main filter is clean.

When completed disconnect vacuum from the mains supply, retract cord and empty dust bowl. Store vacuum cleaner along with all its accessories.

### **DUST BAG REPLACEMENT**

This vacuum cleaner uses model CS003VB dust bag, barcode number 9421009501106 vacuum dust bag available at The Warehouse LTD nationwide.



## CARE AND CLEANING

To clean the outer surface of the vacuum cleaner, use a soft damp cloth and dry the appliance afterwards with a dry towel. Ensure that no moisture enters the appliance. Stubborn spots can be cleaned with a cloth moistened with mild liquid detergent. Do not use solvents to clean plastic parts. Liquids such as solvents, petrol and oils that contain chemical substances may damage, corrode or destroy the plastic parts of the appliance.

Do not put any detergents or any cleaning agents into the vacuum cleaner.

Clean only after unplugging the vacuum cleaner from the mains supply.

Keep the ventilation slots on the vacuum cleaner clean to prevent the appliance from overheating.

Regularly clean the air exit filter (Located at rear of vacuum cleaner behind the rear exhaust filter). Clean by hand in warm soapy water. Air dry any filter before reinstalling. Do not use a hair dryer or similar appliance to dry the filters.

Do not expose the vacuum cleaner to direct sunlight as the quality of the vacuum cleaner finish may deteriorate.

**STORAGE:** Unplug vacuum cleaner from the mains outlet. Retract the power cord into the vacuum cleaner by depressing the cord rewind button with one hand. **WARNING!** Feed the power cord into the appliance with the other hand; do not allow the power cord to free wheel at high speed and stop suddenly when the plug enters the appliance. Store in its box or in a dry place with all of its accessories.



## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Carefully read these instructions before using your appliance.
2. **VERY IMPORTANT:** Do not immerse in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.
3. Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.
4. **WARNING!** Unplug from mains outlet when appliance is not in use or cleaning.
5. An appliance dropped or damaged should not be used until examined by a service engineer.
6. Do not permit the mains lead to come in contact with hot objects.
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
8. **CAUTION:** Keep out of reach of children. This vacuum cleaner is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the vacuum cleaner.
9. Use this appliance only for its intended use. Use only genuine attachments supplied by an authorised Service Dealer.
10. This vacuum cleaner is intended for household use only and not for commercial or industrial use.
11. The vacuum cleaner should not be used outdoors, or placed near a hot gas or electrical burner.



12. **WARNING!** Any appliance should never be left unattended when plugged in.
13. If appliance is to be used by a third party, please supply the instruction manual with it.
14. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

**CAUTION**

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

**Warranty Card**

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase with proof of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts or refund when the product is returned freight prepaid to the retailer with proof of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

**WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS**

Type of Appliance: \_\_\_\_\_

Model No.: \_\_\_\_\_ Purchase Date: \_\_\_\_\_

Product Purchased From: \_\_\_\_\_  
\_\_\_\_\_

Your Name: \_\_\_\_\_

Address: \_\_\_\_\_  
\_\_\_\_\_

Phone Number: \_\_\_\_\_

**IMPORTANT!**

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer. If service or a warranty claim is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged or warranty declined. For technical help contact the helpline.

**Technical Assistance Helpline**

New Zealand call Toll Free 0800-898580

Australia call Toll Free 1-800-858011

Email [service@orientalpacific.com](mailto:service@orientalpacific.com)

Website: [www.orientalpacific.com](http://www.orientalpacific.com)