



We're blurring the line between the latest technology and affordable pricing.

Our mission:

- To get powerful, useful technology into the hands of everyone who wants it.
- To do our part in getting everyone, everywhere in the world, connected to the information and resources available through the internet.



# Android Tablet User Manual



DeerBrook Electronics, LLC  
3616 Harden Blvd STE 357  
Lakeland, FL 33803

## Table of Contents

### General notices for use

#### Disclaimer

#### Box Contents

### 1.0 Product basics

#### 1.1 Buttons and connections

#### 1.2 Start up and shut down

### 2.0 Introduction to Google Android 4.2

#### 2.1 The Desktop

#### 2.2 The App drawer – bottom center of the desktop

#### 2.3 Google Search / Voice search – top of the desktop

#### 2.4 Navigation icons – bottom of the screen

#### 2.5 Status information area – top of the screen

### 3.0 General operation

#### 3.1 Battery status / charging your tablet

#### 3.2 Installing Apps

#### 3.3 Administer / remove apps

#### 3.4 Add an account

### 4.0 Basic setup

#### 4.1 Changing operating language

#### 4.2 Wi-Fi settings

#### 4.3 Connecting the tablet to your PC

### 5.0 Frequently Asked Questions

## 5.0 Frequently Asked Questions

### I downloaded [app name] and now it doesn't work (properly)?

Android software was initially developed for mobile phones and some have no support for Android devices with larger screens. Try to update the software or find a compatible alternative app. This incompatibility also sometimes occurs with software written for previous Android versions.

### How can I manually install an APK file?

By default, it is not possible to manually install APK files. To enable this you have to enable the setting 'Unknown sources'. This can be found in the settings menu -> Security.

### My battery is only lasting xx hours!

The operating time of the tablet on one battery load depends very much on the specific tasks that it has to perform. Wi-Fi, Bluetooth and other wireless communication technologies are known to consume a lot of energy. Also CPU intensive applications such as games and HD video clips can use up the energy of the battery fast.

To maximize the duration of your battery, you can optimize the following settings:

- Choose a low or dynamic screen brightness
- A short press on the power button will directly place the tablet in standby mode
- Download an 'App killer' to clear the memory from previous started apps
- Disable Wireless devices when not using them
- Remove USB devices (these use power as well)
- Avoid use/charging extremely hot or cold environments



## General notices for use

This product is a highly advanced electronics device, disassembly, customization or repairs without the appropriate knowledge and pre-cautions can lead to dangerous situations with chance on damaging the product and serious injuries. Avoid use in extreme conditions such as high and low temperatures, high humidity or moist environments and around magnetic fields. Also avoid long-time exposure to sunlight. Only use by the manufacturer permitted accessories to avoid damages to the product with possibly warranty loss.

 
Please follow the relevant local environmental regulations to deal with obsolete machines and accessories. Use a protective folder to avoid extreme physical shocks to the device (i.e. of dropping).

This product comes with a partially charged battery. Please make sure to fully charge the battery or have the charger inserted before first use to avoid possible damage.

### 4.3 Connecting the tablet to your PC

When connecting the tablet to your PC through USB, no drivers are needed to access the tablet's internal memory or inserted microSD card. However, you do need to confirm the USB connection: click the notification area in the system information bar at the top left of the screen [15:02]. Now select the option 'Touch to copy files to/from your computer'.

If your PC still asks for the device drivers, it may be that the tablet is 'Android debugging mode'. To change this, please go to the 'Settings' menu and open the ( ) 'Developers options' item. In the right pane you can (un)check 'USB debugging'.

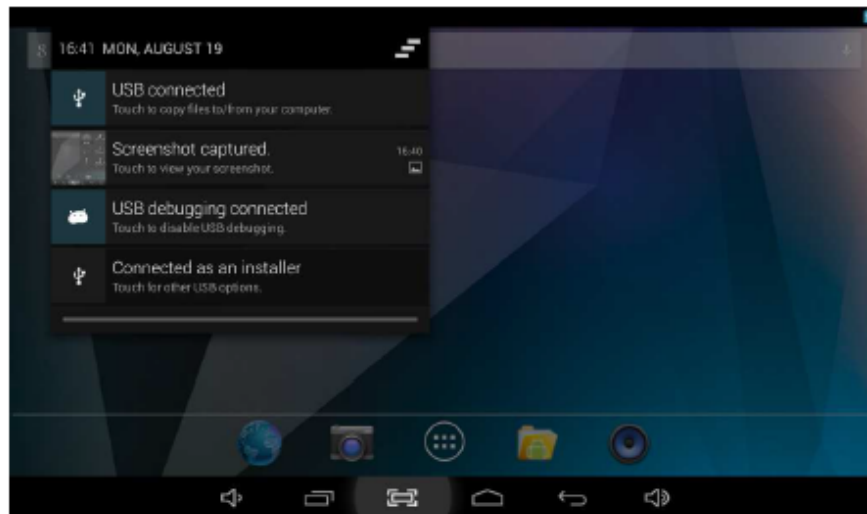

## Disclaimer

 
The screenshots are for Android reference only. They may be made on a device with a different resolution or hardware configuration than yours and may be slightly different than the final product. The manufacturer takes no responsibility for loss of information or data caused by hardware or software failure. The user is responsible for performing timely backups of important data. All information and images used in this user manual are provided 'as is' and are subject to change without notice. The manufacturer accepts no liability for the information offered in this document.

## Box Contents

Android Tablet PC, Device charger, Instruction manual, USB Cable, OTG Cable.

## 1.0 Product basics


### 1.1 Buttons and connections

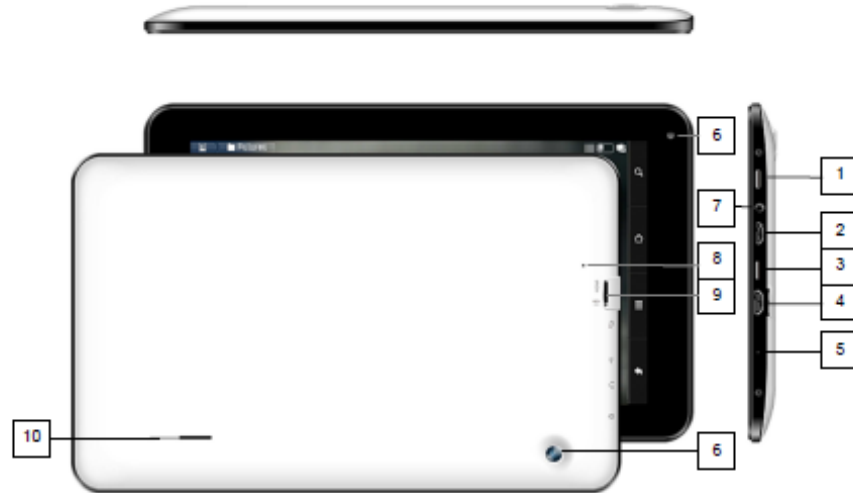

1	Power	2	Micro USB
3	Back button	4	Mini HDMI
5	MIC	6	Webcam
7	Headphone	8	Reset
9	Micro SD card reader	10	Speaker


### 1.2 Start up and shut down

 
To start your device, press and hold the 'Power button' until the screen lights up. To shut down your device, press and hold the 'Power button' until the following dialog popup appears.

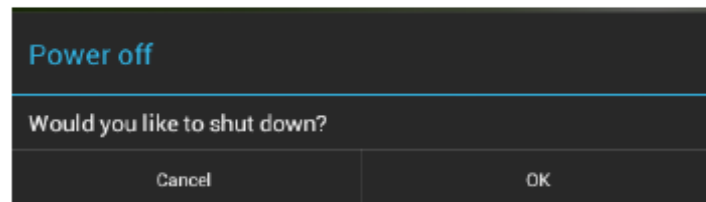


## 4.0 Basic setup

 
 

### 4.1 Changing operating language


Press the  icon in the bottom center of the desktop to open the App drawer. Select the 'Settings' option to open the Android settings menu.

When selecting the option  'Language & input' the contents will be displayed in the right pane. Now open the option 'Language' and choose a language for your tablet to operate in. This pane also displays the keyboard settings which you can customize, enable or disable.

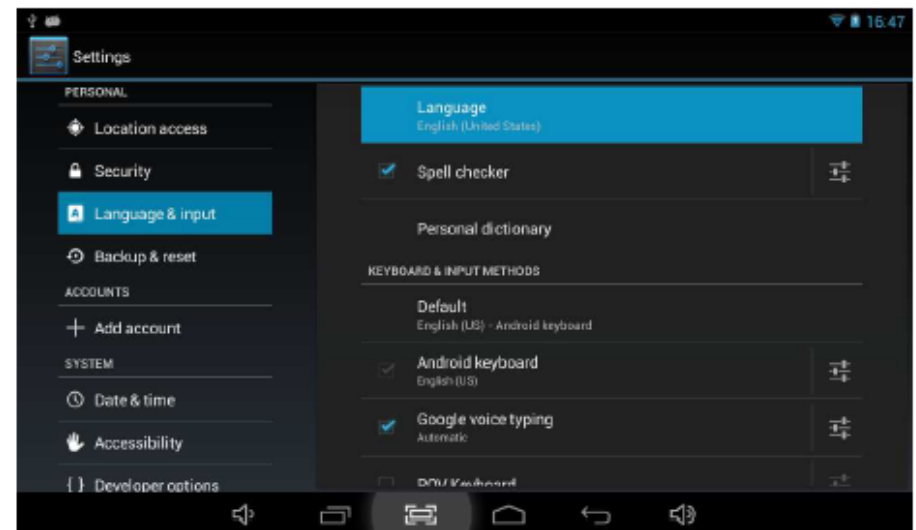


### 4.2 Wi-Fi settings

Press the  icon in the bottom center of the desktop to open the App drawer. Select the 'Settings' option to open the Android settings menu. When selecting the option  'Wi-Fi' the contents will be displayed in the right pane. The  switch allows you to quickly toggle Wi-Fi on and off.


In the 'Wi-Fi' content panel you can view the formerly used Wi-Fi networks and the Wi-Fi networks that have been detected by the tablet. To research for new available networks; please press  located in the right top corner. The option '+' allows you to add a network by manually inputting the SSID network and security method.

Whether manually added or automatically detected, you may need to fill in a password to be accepted on the network. Please contact your system or network administrator for the correct information.

 
Advanced network settings can be found by clicking the options icon .

## 2.0 Introduction to Google Android 4.2

### 3.3 Administer / remove apps


The  'Apps' item in the 'Settings' menu will display an overview of the installed apps. There are four tabs available which filter the displayed app list. Select an app to view its detailed information. In the detailed information you also have the options 'Force Stop', 'Uninstall', 'Clear data' and 'Move to SD card'. Moving apps to your SD card can save you some internal storage memory on the tablet.

The 'Clear cache' and 'Clear defaults' can be used when you are experiencing issues with a specific app. Clearing cached information and (possible wrong) default settings may solve the problem. Clearing this information will also wipe any stored login information. i.e. clearing the cache of your social media app will also force you to re-login afterwards. Apps may also be removed in the apps content page of the Play Store™ / shop application.

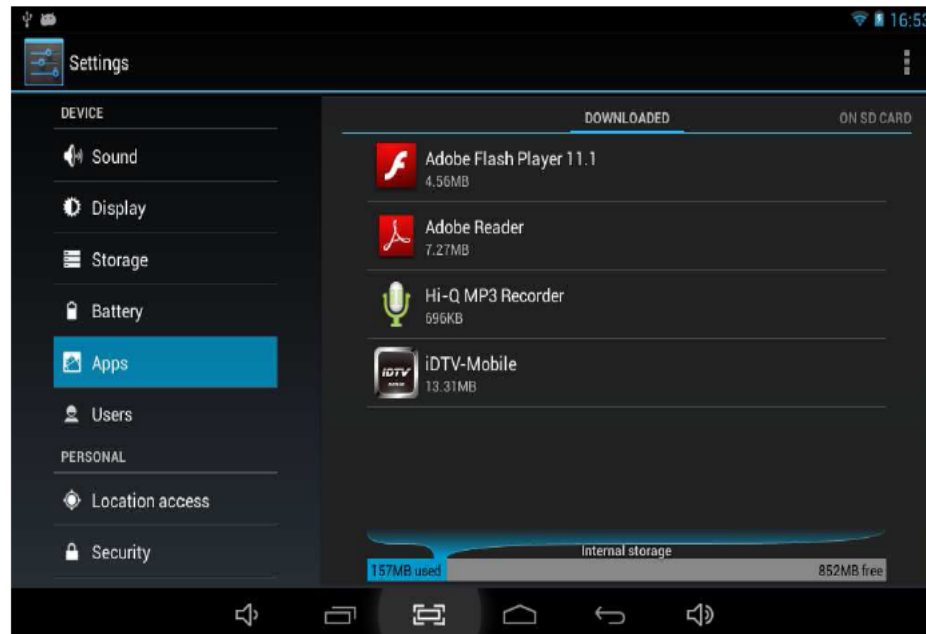

### 2.1 The Desktop

The main area of interest will be the desktop itself. Here you will place shortcuts to Apps or widgets – a visual application that can display real-time information. There may be some pre-installed icons and widgets on your tablet.

To change the desktop background image of your tablet return to your desktop by pressing the 'HOME'  icon. Press and hold an open space on the desktop (don't press an icon) - until a popup appears named 'Select wallpaper from'. In the list may appear multiple options to select an image or animated image of choice. The option 'Live Wallpapers' will show the pre-installed animated desktop images. Other options such as a 'Super-HD Player', 'Gallery' or 'Wallpapers' allow you to select (widescreen) photos, downloaded images or other images; depending on the features of that specific application.

To place a widget or app shortcut on the desktop, touch and hold the icon until the App drawer fades and the desktop appears. Move your finger to the location where you want to place the icon and release your touch to place the icon.


To move or delete icons and widgets from your desktop, touch and hold the icon until a grid appears. Move the icon to the new location or drag it to the 'X Remove' bar on the top of the screen to remove it. Releasing the touch screen will confirm your action.





## 2.5 Status information area – top of the screen

The top icon bar will show some system information (i.e. 15:02 ). The contents of this area can change if installed applications place additional information here. Sliding it down will open a small overlay menu displaying the date/time information, the tablet's current network status, the battery status and a shortcut icon to another quick menu where some things like 'Airplane mode', 'Wi-Fi', the screen brightness and other options can be set or toggled. Also this quick menu contains a shortcut to the 'Settings' menu. Simply clicking elsewhere on the screen will close this menu.

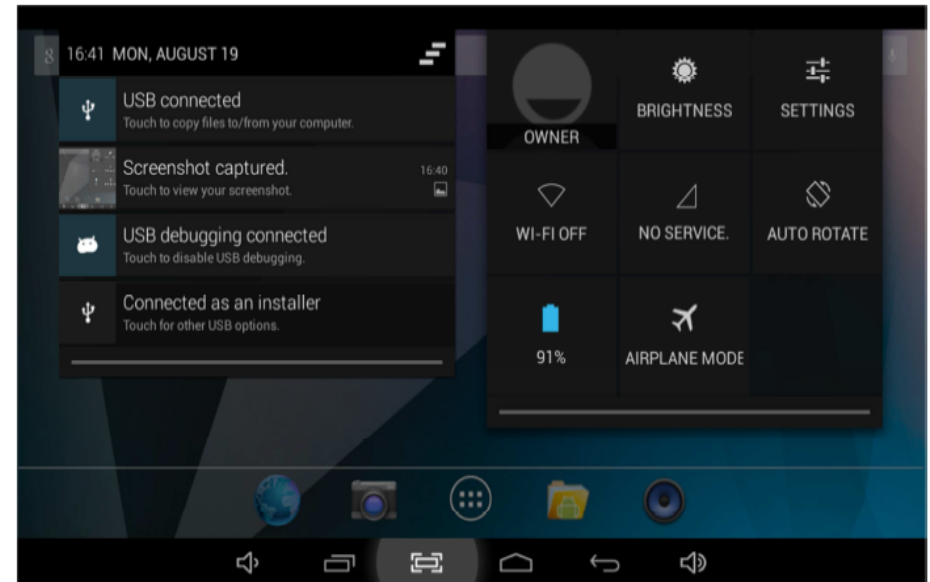 

## 3.0 General operation

### 3.1 Battery status / charging your tablet

 
The current battery status will be always displayed in the top right of the screen in the system information bar. The battery icon will change accordingly to the battery status. When connected to the DC charger, the status area on the top bar will display the charging icon. Note the lightning symbol inside the battery icon.

### 3.2 Installing Apps

You can install your own Apps by opening the Apps shop (Google Play Store™). This button can be found in the 'App drawer'. The Apps shop is located on the top right of the screen. Note that not all applications may function properly for your tablet. Some are made especially for small screen devices such as phones.

## 2.4 Navigation icons – bottom of the screen

On the bottom of the screen you will find three icons: use the navigation icons 'HOME' or 'RETURN' to close the App drawer and return to your desktop. The 'RECENT ACTIVITY' icon will show an overview of the active and recently opened applications. Click on the small displayed preview to open that application.

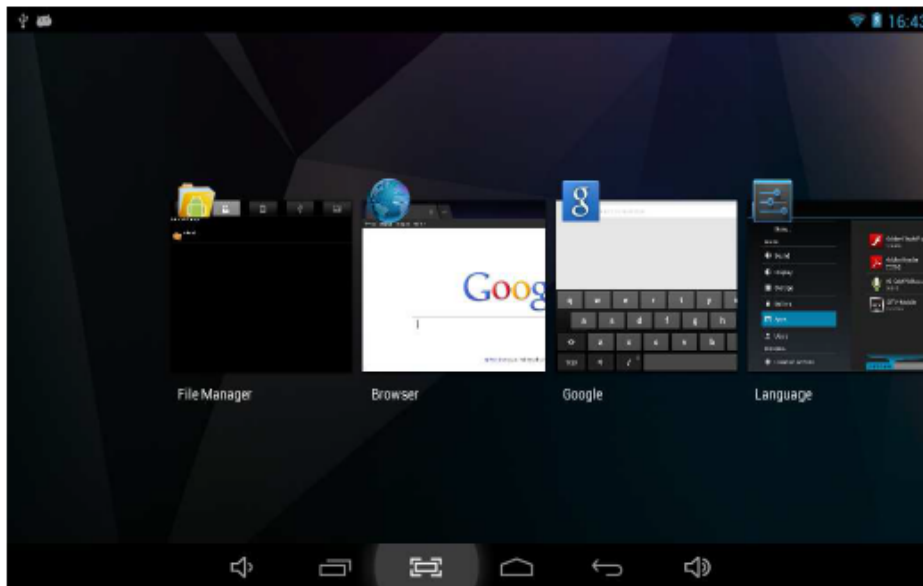

recent activity preview