




QUICK START GUIDE

Product ID label

1. Product description

The IntesisHome® device is an external module capable of connecting Panasonic air-conditioning units into your Wi-Fi network in order to provide global connectivity and remote control applications through a friendly user interface.

2. Packaging content

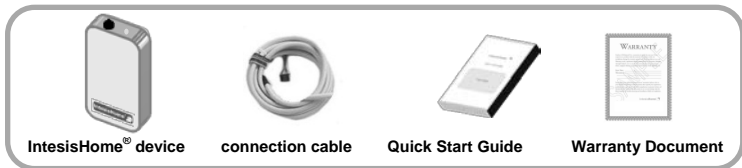

3. IntesisHome® device description

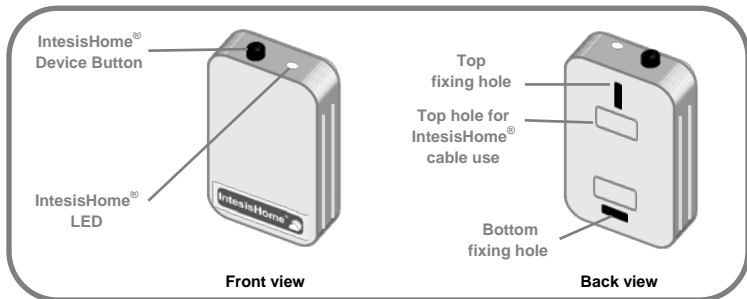


Figure 1.- IntesisHome® Device

4. IntesisHome[®] device connection procedure

Before starting the set up process, make sure that the Air-Conditioning unit (AC) is connected to the power supply line and IntesisHome[®] LED is steady green.

There are two connection modes available: **with WPS** and **without WPS**.

NOTE: Check your Access Point (AP) user's manual to find (if available) the WPS button or WPS activation procedure

4.1 Connection with WPS

This method assumes that your Access Point (AP) supports WPS connection mode.

1.- Press IntesisHome[®] device button

(IntesisHome[®] device LED starts blinking blue)

2.- Activate your AP WPS mode. IntesisHome[®] device LED will change blinking color

If connection has been successful, IntesisHome[®] LED will blink up to one minute and then it will turn off. If not, please check LED status table and/or visit www.intesishome.com/support.

4.2 Connection without WPS


This method assumes that your AP does not support WPS connection mode and that you have a Wi-Fi compatible device (laptop, mobile phone, tablet, etc.)

1.- Connect your Wi-Fi device to the IntesisHome[®] Wi-Fi network

(Network that starts with *Intesishome*)

2.- Open the web browser of your Wi-Fi device and write any URL

(IntesisHome[®] welcome site will open)

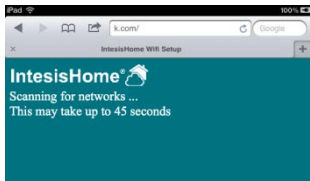

3.- Select your AP from the list of available APs by clicking on **select** button.


(In this example *APWifi*)

If the desired AP is not showed press the browser *Refresh* button.




4.- If the network is protected, write the correct password and click *next* button

This screen may change depending on the security protocol used by your AP.

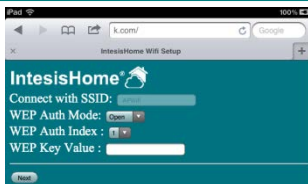

5.- Confirm that you want to connect to that network by clicking *Save and apply* button

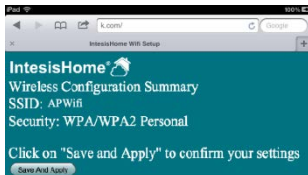

If connection has been successful, IntesisHome® LED will blink up to one minute and then it will turn off. If not, please visit www.intesishome.com/support.

LED status table

Color (s)	Behavior	Description
Green	Steady	Ready to be connected
Blue	Blink	Performing WPS connection
Green	Blink	Connecting to access point and server
Yellow	Blink	Downloading configuration. Wait
Red /Green	Alternate blink	Error Connecting to Access point. Try to connect again and make sure you write the correct password
Yellow /Green	Alternate blink	Server not reached. Check if there is Internet connectivity on your Access Point

5. IntesisHome® Device registration

Go to the user area at www.intesishome.com to register as a user and also to configure the installed device(s).

6. FAQ and support

For any question or problem related with the product or the installation procedure, please visit our support center at www.intesishome.com/support.