

TS² PULSE™

User Manual

Model: FC1720



1. On / Off Switch with 2 speed settings
2. 2 Heat Settings
3. Cold Shot
4. Tourmaline/Ionic Plate
5. Removable Lint Filter
6. Ergonomic Handle
7. Professional 9ft. Cord

PREPARING FOR USE:

Please read these instruction before operating and retain for future reference.

1. Remove all packaging and keep safe until satisfied your hair dryer is operating correctly
2. DO NOT plug in until ready to use
3. Wash and condition hair as you would normally
4. Ensure hands are dry and hair is not dripping wet
5. Always blot hair dry with a towel to remove excess moisture
6. If desired, attach the Salon Slim Concentrator to the nozzle of the hair dryer
7. Plug the unit into a suitable mains supply and switch on

HINTS AND TIPS:

1. As a general guide use higher heat/speed settings for initial drying, rough drying and thicker heavier hair.
Use lower setting for finer hair, to complete your style and for more precise control

2. Use concentrator to help direct airflow

ADDITIONAL INSTRUCTIONS AND CAUTIONS

1. Never put the hair dryer down on soft furnishings, bedding or close to a wall or other surface. Never cover the hair dryer
2. After use or leaving the hair dryer unattended, always unplug from mains supply.

CLEANING AND MAINTENANCE:

1. Switch the hair dryer off, unplug from the mains and allow to cool fully
2. Wipe over the casing using a soft damp cloth(If necessary a little washing up liquid may be used) Do not immerse the unit in water or and other liquid
3. Remove and wash the concentrator in warm soapy water
4. Ensure all parts are dried thoroughly with a soft towel before reusing
5. Do not use harsh abrasives or cleaners. Withdraw the filter and remove any build up of hair and dust
6. This appliance is fitted with a rear mesh. To prevent an ingress of hair, dust or fluff and it MUST be kept clean. Regularly clean the internal filter by twisting and removing the rear inlet grille(5). Withdraw the filter and remove any build up of hair and dust.
7. If you have long hair or use high amount of styling products, clean the filter regularly. i.e. at least once a month.
8. Never attempt to clean the filter by inserting an implement

Ensure the hair dryer is completely cool and hair dry. DO NOT wrap the supply cord around the appliance. Store in original box in a cool, dry place.

IMPORTANT SAFE GUARDS:

ALWAYS...

- ...keep rear air inlet grill and filter dust and fluff free
- ...return malfunctioning appliance for repair as stated in after sales service
- ...ensure hands are dry and hair is free from excess water before handling the plug or switching on the appliance.
- ...unplug the hair dryer from the power supply when not in use, prior to use, when setting down and before cleaning
- ...always keep out of reach of children
- ...always take special care when using near children or people who are insensitive to heat
- ...always allow to cool before cleaning and storing away.

NEVER...

- ...never immerse electrical appliance in water
- ...never use in a bathroom or near any source of water/liquid
- ...never use outdoors
- ...never wrap the mains lead around the hair dryer. Avoid twisting or kinking it
- ...never carry or suspend the hair dryer by mains lead
- ...never allow air inlet or outlet grilles to become even partially blocked
- ...never use other attachments other than these supplied
- ...never cover the hair dryer, or put down on soft furnishings or bedding or against a wall or upright surface.
- ...never use after malfunction or damages to mains lead occurs
- ...never use for any purpose other than these described in these instructions.