



User Manual Phoenix 35

PowerBoss, Inc.
A Member Of The Hako Group

Introduction

Preface

Dear customer, It is our desire that the good characteristics of the Phoenix 35 should justify the confidence you demonstrated by making this purchase. Prior to the first use, read the chapter "Safety Information" carefully as this will ensure safe operation of the machine. Your own safety, as well as the safety of others, depends to a great extent on how the machine is moved and operated. Therefore, this operation and maintenance manual must be read and understood prior to the machine being used for the first time.

The manual provides valuable information about operation, service and maintenance. The warning symbols as used in this manual identifies items relevant to safety. Please observe the safety provisions (see chapter "Safety Information").

Your authorized PowerBoss dealer will be pleased to answer further questions regarding the machine or the operation and maintenance manual.

Please be advised explicitly that we cannot accept any legal issues out of the contents of this manual. If repair work has to be performed make sure that only genuine spare parts are used; only genuine spare parts may guarantee a dependable machine. We reserve the right for technical improvement..

Valid as of: March 2008

PowerBoss Inc.
175 Anderson Street
NC 28315 U.S.A.
Telephone: (910) 944-2105
(800) 982-7141 Fax: (910) 944-740
techsupport@powerboss.com

Proper use

The machine is a vacuum scrubbing machine for wet cleaning of hard-surfaced floors. Using the machine beyond this scope of application will be deemed improper use; The manufacturer cannot be held liable for consequential damages; the user alone bears the risk.

The term of proper use also includes operation, maintenance and repair work to be performed in compliance with the manufacturer's specifications.

The Phoenix 35 may only be used by persons that are familiar with the machine and aware of possible hazards involved.

If modifications to the machine are made in absence of the manufacturer's prior consent, the latter cannot be held liable for damage resulting from such unauthorized modification.

Introduction

Notes on warranty

The terms of the sales contract apply. Damages are not subject to warranty if they are due to non-compliance with the maintenance and service provisions. The maintenance work has to be performed by an authorized PowerBoss service center and confirmed in the "Maintenance certificate" which is the warranty document. The following is excluded from warranty: fuses, natural wear, damages caused by overload, inexpert handling and unauthorized modification of the machine. Moreover, any claim for warranty cannot be accepted if damages of the machine are caused by fitting parts or accessories without PowerBoss's prior and explicit consent or by non-compliance with the maintenance instructions.

Acceptance of the machine

Upon arrival, check machine for possible damages in transit. For refund of such damage, contact your freight forwarder to confirm damage.
Mail notification and waybill to:

PowerBoss Inc.
175 Anderson Street
NC 28315 U.S.A.
Telephone: (910) 944-2105
Fax: (910) 944-740

Table of Content

Introduction	2	3	Operation	12	5.4.6 Disposal of Batteries	29
Preface	2	3.1 Method of operation	12	5.5 Solution Tank	30	
Proper use	2	3.1.1 Brush Head	12	5.5.1 Fill Solution Tank	31	
Notes on warranty	3	3.1.2 Solution Tank	12	5.5.2 Empty Solution Tank	31	
Acceptance of the machine ..	3	3.1.3 Squeegee	13	5.5.3 Clean Solution Filter	31	
		3.1.4 Recovery Tank	13	5.6 Recovery Tank	32	
1 Safety information	5	3.1.5 Travel Drive	13	5.6.1 Empty Recovery Tank	33	
1.1 Safety and Warning Symbols ..	5	3.1.6 Batteries and Charger	13	5.6.2 Clean Recovery Tank	33	
1.2 General Provisions	6	3.1.7 Options	13	5.6.3 Clean Suction Filter	33	
1.3 Provisions for Operation	6	3.2 Operating and Indicating Ele-	14	5.7 Plate brush head	34	
1.4 Maintenance instructions	7	ments	14	5.7.1 Clean Brushes	34	
1.5 Specific Hazards	7	3.2.1 Operating Panel	14	5.7.2 Change Brushes	34	
1.6 Information for Protection of En-	8	3.2.2 At the machine	17	5.7.3 Change Deflector Roller	34	
1.7 Labels at the Machine	9			5.7.4 Change Sealing Strip	34	
		4 Technical Data	20	5.8 Squeegee	35	
2 First Operation	10	5 Maintenance and Care	22	5.8.1 Cleaning the Squeegee	35	
2.1 Instruction	10	5.1 PowerBoss System Mainte-	22	5.8.2 Changing the Squeegee blades...	35	
2.2 Initial charging procedure...	10	nance	22	5.8.3 Adjusting the Squeegee blades ..	36	
2.3 Before Putting into Operation	10	5.2 Maintenance Document	23			
2.4 Start Machine	10	5.3 Maintenance Schedule	24			
2.5 Operation	11	5.4 Battery Systems	28			
2.6 Stop Machine	11	5.4.1 Charge Batteries	29			
2.7 After Work	11	5.4.2 Low Discharge Signal sender	29			
2.8 Transport rides	11	(LDS)	29			
2.9 Tie-down points	11	5.4.3 Maintenance of Drive Batteries	29			
		29			
		5.4.4 Remove Batteries	29			
		5.4.5 Install Batteries	29			




EC-Declaration of Conformity 39

Safety information

1 Safety information

1.1 Safety and Warning Symbols

All paragraphs in this manual referring to your personal safety, the safety of your machine and the environment protection are attributed one of the following warning symbols:

Symbol	Hazardous for ...	Description
Safety Provisions 	persons and goods	Safety Provisions in dangerous situation caused by misuse inaccurate adherence of instructions or prescribed work routine.
CAUTION 	the machine	important information on handling the machine in order to maintain operability.
Ecological hazard 	the environment	due to use of substances representing an inherent danger to health of environment

Safety information

1.2 General Provisions

- Apart from the provisions contained in this instruction manual, the general safety provisions and the accident prevention regulations as imposed by law have to be complied with.
- Before operating machine, carefully read this user manual as well as other separate instructions for accessories or attached implements and comply with all points mentioned there during work.
- Persons being trained by qualified PowerBoss technicians only are authorized to operate, service and repair the machine.
- You are advised to thoroughly study the safety instructions since precise knowledge helps prevent errors during machine operation and thus guarantee proper use of the machine.
- The operating instructions have to be at hand at the place of use of the machine, and therefore have to be kept readily available at the machine.
- When selling or letting the machine for rent, hand out these documents

to the new owner/operator and have the transfer certified!

- The warning and instruction plates attached to the machine contain valuable advice about safe operation. Immediately replace incomplete or illegible labels.
- As far as safety standards are concerned, spare parts must equal to genuine PowerBoss spare parts!

1.3 Provisions for Operation

- Before first operation of the machine, fully charge the battery with an initial charging procedure and comply with the operating instructions of the charger as well as with those of the battery manufacturer. PowerBoss cannot be held liable for damages resulting from an insufficient initial charge.
- Before operation, check the machine for operational safety! Immediately remedy malfunctions!
- It is indispensable for the operator to get acquainted with all attached implements and controls as well as with their function before operation begins.

- When working with the machine use firm and skid proof shoes.
- The machine may be used only on such surfaces clearly specified by the owner or his authorized representative.
- When working with the machine, pay strict attention to any persons in the close vicinity.
- Start moving immediately after brush head has switch on otherwise the brush might leave traces on the floor. Lift the brush head before moving over obstacles (doorsteps).
- Only fold open empty recovery tank.
- Use only cleaning agents suitable for automatic machines (low-foaming) and comply with the instructions for use, disposal and with the warning information specified by the cleaning agent's manufacturer.
- The machine is not designed for collecting hazardous, inflammable or explosive dusts or substances.
- Usage of the machine in explosive areas is prohibited.
- Pull the switching key to avoid unauthorized use of the machine.
- Before transport of the machine, lift the squeegee and the brush head.

Safety information

Adapt driving habits to local conditions.

- The machine may be used only for operation on flat floors with a maximum inclination of up to 10%.

1.4 Maintenance instructions

- The daily and weekly maintenance and repair task must be performed by a qualified operator. For further maintenance and repair work beyond please contact your local PowerBoss service center.
- Observe the maintenance activities and intervals set out in the instruction manual.
- Maintenance and repair work may be carried out only by means of appropriate tools.
- Have the machine checked for safe condition in the sense of the Accident Prevention Regulation by an expert at regular intervals (recommendation: at least once yearly) as well as after modifications or repair.
- Spare parts must be equal to technical requirements as specified by the manufacturer! Genuine spare parts guarantee compliance with these requirements.

- Switch off the engine and remove the key before inspecting the machine or performing any maintenance work.
- To prevent the machine from being used by unauthorized persons, the control key must be removed.
- When performing work at the electrical system, be sure to disconnect the battery plug.
- Make sure to protect the recovery tank against accidental closing or tilting down before working in the area of a lifted tank lid.
- Do not clean the electrical parts by means of high-pressure cleaning equipment.
- The use of aggressive detergents is prohibited.
- Let the machine dry after cleaning.
- The machine may be taken into operation after all protective devices have been fitted and positioned.

1.5 Specific Hazards

Electric system

- Only use genuine fuses with the specified ratings.
- In case of malfunction of the electric system, immediately shutdown ma-

chine and remedy.

- Only qualified personnel are authorized to work on the electrical installations and only according to electro-technical rules.
- Inspect/check the electrical equipment of the machine at regular intervals. Clear up any defects immediately, such as loose connections or damaged cables.

Battery

- Respect the operating instructions of the battery manufacturer.
- Never place metal objects or tools on batteries - short-circuit hazard!
- Due to alteration of the center of gravity, only use batteries as released and at the prescribed position only.
- Only charge batteries in areas with sufficient ventilation. – Explosion hazard!

Safety information

1.6 Information for Protection of Environment

- For safe use of substances inheriting a danger to health and environment specific knowledge is required.
- Observe the legal directives and local regulations for disposal of detergents, see Water Management Act.
- Used batteries labeled as recyclable contain reusable economic goods. According to the crossed dustbin label these batteries must not be added to the normal waste. Provide an agreement with the PowerBoss contract dealer on their return and disposal.

Safety information

 
1.7 Labels at the Machine

The following safety and information labels are legibly attached to the machine. Replace missing or illegible labels immediately.


PowerBoss nameplate (Fig. 1/1)

PowerBoss®

Machine identification number (Fig. 1/2)

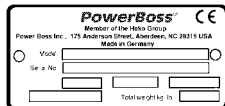

Recovery drain hose (Fig. 1/3)

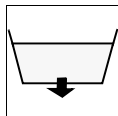 

A = Read and observe the instruction manual (Fig. 1/2)

B = Maximum inclination of 10% (Fig. 1/2)

C = Do not clean the machine by means of high-pressure cleaning equipment (Fig. 1/2)

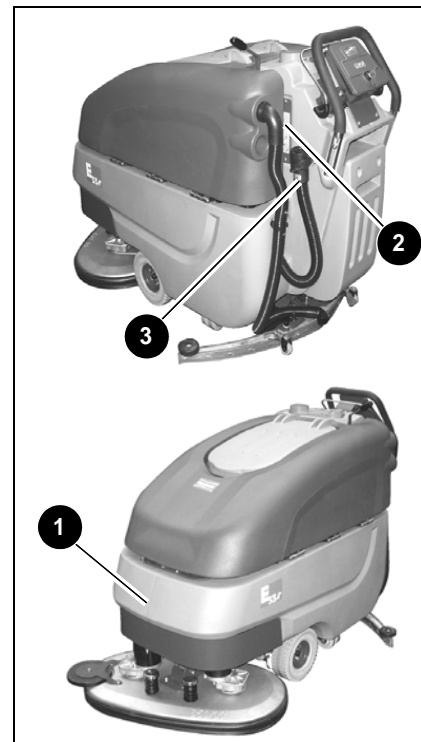
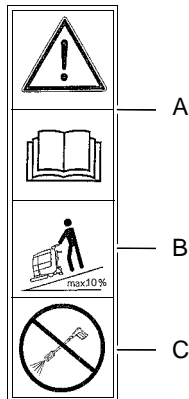


Fig.1

First Operation

2 First Operation

2.1 Instruction

Instruction is required before first operation. First instruction into handling of the machine must be held by a qualified person sent by your local PowerBoss contract dealer. Your PowerBoss dealer will be informed by the manufacturer upon delivery of the vehicle and will contact you to make a date for instruction.

2.2 Initial charging procedure



Before first operation of the machine, fully charge the battery with an initial charging procedure and comply with the operating instructions of the charger as well as with those of the battery manufacturer. PowerBoss cannot be held liable for damages resulting from an insufficient initial charge.

2.3 Before Putting into Operation

Complete the following inspections before taking the machine into operation:

1. Check the area around the machine for signs of leakage. Hoses, lines and tanks must be free from any leakage or damage.
2. Install brushes and squeegee, see maintenance chapter.
3. Install batteries and connect battery plug, see maintenance chapter.
4. Check battery charge and proceed to re-charging of batteries if required. Generally proceed to initial charging before first operation of the machine.
5. Empty recovery tank and clean it if required, see maintenance chapter.
6. Re-fill solution tank and add cleaning agent according to the manufacturer's recommendations.



Use only cleaning agents suitable for automatic machines (low-foaming) and comply with the instructions for use, disposal and with the warning information specified by the cleaning agent's manufacturer.

2.4 Start Machine

Proceed with the following to set the machine to operating mode:

- Disconnect AC plug of the charger from outlet and fasten to the holder.
- Switch on machine by turning the key switch from position (0) to position (1).

First Operation

2.5 Operation

1. Switch on the machine.
2. Use tip switch to lower squeegee. Suction turbine switches on automatically.
3. Switch on solution supply by means of the tip-switch (Fig. 4/14).
4. Adjust the solution amount by means of the tip-switch (Fig. 4/13) when brush head lowers solution supply switches on automatically.
5. Use the speed control knob (Fig. 5/1b) to adjust the working speed. Use the direction switch (Fig.5/1a) to select forward or reverse. Pull the bail handle (Fig. 5/1c) to start moving.



Start moving machine immediately after switch on the brush head, otherwise the brushes leave traces on the floor. Lift brush head before passing over steps and other obstacles.

2.6 Stop Machine

If release the accelerator lever, this returns automatically into the neutral position. The machine stops. Protect the machine against unintentional move-

ments or against being inadvertently started.

2.7 After Work

1. Ride machine to suitable site for maintenance.
2. Stop machine, lift squeegee and brush head and remove the key.
3. Empty and clean recovery tank.



Observe the legal directives and local regulations for disposal of detergents.

4. Check solution filter.
 5. Check seals and suction hose.
 6. Check operating fluid levels, function and setting.
 7. Charge batteries.
 8. Clean the machine.
- Empty the solution tank before shutting down the machine for a longer time.



Do not clean the electrical parts by means of high-pressure cleaning equipment.

2.8 Transport rides

To move the machine to the place where it is to be used, switch it on, lift-out squeegee and brush head and actuate the accelerator switch according to the desired direction of travel.

2.9 Tie-down points

In case of transport on a vehicle or trailer, the machine has to be protected against rolling off. Tie the machine down firmly by lashing it to the front with the eye bolts (Fig. 2/1) and to the rear with the chassis (Fig. 2/2) .

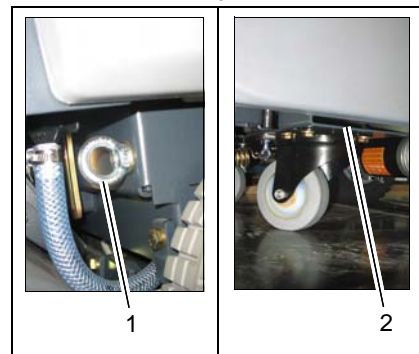


Fig.2

Operation

3 Operation

3.1 Method of operation

General

The Phoenix 35 is a vacuum scrubbing machine for wet cleaning of hard-surfaced floors.

3.1.1 Brush Head

Lower brush head (Fig. 3/1)

The brushes rotate and water supply switch off automatically when the accelerator lever is in the neutral position (machine stopped). Likewise the brushes and water supply switch on automatically in forward position.

3.1.2 Solution Tank

Fill the solution tank (Fig. 3/2) after folding up the opening. The solution tank holds 113 litres and the filling level can be seen through the transparent hose. Regulation of water amount is available via adjustment handle.

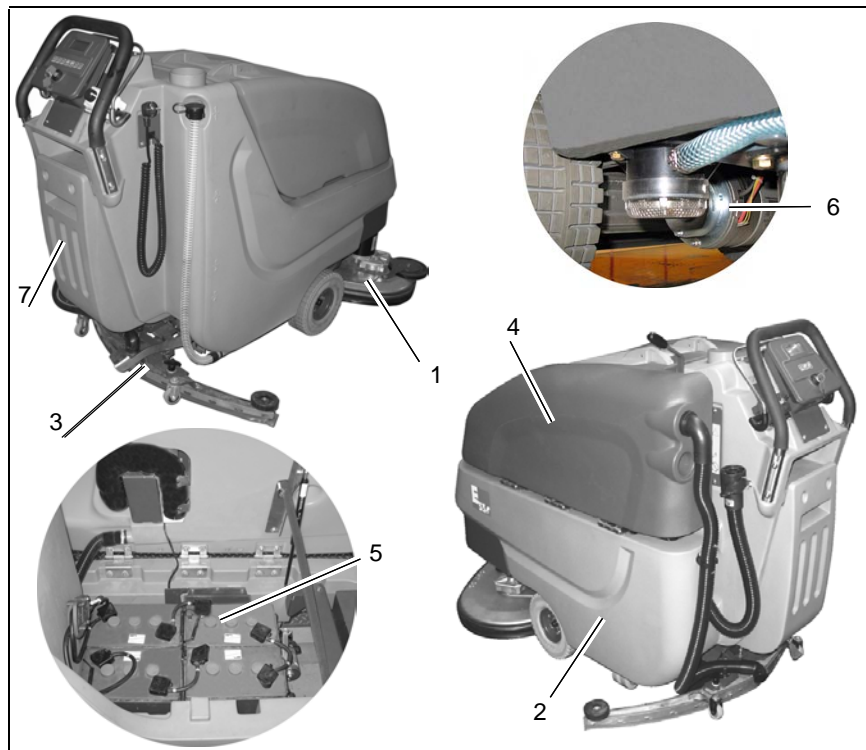


Fig.3

Operation

3.1.3 Squeegee

The movable squeegee (Fig. 3/3) consists of the squeegee lift-out, the suction turbine and squeegee blades. The dirty water is wiped from the floor by means of the squeegee blades. Squeegee is lowered via tip switch. Simultaneously, the suction turbine switches on. The suction turbine works independent of direction of travel and even if the machine stops. Second actuation of the tip switch lifts the squeegee up again and suction turbine is automatically switched off with a delay of 15 seconds.

3.1.4 Recovery Tank

The dirty water is taken from squeegee to the recovery tank (Fig. 3/4) by suction turbine and suction hose. For cleaning and collecting water at places where access is difficult, the machine can be equipped optionally with handheld suction hose.

3.1.5 Travel Drive

The machine features a continuous travel drive (Fig. 3/6). The electronic drive control maintains travel speed, direction as well as dynamic braking.

3.1.6 Batteries and Charger

The machine is equipped with an automatic charger unit (Fig. 3/7) and a low discharge signal sender (LDS) for protection against low discharge.

3.1.7 Options

- Dosage system and floater unit for automatic filling
- Extraction hose including suction pipe, joint nozzle and wet suction nozzle
- Mop holder and tool-box for cleaning utensils
- Silence Kit for soundproofed operation
- Private-Label for additional labels.
- Scrubbing tool
- Handheld suction hose



Accessories such as brushes, rollers, pads, pad holder with centerlock and squeegee blades are available. Contact your PowerBoss Dealer for more information.

Operation

3.2 Operating and Indicating Elements

3.2.1 Operating Panel

- 1 Display
- 2 Key switch
- 3 Battery charge indication
- 4 LDS indicator
- 5 Symbol brush drive
- 6 Symbol suction turbine drive
- 7 Hourmeter
- 8 Symbol Service indicator
- 9 Symbol Parking brake
- 10 Symbol Silence Kit (optional)
- 11 Symbol solution dosage
- 12 Tip-switch Silence Kit (optional)
- 13 Tip-switch solution dosage
- 14 Tip-switch solution supply On/Off
- 15 Symbol vacuum scrubbing tool (optional)
- 16 Tip-switch vacuum scrubbing tool (optional)

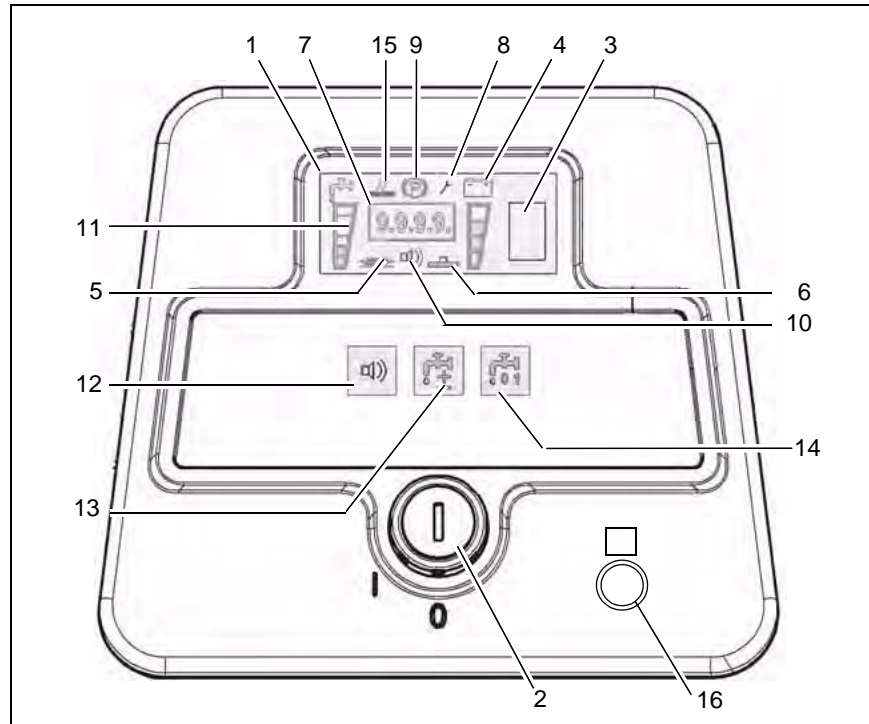


Fig.4

Operation

Display (Fig. 4/1)

 
This panel allows centralized monitoring of functions and detection of all available operating modes.



The key switch turns the electrical system on and off.



Remove the key to avoid unauthorized use of the machine.

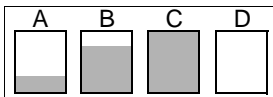

Battery charge indication (Fig. 4/3)

Battery charge indication appears on the panel during the charging procedure and shows the current charge condition of batteries during the procedure.

The following symbols appear:

Battery symbol A < charge of 20 %

Battery symbol B = charge of 80 %

Battery symbol C = charge of 100 %

Battery symbol D (flashes) = error



LDS indicator (Fig. 4/4)

Upon switching unit on, the LDS indicator shows the current battery charge condition during operation. For additional information see chapter maintenance.



 
Symbol brush drive (Fig. 4/5)

This symbol appears when brush drive is switched on.



Symbol suction turbine drive (Fig. 4/6)

This symbol appears when suction turbine drive is switched on.

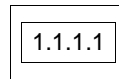

Hourmeter (Fig. 4/7)

Upon switching on, the hourmeter briefly displays the software version and the last error code. Then the current operating hour level is shown.



Service indicator (Fig. 4/8)

The service indicator lights after occurrence of a system error and cleaning or riding procedure is interrupted. In addition to the service indicator, a 4-digit code is displayed on the hourmeter.

Operation



Parking brake symbol (Fig. 4/9)

This symbol appears if control lever is in neutral position and travel drive will be locked.



Silence Kit tip symbol (optional) (Fig. 4/10)

This symbol appears when Silence Kit tip-switch is switched on.



Solution dosage symbol (Fig. 4/11)

This symbol appears upon actuation of the solution dosage tip-switch.



Silence Kit tip-switch (optional) (Fig. 4/12)

This tip-switch is used to change suction turbine to silent mode. The silent mode symbol appears in the display.



Solution dosage tip-switch (Fig. 4/13)

This tip-switch is used to regulate the amount of solution. Additionally, solution amount is adapted to driving speed. The display shows a six-stage symbol for the supplied amount of solution.




Solution supply ON/OFF tip-switch (Fig. 4/14)

This tip-switch is used to switch solution supply ON or OFF.



Scrubbing tool symbol (optional) (Fig. 4/15)

This symbol appears when scrubbing tool-switch (A) (Fig. 4/16) is switched on

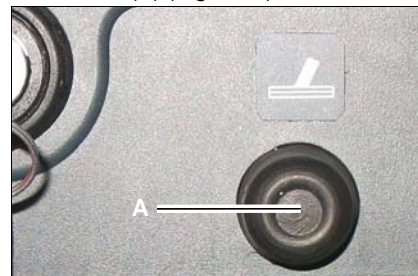

Operation

3.2.2 At the machine

- 1 Drive direction control (1a) with speed control knob (1b) and bail handle (1c)
- 2 Opening of solution tank
- 3 Dirty water vacuum hose
- 4 Solution filter
- 5 Soiled water drain hose
- 6 Solution level indication
- 7 Brush ejector
- 8 Power connection charger unit
- 9 Hand lever for squeegee lift-out
- 10 Pedal brush head
- 11 Scrub brush head pressure


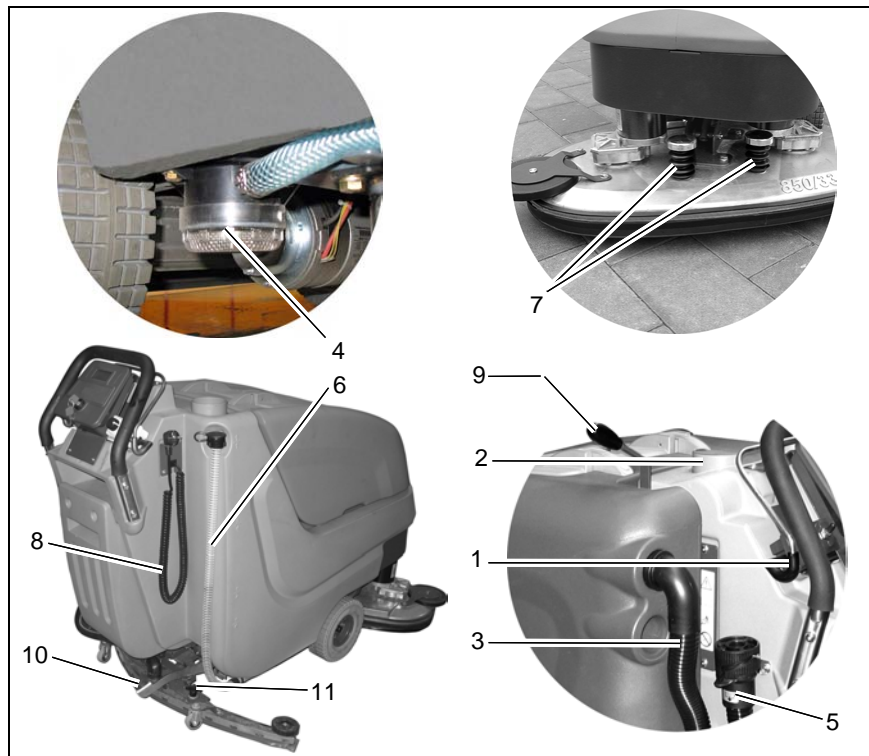


Fig.5

Operation

Drive direction control with speed control knob/bail handle (Fig. 5/1)

The drive direction control (1a) is used to control the driving direction (forward or reverse). The bail handle (1c) must be pressed in order to drive. The speed can be adjusted continuously by means of the speed control knob (1b). The machine stops when the bail handle is released (deadman function).

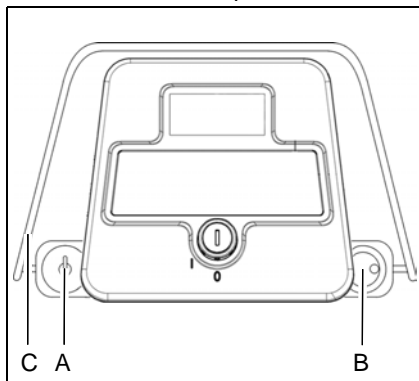

Protect the machine against rolling off before leaving it unattended.

Opening of solution tank (Fig. 5/2)

The solution water tank is filled after folding up the opening.

Dirty water vacuum hose (Fig. 5/3)

This hose transports the dirty water from squeegee to recovery tank.

Solution filter (Fig. 5/4)

While solution flows from tank to squeegee, it is cleaned by the filter element.

Recovery Tank drain hose (Fig. 5/5)

This hose allows draining the collected dirty water from the tank.

Solution drain hose (Fig. 5/6)

This hose allows draining the solution tank.

Brush ejector (Fig. 5/7)

The brush ejector makes brush removal fast and easy.

AC Power connection for charger unit (Fig.5/8)

The power connection supplies the charger unit with power.

Hand lever for squeegee lift-out (Fig.5/9)

Use this hand lever to lift and lower the squeegee.

Pedal brush head (Fig. 5/10)

Use this pedal to lift and lower the brush head.

Pedal plate brush head pressure (Fig. 5/11)

This pedal allows increasing the ground pressure of the plate brush head.

Operation

Swing aside squeegee

Swing aside the squeegee in lifted-out position to allow passage through narrow clearances. This can be done by foot or by hand by swinging the squeegee to the left in the area of the deflector bail / deflector roller until the locking pin (Fig. 6/1) catches. In order to release locking of the squeegee, activated the tip switch (Fig. 5/9).

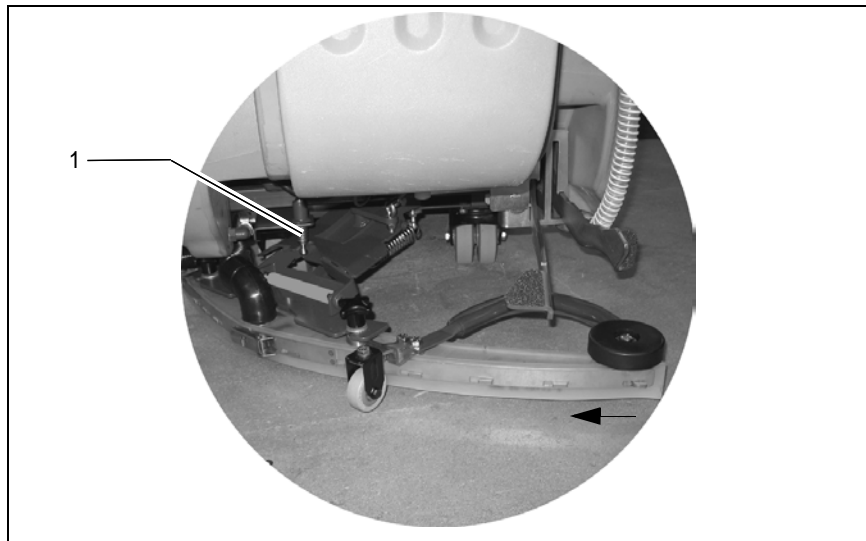


Fig.6

Technical Data

4 Technical Data

	Unit of measure	Scrub brush head
Machine length	in	68
Machine height	in	44
Machine width without Squeegee	in	35
Machine width with Squeegee	in	44
Working width	in	33
Squeegee width	in	44
Surface performance theoretical	ft ² /h	36600
Service voltage	V	24
Nominal power drive motor	W	430
Nominal power suction motor	W	520
Nominal power brush motor	W	2x935
Number of brushes	Qty.	2
Diameter of brushes	in	17
Speed Working	Mph	3,0
Solution tank	gallon	30
Recovery tank	gallon	30
Weight without batteries and solution	lbs	496
Weight with solution and batteries	lbs	1155

Technical Data

Noise emission	Metric unit	Standard	Soundproofing pack	Soundproofing pack/ Silence Kit
The sound pressure level measured under maximum conditions of use (LwA) according to DIN EN 60335-2-72 amounts to:	dB (A)	82	80	79
The sound pressure level measured (at the ear of the driver) under normal conditions of use (LpA) according to DIN EN 60335-2-72 amounts to:	dB (A)	67	65	63
Measurement inaccuracy (KpA):	dB (A)	1.6	1.6	1.6
Vibration				
The frequency weighted acceleration measured according to DIN EN ISO 5349 which have an effect upon the upper limbs (hand-arm-system) amounts under normal working conditions:	m/s ²	< 2,5	< 2,5	< 2,5

Maintenance and Care

5 Maintenance and Care

General



Before proceeding to maintenance and care work you are advised to read and comply with the Safety Information chapter!

Compliance with the recommended maintenance work will ensure that you always have a reliable machine available.

Daily or weekly maintenance and repair work may be executed by the driver/operator having been trained accordingly. Further PowerBoss system maintenance work must be completed executed by qualified personnel only. Please contact your local PowerBoss Service Center or PowerBoss contract dealer. We cannot be held liable for damages resulting from non-compliance with these instructions.

Please indicate the machine's serial number with any inquiry or spare part order, see paragraph 1.7 - Nameplate.

5. PowerBoss System Maintenance

The PowerBoss System Maintenance:

- guarantees reliable operability of the PowerBoss machines (preventive maintenance)
- minimizes operating costs, repair costs and maintenance costs
- ensures long service life and operability of the machine

The PowerBoss System Maintenance is structured in separate modules and determines specific technical works to be executed as well as the intervals for such maintenance work. For any specific maintenance type, the replacement parts are determined and listed in spare part kits.

System Maintenance K:

To be performed by the customer in accordance to the maintenance and care instructions contained in the operating instructions (daily or weekly). The driver/operator will be instructed upon delivery of the machine.

System Maintenance I :

(every 125 hours of operation)

To be performed by qualified personnel of authorized PowerBoss Service Center in accordance with the machine-specific system maintenance including spare part kit.

System Maintenance II:

(every 250 hours of operation)

To be performed by qualified personnel of authorized PowerBoss Service Center in accordance with the machine-specific system maintenance including spare part kit.

System Maintenance S:

(every 500 hours of operation safety check)

To be performed by qualified personnel of authorized PowerBoss Service Center in accordance with the machine-specific system maintenance including spare part kit.

Maintenance and Care

5.2 Maintenance Document

Handing over Upgrade Test drive Handing over to the customer Instruction carried out on: at _____ operating hours	System Maintenance I 125 operating hours Workshop stamp carried out on: at _____ operating hours	System Maintenance II 250 operating hours Workshop stamp carried out on: at _____ operating hours	System Maintenance I 375 operating hours Workshop stamp carried out on: at _____ operating hours
System Maintenance S 500 operating hours Workshop stamp carried out on: at _____ operating hours	System Maintenance I 625 operating hours Workshop stamp carried out on: at _____ operating hours	System Maintenance II 750 operating hours Workshop stamp carried out on: at _____ operating hours	System Maintenance I 875 operating hours Workshop stamp carried out on: at _____ operating hours
System Maintenance S 1000 operating hours Workshop stamp carried out on: at _____ operating hours	System Maintenance I 1125 operating hours Workshop stamp carried out on: at _____ operating hours	System Maintenance II 1250 operating hours Workshop stamp carried out on: at _____ operating hours	System Maintenance I 1375 operating hours Workshop stamp carried out on: at _____ operating hours

Maintenance and Care

5.3 Maintenance Schedule System Maintenance Customer

The daily and weekly maintenance intervals must be performed by the customer/operator.

To be performed	Interval	
	daily	weekly
Fill solution tank and proceed to chemical agent dosage	o	
Charge batteries	o	
Check brush head and clean if required	o	
Check squeegee and clean if required	o	
Clean tank lid seal of the recovery tank	o	
Empty recovery tank. Clean recovery tank and suction filter	o	
Check brushes/pads and replace if required		o
Clean suction hose of recovery tank		o
Check squeegee sealing strips and turn around or replace if required		o
Clean drain hose of solution tank		o
Check solution supply to brushes and clean if required		o
Check solution filter and clean if required		o
Test drive and function test		o

Maintenance and Care

System Maintenance I

The following maintenance work must be performed by an authorized Power-Boss Service workshop.

To be performed	Interval
	every 125 hours of operation
Check battery charger	o
Check tank lid seal of the recovery tank and replace if required	o
Check drain hose of the recovery tank and replace if required	o
Grease joints at the brush lift-out	o
Check wheel fixing screws and tighten (24 lb ft) if required	o
Check condition of tires	o
Grease joints at the squeegee holder	o
Test drive and function test	o

Maintenance and Care

System Maintenance II

The following maintenance work must be performed by an authorized Power-Boss Service workshop.

To be performed	Interval
	every 250 hours of operation
Perform maintenance works according to System Maintenance I	o
Inspect steering rollers for tread damages and bearing slackness and replace if required	o
Check drain hose of the recovery tank and replace if required	o
Check deflector roller of the brush head and replace if required	o
Check suction hose for tight fitting and damages and replace if required	o
Check supporting wheel of the squeegee and replace if required	o
Test drive and function test	o

Maintenance and Care

System Maintenance S (Safety check)

The following maintenance work must be performed by an authorized Power-Boss Service workshop at least once a year.

To be performed	Interval
	every 500 hours of operation
Perform maintenance works according to System Maintenance II	o
Clean travel drive motor from carbon dust and check carbon brushes for smooth operation and wearing and replace carbon brushes if required	o
Clean brush motors from carbon dust and check carbon brushes for smooth operation and wearing and replace carbon brushes if required	o
Test drive and function test	o

Maintenance and Care

5.4 Battery Systems

- 1 LDS display
- 2 Charger indicator
- 3 Charger
- 4 AC cable for charger
- 5 Battery plug
- 6 Batteries
- 7 Recovery tank
- 8 Support
- 9 Wiring diagram



Handling and changes of the batteries may take place only by maintenance staff.

During operation, the LDS indicator displays the battery charge status. When the batteries are empty, the battery icon flashes and an acoustic warning signal is issued. The machine functions are restricted. Drive to a charging station immediately.!

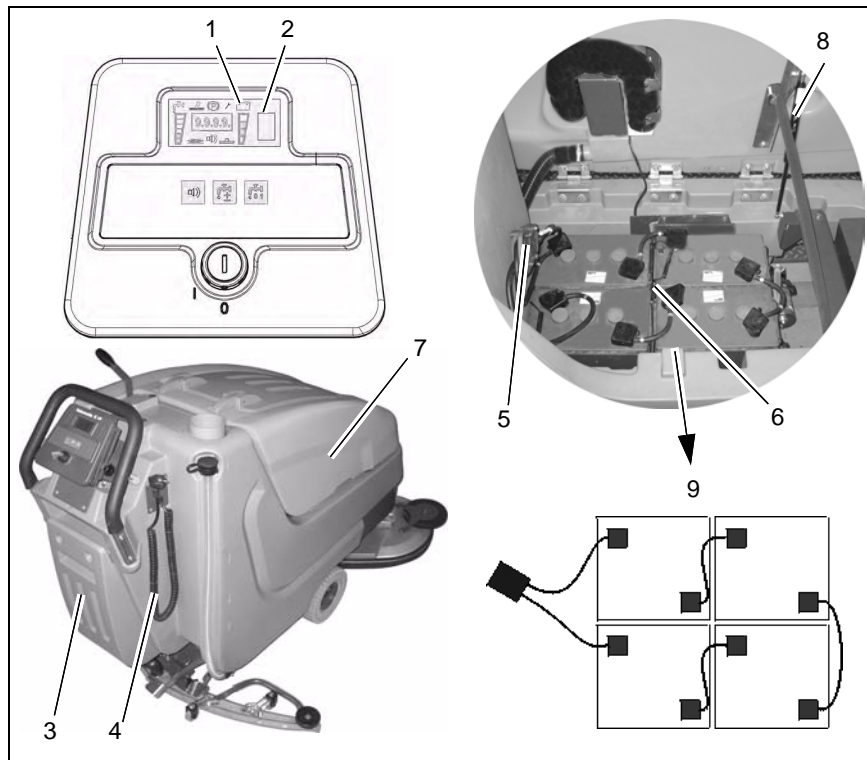


Fig.7

Maintenance and Care

5.4.1 Charge Batteries

Use the integrated battery charger (Fig. 7/3) to charge batteries. Proceed to connection of the charger by means of the ac power cable (Fig. 7/4) with safety plug. Charging batteries is recommended if at least one bar of the LDS display has extinguished after operation of the machine. You should observe the operating instructions of the charger as well as the operating instructions of the battery manufacturer.



Proceed to proper initial charging of the batteries before operation of the machine. PowerBoss cannot be held liable for battery damages resulting from non-execution of initial charging. In case it is intended to change the type of battery the charger has to be adjusted only by PowerBoss contract workshops. Provide for sufficient ventilation of areas where batteries are charged. – Explosion hazard!

5.4.2 Low Discharge Signal sender (LDS)

The machine has been equipped with a charge indicator to preclude the batteries from low discharge. This low discharge signal sender has been integrated into the electronics. If other batteries are used, re-adjustment of the low discharge signal sender is required.



Only PowerBoss contract workshops are authorized to proceed to adjustment of the low discharge signal sender.

5.4.3 Maintenance of Drive Batteries

Refer to operating instructions 88-60-2556 for information on care of drive batteries.

5.4.4 Remove Batteries

1. Park machine on level ground.
2. Switch off machine by key switch.
3. Open empty recovery tank (Fig. 7/7) and secure by support (Fig. 7/8).
4. Disconnect battery plug (Fig. 7/5).
5. Disconnect battery connection cables.
6. Remove batteries.

5.4.5 Install Batteries



Due to alteration of the center of gravity, only use batteries as released and at the prescribed position only.

1. Switch off machine by key switch.
2. Open empty recovery tank (Fig. 7/7) and secure by gas pressure spring (Fig. 7/8).
3. Place batteries into trough according to figure.
4. Connect battery poles and enclosed connecting cables according to wiring diagram (Fig. 7/9). Provide for tight fitting and grease poles.

5.4.6 Disposal of Batteries

Used batteries labelled by the recycling sign contain re-usable substances. According to the labelling by crossed dustbin, such batteries must not be added to normal household waste. Contact your local PowerBoss contract partner for return and recycling.

Maintenance and Care

5.5 Solution Tank

- 1 Solution tank
- 2 Marker
- 3 Fill level hose
- 4 Solution filter
- 5 Tank lid

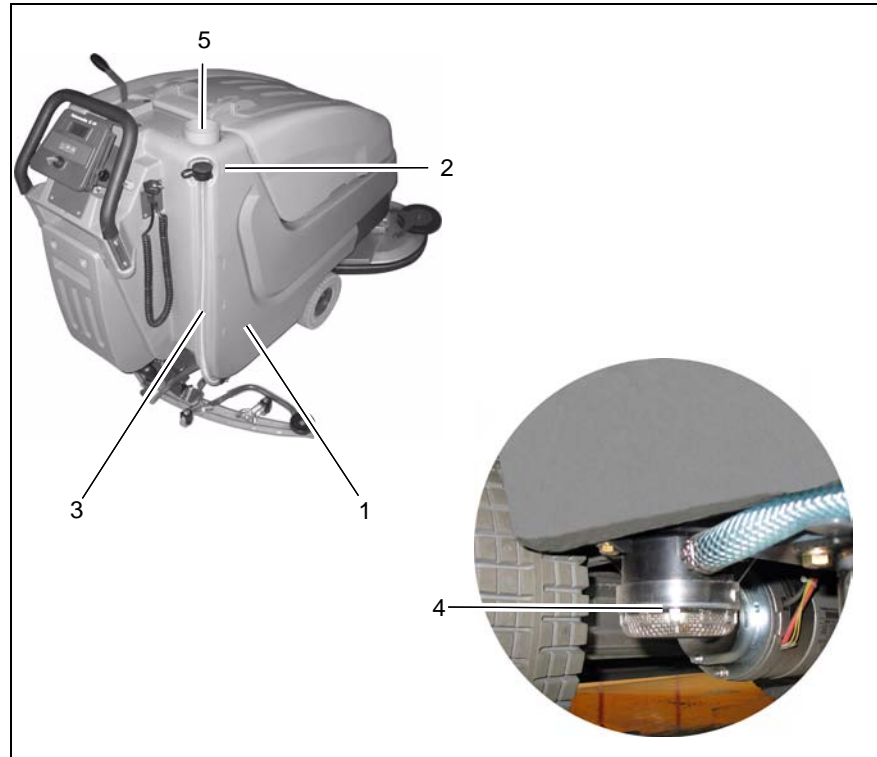


Fig.8

Maintenance and Care

5.5.1 Fill Solution Tank

Fill solution tank (Fig. 8/1) before work or as required. Park vehicle on level ground. Open tank lid (Fig. 8/5) and fill tank up to the maximum (1/1 marker) (Fig. 8/2).

Alternatively, filling of the machine via quick coupling (Fig. 8/6) is available. Before doing so, connect the filling hose of the dosage unit and the quick coupling. The floater valve automatically closes after the maximum filling level has been attained.

(Refer to specific operating instructions for information on operation of the dosage unit)

The maximum admissible service pressure of the floater unit is 6bar.

5.5.2 Empty Solution Tank

Park vehicle such that the fill level hose (Fig. 8/3) is located above the drain aperture in the floor. Take fill level hose from holder and remove lid.

5.5.3 Clean Solution Filter

Check solution filter (Fig. 8/4) at weekly intervals and clean or replace if required.



Only clean solution filter with emptied solution tank.

1. Empty solution tank (Fig. 8/1) entirely, see paragraph 5.5.2.
2. Unscrew filter cap.
3. Remove the filter element from the filter case for cleaning. Replace if required.
4. Re-install filter element and filter cap.

Maintenance and Care

5.6 Recovery Tank

- 1 Recovery Tank
- 2 Drain hose
- 3 Suction filter
- 4 Tank lid

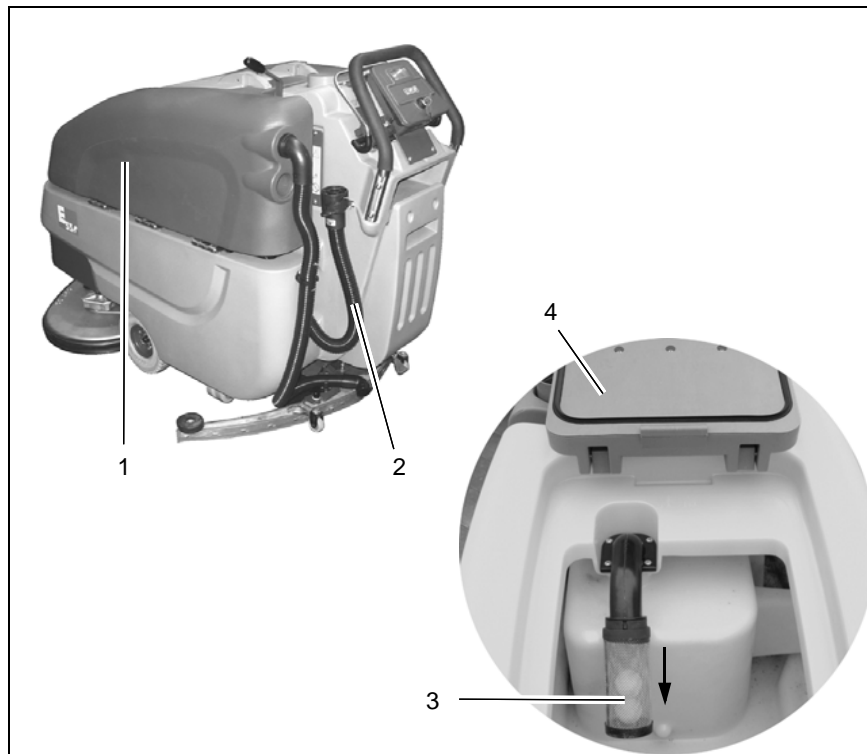


Fig.9

Maintenance and Care

5.6.1 Empty Recovery Tank

Clean recovery tank (Fig. 9/1) at daily intervals, as required or upon acoustic signal (increased suction turbine speed).

1. Take machine to appropriate place for discharge.
2. Park machine such that drain hose attains drain aperture in the floor.
3. Switch off machine.



Observe the legal provisions and the local regulations for disposal of detergents!

4. Take drain hose (Fig. 9/2) from holder and empty recovery tank completely.

5.6.2 Clean Recovery Tank

Clean recovery tank (Fig. 9/1) at daily intervals or as required.

1. Empty recovery tank, see paragraph 5.6.1.
2. Open tank lid (Fig. 9/4) of the recovery tank.
3. Take drain hose (Fig. 9/2) from holder and empty recovery tank completely.
4. Remove remaining debris by rinsing with clear water.
5. Rinse drain hose as well.

5.6.3 Clean Suction Filter

Check suction filter (Fig. 9/3) for function at daily intervals and clean if required. The suction filter is clipped and can be easily removed.

Maintenance and Care

5.7 Plate brush head

- 1 Toggle-type fastener
- 2 Brush head
- 3 Brush ejectors
- 4 Deflector roller
- 5 Sealing strip

5.7.1 Clean Brushes

Clean brushes of the brush head (Fig. 10/2) at daily intervals or as required. Press brush ejectors (Fig. 10/3) down to remove brushes for cleaning.

5.7.2 Change Brushes

Check brushes of the brush head for wearing at weekly intervals. Replace brushes if bristles are worn down to a length of 1.5 cm.

1. Press brush ejectors (Fig. 10/3) down to remove old brushes.
2. Push new brush under brush head and use both hands to press it into seating.

5.7.3 Change Deflector Roller

Check deflector roller (Fig. 10/4) at weekly intervals or replace as required.

5.7.4 Change Squeegee Blades

Check squeegee blades (Fig. 10/5) at weekly intervals or as required. Before doing so, open toggle-type fastener (Fig. 10/1) and remove squeegee blade. Proceed to mount in inverse order.

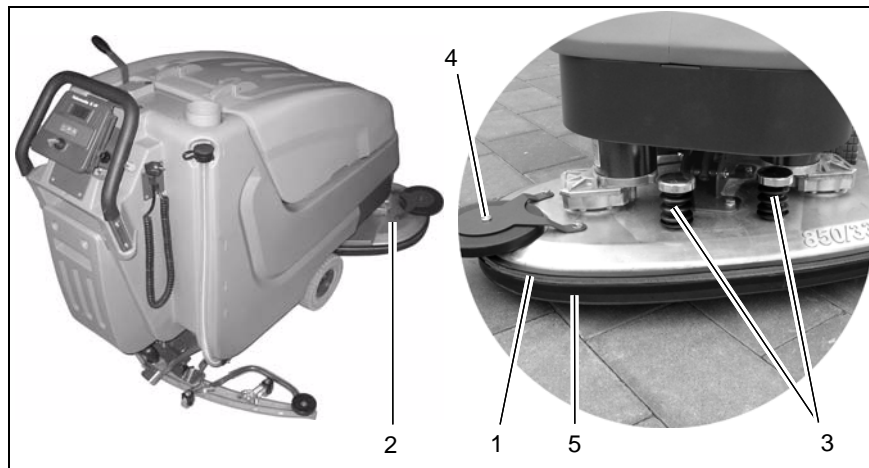


Fig.10

Maintenance and Care

5.8 Squeegee Tool

- 1 Squeegee blade
- 2 Star-shaped knob
- 3 Eccentric wheel for angle adjustment
- 4 Suction hose
- 5 Fastening device
- 6 Washers for height adjustment

5.8.1 Cleaning the Squeegee Tool

Check the squeegee (Fig. 11/1) daily and clean as necessary.

To clean it lift the squeegee out, pull off the suction hose (Fig. 11/4), loosen the two star-shaped knobs (Fig. 11/2) and remove the squeegee.

5.8.2 Changing the Squeegee Blades

Check the inner and outer squeegee blades on the squeegee tool (Fig. 11/1) weekly for signs of wear. The blades can be used fourfold by turning them.

1. With Squeegee in raised position.
2. Pull off the suction hose, loosen the two star-shaped knobs and remove the squeegee tool.
3. Unlock the fastening device (Fig. 11/5) and remove the outer squeegee blade. Turn the blade or install a new one, as necessary. Change the inner blade in the same way.

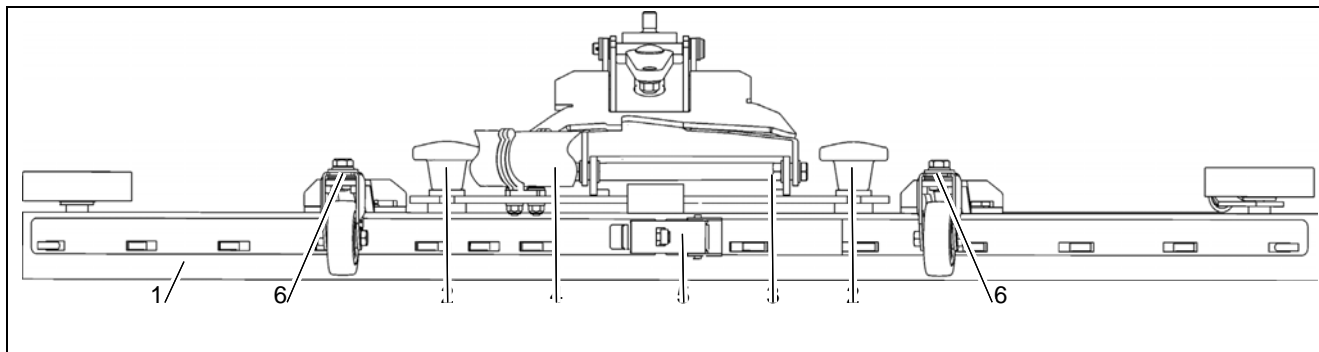


Fig.11

Maintenance and Care

5.8.3 Adjusting the Squeegee Tool Angle Adjustment

The angle adjustment is the decisive factor in ensuring that the squeegee blade on the squeegee tool lie evenly on the floor.

1. Park the machine on a level surface and lower the squeegee.
2. Loosen the screws on the eccentric wheel (Fig. 12/1) and adjust the squeegee using the eccentric wheel (SW13) so that the ends of the blade still have contact with the floor.

Figure A: Turn the eccentric wheel in the front top position: The clearance between blade and floor is reduced in the center.

Figure B: Turn the eccentric wheel in the behind top position: The clearance between blade and floor is increased in the center.

3. Switch the machine on and check the suction pattern. When the machine is in operation, the entire surface of the sealing strips (center and outer areas) must be applied as evenly as possible.
4. Tighten the screws on the eccentric wheel at 5 lb ft.

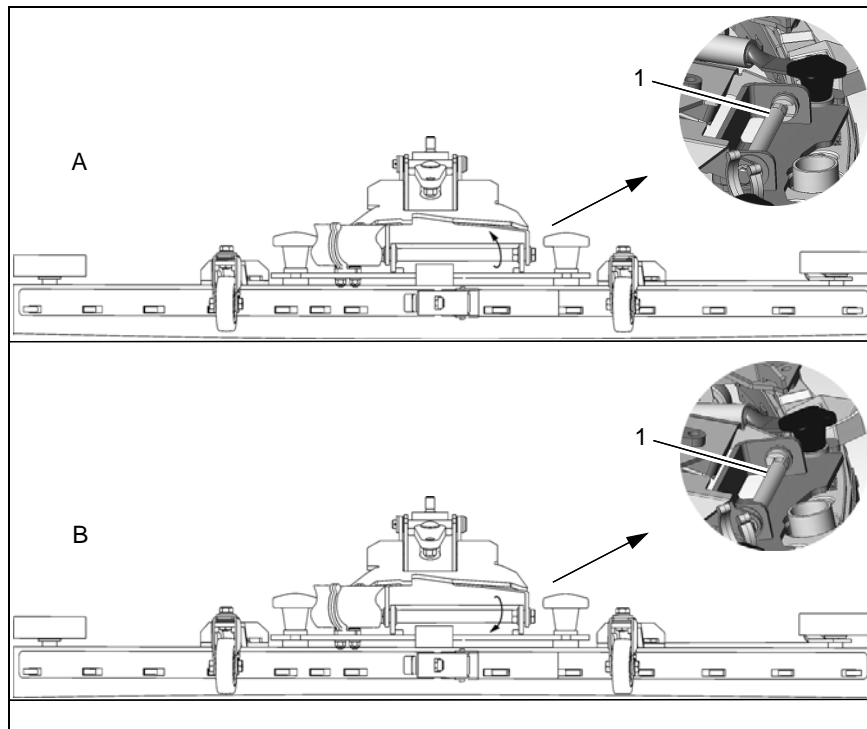


Fig.12

Maintenance and Care

Height Adjustment

The height adjustment is set to 3 mm at the factory. If streaks are produced, despite an optimum angle adjustment, the clearance between the rollers and floor must be adjusted by changing the number of washers on the holder.

In the case of very smooth floors, e.g. finished floors, PVC, linoleum, etc.

Number of washers = 2. This corresponds to a clearance of approx. 2 mm.

In the case of very uneven floors, e.g. poorly laid tiles (water does not run off)

Number of washers = 4. This corresponds to a clearance of approx. 4 mm.



The Squeegee 110 cm is equipped with two additional rollers which are adjusted at the factory to a distance of 10 mm to the floor by means of spacers.

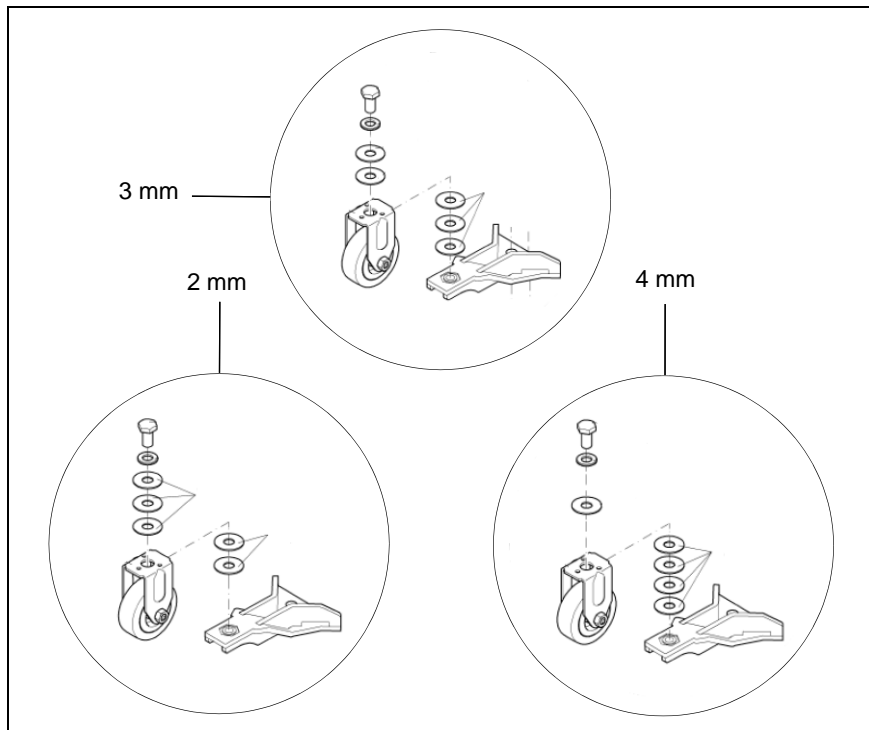


Fig.13

Maintenance and Care

EC-Declaration of Conformity (according to Directive 98/37/EC)

PowerBoss Inc.
175 Anderson Street
NC 28315 U.S.A.
Telephone: (910) 944-2105
Fax: (910) 944-740

declare under our sole responsibility,
that the product

Phoenix 35
Type: 7311

to which this declaration relates, corresponds to the relevant basic safety and health requirement of the Directive 98/37/EC, and to the requirements of the other relevant Directives:

89/336/EEC.

For the relevant implementation of the safety and health requirements mentioned in the Directives, the following standard (s) and / or technical specification (s) has (have) been respected:

DIN EN 60335-2-72
DIN EN 61000-6-2
DIN EN 61000-6-3

Warranty Information



Revision D

Effective June 1, 2007

PowerBoss Made Simple Industrial Limited Warranty

PowerBoss warrants to the original purchaser/user that the product is free from defects in workmanship and materials under normal use. PowerBoss will, at its option, repair or replace without charge, parts that fail under normal use and service when operated and maintained in accordance with the applicable operation and instruction manuals. All warranty claims must be submitted through and approved by factory authorized repair stations.

This warranty does not apply to normal wear, or to items whose life is dependent on their use and care. Parts not manufactured by PowerBoss are covered by and subject to the warranties and/or guarantees of their manufacturers. Please contact PowerBoss for procedures in warranty claims against these manufacturers.

Special warning to purchaser -- Use of replacement parts not manufactured by PowerBoss or its designated licensees, will void all warranties expressed or implied. A potential health hazard exists without original equipment replacement.

All warranted items become the sole property of PowerBoss or its original manufacturer, whichever the case may be.

PowerBoss disclaims any implied warranty, including the warranty of merchantability and the warranty of fitness for a particular purpose. PowerBoss assumes no responsibility for any special, incidental or consequential damages.

This limited warranty is applicable only in the U.S.A. and Canada, and is extended only to the original user/purchaser of this product. Customers outside the U.S.A. and Canada should contact their local distributor for export warranty policies. PowerBoss is not responsible for costs or repairs performed by persons other than those specifically authorized by PowerBoss. This warranty does not apply to damage from transportation, alterations by unauthorized persons, misuse or abuse of the equipment, use of non-compatible chemicals, or damage to property, or loss of income due to malfunctions of the product. If a difficulty develops with this machine, you should contact the dealer from whom it was purchased.

This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Some states do not allow the exclusion or limitation of special, incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

	Travel*	Labor	Parts	Engine
Walk Behinds				
Battery sweepers	Ninety days	One year	One year	N/A
IC sweepers	Ninety days	One year	One year	Through manufacturer
Battery scrubbers	Ninety days	Two years	Three years	N/A
Riders				
Battery scrubbers	Ninety days	Two years	Three years/2000 hrs	N/A
IC sweeper/scrubbers	Ninety days	Six months	Two years/2000 hrs	Two years/3000 hrs
IC sweepers	Ninety days	Six months	Four years/3000 hrs	Five years/3000 hrs
Exceptions				
Apex series sweepers	Ninety days	One year	One year/1000 hrs	One year/1000 hrs
6X sweeper	Ninety days	Six months	Two years/2000 hrs	Two years/2000 hours

Tank Bladders	Eight years/ no additional labor
Polypropylene Plastic Tanks	Ten years/ no additional labor
Batteries	0-3 months full replacement
	4-12 prorated credit
Chargers	One-year replacement
Replacement Parts	Ninety days
*Two-hour cap	

****Extended Warranties Available****

All above labor and travel reimbursed at 65% of the published shop rate.



“The Power of Clean”

PowerBoss, Inc. 175 Anderson Street P.O. Box 1227- Aberdeen North Carolina 28315

Phone: 800-982-7141 - Fax: 1-800-277-7141 Local: 910-944-2105 Fax: 910-944-7409 e-mail: techsupport@powerboss.com