# REVLON®



# **18 PIECE ROLLER SET**

Model 9033U



# **18 PIECE ROLLER SET**

The REVLON® Roller Set is ideal for creating volume, shape and curls. Includes 3 concave roller sizes for styling versatility and comes with 18 metal pins to secure the rollers in place.

#### **FEATURES**

- 18 concave rollers
- 3 roller sizes: 6 large, 6 medium and 6 small
- 18 metal pins
- Heat ready indicator
- On/off button with on indicator
- 1.8m cord
- 2 year guarantee

# **SAFETY CAUTIONS**

 This appliance should only be used as described within this instruction booklet. Please retain for reference.

**WARNING!** Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

 UK Only: This appliance must not be used in the bathroom. If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

**WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.

- Do not use this appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information).
- Do not leave the appliance unattended when switched on or plugged in.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- Turn off and unplug the appliance immediately, should you have any problems when using the appliance.
- Do not use any accessories other than those recommended in the instruction booklet.
- Always unplug the appliance from the mains socket and ensure it has cooled down before cleaning.

- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- Allow appliance to cool before storing away.
- After use do not coil the lead around the appliance as this may cause damage to the lead. Instead coil the lead loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

#### INSTRUCTIONS FOR USE

- Place the appliance on a level, heatproof surface and plug into a suitable mains socket.
- Press the button marked 'I/0' to turn the appliance on. The on/off button will illuminate, indicating the appliance is on and the rollers are heating up.
- When heating the rollers, keep the lid closed to ensure the rollers reach maximum heat.
- The rollers are ready to use when the heat ready dot turns from red to white. The heat ready dot is located on top of one of the rollers.
- Allow the rollers to cool until they feel comfortable to apply to the hair, failure to do so may lead to discomfort.
- Comb the hair thoroughly and position the hair in a side or middle parting.
- Choose one of the 3 sizes of rollers.
- For best results, always start styling the hair at the top of the head and work downwards towards the nape of the neck. Start applying the rollers to the hair line around the face and work backwards towards the crown of the head.
- Take a section of hair the same width as the roller.
- Wind the end of the hair around the roller tightly. Hold the hair taut and keep the roller at right angles to the scalp to ensure even curls.
- Continue to wind the hair around the roller, until you reach the roots. Slide the pin over the roller, through the hair and away from you to hold in place.
- Once the rollers have been applied to the top layer, start adding the rollers to the next section of hair. Continue adding the rollers to the hair until you reach the nape of the neck.
- When all rollers have been used, switch the appliance off at the mains and unplug.
- Let the hair cool down in the rollers so that the curl can set.
- To remove the rollers from the hair, hold in one hand and remove the pin with the other hand.
- Slowly unroll the roller (do not pull) and let the curl bounce back once the roller has been removed from hair. Repeat the process until all

the rollers have been removed, then style as desired.

- Press the button marked 'I/0' to turn off the appliance and unplug from mains socket.
- Allow the appliance to cool completely before storing away.

### **IMPORTANT!**

- This roller set reaches high temperatures and will get very hot. Always take extra care to avoid the roller coming in direct contact with the scalp.
- When using on long or thick hair, the rollers can be used instantly once
  the heat ready indicator dot has turned white. If using on short, thin or
  fine hair, open the lid and turn appliance off, once the heat ready dot
  has turned white. Allow the rollers to cool until they feel comfortable
  when applying into hair, failure to do so may lead to discomfort.

#### **CLEANING AND MAINTENANCE**

To keep your rollers in the best possible condition, please follow the steps below:

# General

- Always unplug the appliance when not in use or before cleaning.
- Always store the appliance with the lid on to protect it from dust.
- After use, the cord can be wrapped around the base for easy storage.

# Cleaning

• The rollers can be easily cleaned by soaking them in warm soapy water for a few moments. Rinse in clear water, then shake briefly and towel dry. Allow the rollers to dry for 1 to 2 hours before using again.

# **IMPORTANT!**

Never submerge the appliance in water. To remove hair and other debris, unplug and use a slightly damp cloth to wipe clean and then leave the appliance to dry for a few hours before using.

#### **UK GUARANTEE**

This REVLON® appliance is guaranteed for consumer use for 2 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

# **UK AFTER SALES SERVICE**

For further advice on using the appliance, contact the Conair Customer Care Line on 0870 2 406902 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre Conair Logistics Unit 4 Revolution Park Buckshaw Avenue Buckshaw Village Chorley PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

#### **UK WIRING INSTRUCTIONS**

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL BROWN = LIVE GREEN & YELLOW = EARTH

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- The wire which is coloured GREEN & YELLOW must be connected to the terminal in the plug which is marked with the letter E or ⊥.

This appliance comes fitted with a British Standard 13 amp type plug and a 3 amp fuse. It is important to always use a 3 amp fuse, should its replacement be required. If any other type of plug is used, a 5 amp fuse must be fitted either in the plug or at the distribution board.