




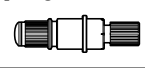

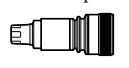



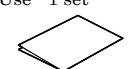
CE5000 SERIES SETUP MANUAL

This Setup Manual describes the procedures required for setup. For operation procedures and details on how to make the settings, and for any other points that are not clear, please refer to the "CE5000 User's Manual" PDF files that are included in the CD-ROM provided with the CE5000 plotter.

* Windows and Windows XP and Windows Vista are registered trademark of Microsoft Corporation in USA and other countries.
* Adobe Reader and Adobe Illustrator are trademark of Adobe Systems Incorporated.

1. Check the content

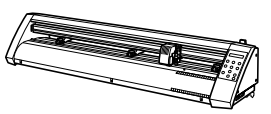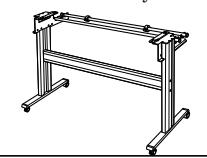1. Check the content
2. Following accessories are attached to the plotter. Refer to the list and check the accessories.

<input type="checkbox"/> Plotter - 1 unit 	<input type="checkbox"/> Stand - 1 assembly 
<input type="checkbox"/> Power cable/USB cable - 1 of each 	<input type="checkbox"/> Cutter plunger - 1 set 
<input type="checkbox"/> Cutter Blade (CB09UA) - 1 set 	<input type="checkbox"/> Water based fiber pen - 1 set 
<input type="checkbox"/> User guide CD-ROM - 1 set 	<input type="checkbox"/> Media Cutter - 1 set 
<input type="checkbox"/> Setup Manual (this manual) - 1 set 	<input type="checkbox"/> Note on Use - 1 set 

2. Prepare the connection cable

Note : The RS-232C cable is an option.

Connect the plotter to PC with one of the following cables.


- RS-232C (Serial port)
- USB cable

Select the cable according to the specification of the application software or the availability of the communication port on your PC. Use Graphtec recommended cable for reliable operation.

If you plan to use the ROBO Master-Pro software and the Cutting Plotter Controller, use the USB cable to connect the plotter to your computer.

3. Connect the power source

Note : Remove all transportation tapes.

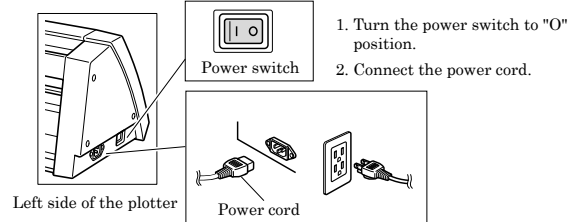

4. Install the software

Note: This manual explains the case of **Windows XP**. The explanations concerning the plotter driver are for Windows XP and Windows Vista.


Computer administrator rights are required for users to install or use this software. Note: If you are using **Macintosh**, read "README" file in the English folder of attached CD-ROM.

A-1 Launch Windows, then insert the User guide CD-ROM into the CD-ROM drive of the PC.




Note : At this stage, do not connect the plotter to the PC.

A-2 A little later, the start window is displayed. Press "Install CE5000" button to install the software and driver.

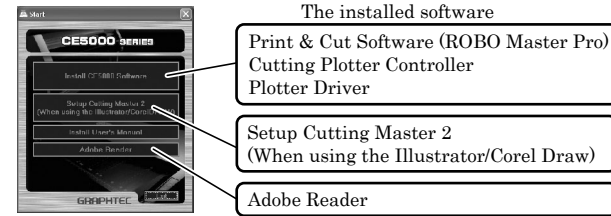

Note : If it is not displayed, press START menu of the Windows, then select the Run. Select [CD-ROM]: \MultiSetup.exe and press OK button.

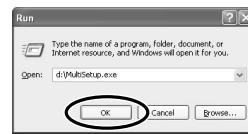

Note: If you are using the Windows98SE/Me, press START menu, the select the Run. Then select [CD-ROM]\English\Drive\DSETUP.exe and press the OK button. Note: In case of the Windows98SE/Me, it is compatible with the CE5000 driver, so skip to the section D-1.

A-3 Follow the installation wizard.

Note : If "Software License Agreement" is displayed, check the description. If you agree to the License agreement, press the Yes button.

Install CE5000 Software


Print and Cut software (ROBO Master Pro)

Install the Print and Cut software (ROBO Master Pro) according to the instruction on the screen.


Note : The ROBO Master Pro works only when installed to Windows 2000/XP/Vista using the USB interface.

Note: The ROBO Master Pro is an application software which has easy-to-use drawing function and has a function to output to the CE5000 and printers.


B-1. Press the Next button.

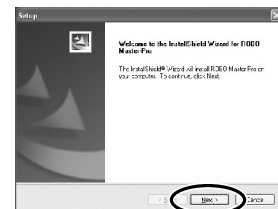

B-2. Press the Yes button.

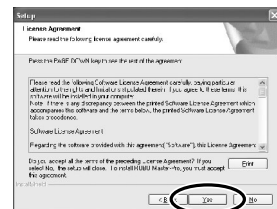


B-3. Press the Next button.

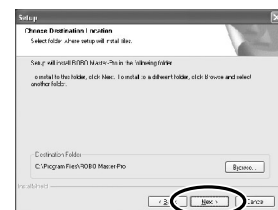


B-4. Press the Next button.



B-5. Press the Next button.

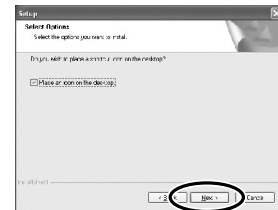

B-6. Press the Finish button.

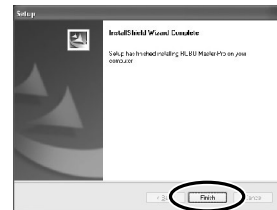


Cutting Plotter Controller

Install the Cutting Plotter Controller according to the instruction on the screen.


Note : The Cutting Plotter controller works only when installed to Windows 2000/XP/Vista using the USB interface.

The Cutting Plotter Controller is a software which enables to control major functions of the CE5000 from PC.


C-1. Press the Next button.

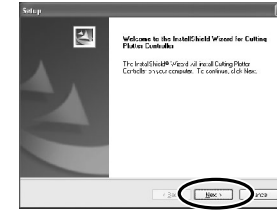


C-2. Press the Next button.

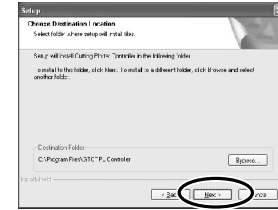

C-3. Press the Next button.

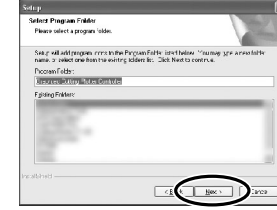

C-4. Press the Finish button.

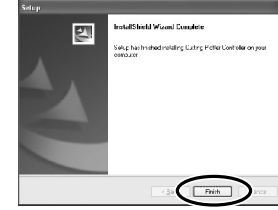


Plotter Driver

When using Windows XP

Install the driver software according to the instructions on the screen.

D-1. Press the OK button.

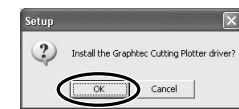


D-2. Confirm that the CE5000 is not connected with the PC, then press the OK button.



D-3. Press the OK button.



D-4. Select the port then press the OK button.

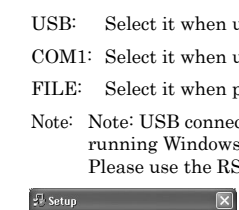

USB: Select it when using the USB cable.

COM1: Select it when using the RS-232C (Serial) cable.


FILE: Select it when plot data is output to a file.

Note: Note: USB connection is not guaranteed for computers running Windows 98 SE.

Please use the RS-232C (serial) connection instead.



D-5. Press "Continue anyway" button.

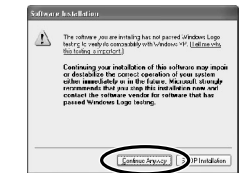

If specified port isn't available on the PC, the following window is displayed and the destination port is changed to "File".



D-6. Press the OK button.

In case of COM1 and FILE connection,



In case of USB connection,



Note: If the connection is COM1 or FILE the installation process is complete. To install Cutting Master 2 go to step **A-4**, otherwise go to step **A-5**.

In case of USB connection,

Note : E-2 and E-4 may not be displayed on certain computers.

E-1. Connect the CE5000 and the PC using the USB cable, then power on the CE5000.




E-2. Select "No, not this time", then press the Next button.




E-3. Select "Install the software automatically (Recommended)" then press the Next button.



E-4. Press the Next button. Install the item which is selected as a default.

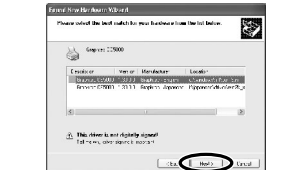

E-5. Press "Continue Anyway" button. E-6. Press the Finish button.

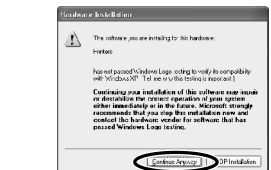

When using Windows Vista

If you are using Windows Vista, please refer to the separate instruction sheet for the plotter driver installation procedure.

To install Cutting Master 2 go to step **A-4**, otherwise go to step **A-5**.

Setup Cutting Master 2


Note : If you use the Illustrator 8 or 9 for Macintosh, please read "Plug in for Illustrator.pdf".

A-4 Press "Setup Cutting Master 2" button on the Start window. (Refer to **A-2** and **A-3**)


F-1. Select the language that you wish to use and then press the OK button.




F-2. Select the language of the Cutting Master 2 and then press the Next button.

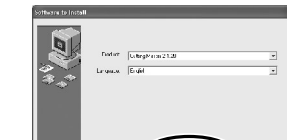


F-3. Press the Next button.

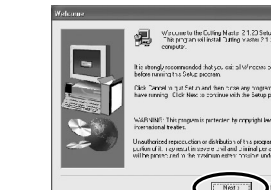


F-4. Press the Yes button.

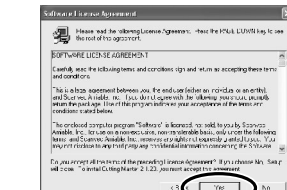

F-5. Follow the instructions displayed on the screen and then press the Next button. (The screens that are displayed may differ according to the operating system. Check the contents of each screen before proceeding with the installation.)

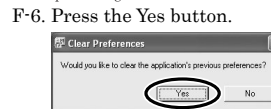

F-7. Press the Finish button.

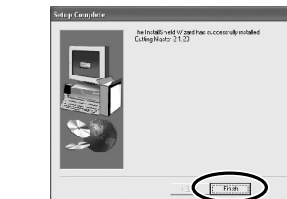

A-5 Install Adobe Reader

The Adobe Reader is necessary to read attached users manual. If the Adobe Reader is not installed in your PC, press "Adobe Reader" to install it.

A-6 Press the Exit button.



CE5000 SERIES Installing the Plotter Driver (Windows Vista Edition)


When using Windows Vista

The [User Account Control] window may appear during the installation procedure. If you have logged in using a standard user account, you will be asked to enter the administrator account password. Have it ready beforehand. If you have logged in using an administrator account, permission to continue will be required.


Connecting via USB

Note: Depending on the environment used, the window shown in Step UV-2 below may not be displayed.


UV-1. Use the USB cable to connect the CE5000 to your computer. When the power to the CE5000 is turned on, the following window is displayed. Click [Locate and install driver software (recommended)].

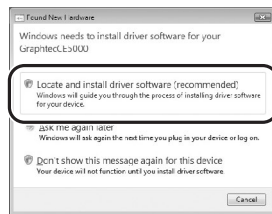


UV-2. If the following window is displayed, press "Don't search online".

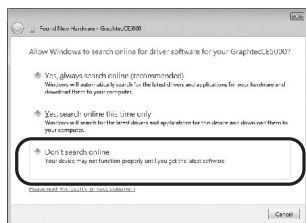


UV-3. The following message is displayed. Do not click on it simply wait.

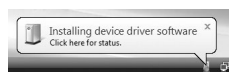


UV-4. Press the Next button.

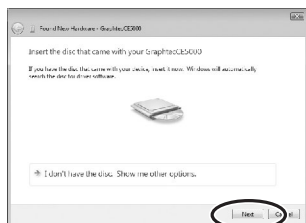


UV-5. Select "Graphtec CE5000" opposite [Graphtec - English] displayed under "Manufacturer" and then press the Next button.

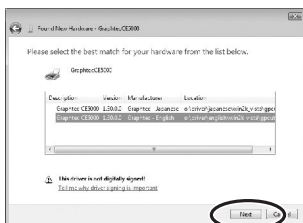

UV-6. Press "Install this driver software anyway".

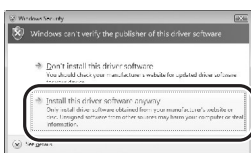


UV-7. Installation of the driver software has been completed. Press the Close button.

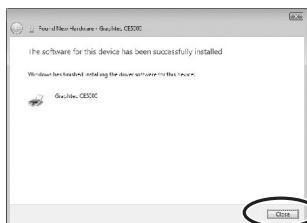

Connecting via RS-232C


Note: These instructions assume that you are using the COM1 port.

RV-1. When installation of the Cutting Plotter Controller has been completed, a Help window to assist you in installing the driver is displayed. If you are connecting via the RS-232C interface, close this Help window.

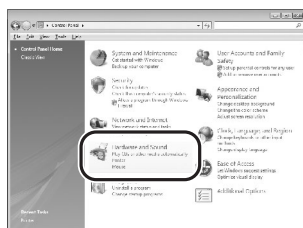


RV-2. Select [Control Panel] from the [Start] menu and then click [Printer] in the [Hardware and Sound] group.


RV-3. Press "Add a printer" button.

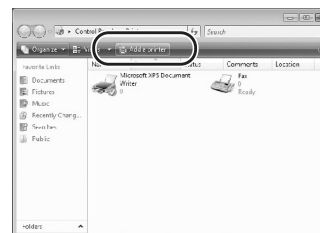


RV-4. Press "Add a local printer" button.

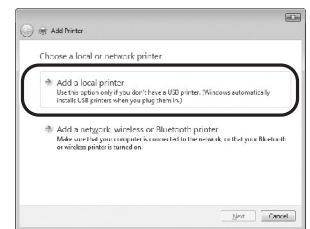


RV-5. Select COM1:(Serial Port) from [Use an existing port] and then press the Next button.

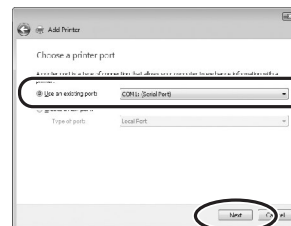


RV-6. Press "Have Disk..." button.

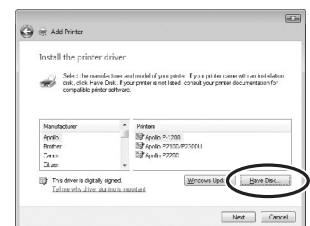


RV-7. Press "Browse..." button.

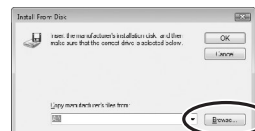


RV-8. Select [GPUTC.INF] from the [CD-ROM]\Driver\English\WIN2K_VISTA folder and then press the Open button.

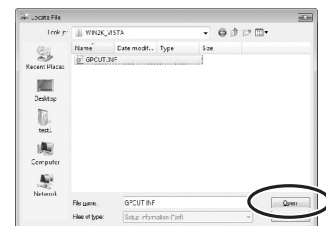

RV-9. Press the OK button.

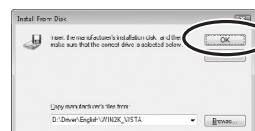


RV-10. Select [Graphtec CE5000] and then press the Next button.

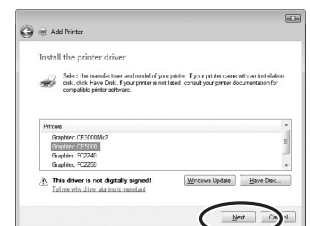


RV-11. Press the Next button.



RV-12. The installation starts. Press "Install this driver software anyway" button.

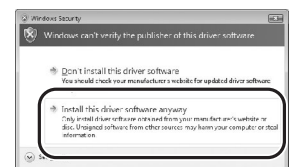


RV-13. Installation of the driver software has been completed. Press the Finish button.

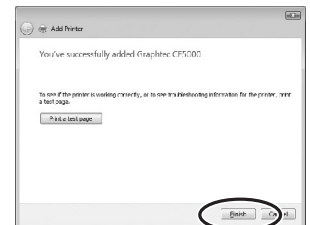


CE5000 SERIES OPERATION MANUAL

Caution
To avoid bodily injury, always handle the cutter blade with caution.

1 Preparing the cutter blade and the cutter pen plunger

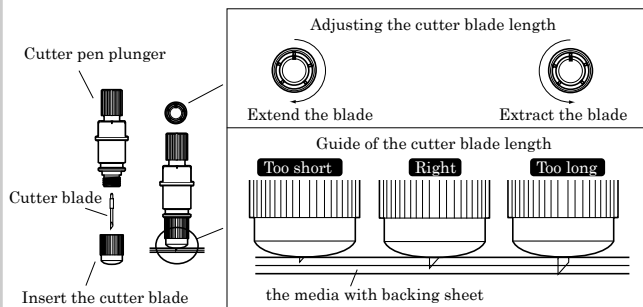


2 Mounting the cutter pen plunger

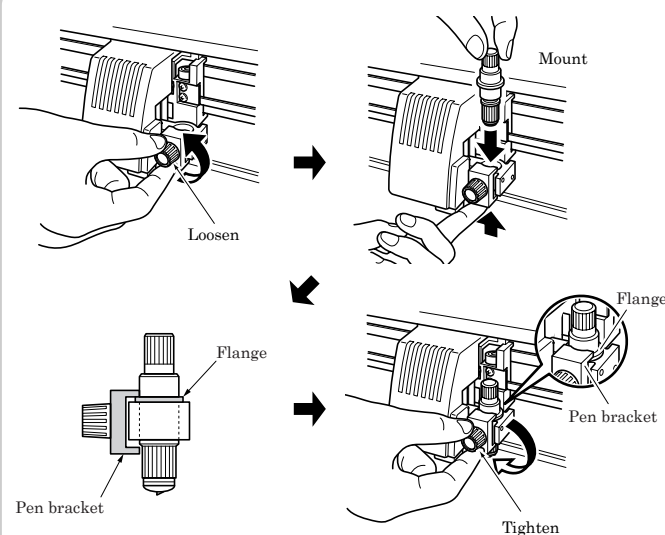


3 Loading the media


1. Lower the set lever

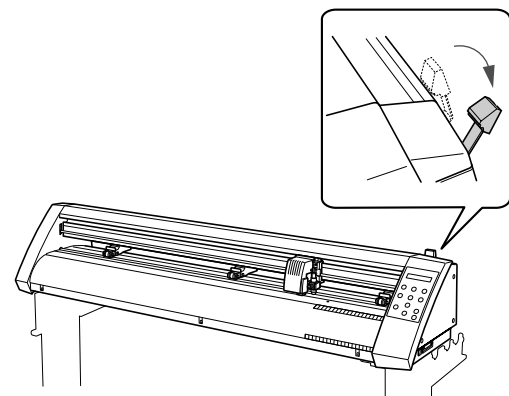


2. Setting the roll media stand

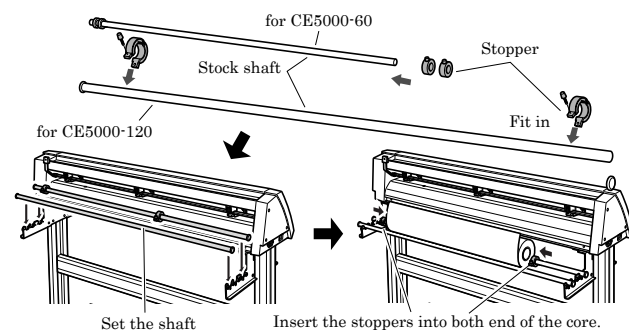


3-1. Pull out the roll media and pass through the CE5000 (in case of roll media) □

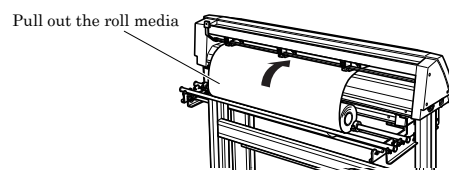

3-2. Pass the sheet media through the CE5000 (in case of sheet media)

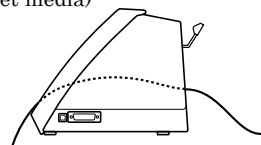


4. Align the media with the CE5000

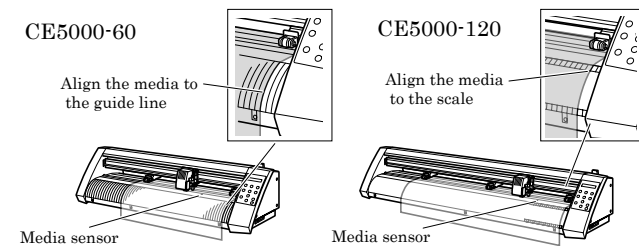


5. Adjust the push roller position

Adjust the position of the push rollers to the push roller position guide mark

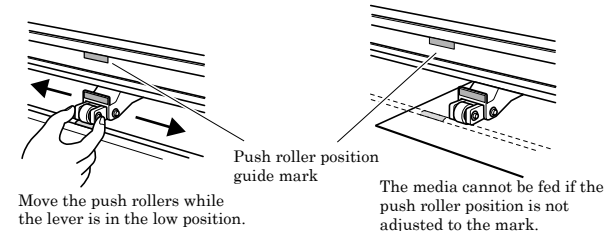


Make sure to position the media so it covers the media sensor.


CE5000-60

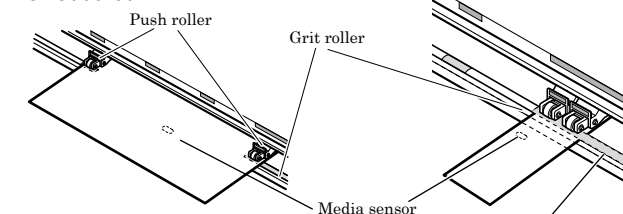


CE5000-120

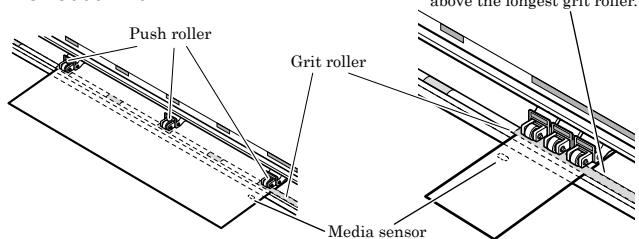


6. Adjusting the media

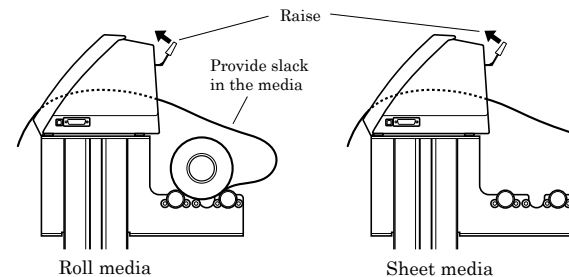



4 Turn on the cutting plotter

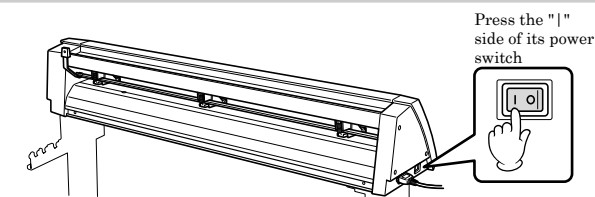 

5 Select the media mode

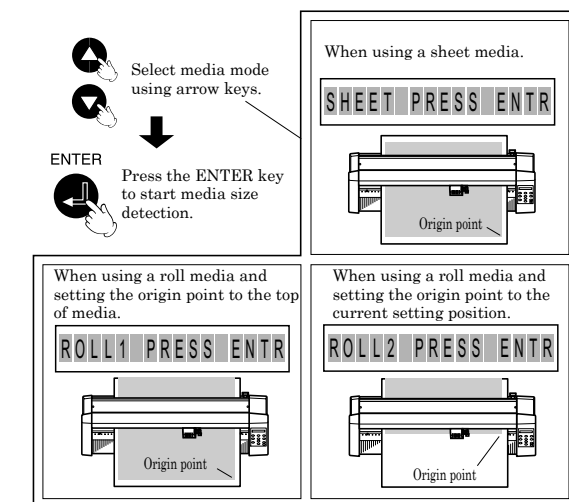 


6 Setting the cutting conditions

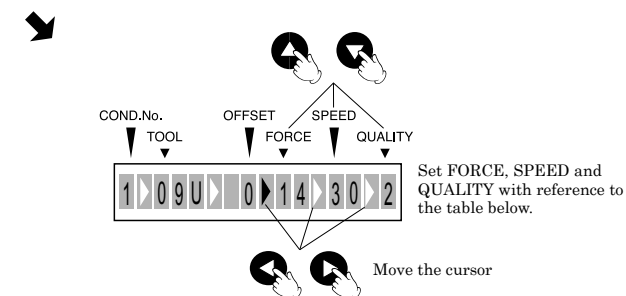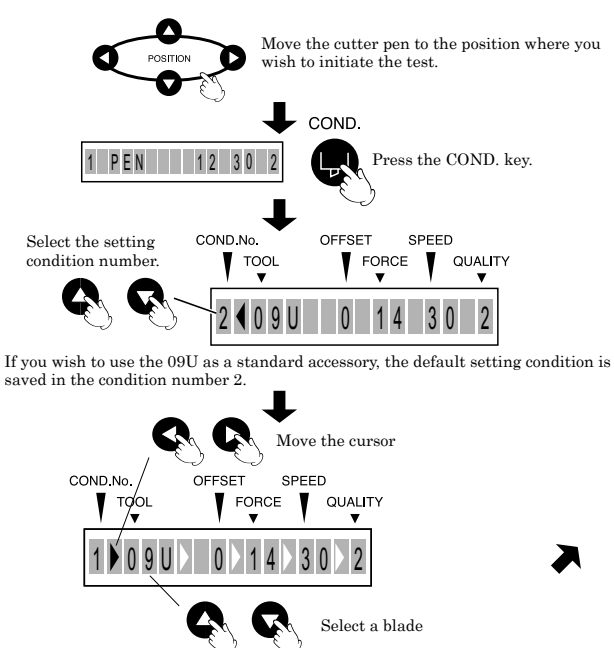  




A rough guide of the setting

Material	Thickness(mm)	Blade	Cutting force	Speed	Quality
Outdoor vinyl	0.05 to 0.08	CB09UA	10-14	1-30	2
1 (for small size character cutting)	0.05 to 0.08	CB15UB	10-14	1-20	1
Film for decoration	0.08 to 0.1	CB09UA	14-17	1-30	2
Transparent/translucent film	0.08 to 0.1	CB09UA	14-20	1-30	2
Reflection film	0.08 to 0.1	CB09UA	14-20	1-30	2
Fluorescent film	0.20 to 0.25	CB09UA	20-21	1-20	1
Fluorescent film	0.20 to 0.25	CB15U	20-21	1-20	1

 Adjust the cutting force so that the cutting trace lightly appears on the media liner.

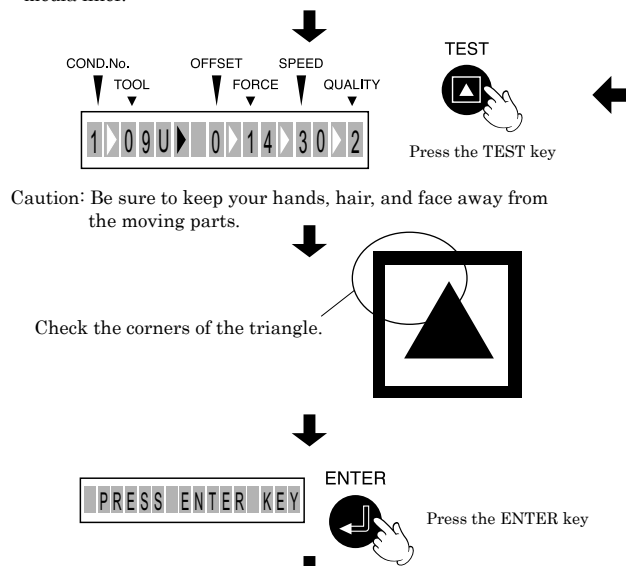

Move the cursor to adjust the offset value, repeat the adjustment until the result becomes proper.

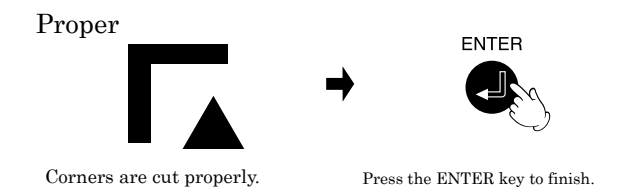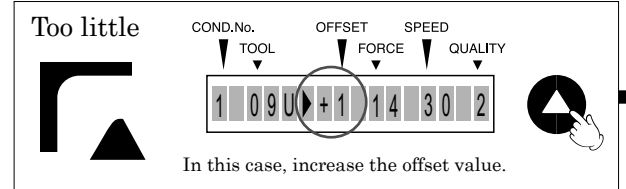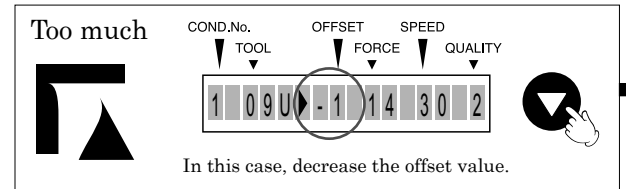

If the ENTER key is pressed, then the setting conditions are stored into the memory.