



APLUS QUBIC USER MANUAL

✧ **Open case:**



- Unscrew Thumb Screws from rear of the case.
- Remove Left or Right Side Panel by sliding side panel backward.

✧ **Install 5.25" (DVD-ROM) and 3.5" Device (Floppy Disk):**

- Remove 5.25" or 3.5" Plastic cover.
- Remove 5.25" or 3.5" Steel cover (!Please handle with care!).
- Insert DVD-ROM or Floppy Disk into the corresponding drive bay.



✧ **Install Power Supply:**

- Place PSU at corresponding position.




- Install PSU with 4 screws.

✧ **Frontpanel USB & Audio Ports:**

You will find a single 10-pin connector on a cable attached to the front USB ports. This is an Intel standard connector, Connect the 10-pin connector to your motherboard headers, so the blocked pin fits over the missing header pin.

Intel Standard USB Header Pin Layout

Pin	Signal Names	Pin	Signal Names
1	USB Power 1	2	USB Power 2
3	Negative Signal 1	4	Negative Signal 2
5	Positive Signal 1	6	Positive Signal 2
7	Ground 1	8	Ground 2
9	Key (No Pin)	10	Empty Pin

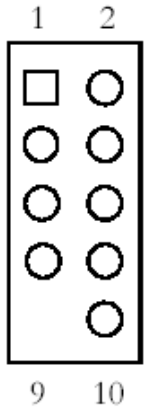

✧ **Power and HDD indicator:**



- QUBIC has special Power On and HD Operating showing light.

✧ **Temperature LCD:**



Temp. LCD which can be use for chassis's internal temp. monitoring.