# E70 User Manual

Dear Customer,

Thank you for purchasing E70. Kindly read this user manual carefully to learn about key functional characteristics and operational methods of this mobile phone.

1

# Contents

I.	Safety precautions	3
	Cell phone outline	
	Operation of menu functions	
	Application of USB storage function	
	Troubleshooting	
	Device specifications	
	· · · #	

#### I. Safety Precautions

To use your phone safely and effectively, please read the following information before use:



Please turn off your phone when you are near a chemical plant, a gas station, an oil depot or other explosives.

To ensure safety, please use earphone during driving; Otherwise, unless emergency, make a call after parking your car by the roadside. DO NOT use the phone during driving at high speed.



Do not use your cell phone while in a plane. Please check whether Flight mode is set

Do not use your cell phone in a hospital to avoid interference with the normal operation of medical equipment which may result in a medical accident. If the cell phone is used near a pacemaker, audiphones and some medical electronic equipment, you should pay special attention that the cell phone may interfere with these devices.



Auxiliaries and accessories not provided by us are excluded from the guarantee.

Do not dismantle your cell phone by yourself. In case of a failure, please contact the service station specified by us. Only qualified person may install or repair this product.

The phone should be charged in the environment which is well-ventilated, and should be kept away from inflammable substances and explosives. To avoid demagnetization, please keep your phone away from magnetic substances, such as magnetic disk, credit card, etc.

Please be sure the phone isn't exposed to any liquid. In Case this situation occurs, please remove the battery and contact the service station specified by us. Please use your phone in the environment which is neither too hot nor too cold, do not expose your phone in strong sunlight and in high-humidity environment.

All wireless devices may be susceptible to interference, which could affect performance.


Your cell phone has photo and record functions, please use these functions following the related laws and regulations. You may violate the laws and regulations if you take photos and record without authorization.

#### Note:

- Do not dispose the worn battery as common domestic rubbish. Please dispose the worn battery according to the specified instructions where the disposal of a worn battery is clearly specified.
- The Company will not undertake any responsibility for any consequences caused by

- failure to observe the above-mentioned suggestions or improper applications.
- If any content described in this manual goes against that of your cell phone, it is subject
  to the real cell phone.

#### II. Cell Phone Outline

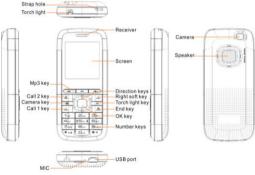

#### III. Operation of menu functions

In the standby mode, select **Menu** and the desired menu and submenu. Select **Exit** or **Back** to exit the current level of menu. Press the end key to return to the standby mode directly.

### 1. Call Center:

Your mobile phone will automatically store the information of call history so as to facilitate viewing; you can call phone number in the call history; it supports saving phone numbers in the call history into the phonebook, or adding it to the blacklist; supports deleting single item call history and rapidly delete all contents in call history list.

#### 2. Phonebook:

You can add the new contact by selecting menu "Option->New". You can save the contacts in the mobile phone and SIM card; it depends on the SIM card memory capacity. You can quickly see number from the phonebook; each Phonebook record in the mobile phone can match as many as two phone numbers, the phone can store as many as 500 pieces of phonebook record, the number of phonebook record that SIM card can store varies based on SIM card capacity; you can send short messages in phonebook; you can copy phonebook records between SIM card and mobile phone; it supports rapid deletion of phonebook records in the SIM card and the mobile phone.

# 3. <u>Settings:</u>

This menu option lets you view and edit your phone base settings; SIM, Phone, display, user profiles, network and security settings. You can customize user profile option to set your desired ringtones or message tones. The default password for Phone lock, Privacy & Restore factory settings is "1234" you can personalize the password.

# 4. Multimedia:

You can access your camera, video recorder/player, audio player, sound recorder and FM Radio. Your mobile phone can play MP3 music files as well as the music format of \*wav, \*mp3,etc. you can record sound or a call, the file generated by recording will be saved in \*wav format, and stored under [Audio] sub-directory of the memory card as your inquiry. You can play videos with \*MP4, \*3GP formats. Also the phone has the FM radio option so you can play the FM radio channels as you want.

# 5. Messages:

The SMS function is a network service. You may need to apply to the network operator first before you can send and receive a message. The phone supports saving short messages on the mobile phone for as much as 500 pieces, it can insert preset short messages on templates while writing a short message; you can view message storage capacity of SIM card and mobile phone as well as occupied space.

#### 6. Organizer:

Your mobile phone has various practical functions. It supports 3 alarms, calendar, calculator, E-book reader, etc. Another feature for the phone is the torch with its Strong light.

# 7. File manager:

This menu enables you to access the File Manager, where folders or files in the memory card or the phone can be managed

Caution: You will lose all the data stored in the memory card after format.

# 8. Connectivity:

Phone supports STK function (But it requires support from SIM card service provider). Connect to other Bluetooth devices to send / receive / share files.

#### 9. Fun & Games:

Fun & Games option lets you play game provided in the phone.

# IV. Application of USB storage function

The phone can use USB function under switched off mode and switch on mode.

In switch off mode, when you plug in the USB cable, you need not select function; the phone can be connected to the PC and used as a USB Flash Disk. You can also use the USB cable as a charger.

In switch on mode, when you plug in the USB cable, you need to select the "Mass Storage" function; the phone can be connected to the PC and used as a USB Flash Disk. You can also use the USB cable as a charger.

# V. Troubleshooting

Failure	Solution	
The phone fails to power	<ol> <li>Check that the battery is charged.</li> </ol>	
on.	<ol><li>Check that the battery installed correctly.</li></ol>	
Insert SIM card error	1. Check whether the SIM card is dirty. If the card is	
	dirty, clean it.	
	2. Reinstall the SIM card.	
	<ol><li>If the SIM card is damaged, replace the SIM card.</li></ol>	
Low Network	Check the signal strength indicator on the screen. 4 bars	
	indicate a strong signal, and 2 bars or less indicate a	
	weak signal.	
Call registration fails	1. You might have set the Hide Caller ID but the	
	network operator does not support this service.	
	<ol><li>There may be strong signal interference.</li></ol>	
	<ol><li>You might have activated the Call Barring Function.</li></ol>	
	4. You might have activated Line 2 but the network	
	operator may not support this service	
Battery fails to charge	1. The battery may have been excessively discharged.	

	To charge the battery, it is necessary to connect it to a
	charger for certain period of time.
	<ol><li>The battery may have been deteriorated.</li></ol>
Cannot connect to the	1. Check whether the signal is too weak or wireless
network	interference exists around.
	2. Check whether the SIM card is installed correctly,
	poor connection exists, or the SIM card is damaged. If
	the SIM card is damaged, please contact the network
	operator.
Photos shot are too dark	1. The brightness is set too low.
	2. The ambient light is too dark.
Photos shot are too blurred	<ol> <li>The object shot is moving.</li> </ol>
	<ol><li>Your hand shakes when the shutter is pressed.</li></ol>
Photo shots are distorted	The object shot is too close to the lens.
Cannot access the service	The SIM card may not support the service.
menu	

# VI. Device specifications

Features		Description		
Model		E70		
		Dual SIM Dual Standby		
Product Features		Bluetooth, FM Radio, Torch		
		GSM:900/1800		
		OS: SPREAD 6610		
Tashnalası	Frequency	GSM 900/1800		
Technology	Chipset	SPREAD 6610		
Dimensions		107.6*43.2*14.2mm		
	Type	1.8" TFT colour display		
Display	Resolution	160x128		
	Touch	No		
Memory	Internal	32M+16M (NOR+PSRAM)		
Memory	External	Up to 8 GB		
Dinatana	Download	Yes		
Ringtone	Vibration	Yes		
	Phonebook	500		
Capacity	Call records	20 Outgoing calls, 20 Incoming calls, 20 Missed calls		
	Micro-SD Card Slot	Yes		
Connectivity	Bluetooth	Yes		

ĺ	USB	Yes	
	Maximum Resolution	VGA	
	Continue shot	Yes	
Camera	Video recorder	Yes	
	Photo Album	GIF/JPG/BMP/PNG	
		3GP/MP4	Yes
	Video	Video Player	Yes
		Video Rec.	Yes
Media	Audio	MIDI/MP3/WAV	Yes
		Voice Rec.	MPEG4/ H.264
		Built-in speaker	Yes
	FM	Yes	
Messaging	SMS	500 for phone	
Wiessaging	Templates	Yes	
	Capacity (mAh)	1000mAh BL-5C	
Battery	Stand-by Time **	140h~350h	
	Talk time **	3.5H~5.5H	
	Calculator	Yes	
	Alarm, Calendar	Yes	
Misc.	Phone Book/ Groups	Yes	·
	Call Divert/Call		·
1	Restriction	Yes	

	/Call Waiting*		
	Game	Yes	
	Wallpapers	Preloaded and Customizable	
	User Manual	One piece	
	Warranty card	One piece	
In the Box	Battery	One piece	1000mAh
in the box	Earphone	One piece	High quality earphone
	Charger	One piece	Mini USB Charger
	USB Cable	One piece	

#### Notes:

- \* Needs network support.

  \*\* In ideal conditions only. Actual performance may vary due to signal strength, temperature, movement speed ...