

## QUICK INSTALLATION GUIDE



# StoryDisk Ultimate



INTRODUCTION	4
OPERATION	4
KEY FEATURES	4
PRODUCT DETAILS	5
FRONT PANEL	5
REAR PANEL	5
REMOTE CONTROL BUTTONS	6
CONNECTING STORYDISK ULTIMATE TO THE TV	8
PLAYING A FILE	9
INSTALLING TNT CHANNELS	11
FIRST USAGE OF THE TNT FUNCTION	11
TNT MENU CONFIGURATION	12
VIEWING AND RECORDING TNT CHANNELS	13
VIEWING	13
SELECTING RECORDING DEVICE	13
LIVE RECORDING	14
SCHEDULED RECORDING	14
STORYDISK ULTIMATE PARAMETERS	15
STOREX WEB SITE	16
TECHNICAL SUPPORT	16
WARRANTY REGISTRATION	16
WARRANTY TERMS AND CONDITIONS	17
SAFETY INFORMATION	18
GENERAL INFORMATION	18
SAFETY PRECAUTIONS	18
ELECTRICAL POWER SUPPLY TO THE PRODUCT	18
PROPER PLACEMENT OF THE PRODUCT	18
CLEANING	18
REPAIRS	19
IMPORTANT NOTICE	19
SAFETY – ENVIRONMENT	19

### INTRODUCTION

Your "StoryDisk Ultimate" is a TNT/HD TNT receiver integrating a live or delayed recording function

The "StoryDisk Ultimate" also works as a media player allowing you to look at photos and watch videos on High Definition TV, or to listen to music.

### OPERATION

- Once connected to the TV, you can view media files in High Definition from your hard drive or a USB device on your "StoryDisk Ultimate."

### **KEY FEATURES**

- USB Host Connection.
- Video connection: Composite, YUV and HDMI
- Power INPUT: ~100V 240V

50-60Hz 0.6A

OUTPUT: 5.0V ---- 2000mA

- Supported formats - Video: AVI, MPEG HD, Ts, Vob, Mkv and Xvid HD

- Audio: MP3, WMA, AC3

- Photo: BMP, JPEG and PNG

### PRODUCT DETAILS

#### **Front Panel**



- 1. SD/MMC/MS: To connect a memory card (SD, MMC or MS)
- 2. USB HOST: To connect a USB device (USB key, external hard drive, etc.)
- 3. LCD SCREEN: To display information on the screen
- 4. "RECORD" LED: O Flashes to indicate recording on a USB device "STANDBY" LED ": () Indicates the status of the product (On/Off)

#### **Rear Panel**



- 1. **DC IN:** To connect the power adapter to the wall outlet
- 2. **ON/OFF:** To turn On/Off the product
- 3. HDMI: To connect an HDMI cable to the "StoryDisk Ultimate " and your TV
- 4. **COAXIAL:** To connect a coaxial audio cable
- 5. Y/Pb/Pr: Video output (YUV)
- 6. CVBS/AUDIO LR: Video output (Composite)
- 7. USB 2.0: To connect the "StoryDisk Ultimate" to the PC
- 8. **ANT IN:** To connect the antenna to the wall

ANT OUT: To connect the "StoryDisk Ultimate" antenna cable to your TV

### **REMOTE CONTROL BUTTONS**



**Remote control 1:** Refers to the actual remote. **Remote control 2:** Refers to the numbering of the buttons on the remote.

NO.	BUTTON		FUNCTION
1	STANDBY	С С	Turn On/Off (Standby) the StoryDisk Ultimate
2	MUTE	$\bowtie$	Enable/Disable the sound (Mute)
3	NUMBERED BUTTONS	0-9	0-9 The 0 button allows adding a TNT channel to the Favorites list, or adding selected audio tracks to the BGM list
4	GOTO	<b>♦</b> (P)	Goes to a specific point (Time)
5	SELECT/BGM	$\mathbf{\nabla}$	Displays the edit page (Copy, Rename, Delete, etc.) Enable/Disable background music while viewing a slideshow
6	AUDIO	Ц	Allows selection of an audio track
7	ттх		Enable/Disable Teletext
8	SUBTITLE		Enable/Disable the display of subtitles
9	EPG		Displays the EPG screen (Electronic Program Guide)
10	SETUP		Allows direct access to the configuration page
11	НОМЕ	1	Allows direct access to the home page
12	ARROW BUTTONS		Allows you to navigate between different files and folders Allows you to validate your selection The ▲ button changes the channel (CH+) The ▼ button changes the channel (CH-) The ◀ button jumps to the top of the list of media files (PAG-) The ▶ button jumps to the next page in the list of media files (PAG+)
13	BACK	•	Exit/return to the previous page
14	REC	Ó	Enable/Disable the "record" function
15	VOL+/VOL-	+ -	Increase/Decrease the volume
16	STOP		Stop the media file playback
17	PLAY/PAUSE		Playback or pause of a file
18	FULL SCREEN	Ē,	Switches the selected file into full screen playback mode
19/21	NEXT/PREV	*	<ol> <li>Skips to the next page when you are in the explorer</li> <li>Skips to the next file during playback of media files</li> <li>Return to the previous page when you are in the explorer</li> <li>Return to the previous file during playback of media files</li> </ol>
20	FR/FF	<b>~~ &gt;&gt;</b>	Fast rewind of the media file with a playing speed of 2x, 4x, 8x, etc. Fast-forward of the media file with a playing speed of 2x, 4x, 8x, etc.
22	DTV/RADIO	۳۵ ۲	Allows direct access to TNT and HD TNT channels Allows direct access to radio channels
23	T-SHIFT	Ś	Enable the "TIMESHIFT" function
24	TIMER	ප	Allows direct access to the programming page
25	СОРҮ	E,	Allows direct access to the "COPY" page
26	A - B/ROTATE	A <b>C</b> B	Used to rotate the image when viewing a photo Defines a point "A" and point "B" to enable the repetition of the sequence
27	REPEAT	Ľ,	Music and Video: Repeats the current file or repeats all files in the directory or cancels the repeat function Enable/Disable random mode for audio tracks
28	ZOOM	Q	Zoom on a video or photo
29	VIDEO OUT	Ð	Allows you to switch between different video display modes
30	DIGEST	88•	Displays mosaic (photo mode)
31	SLIDE SHOW	88.•	Turns on slideshow mode (photo mode)
32	INFO	i	Displays information from the selected file
33	BACKLIGHT	ON/OFF)	Enable/Disable the backlight of the LCD screen

### CONNECTING STORYDISK ULTIMATE TO THE TV



- 1. Connect your StoryDisk Ultimate to the wall antenna socket to take advantage of TNT and TNT HD channels.
- 2. Connect the StoryDisk Ultimate to the TV with a YUV cable (depending upon your configuration).
- 3. Connect the StoryDisk Ultimate to the TV with an AV cable (depending upon your configuration).
- 4. Connect the StoryDisk Ultimate to the TV with a HDMI cable (depending upon your configuration).
- 5. Connect the supplied power adapter to your wall outlet.

### PLAYING A FILE

- 1. The home page (HOME) displays 7 key icons.
- 2. Select one of the four modes using the arrow buttons on the remote control and press "ENTER". To use the remote control, please refer to details on the remote control



#### Home page

3. Select the folders and files with the arrow buttons and confirm the selection by pressing "ENTER"

#### 4. Select the playback device.

Select "DEVICE" from the StoryDisk Ultimate homepage to display the device selection page

Dev	ice			
	P 🗸	lard Disk (NTFS)		
		SB Disk (FAT16)		
			_	

#### Photo page



#### Music page



#### Video page

#### **STOREX** Movie Page 02/02 J\_SUBTITLES K\_OTHERS Temps de chargement d'une image Q 1280\_720p\_24FPS.divx Q For.The.Birds.720p.BDRiP.x264.mkv Ċ, Jack.Jack.Attack.720p.BDRiP.x264.mkv Filename:Presto.720p.BDRiP.x264.mkv Ŭ, Mike.s.New.Car.720p.BDRiP.x264.mkv Ŭ, One.Man.Band.720p.BDRiP.x264.mkv X FullScreen 🔵 RepeatAB Coto

#### File page

/HD	D/C	Page 01/03		
	A_MEDIAS			
	Albums			
	B_GEN_OPTIONS			
	C_MENU_OPTIONS			
	D_FILE_OPTIONS			
	E_CONNECTIONS		00:00:00	
	F_IMAGES			
	G_AUDIO_CODECS			
	H_VIDEO_CODECS			
	I_CONTAINERS			

#### **QUICK EXPLANATION**

Video: To watch your favorite moviesMusic: To listen to your favorite musicPhoto: To view your favorite photosFile: To browse all files stored on your hard drive

You may use the shortcut buttons (film, music, photo, file) on the home page to select the desired function.

### **INSTALLING TNT CHANNELS**

Select the "TV" menu by pressing on the "ENTER" button.



#### FIRST USAGE OF THE TNT FUNCTION

1. Select the menu language.

2. Select your location (country).

Guide d'Install.	Guide d'i	nstall.
Langue des Menus	Langue des Menus	Français
Pays France	Pays	〈 France 〉
Balayage Chaînes	Balayage Chaînes	

3. To start the automatic channel scan, select "Scan for channels" and press "ENTER" on your remote control

			Balayage	e Chaînes
Guide d'insi	tall.		DTV: 007 001 Direct 8 002 BFM TV 003 i>TELE	Radio: 000
Langue des Menus	Français		004 Virgin 17	
Pays	France		006 France 4	
Balayage Chaînes	$\rangle$		007	
			Avancement	
		I		

This progress bar should appear.

#### TNT MENU CONFIGURATION

1. Press the "MENU" button on the remote control to access the "TNT configuration" menu



The tabs allow you to configure all of the functions of the TNT mode

- **Config:** Edit the list of TNT channels, EPG configuration, to sort channels
- **CH scanning:** Channel scanning
- **Hour:** Set the time and time zone of your device
- **Options:** Display subtitles
- **System:** Setting the password and Parental Control

### VIEWING AND RECORDING TNT CHANNELS

#### VIEWING

Select the "TV" menu by pressing the "ENTER" button.



#### SELECTING RECORDING DEVICE

Once in the "TV" menu, press "HOME" then select "REC MODE" and confirm by pressing "ENTER".

<b>9</b> STORE	*
🔊 Photo	유 Music 켗 Video 💆 TV 면 Files @ Setup 월 Device

Select "REC MODE" in order to see the StoryDisk Ultimate disc or USB device connected



#### LIVE RECORDING

To record TNT channels, the StoryDisk Ultimate hard disk must be detected in the "**REC MODE**" page or you must have previously connected a USB device to the StoryDisk Ultimate.

*Note*: Recordings are stored directly at the root of the connected device (USB key, external hard drive) in the "PVR RECORD" file.

#### SCHEDULED RECORDING

To schedule a recording press on the "BLUE" button of the remote control.

1. To add a new scheduled program, press on the "RED" button of the remote control.

ana	Calendrier	Date	Houro	Rénétition Etat	Evene	Cale	ndrier	Data	Heure	Rénétition Et
ene	chuine	Dute	neure		Evene		Evene	mont	Additioner	Repetition Lt
							Evener	ment	Auditioner	
							Type de Chair	ie (	]   V	
							Chaine No.		0001	
							Nom de Chain		TF1 HD	
							Date début(M	/J/A)	01/04/2010	
							Heure de déb	ut	17:50	
							Fin		17:50	
							Répétition		Une fois	
							Mode		View	
				U						
Addi	tioner 📕 Edit	Suppr	imer							

2. Enter your timer recording settings and press the "ENTER" button on your remote control

### STORYDISK ULTIMATE PARAMETERS

On this page you can adjust several settings, including the language and display resolution.

- 1. Press the "SETUP" button of the remote control to enter the "SETUP" menu
- 2. Use the arrow buttons  $\checkmark \checkmark \checkmark$  to select the setting and press "ENTER"

On this page you can change the language.

Système			
Langue	<	Français	
Ratio			
Format TV		PAL	
Résolution		720P	
SPDIF		PCM	
Visualisation		Activé	
Config par défaut			
Version Firmware	STX-	No 2.0 Oct 27 200	9 19:54:00

On this page you can change the display resolution of StoryDisk Ultimate.

Système				
			Français	
Ratio				
Format T	V		PAL	
Résolutio	n		720P	
SPDIF			PCM	
Visualisati	on		Activé	
Config par de	éfaut			
Version Firm	ware	STX-No	2.0 Oct 27 20	09 19:54:00

**Note:** The display resolution 576i/576p may not appear on the configuration page. It all depends upon the equipment being used.

### STOREX WEB SITE

Visit <u>http://www.storex.eu</u>, select "**Multimedia Hard Drive**" then StoryDisk Ultimate. You can download the latest full version of the manual, software.

### **TECHNICAL SUPPORT**

All requests should be sent by e-mail to the following address:

#### support.fr@storex.eu

Or telephone the following offices

France: Spain: **09 72 11 39 20** (Price of a local call to Paris))

911 871 608 (soporte.es@storex.eu)

Monday to Thursday from 9:30 a.m. to 7:30 p.m. Friday from 9:30 a.m. to 6:30 p.m.

The STOREX forum, additional information, updates and technical support are available on our website:

### www.storex.eu

### WARRANTY REGISTRATION

We invite you to register for your StoryDisk Ultimate warranty on our website

### http://garantie.storex.eu

### WARRANTY TERMS AND CONDITIONS

STOREX provides a warranty of 1 year for StoryDisk Ultimate and 3 months for accessories (remote, AV cables, power adapter, etc.).

STOREX guarantees your StoryDisk Ultimate against any defects in manufacturing or assembly. This guarantee applies only to a first purchase of the StoryDisk Ultimate by the end user, and is not transferable if the unit is resold. This warranty does not cover any incompatibilities detected by the end user outside of the use recommendations printed on the package, or any incompatibility arising from other hardware or software on the computer connected to StoryDisk Ultimate.

Proof of purchase must be provided to us to begin STOREX warranty coverage.

The warranty does not apply to any breakdowns or defects due to improper use that does not comply with the recommendations contained in this notice, neglect, alteration, improper installation or maintenance, improper repairs or modifications not authorized by STOREX, inappropriate testing, accidents or external factors such as, without limitation, exposure to heat or excessive moisture, a power failure or incorrect installation/uninstallation of the StoryDisk Ultimate.

The only contractual obligation of STOREX involves the repair or replacement of a defective product. In no case may STOREX be held liable for any loss of data, or its consequences, resulting from a malfunction or failure of the product. In any event, the financial responsibility of STOREX will not be incurred for any amount greater than the end customer's product purchase price.

The guarantee of your StoryDisk Ultimate is well defined in this document and may not be modified, reduced or enlarged without written consent from STOREX. Also, STOREX cannot be held responsible for any technical advice or services provided in connection with your StoryDisk Ultimate

You are not the assignee of this warranty.

This warranty covers only your StoryDisk Ultimate, and is governed by French law.

For any claim beyond the warranty, please contact STOREX customer support. Log on to <u>www.e-</u><u>storex.com</u> to order any accessories.

Note: STOREX<sup>™</sup> reserves the right to modify the user manual without notice according to changes made to the product. Find the latest version of the manual on our website: <u>http://www.storex.eu</u>

### SAFETY INFORMATION

This device was designed and manufactured to ensure your safety. The security mechanisms built into the product offer adequate protection if you observe the following procedures for installing, using and repairs:

- Carefully read and follow the instructions below before handling and installing your hardware.
- Keep these instructions on hand so you may refer to them later.

### **GENERAL INFORMATION**

- Do not shake the player at the risk of damaging the product.
- Use only parts and accessories (power adapter, etc.) recommended by the manufacturer.
- Do not move the appliance while it is operating

### SAFETY PRECAUTIONS

- To avoid the risk of fire or electrical shock, do not place the device near objects filled with liquids
- If a heavy object falls or liquid spills onto the device, unplug it immediately and have it checked by qualified personnel before re-use
- While operating, the housing unit gives off heat, therefore, place the product on a flat and rigid surface and avoid covering or placing any item on top of it

### ELECTRICAL POWER SUPPLY TO THE PRODUCT

- In the event of prolonged disuse of the product, or during a lightning storm, unplug the unit from the wall outlet by grasping the plug itself, without pulling on the cable.
- The power adapter provided is specific to the product. The use of another adapter could damage the product or lead to accidents.

### PROPER PLACEMENT OF THE PRODUCT

- Install the appliance far away from any equipment with a strong attraction such as microwave ovens, large speakers and so forth.
- Place your product in a location with adequate ventilation and on a flat and rigid surface to disperse the heat emitted by the device

### CLEANING

- Never open the product for cleaning purposes under risk of voiding the warranty.
- Unplug the product from the wall outlet before cleaning
- Clean the outside of the product and the remote control using a soft, dry cloth. Never use an abrasive pad, scouring powder or solvent such as alcohol or gasoline

### REPAIRS

 Refer all servicing to qualified personnel. Repairs are necessary if the device has been damaged in any manner whatsoever: damaged plug or power cord, liquid spilled on the product, introduction of small objects in the product, exposure to rain or moisture, malfunctions, product being dropped, etc.

### **IMPORTANT NOTICE**

Warning: This product allows maintaining a still video image or a picture screen on your television screen indefinitely. If you leave a still video image or picture screen displayed on your TV screen for an extended period, you risk damaging the screen of your television. Plasma TVs and projection televisions also are vulnerable to damage

### SAFETY - ENVIRONMENT



Your STOREX product has been laboratory tested and is in compliance with European directives related to EC marking in force at the time of its sale.



Traceability of the components of your STOREX product was performed, which demonstrated that the product complies with the environmental directive (RoHS) in force at the time of its sale.



At the end of life, do not throw the product in the garbage but return it to the distributor or your local waste disposal site, which will transfer the product to a recycling plant for electrical, electromechanical and electronic equipment waste (EEEW).



Your STOREX product has been prepared, tested and packaged in a French company certified ISO9001: 2000 by an annual audit performed by a qualified person from the VERITAS Certification office.

### STORYDISK ULTIMATE

is a product line of



### www.storex.eu

© STOREX -2010

All trademarks cited are trademarks of their respective owners.