



**SmartZone™ Gateway-
Enabled
MSPO Series Rack PDU
User Manual**

**Release 1.0
Issue 1.0**

Copyright © 2014 Panduit Corp. All rights reserved. No part of this book shall be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording or otherwise, without written permission from Panduit. No patent liability is assumed with respect to the use of the information contained herein.

Although every precaution has been taken in the preparation of this book, Panduit assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Table of Contents

SmartZone™ Gateway-Enabled MSPO Series Rack PDU	4
Contacting Panduit	4
Symbols Used	4
Equipment Overview	6
Box Contents	6
Cable Details	6
Model Numbers	7
Pre-Installation	8
Installation	9
Product Inspection	9
Plug Connection	9
Hardwiring	9
Vertical Mounting	10
Horizontal Mounting	12
SmartZone 1RU Inline Meters	12
Optional Accessories	13
Additional Required Items	14
Safety Precautions	14
Servicing	14
Product Safety Warnings	14
Rules	15
Environmental Specifications	16
Bonding	16
Hardware	17
LCD Display	17
Reset Button	17
Mode Button Operation	18
Bootloader Startup	18
Firmware Recovery Mode	18
Application Startup	18
Internal Error Notification	19
Gateway User Interface	20
Access the PDU Graphical User Interface	20
Using the PDU Graphical User Interface	21
Appendix A - Temperature Sensor Adapter Installation	22
New Installations	22
Existing Installations.	23
Fitting the Adapter In-line.	23

SmartZone™ Gateway-Enabled MSPO Series Rack PDU

Gateway-Enabled MSPO (Monitored and Switched Per Outlet) Series Rack PDUs manage and distribute power to multiple power devices through a single power connector. This PDU allows you to access, configure, and manage power consumption and environmental parameters from remote locations.

The MSPO Series PDU monitors per-phase power, voltage and current, per-outlet power, voltage and current, per-branch current, and includes the ability to switch the power to each outlet off or on.

SmartZone™ Gateway-Enabled PDUs are available in a wide range of configurations and power connections and outlets and can be mounted vertically or horizontally.



Contacting Panduit

For Technical Support on PDU hardware and associated software, please contact Panduit Technical Support using one of the following methods:

1-866-721-5302 (toll-free)
Monday-Friday, 7:30 am - 5:00 pm CST
systemsupport@panduit.com

Symbols Used

Symbol	Description
	Danger – Electric Shock Hazard
	Warning – Possible Safety Hazard
	Primary Earth Ground

Symbol	Description
	Secondary Earth Ground
I	ON
O	OFF

Equipment Overview

The power inlet/cord(s) connects the PDU to the electrical power source. The LCD displays the current load for each input feed or electrical phase per input feed.

Box Contents

The SmartZone Gateway-Enabled Rack PDU box contains the following:

- Gateway-Enabled Rack PDU
- Configuration Cable
- CD
- Mains Adapter
- External Grounding Stud

Cable Details

- **63A single and three phase feed cable – 10mm² (0.40 inches²) conductors:**
HO7 cable type terminated with (1P) 3-pin 63A commando and (3P) 5-pin 63A commando (IEC60309)
- **32A single and three phase feed cable – 6.0mm² (0.23 inches²) conductors:**
HO7 cable type terminated with (1P) 3-pin 32A commando and (3P) 5-pin 32A commando (IEC60309)
- **16A single and three phase feed cable – 2.5mm² (0.10 inches²) conductors:**
HO7 cable type terminated with (1P) 3-pin 16A commando and (3P) 5-pin 16A commando (IEC60309)
- **13A single phase feed cable – 1.5mm² (0.06 inches²):** HO7 cable type terminated with 3-pin UK plug
- **10A single phase feed cable – 1.0mm² (0.04 inches²):** HO7 cable type terminated with 3-pin IEC C14 Plug

For IEC C-20 inlet PDUs, a customer-supplied cord is used for connection to the power source. The connection end to the PDU has an IEC C-19 plug for connection to the PDU. The opposite end of the cord shall have a plug suitable for connecting to the customer supplied receptacle. The cord and plug shall be rated for 20A in North America and 16A outside of North America. The connection to the PDU should be made prior to connecting to the power source

Model Numbers

The following table lists the specifications for the Gateway-Enabled Rack PDU model numbers.

Horizontal	IQ Adapter
HC-wwwVxxA	IM-wwwVxxA
HD-wwwVxxA	IL-wwwVxxA
HL-wwwVxxA	Single Inline
HM-wwwVxxA	GM-wwwVxxA
HP-wwwVxxA	GL-wwwVxxA
HS-wwwVxxA	Dual Inline
Vertical	LM-wwwVxxA
VC-wwwVxxA	LL-wwwVxxA
VD-wwwVxxA	Quad Inline
VL-wwwVxxA	AM-wwwVxxA
VM-wwwVxxA	AL-wwwVxxA
VP-wwwVxxA	Under the Floor
VS-wwwVxxA	UM-wwwVxxA

In the tables above, www is the voltage for single phase or 3-phase and xx is the possible current associated with the voltage. Refer to the chart below for valid International and U.S. values.

International		U.S.	
Voltage	Current	Voltage	Current
240, 415	10, 13, 16, 20, 30, 32, 48, 63	120, 208	15, 20, 30, 50, 60, 80

Pre-Installation

The Gateway-Enabled Rack PDU products covered by this guide are designed to be installed within EIA racks and cabinets. Use of this product in other applications is acceptable, but other precautions may be required to allow for specific installations not covered by this guideline.

Installation


The Gateway-Enabled Rack PDUs are designed to be installed within 19" rack cabinets. Use of this product in other applications is acceptable, but other precautions may be required to allow for specific installations not covered here.

Product Inspection

Before installing your PDU, ensure that it has been inspected. If the product has any visible signs of damage please contact Panduit customer support at 800-777-3300 or cs@panduit.com. Please register your product to receive notification of firmware and product updates at: <http://bit.ly/1aXKhr1>

Plug Connection


This product is intended to be connected by the customer and must be installed by a competent person in compliance with all local and national regulations.

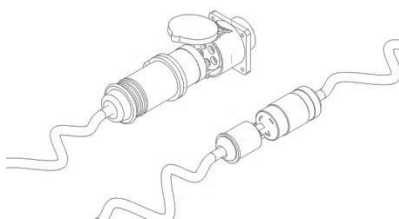

Hardwiring

This product is intended to be hardwired by the customer. It must be installed by a qualified electrician in compliance with all local and national regulations.

1. To install the power cable, remove the securing screws on the removable user panel.
2. Connect the conductors to the rack PDU terminals, in line with the terminal markings provided.

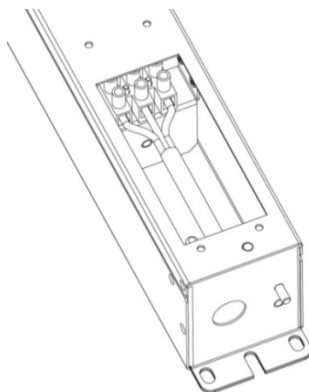


3. Ensure that the cover is replaced and secure before commissioning.


Vertical Mounting

Panduit recommends using the provided external grounding stud for supplementary ground bonding to the rack metalwork.

1. Insert the tool-less mounting buttons into the fixing holes on the back of the rack-/cabinet.

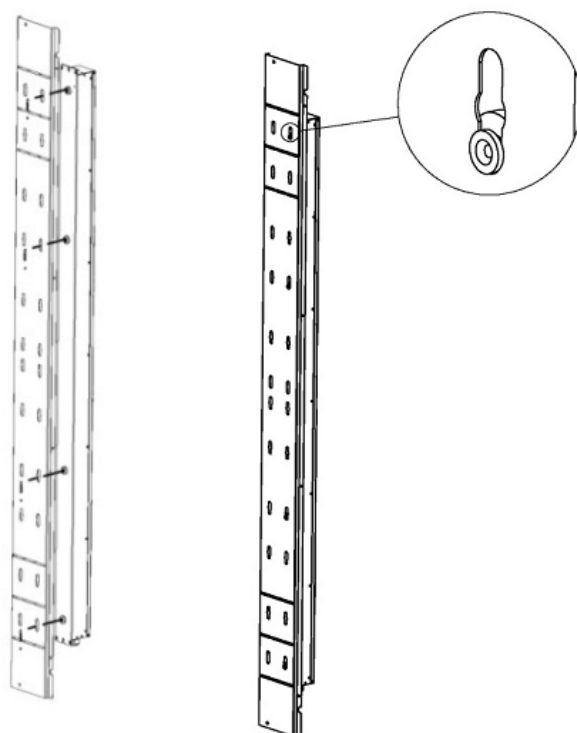

2. Install the PDU using the bracket mounting buttons and the mounting brackets located at either end of the PDU.

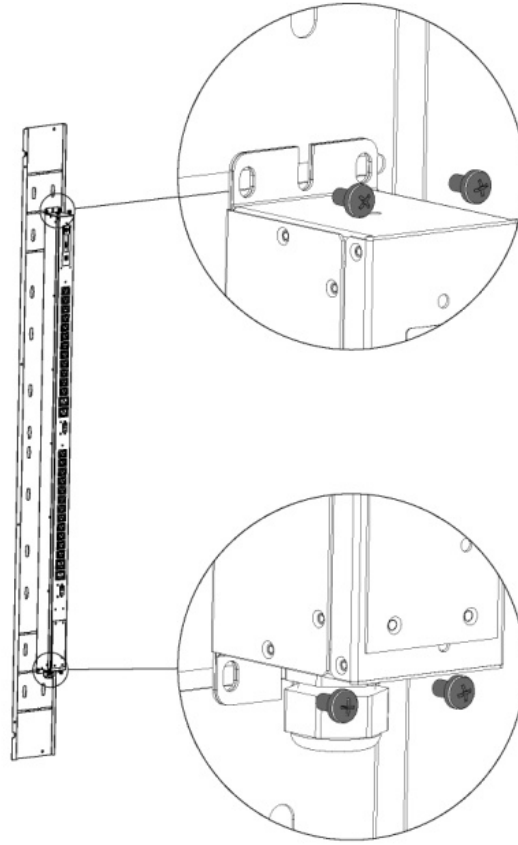


Horizontal Mounting

To mount this product horizontally, use the RU mountings via the brackets found at either end of the PDU with the provided accessory screws, listed below.


- Horizontal Models
North American units
(4) #10-32 x 1/2" MOUNTING SCREWS
(4) #12-24 x 1/2" MOUNTING SCREWS

Global units
(4) M6 x 20mm MOUNTING SCREWS
(4) #12-24 x 1/2" MOUNTING SCREWS

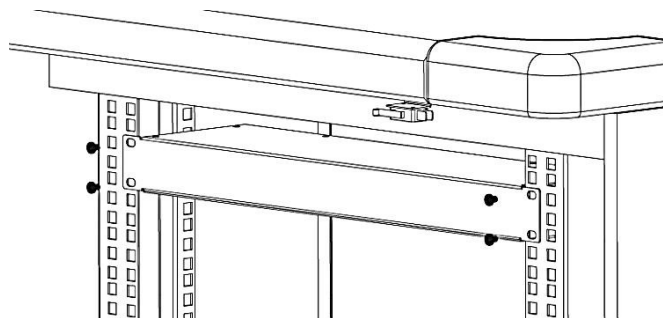

SmartZone 1RU Inline Meters

Install this product to the racks frame via the mounting plate holes found at either end of the PDU using the provided mounting hardware. The mounting plate can be adjusted as shown below.

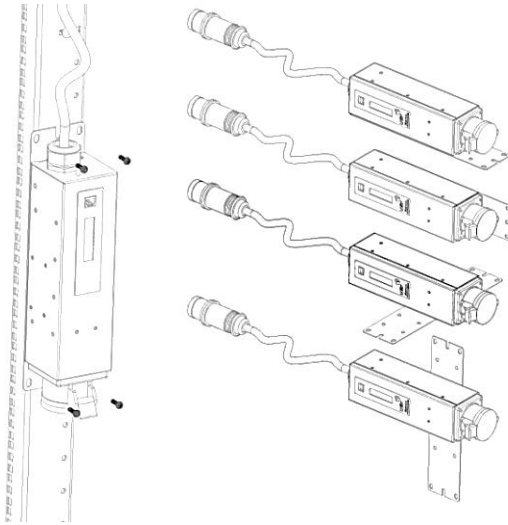

Optional Accessories

- Temperature Sensor
- External Temperature Sensor
- Humidity Sensor
- Temperature/Humidity Sensor
- Water Contact Sensor
- Water Rope Sensor
- Air Flow Sensor
- Shock Sensor
- Digital Input Sensor
- Passive Infra-Red (PIR) Sensor
- Door Contact (micro switch)
- Door Contact (magnetic)
- Standard Electronic Swing Handle Kit
- Smoke Detector
- Differential Pressure Transducer
- Flashing Beacon with Sounder
- Flashing Beacon with no Sounder
- HID Access and Control Card Reader
- Keypad Kit
- LCD Display Module with Selector Switches (PCB only)
- External LCD Display

Additional Required Items

- Flathead and Phillips screwdrivers
- Appropriate local AC power receptacle to power the PDU
- Local active Ethernet port to communicate with the PDU

Safety Precautions

This section contains important safety and regulatory information that should be reviewed before installing and using the Rack PDU.

Servicing

There are no user-serviceable parts inside these products. Any maintenance or repair must be performed by approved service-trained personnel. Opening the unit will void the product warranty.

Product Safety Warnings



Warning: Use only in dry locations. Indoor use only.

PDU hardware has an International Protection Rating of IPX0.

The installer must connect the power distribution unit to an electrical supply that has a protective Earth conductor.

For pluggable equipment, the socket outlet should be installed near the equipment and should be easily accessible.



Warning: For permanently connected equipment, a readily accessible disconnect device should be incorporated external to the equipment.

Rack PDUs must be protected by a branch circuit protective device rated at the maximum rating of the product specified on the product rating label.

To avoid risk of overload, do not plug additional multiple outlet power distribution devices into the power distribution unit socket outlets.

This equipment is intended only for installation and use in a Service Access Location in accordance with the following installation and use instructions.

This equipment is designed to be installed on a dedicated circuit.

- The dedicated circuit must have circuit-breaker or fuse protection.
- Rack PDUs have been designed without a master circuit breaker or fuse to avoid becoming a single point of failure. It is the customer's responsibility to provide adequate protection for the dedicated power circuit. Protection of capacity equal to the current rating of the Rack PDU must be provided and must meet all applicable codes and regulations. In North America, protection must have a 10,000A interrupt capacity.



Warning: Always disconnect the power supply cord before opening to avoid electrical shock.



Danger
Electro-shock risk

DANGER: High leakage current! Ground connection is essential before connecting supply!



Danger
Electro-shock risk

DANGER: Double Pole/Neutral Fusing: The plug on the power supply cord must be installed near the equipment and must be easily accessible.

Rules

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes/modifications not approved by the responsible party could void the user's authority to operate the equipment.

Environmental Specifications

- Operating Temperature: 0C to 40C
- Transportation Temperature: -10C to 70C
- Operating Humidity: 15% to 85% non-condensing
- Transportation Humidity: 5% to 90% non-condensing

Bonding

This product contains an external earthing screw with a star washer, which should be used for supplementary Earth bonding to the rack metalwork.

Bonding	
Minimum Requirements for Bonding Conductors	
Up to and including 32A	12 AWG
Up to and including 63A	8 AWG
Up to and including 80A	6 AWG
Screw Size	
Over 16A, less than or equal to 40A	5mm
Over 40A, less than or equal to 63A	6mm
64A	7mm

Hardware

LCD Display

The display shows the firmware version number, device model number, serial number, MAC Address, IP Address, and electrical readings. The display automatically scrolls through the readings, which include:

- Start Up messages
- Configuration/serial/product number messages
- Error/Status messages
- Aggregate data
- Single Phase data, 3-Phase Delta data, or 3-Phase Wye data
- Branch current data (if the unit has breakers)

During normal operation, the mode button may be used to quickly advance through the LCD display pages.

Reset Button

Push the **Reset** button using a non-metallic item, similar in size to a paper clip, to reset the PDU device.



Warning: a metallic item, such as a paper clip, is not recommended as a reset tool.

The reset tool should be inserted perpendicular to the surface of the device and pressed until the button is reached and is actuated.

The reset tool should bump into the button within 1/8 of an inch of being inserted, and should be lightly depressed and held for at least 1 second. The reset tool should never be inserted more than 1/4 of an inch.

Resetting the PDU device starts the bootloader. Wait between 1 and 30 seconds for the Display Backlight to blink on and off at a rate of 2 blinks per second. The bootloader stays in this mode for at least 4 seconds (8 blinks) if no user operation is detected.

Mode Button Operation

Bootloader Startup

When the user presses and holds the **Mode** button, the Display Backlight switches to one blink per second, indicating the bootloader is waiting for one of the following operations.

- If the user releases the **Mode** button after two blinks, the backlight goes solid-on and stays in the bootloader, entering the “firmware recovery mode”. See the "Firmware Recovery Mode" section (below) for more details.
- If the user releases the **Mode** button after four blinks, the backlight goes solid-on and attempts to boot the “backup firmware image”.
- If the user does not operate the **Mode** button as described above, the Display Backlight is turned off. The “firmware updatable application image” continues loading.

Firmware Recovery Mode

The Gateway-Enabled PDU provides a firmware recovery mode in case a firmware update is interrupted while in progress and fails to complete successfully.

Note: Do not power cycle or restart a device while a firmware update is in progress.

If a firmware update does not complete successfully, and the device fails to be operational after 30 minutes, contact Panduit Technical Support.

1-866-721-5302 (toll-free)

Monday-Friday, 7:30 am - 5:00 pm CST

support@panduit.com

Application Startup

When the application is ready, a message is displayed on the LCD:

Starting up...

The display backlight blinks quickly three times and remains lit.

The LCD then displays:

Hold MODE button to reset to defaults...

The application stays in this mode for at least five seconds. If no button operation is detected, the application continues to normal system operation.

If the customer presses and holds the **Mode** button for five seconds, the following message displays on the LCD:

```
Hold MODE button more than 5 seconds to reset to defaults
```

If the customer continues to press and hold the **Mode** button, the following message displays on the LCD:

```
Reset to defaults is detected. Please release MODE button.
```

The customer should release the **Mode** button at this point. The following message displays on the LCD:

```
Device is Resetting to factory defaults.
```

If the customer does not operate the **Mode** button as described above, the application continues normal system operation.

Internal Error Notification

After system start up is complete, the LCD screen may blink during normal operation of the unit. This typically indicates a temporary or persistent internal error condition.

If the condition is persistent, the LCD screen displays the word "STATUS:" followed by a hexadecimal code, similar to the following.

```
STATUS: 0x009000080
```

The hexadecimal code is a composition of per-outlet control, per-outlet monitoring and per-phase monitoring status. For example, if a three phase Per-outlet Monitoring or Switched unit loses a power phase, the status screen will reflect that communication to those boards has been lost.

For definitions and recommended actions on status codes, provide the displayed hexadecimal number to Panduit Technical Support.

Gateway User Interface

The SmartZone Gateway-Enabled Rack PDU provides access to configuration, power, and sensor data through the Gateway Graphical User Interface (GUI), using a standard browser. There are several ways to connect to the device's Gateway GUI, depending on your network configuration and the firmware revision of the device.

If the PDU has firmware revision 2.3.03 (or earlier), Static IP is the default. The configuration settings in this case are:

IPv4 Address:192.168.0.253

IPv4 Network:255.255.255.0

IPv4 Gateway:192.168.0.1

If the device has firmware revision 2.3.04 (or later), DHCP is the default, and one of the following scenarios will be used.


- If you have a DHCP Server available, connect to the appliance through that server, using the PDU's IP Address.

Note: The IP address for the Rack PDU is displayed on the device's LCD screen after the label IPv4

- If you do not have a DHCP server, you can run one on your PC. To connect to the device, use the IP address displayed on the LCD screen.
- If you want to use automatic IPv4 address configuration, you must activate DHCP on your PC and then connect directly to the PDU. This will give you an address on the 169.254.0.0/16 network. You can then connect directly using the IP Address displayed on the LCD screen.

Access the PDU Graphical User Interface

To access the GUI, open a web browser and enter the IP Address of the PDU. When the login page opens, you will be prompted to enter a login and password.

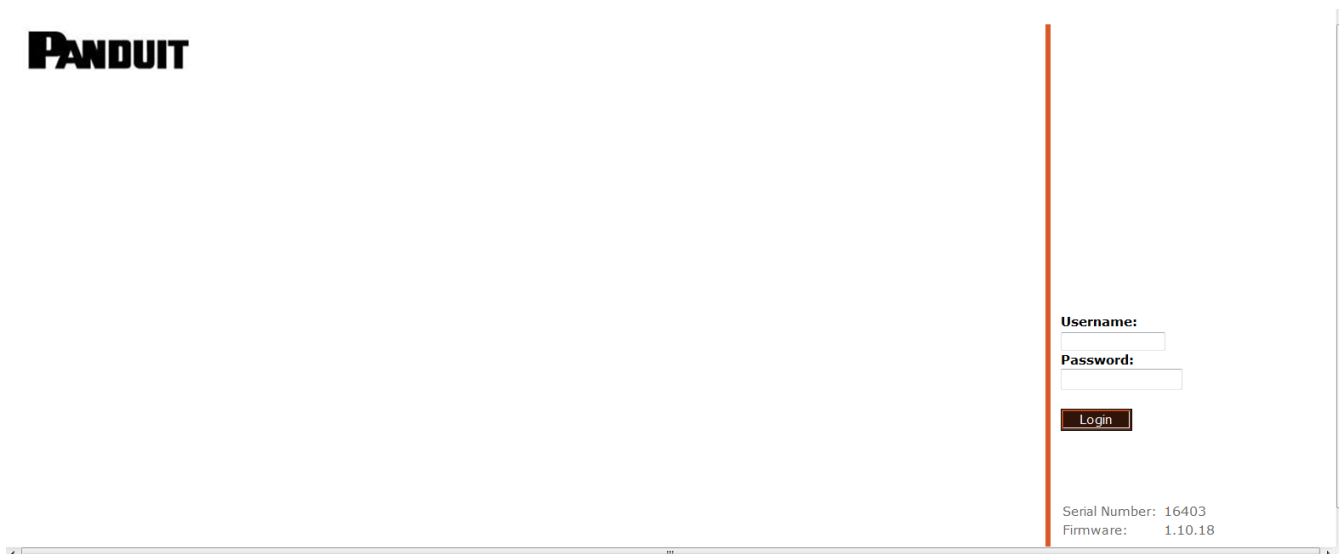

The default login and password are:

Login:admin

Password:admin

After successful login, the GUI opens to the Overview page.

Using the PDU Graphical User Interface

For detailed information on working with the GUI, refer to the appropriate SmartZone™ Gateway User Manual:

- SmartZone™ E24 Gateway User Manual
- SmartZone™ EP042 Gateway User Manual
- SmartZone™ EPA064 Gateway User Manual
- SmartZone™ EPA126 Gateway User Manual

Appendix A - Temperature Sensor Adapter Installation

Follow the instructions below to install the ZAHTLADT-02 v1.01.01 temperature sensor adapter module. This adapter allows legacy sensors to provide more accurate temperature readings.



Note: This adapter does not work with the ZETHL-14 temperature sensor.

New Installations

Follow these instructions when you are installing a standard temperature sensor, but the upgraded sensor input is required.

1. Plug the adapter directly into the back of the gateway, at the sensor port to be used for temperature.
2. Plug the temperature sensor connector into the adapter.



3. Update the gateway firmware to the latest release. See "Hardware" for details.

Existing Installations.

Follow these instructions when the sensor is already installed along with the gateway.

1. Unplug the current temperature sensor from the gateway, noting the location where it resided.
2. Insert the adapter into that location.
3. Plug the sensor into the end of the adapter.
4. Perform these steps for all other temperature sensors to be changed.
5. The gateway firmware must be updated to the latest firmware. See "Hardware" for details.

Before the adapter is fitted:



After the adapter is fitted:



Fitting the Adapter In-line.

This procedure is not recommended, but it may be the only solution in some cases.

1. Using a patch lead from the gateway and an RJ45 Jack to Jack through connector on its non-gateway end, plug the adapter RJ45 Plug into the through connector.
2. Plug either the RJ45 plug of a temperature sensor into the jack on the adapter or a patch lead with the temperature sensor on the end.

